

ま え が き

このパーツカタログは、スズキ船外機 DF350A/325A 型の補給取扱い部品を収録してあります。

DF350A				
機 種 記 号	型 式	トランサム	色	実 施 号 機
DF350A	35001F	X, XX	YAY, QTN	35001F-440001 ～

DF325A				
機 種 記 号	型 式	トランサム	色	実 施 号 機
DF325A	32501F	X, XX	YAY, QTN	32501F-440001 ～

パーツカタログのご使用について

1. 記号および略語

1-1. サイズ等

- A : 用品

AR : 必要量

D : 線 径

E.NO. : エンジン番号

F.NO. : フレーム番号

H : 高 さ

ID : 内 径

L : 長さ、リンク数、容積

NT : 歯 数

OD : 外 径

OPT : オプション

OS : オーバーサイズ

STD : スタンダード

T : 厚 さ

US : アンダサイズ

W : 巾

W/ : 同時使用

: 直送品

* : 直売品

～ : より、から
- 12X34X5 : 内径X外径X厚さ（巾、長さ）

1-2. メーカー名

- CHKK : 中央発条

DID : 大同工業

DK : 大金製作所

FB : 古河電池

IRC : 井上護謄工業

KYB : 萱場工業

NABCO : 日本エアープレーキ

NGK : 日本特殊陶業

NHK : 日本発条


RK : 高砂チェン

TEN : 富士通デン

TR : 東海理化電機製作所

YB : 湯浅電池

1-3. 構成部品の表示

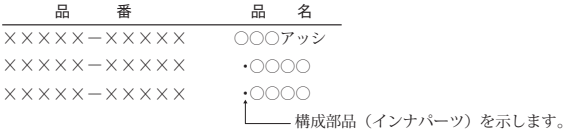

1-4. 部品変更

備考欄の品番の前の→印は変更部品相互の互換性を表示します。

←○○○○○-○○○○○……「～より統一」を示し、旧  新です。

→○○○○○-○○○○○……「～に統一」を示し、旧  新です。

1-5. 修正使用

ホース、チューブ等で寸法表示の→印は修正使用を表示します。

(例) L : 200 →180……200 を 180 に修正して使用します。

2. 部品変更のお知らせ

部品が新設または変更となった場合、サービス・部品ニュース、統一部品一覧表などのご案内いたします。

販売店様にあつては、弊社代理店にお問い合わせください。

3. 部品の注文

部品ご注文の場合は、このパーツカタログをご参照の上、次の点にご留意され、正確にご注文ください。

- 3-1. 品番、品名および数量
- 3-2. フレーム番号およびエンジン番号と型式番号
- 3-3. 部品メーカー（電装部品、保安部品など）

注※ 分解図は、補給部品索引のためのものです。分解、組み立てには使用しないでください。

※ 補給部品の中で車種間の共通化により、一部生産車の部品と異なる場合があります。

あらかじめご了承ください。

※ 記載事項は予告なく変更することがあります。あらかじめご了承ください。


I.D プレートの説明

I.D プレートには下記の項目が刻印されています。


より正確な部品発注のため① 機種名、② 型式、③ 製造番号（号機）をご確認ください。

I.D プレートはクランプブラケットに取り付けられています。

パターン 1

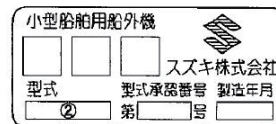

パターン 2

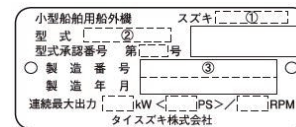


① 機種名を示します。 (例) DF140ATX

② 型式を示します。 (例) 14003F


③ 製造番号（号機）を示します。 (例) 910001

FIG.111A

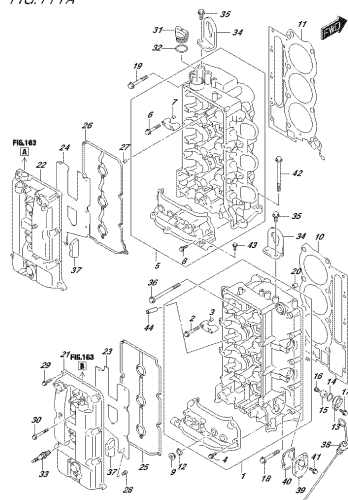


OP3034_000_REV_1114
CYLINDERHEAD

FIG.113A

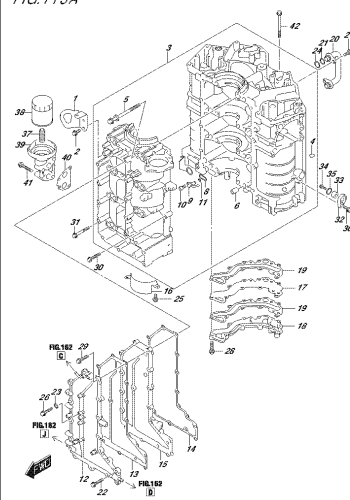


OP3034_000_REV_1134
CYLINDERHEAD

FIG.116B

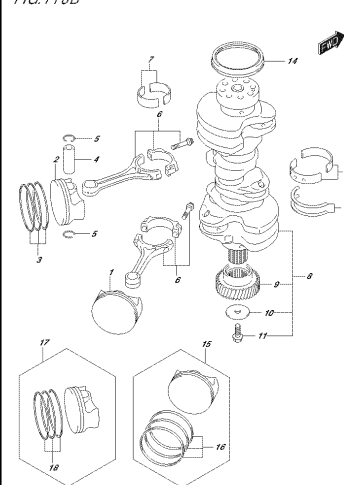


OP3034_000_REV_116B
CRANKSHAFT

FIG.116D

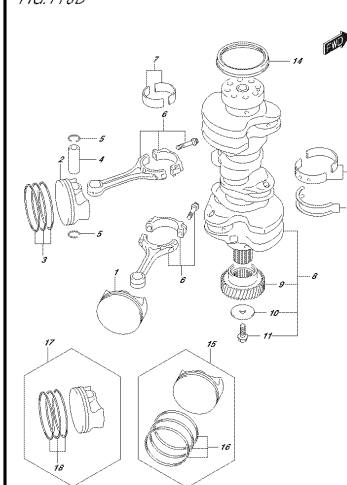


OP3034_000_REV_116D
CRANKSHAFT

FIG.119A

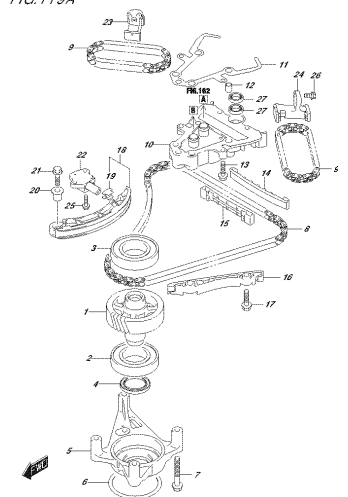


OP3034_000_REV_119A
CRANKSHAFT

FIG.121B

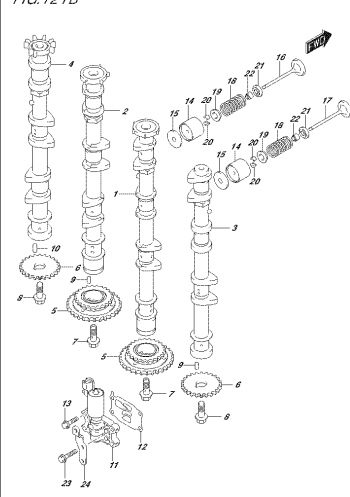


OP3034_000_REV_121B
CRANKSHAFT

FIG.122A

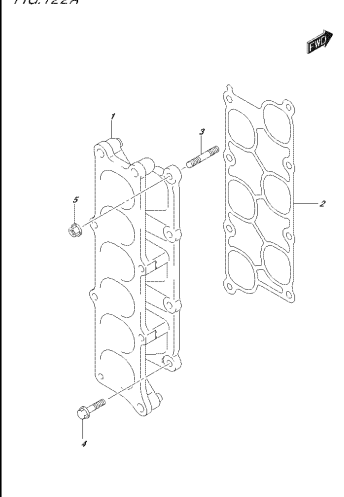


OP3034_000_REV_122A
PISTON BARNICLE

FIG.136A

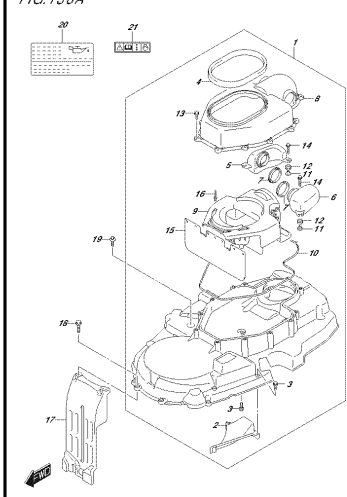


OP3034_000_REV_136A
PISTON BARNICLE

FIG. 140A

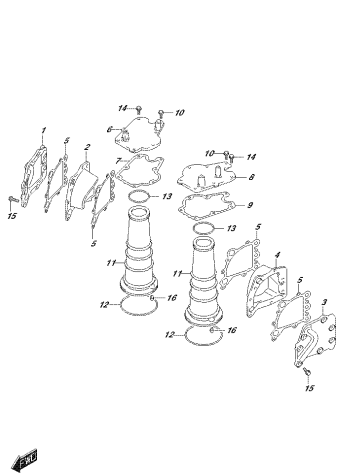


EXHAUSTORER

FIG. 144B

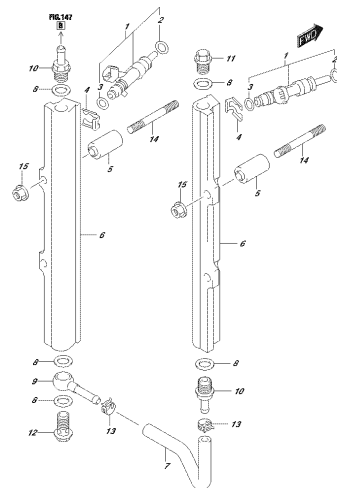


DP3804_000_024_1449
FUEL INJECTOR

FIG. 147B

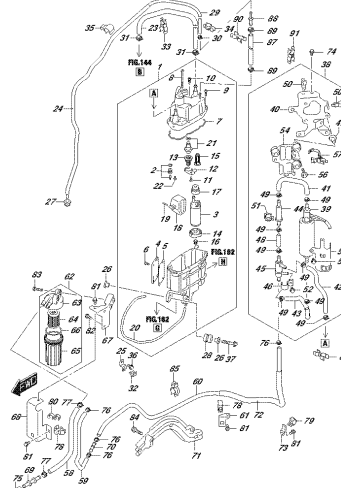


DF3504_000_024_1473
FUELPUMP/FUELAIRPUMP/GENERATOR

FIG. 160B

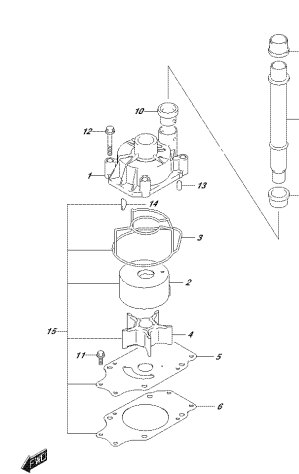


DP3504_002_024_1809
WATER PUMP

FIG. 162A

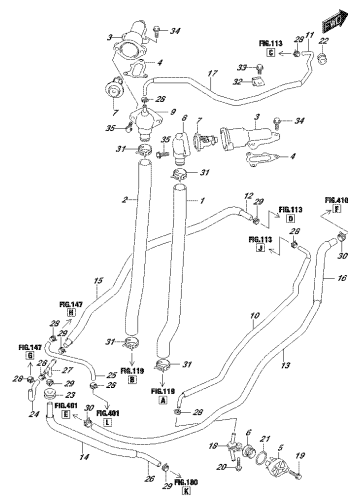


EPSON_002_024_102A
THERMOSTAT

FIG. 163A

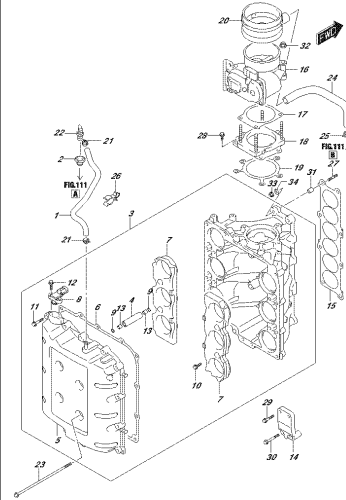


DFSS04_000_024_1834
THROTTLEBODY

FIG. 175A

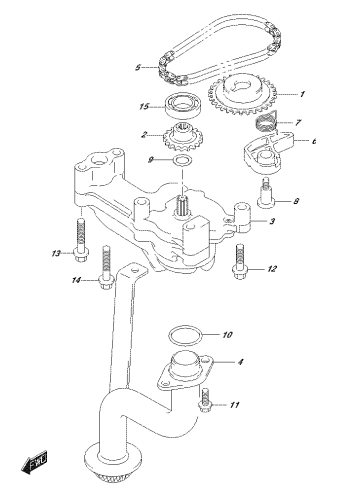


DF3524_002_024_1754
OE PUMP

FIG. 180A

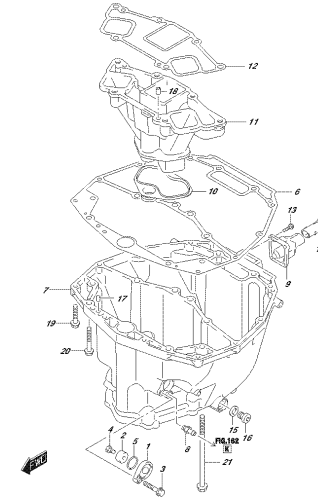


DP3504_002_024_1804
OE PAN

FIG.204B

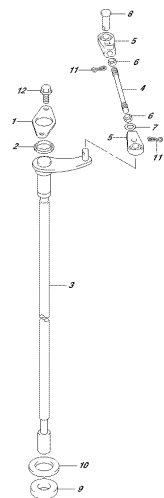


OP3034_000_024_0049
CLUTCH SHAFT

FIG.206B

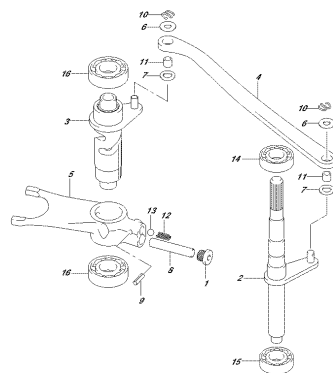


OP3034_000_024_0049
CLUTCH SHAFT

FIG.220B

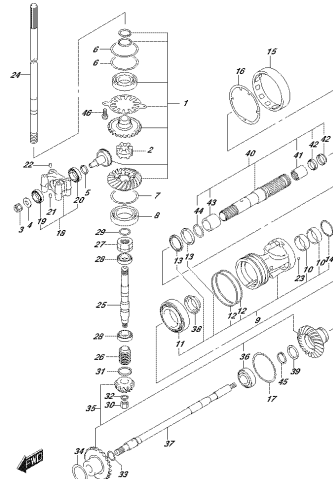


OP3034_000_024_0049
ITR4650307

FIG.220D

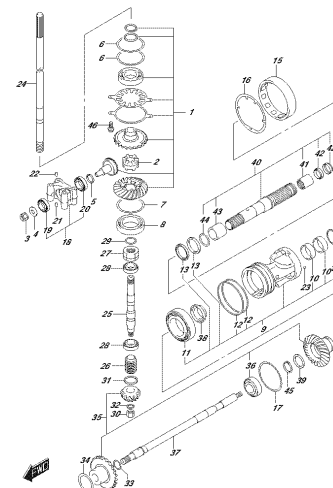


OP3034_000_024_0049
ITR4650307

FIG.301A

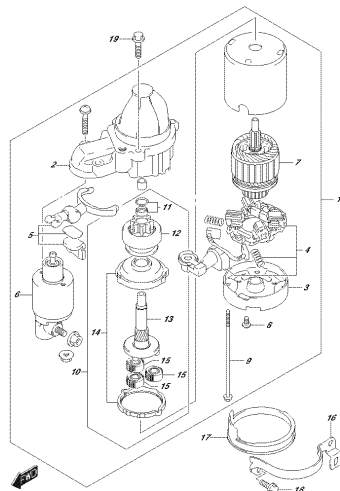


OP3034_000_024_0104
STARTING MOTOR

FIG.303A

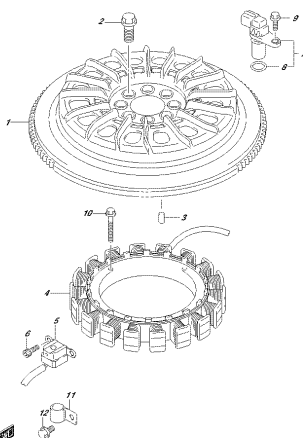


OP3034_000_024_0104
BAND PULLEY

FIG.310A

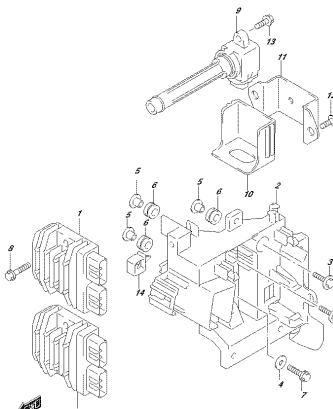


OP3034_000_024_0104
RECUPERATION COIL

FIG.315B

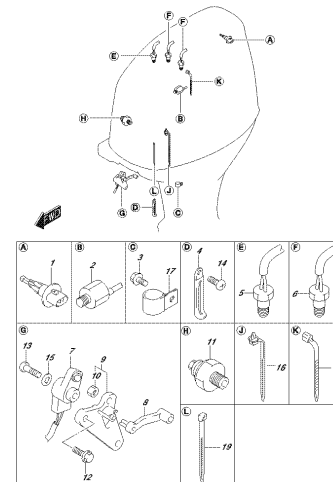


OP3034_000_024_0108
SEALING

FIG.322A

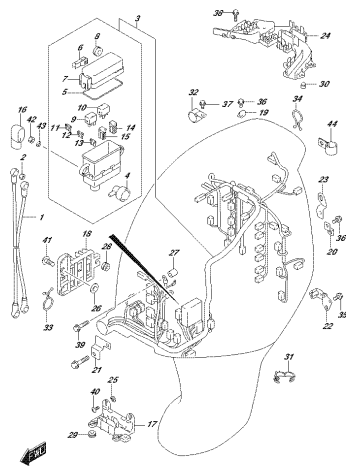


OPR304_000_024_322A
PARTS LIST

FIG.326A

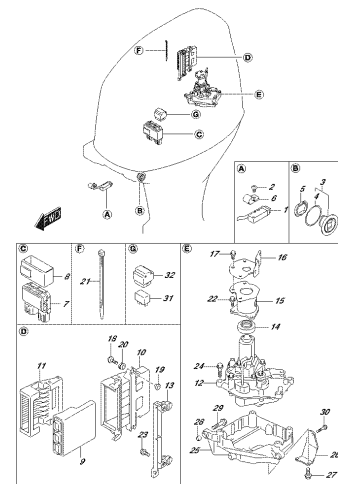


OPR304_000_024_326A
PTT SWITCHGEAR CONTROL UNIT

FIG.331B

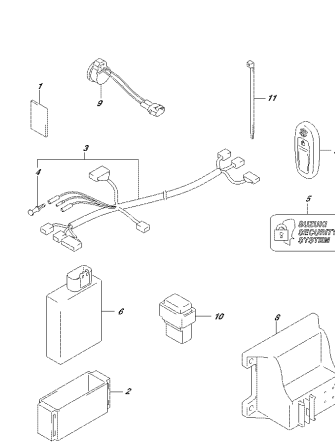


OPR304_000_024_331B
KEY LOCK SYSTEM

FIG.335B

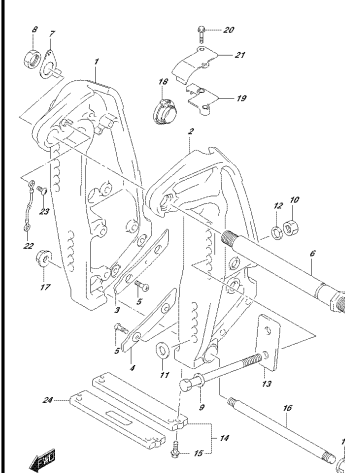


OPR304_000_024_335B
CLAMP BRACKET

FIG.336B

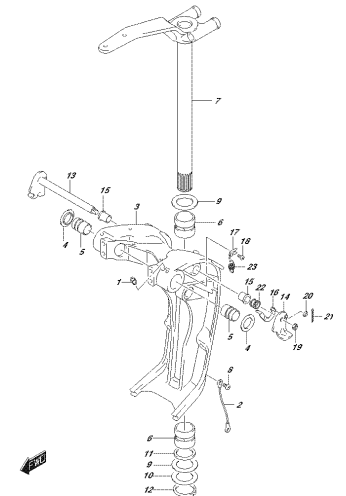


OPR304_000_024_336B
SWING BRACKET

FIG.337B

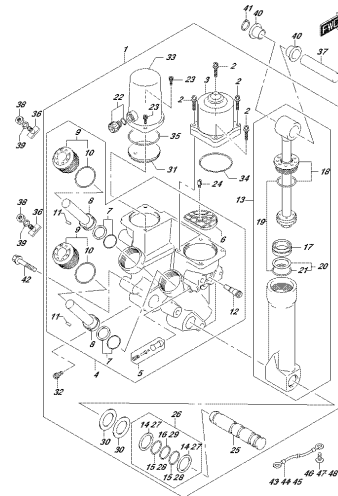


OPR304_000_024_337B
TRIM CYLINDER

FIG.340B

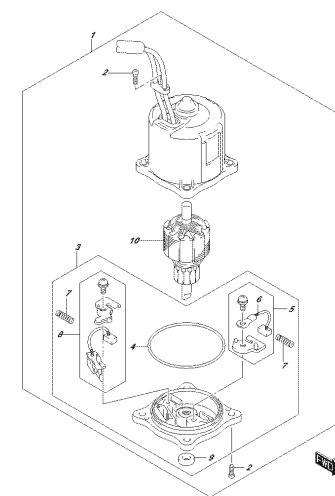


OPR304_000_024_340B
PTT MOTOR

FIG.401B

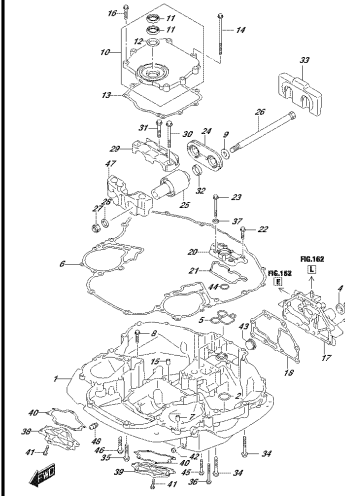


OPR304_000_024_401B
ENGINE HAZARD

FIG.405B

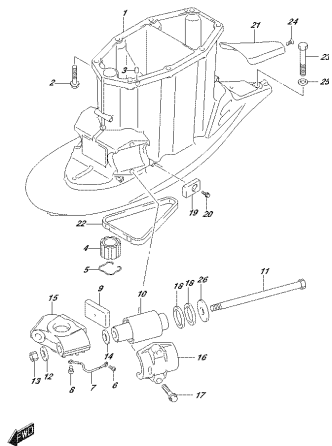


OPTIONAL AIR CLEANER KIT
OPTIONAL SWAY BAR KIT

FIG.405D

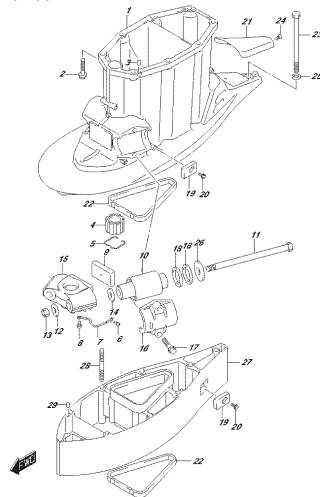


OPTIONAL AIR CLEANER KIT
OPTIONAL SWAY BAR KIT

FIG.407B

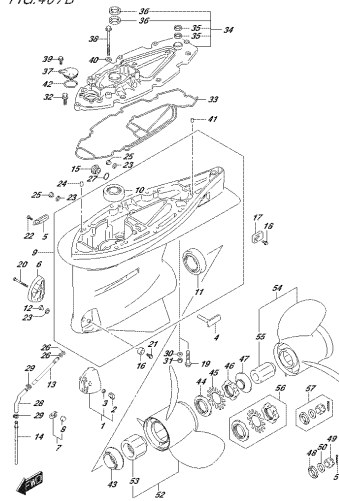


OPTIONAL AIR CLEANER KIT
OPTIONAL SWAY BAR KIT

FIG.410A

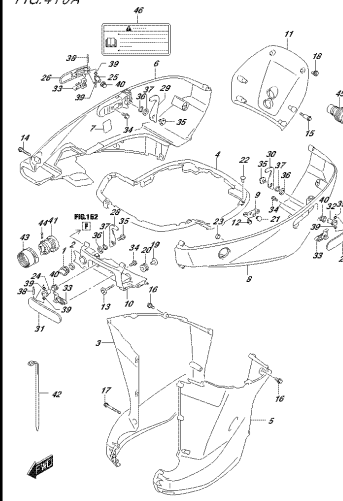


OPTIONAL AIR CLEANER KIT
OPTIONAL SWAY BAR KIT

FIG.420A

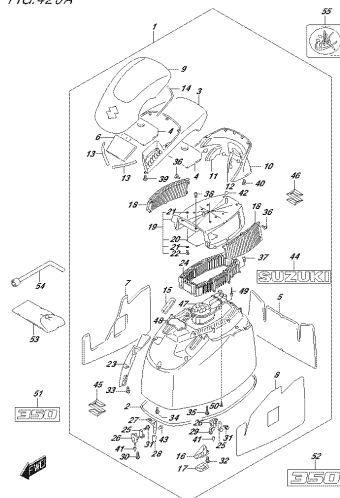


OPTIONAL AIR CLEANER KIT
OPTIONAL SWAY BAR KIT

FIG.420C

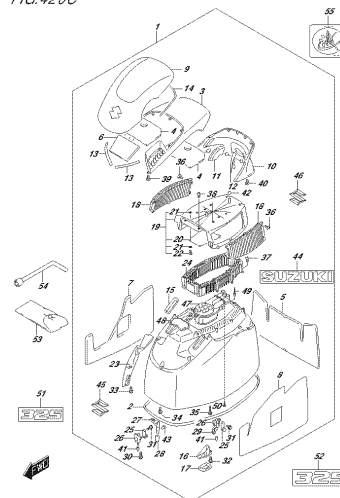


OPTIONAL AIR CLEANER KIT
OPTIONAL SWAY BAR KIT

FIG.430A

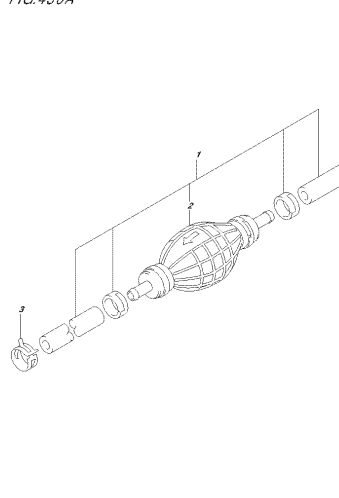


OPTIONAL AIR CLEANER KIT
OPTIONAL SWAY BAR KIT

FIG.520A

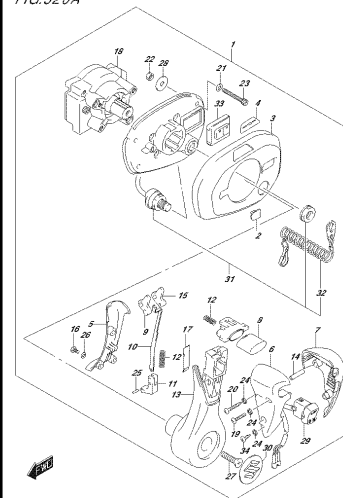

OPTIONAL AIR CLEANER KIT
OPTIONAL SWAY BAR KIT

FIG. 602A

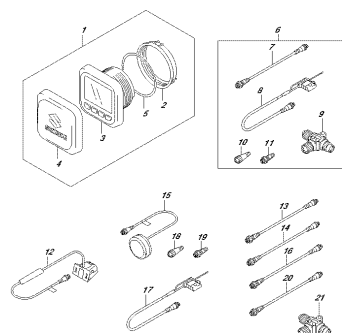

OPTIONAL: 602, 603, 604, 605
OPTIONAL: 606, 607, 608, 609

FIG.111A

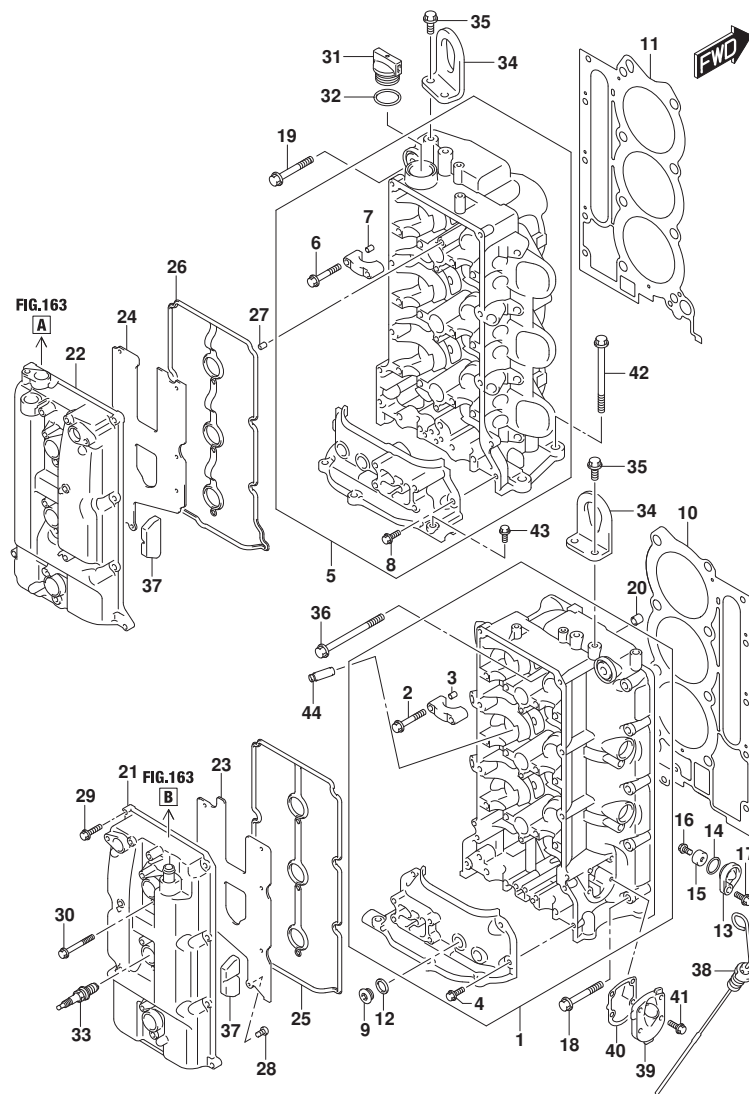


FIG.111A (1-B-2) シリンダヘッド

見出番号	品番	品名	使用個数	備考	標準作業時間
1	11101-98L20	ヘッドアツシ, シリンダスターホート	1	STBD	
2	09103-06266	ボルト (6X40)	16		
3	09206-08001	ピン (8X11)	14		
4	01547-06207	ボルト (6X20)	4		
5	11103-98L20	ヘッドアツシ, シリンダホート	1	PORT	
6	09103-06266	ボルト (6X40)	16		
7	09206-08001	ピン (8X11)	14		
8	01547-06207	ボルト (6X20)	2		
9	11116-93J01	プラグ	4		
10	11141-98L00	ガスケット, シリンダヘッドスターホート	1	STBD	
11	11142-98L00	ガスケット, シリンダヘッドホート	1	PORT	
12	11216-98L10	ガスケット	4		
13	11261-93J00	カバー, プロテクションアノード	4		
14	09280-22019	リング (D:1.9, ID:21.8)	4		
15	55321-87J01	アノード, プロテクション	4		
16	09128-06094	ボルト (6X14)	4		
17	01550-0820C	ボルト (8X20)	4		
18	01550-08607	ボルト	6	STBD	
19	01550-08607	ボルト	5	PORT	
20	09206-15001	ピン (12.4X15X17)	4		
21	11170-93J01	カバー, シリンダヘッドスターホート	1	STBD	
22	11180-98L00	カバー, シリンダヘッドホート	1	PORT	
23	11173-93J00	プレート, プリザスターホート	1	STBD	
24	11183-93J00	プレート, プリザホート	1	PORT	
25	11179-93J00	ガスケット, シリンダヘッドカバースターホート	1	STBD	
26	11189-93J00	ガスケット, シリンダヘッドカバーホート	1	PORT	
27	09206-08001	ピン (8X11)	1		
28	02142-0612A	スクリュ	14		
29	01547-0625C	ボルト	16		
30	01547-0650C	ボルト	6		
31	11382-93J00	キャップ, オイルフイ	1		
32	09280-26006	リング (D:3.1, ID:26.4)	1		
33	09482-00642	プラグ, スパーク (1LZKR7D8)	6	NGK	
34	11291-98L00	フック, エンジン	2		
35	01550-0820C	ボルト (8X20)	4		

FIG.111A

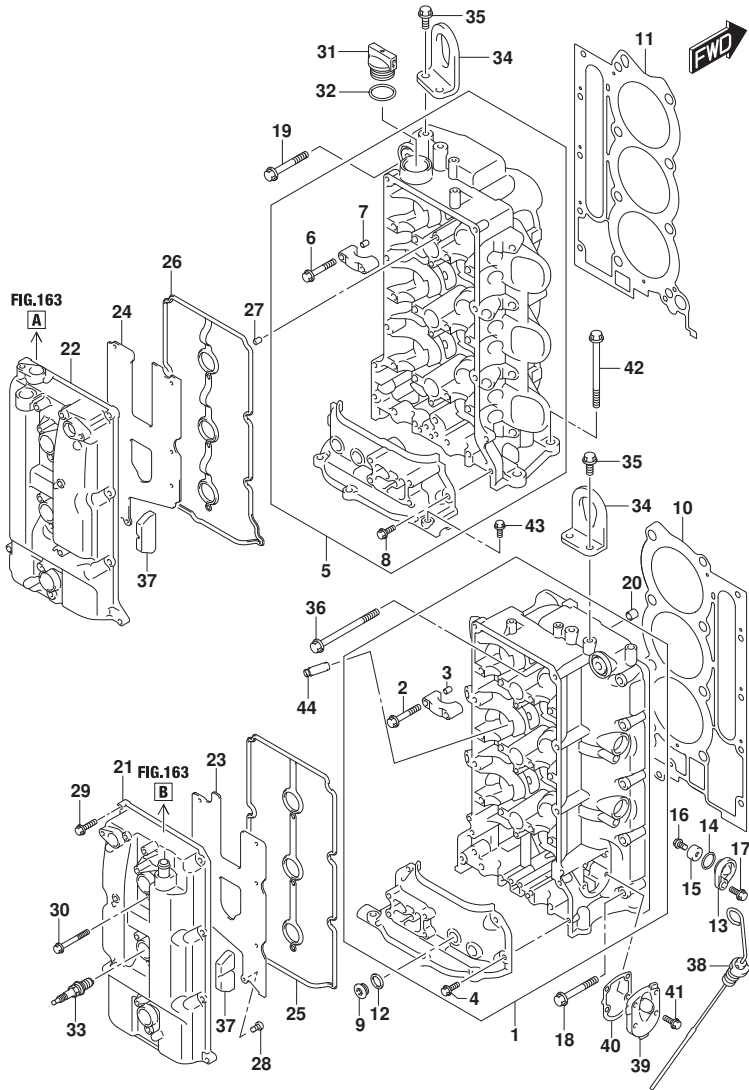


FIG. 111A (1-B-3) シリンダーヘッド

見出番号	品番	品名	使用個数	備考	標準作業時間
36	11119-98L00	ホルト, シリンダーヘッド	16		
37	11186-15501	セパレータ, オイルブリーザーカバー	2		
38	16910-98L00	ゲージ, オイルレベル	1		
39	16931-98L00	ガイド, オイルレベルゲージ	1		
40	16941-98L00	ガスケット, オイルレベルゲージガイド	1		
41	01550-0625C	ホルト (6X25)	4		
42	09116-10146	ホルト (10X195)	2		
43	01550-0830C	ホルト	6		
44	11115-98L00-001	ガイド, ハルブ OS (OS:0.5)	24	オプション	

FIG.113A

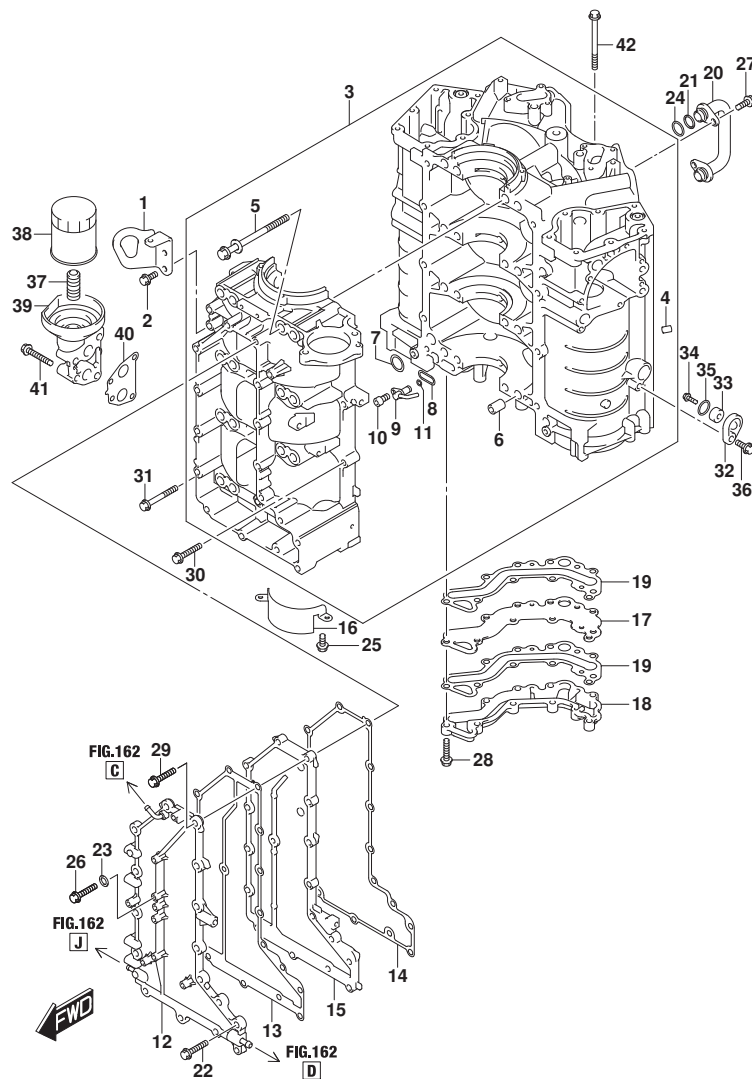


FIG.113A (1-B-4) シリンダブロック

見出番号	品番	品名	使用個数	備考	標準作業時間
1	11293-98L00	ツク, エンジンフロント	1		
2	01550-0820C	ボルト (8X20)	2		
3	11301-98L20	ブロックセツト, シリンダ	1		
4	11112-93J00	ブラク, オイルパンチユリ	2		
5	11117-98L00	ボルト, クランクケース	16		
6	09206-14004	ピン (14X11, 4X23)	5		
7	11318-98L00	ガスケット, オイルキヤリNO. 1	1		
8	11319-98L00	ガスケット, オイルキヤリNO. 2	1		
9	11390-98L00	シエツト, ヒーストンケーリング	6		
10	09106-06075	ボルト (6X12)	6		
11	09280-05007	リング (D:1.2, ID:4.7)	6		
12	11330-98L00	カバー, クランクケースウオシヤセツト	1		
13	11332-98L00	ガスケット, クランクケースウオシヤセツトカバー	1		
14	11333-98L00	ガスケット, クランクケースオイルカバー	1		
15	11334-98L00	カバー, オイルキヤリクランクケース	1		
16	12247-98L00	プレート, オイルカート	1		
17	16431-98L00	プレート, オイルキヤリ	1		
18	16432-98L00	カバー, オイルキヤリ	1		
19	16433-98L00	ガスケット, オイルキヤリ	2		
20	16480-98L00	パイプ, オイルキヤリ	1		
21	16485-98L00	リング, パツクアツツ オイルキヤリ	2		
22	09103-08379	ボルト (8X165)	1		
23	09168-06023	ガスケット (5.8X13X1.2)	1		
24	09280-18004	リング (D:2.4, ID:17.8)	2		
25	01550-0612A	ボルト (6X12)	2		
26	01550-06357	ボルト (6X35)	1		
27	01550-0820C	ボルト (8X20)	2		
28	01550-0835A	ボルト (8X35)	9		
29	01550-0840C	ボルト (8X40)	13		
30	01550-08457	ボルト (8X45)	7		
31	01550-08657	ボルト	1		
32	11261-93J00	カバー, ブロテクションアノード	2		
33	55321-87J01	アノード, ブロテクション	2		
34	09128-06094	ボルト (6X14)	2		
35	09280-22019	リング (D:1.9, ID:21.8)	2		

Exploded view diagram of the engine assembly for a 1.6L engine. The diagram shows the main engine block assembly (3) and the timing chain assembly (14-19). Components are numbered 1 through 42. A 'FWD' arrow points towards the bottom left. Reference to FIG. 162 is made for parts 29, 23, 26, 22, and 13.

見出番号	品番	品名	使用個数	備考	標準作業時間
36	01550-0820C	ホルト (8X20)	2		
37	11241-86FA0	スタンド, オイルフィルタ	1		
38	16510-96J10	フィルタアツツ, オイル	1		
39	16531-98L00	ケース, オイルフィルタアツツ	1		
40	16539-98L10	ガスケツツ, オイルフィルタアツツ	1		
41	01550-0850C	ホルト (8X50)	4		
42	09116-10134	ホルト (10X115)	1		

FIG.116B

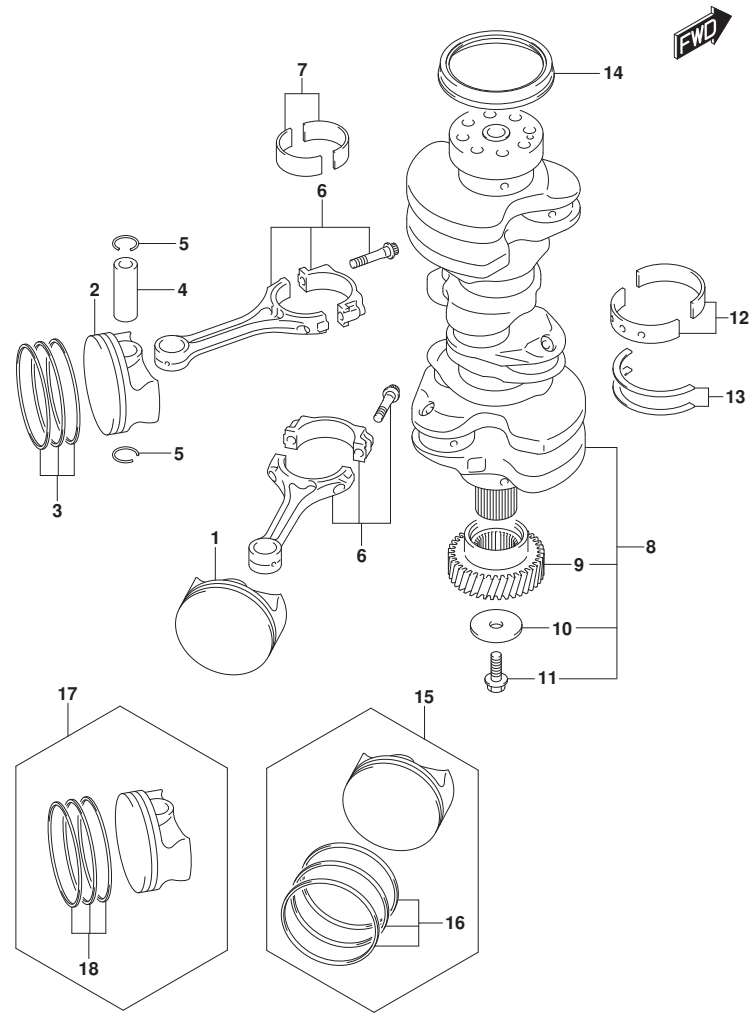


FIG.116B (1-B-6) クランクシャフト (DF350A)

見出番号	品番	品名	使用個数	備考	標準作業時間
1	12111-98L00-0B0	ピン, スターボート	3	STBD	
2	12121-98L00-0B0	ピン, ホート	3	PORT	
3	12140-98J10	リング, セット, ピン	6		
4	12151-98L00	ピン, ピン	6		
5	09381-22010	サーキット	12		
6	12160-98L00	コンロッド, アッ	6		
7-1	12100-98810-0A0	ベアリング, セット, コンロッド (STD)	6	グリーン	
7-2	12100-98810-025	ベアリング, セット, コンロッド, アンタ, サイズ (US:0.25)	6	OPT, RED	
8	12200-98L00	クランクシャフト, アッ	1		
9	12242-98J00	.ギヤ, ドライブ (NT:32)	1		
10	09160-10104	.ワッシャ (10.5X50X3.2)	1		
11	01550-1025A	.ボルト	1		
12-1	12340-98L01-0A0	ベアリング, サブ, セット, クランクシャフト	4	ブラック	
12-2	12340-98L01-0B0	ベアリング, サブ, セット, クランクシャフト	4	NON	
12-3	12340-98L01-0C0	ベアリング, サブ, セット, クランクシャフト	4	イエロー	
12-4	12340-98L01-0D0	ベアリング, サブ, セット, クランクシャフト	4	ブルー	
12-5	12340-98L01-0E0	ベアリング, サブ, セット, クランクシャフト	4	PINK	
12-6	12300-98841-0AA	ベアリング, セット, クランクシャフト (US:0.25)	4	OPT, RED/BLACK	
12-7	12300-98841-0BA	ベアリング, セット, クランクシャフト (US:0.25)	4	OPT, RED	
12-8	12300-98841-0CA	ベアリング, セット, クランクシャフト (US:0.25)	4	OPT, RED/YELLOW	
12-9	12300-98841-0DA	ベアリング, セット, クランクシャフト (US:0.25)	4	OPT, RED/BLUE	
12-10	12300-98841-0EA	ベアリング, セット, クランクシャフト (US:0.25)	4	OPT, RED/PINK	
13-1	12300-98830	ベアリング, セット, クランクスラスト	1		
13-2	12300-98830-012	ベアリング, セット, クランクスラスト, OS (OS:0.125)	1	オプション	
14	09283-91001	シール, オイル (91X109X10)	1		
15	12101-98L20-050	ピン, セット, スターボート, OS (OS:0.50)	3	OPT, STBD	
16	12140-98J10-050	.リング, セット, ピン, OS (OS:0.50)	3	OPT, STBD	
17	12102-98L20-050	ピン, セット, ホート, OS (OS:0.50)	3	OPT, PORT	
18	12140-98J10-050	.リング, セット, ピン, OS (OS:0.50)	3	OPT, PORT	

FIG.116D

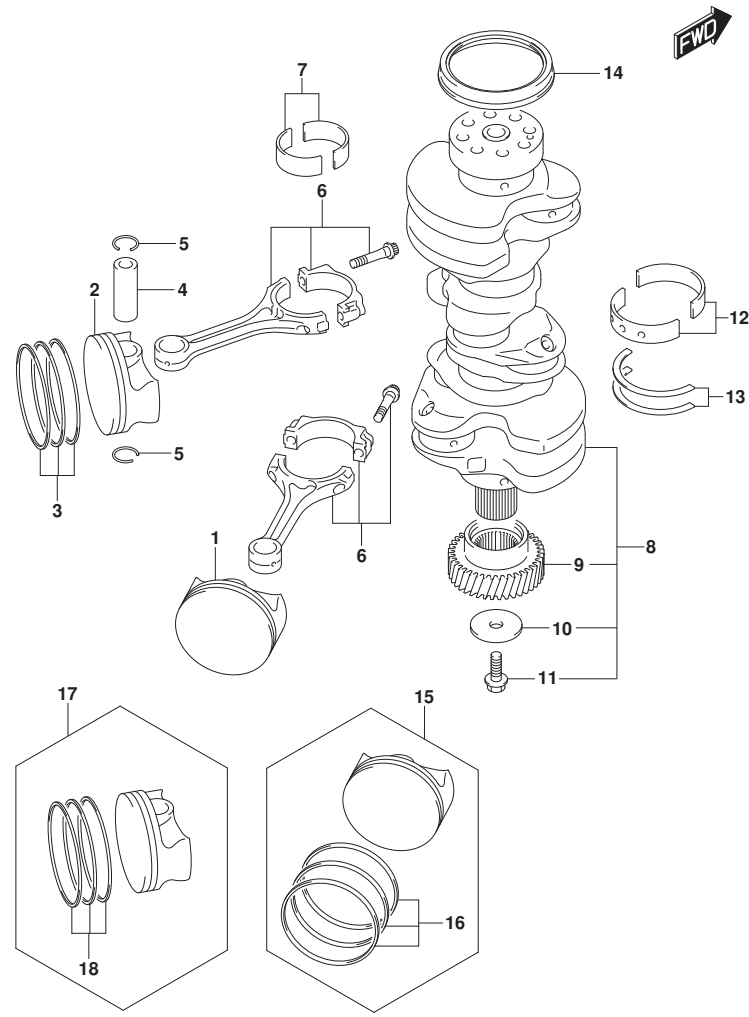


FIG. 116D (1-B-7) クランクシャフト (DF325A)

見出番号	品番	品名	使用個数	備考	標準作業時間
1	12111-98L10-0B0	ピン, スターボート	3	STBD	
2	12121-98L10-0B0	ピン, ホート	3	PORT	
3	12140-98J10	リング, セット, ピン	6		
4	12151-98L00	ピン, ピン	6		
5	09381-22010	サーキット	12		
6	12160-98L00	コンロッド アッ	6		
7-1	12100-98810-0A0	ベアリング, セット, コンロッド (STD)	6	グリーン	
7-2	12100-98810-025	ベアリング, セット, コンロッド アンタ サイズ (US:0.25)	6	OPT, RED	
8	12200-98L00	クランクシャフトアッ	1		
9	12242-98J00	.ギヤ, ドライブ (NT:32)	1		
10	09160-10104	.ワッシャ (10.5X50X3.2)	1		
11	01550-1025A	.ボルト	1		
12-1	12340-98L01-0A0	ベアリング, サブ, セット, クランクシャフト	4	ブラック	
12-2	12340-98L01-0B0	ベアリング, サブ, セット, クランクシャフト	4	NON	
12-3	12340-98L01-0C0	ベアリング, サブ, セット, クランクシャフト	4	イエロー	
12-4	12340-98L01-0D0	ベアリング, サブ, セット, クランクシャフト	4	ブルー	
12-5	12340-98L01-0E0	ベアリング, サブ, セット, クランクシャフト	4	PINK	
12-6	12300-98841-0AA	ベアリング, セット, クランクシャフト (US:0.25)	4	OPT, RED/BLACK	
12-7	12300-98841-0BA	ベアリング, セット, クランクシャフト (US:0.25)	4	OPT, RED	
12-8	12300-98841-0CA	ベアリング, セット, クランクシャフト (US:0.25)	4	OPT, RED/YELLOW	
12-9	12300-98841-0DA	ベアリング, セット, クランクシャフト (US:0.25)	4	OPT, RED/BLUE	
12-10	12300-98841-0EA	ベアリング, セット, クランクシャフト (US:0.25)	4	OPT, RED/PINK	
13-1	12300-98830	ベアリング, セット, クランクスラスト	1		
13-2	12300-98830-012	ベアリング, セット, クランクスラスト OS (OS:0.125)	1	オプション	
14	09283-91001	シール, オイル (91X109X10)	1		
15	12101-98L30-050	ピン, セット, スターボート OS (OS:0.50)	3	OPT, STBD	
16	12140-98J10-050	.リング, セット, ピン OS (OS:0.50)	3	OPT, STBD	
17	12102-98L30-050	ピン, セット, ホート OS (OS:0.50)	3	OPT, PORT	
18	12140-98J10-050	.リング, セット, ピン OS (OS:0.50)	3	OPT, PORT	

FIG.119A


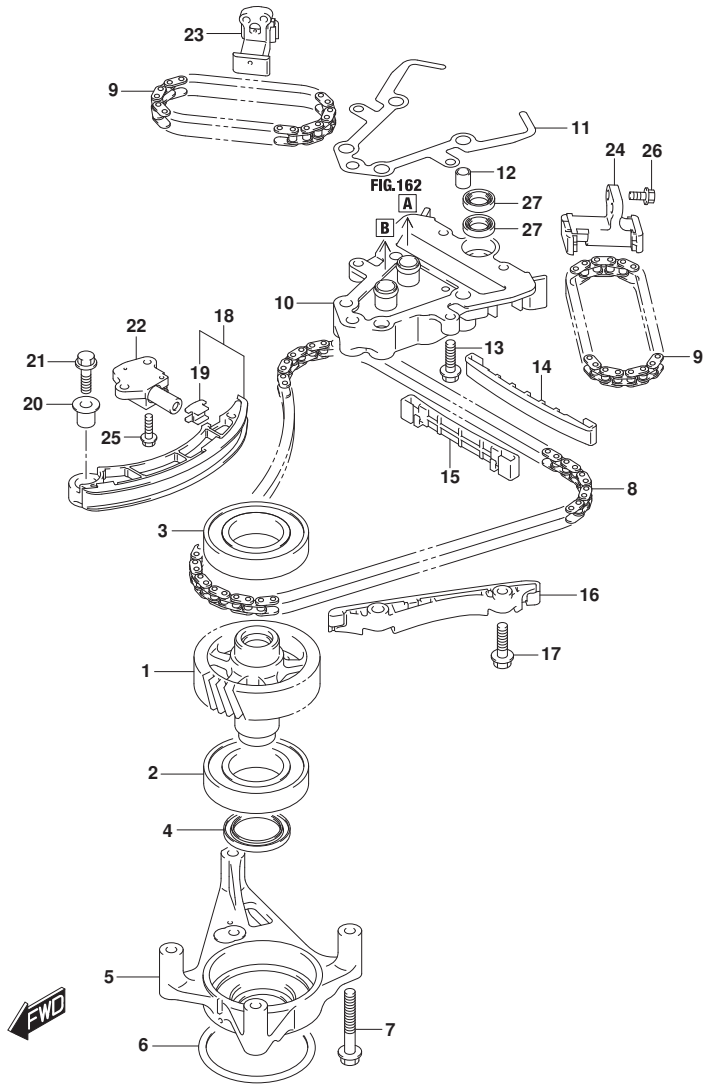


FIG.119A (1-B-8) タイミングチェーン

見出番号	品番	品名	使用個数	備考	標準作業時間
1	12730-98J02	ギヤ, トリフン (NT:40)	1		
2	09262-40021	ベアリング (40X80X18)	1	アッパ-	
3	09262-40017	ベアリング (40X80X18)	1	ロア	
4	09283-32044	シール, オイル (32X47X6)	1		
5	12734-98L00	ホルダ, トリフンギヤ	1		
6	09280-70012	オリング (D:5.7, ID:69.6)	1		
7	01550-0855A	ホルト	4		
8	12761-98L00	チェーン, タイミング ファースト	1		
9	12762-93J00	チェーン, タイミング セカント	2		
10	12770-98L00	ベース, タイミング チェンガイト NO. 1	1		
11	12778-98L00	ガスケツト, タイミング チェンガイト ベース	1		
12	04211-13149	ピン (13X14)	2		
13	01550-0830A	ホルト (8X30)	2		
14	12771-93J00	SHOE, TIMING CHAIN UPR	1	アッパ-	
15	12775-93J00	SHOE, TIMING CHAIN LWR	1	ロア	
16	12772-98L00	ガイト, タイミング チェン NO. 2	1		
17	01550-0830A	ホルト (8X30)	2		
18	12810-93J00	テンシヨナアツシ, タイミング チェン	1		
19	12813-73G00	.バツト, タイミング チェンテンシヨナ	1		
20	12812-90J00	スベ-サ, タイミング チェンテンシヨナ	1		
21	01550-0830A	ホルト (8X30)	1		
22	12831-93J01	アシヤスタツシ, テンシヨナ NO. 1	1		
23	12832-93J00	テンシヨナアツシ, スターホ-ード	1	STBD	
24	12833-93J00	テンシヨナアツシ, ホ-ート	1	PORT	
25	01550-0620A	ホルト	2		
26	01550-0620A	ホルト	4		
27	09282-17011	シール, オイル (16.5X28X6)	2		

FIG.121B

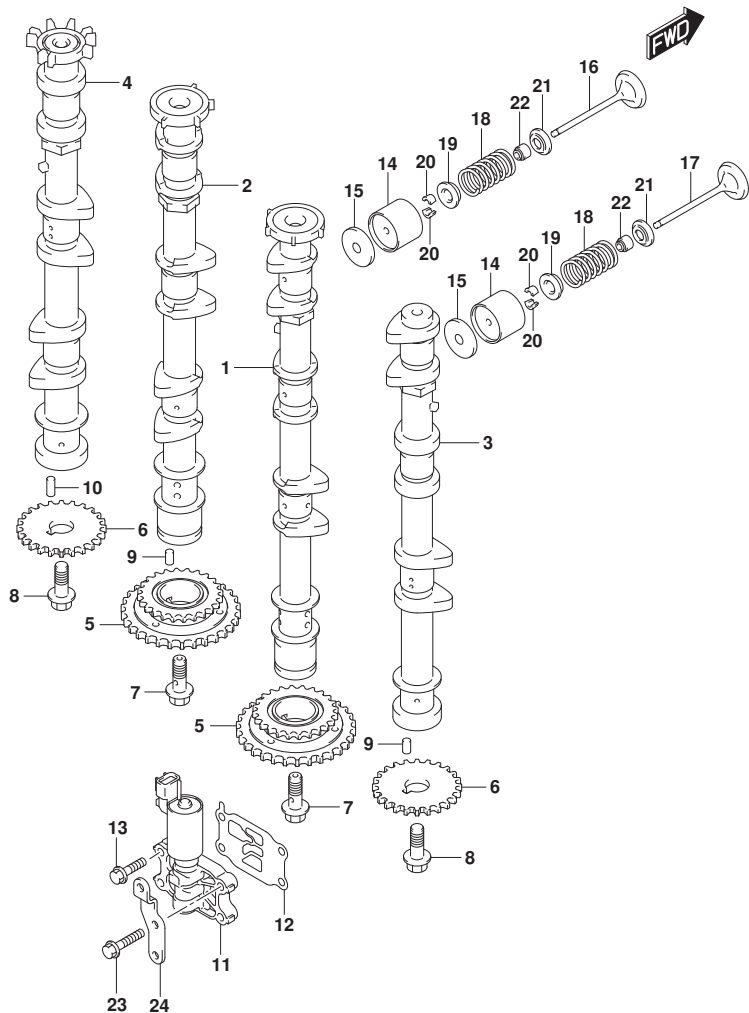

DF350A_000_024_121B
CAMSHAFT

FIG.121B (1-B-9) カムシャフト

見出番号	品番	品名	使用個数	備考	標準作業時間
1	12701-98L50	カムシャフト, インテークスターボート	1	STBD	
2	12705-98L40	カムシャフト, インテークポート	1	PORT	
3	12721-98L30	カムシャフト, エキゾーストスターボート	1	STBD	
4	12729-98L30	カムシャフト, エキゾーストポート	1	PORT	
5	12740-98L00	スプロケットアッシ, カムタイミング (NT:22/32)	2		
6	12748-93J00	スプロケット, カムシャフト (NT:22)	2		
7	12753-93J00	ボルト, インテークカムシャフト	2		
8	12749-93J00	ボルト, カムシャフト	2		
9	09202-05032	ピン (5X12)	3		
10	09261-05006	ピン (5X18)	1		
11	16550-93J00	パルプ, オイルコントロール	2		
12	16555-93J01	ガスクワツ, オイルコントロールパルプ	2		
13	01550-0625C	ボルト (6X25)	6		
14	12891-93J10	タペット	24		
15-1	12892-93J10-218	シム, タペット (T:2.175)	AR		
15-2	12892-93J10-220	シム, タペット (T:2.200)	AR		
15-3	12892-93J10-223	シム, タペット (T:2.225)	AR		
15-4	12892-93J10-225	シム, タペット (T:2.250)	AR		
15-5	12892-93J10-228	シム, タペット (T:2.275)	AR		
15-6	12892-93J10-230	シム, タペット (T:2.300)	AR		
15-7	12892-93J10-233	シム, タペット (T:2.325)	AR		
15-8	12892-93J10-235	シム, タペット (T:2.350)	AR		
15-9	12892-93J10-238	シム, タペット (T:2.375)	AR		
15-10	12892-93J10-240	シム, タペット (T:2.400)	AR		
15-11	12892-93J10-243	シム, タペット (T:2.425)	AR		
15-12	12892-93J10-245	シム, タペット (T:2.450)	AR		
15-13	12892-93J10-248	シム, タペット (T:2.475)	AR		
15-14	12892-93J10-250	シム, タペット (T:2.500)	AR		
15-15	12892-93J10-253	シム, タペット (T:2.525)	AR		
15-16	12892-93J10-255	シム, タペット (T:2.550)	AR		
15-17	12892-93J10-258	シム, タペット (T:2.575)	AR		
15-18	12892-93J10-260	シム, タペット (T:2.600)	AR		
15-19	12892-93J10-263	シム, タペット (T:2.625)	AR		
15-20	12892-93J10-265	シム, タペット (T:2.650)	AR		
15-21	12892-93J10-268	シム, タペット (T:2.675)	AR		

DF350A_000_024

FIG.121B

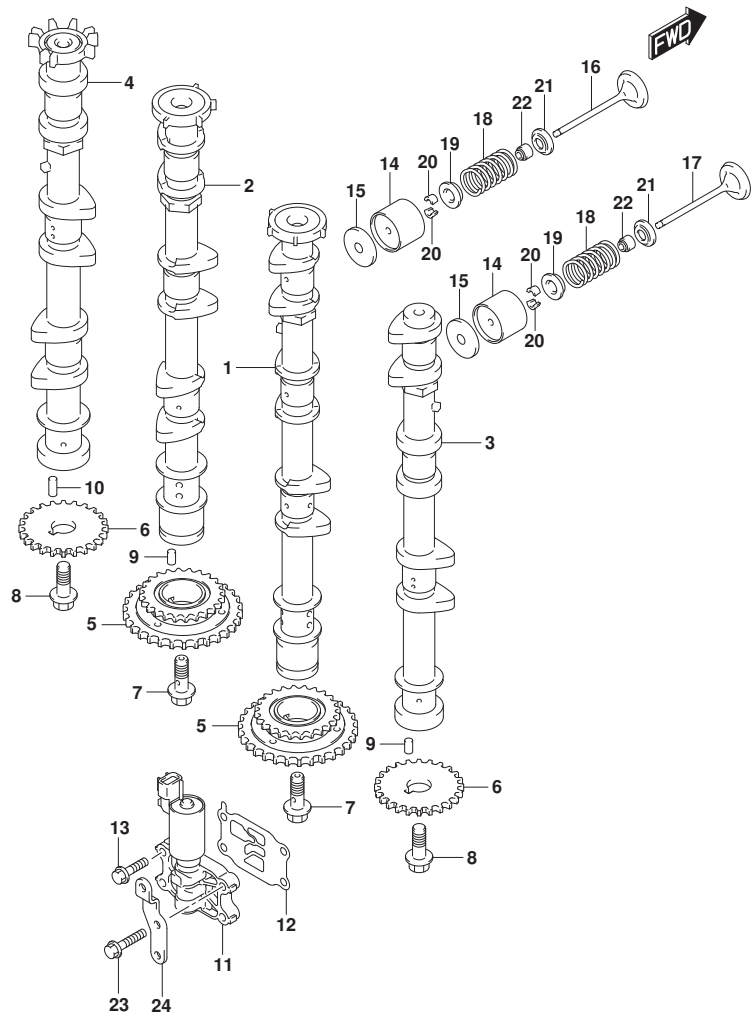


FIG. 121B (1-B-10) カムシャフト

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
15-22	12892-93J10-270	シム, タハ° ット (T:2.700)	AR		
15-23	12892-93J10-273	シム, タハ° ット (T:2.725)	AR		
15-24	12892-93J10-275	シム, タハ° ット (T:2.750)	AR		
15-25	12892-93J10-278	シム, タハ° ット (T:2.775)	AR		
15-26	12892-93J10-280	シム, タハ° ット (T:2.800)	AR		
15-27	12892-93J10-283	シム, タハ° ット (T:2.825)	AR		
15-28	12892-93J10-285	シム, タハ° ット (T:2.850)	AR		
15-29	12892-93J10-288	シム, タハ° ット (T:2.875)	AR		
15-30	12892-93J10-290	シム, タハ° ット (T:2.900)	AR		
15-31	12892-93J10-293	シム, タハ° ット (T:2.925)	AR		
15-32	12892-93J10-295	シム, タハ° ット (T:2.950)	AR		
15-33	12892-93J10-298	シム, タハ° ット (T:2.975)	AR		
15-34	12892-93J10-300	シム, タハ° ット (T:3.000)	AR		
16	12911-98L00	バ° ルフ°, インテーク	12		
17	12915-98L00	バ° ルフ°, エキゾースト	12		
18	12921-98L00	スプ° リング°, バ° ルフ°	24		
19	12931-78G00	リテーナ, バ° ルフ° スプ° リング°	24		
20	12932-24400	コツタ, バ° ルフ°	48		
21	12933-69G10	シート, バ° ルフ° スプ° リング°	24		
22	09289-05012	シール, オイル (5.5X11.5X9.3)	24		
23	01550-0630C	ホ° ルト (6X30)	2		
24	36617-98L40	プ° ラケツト, ハーネス	1		

FIG.122A

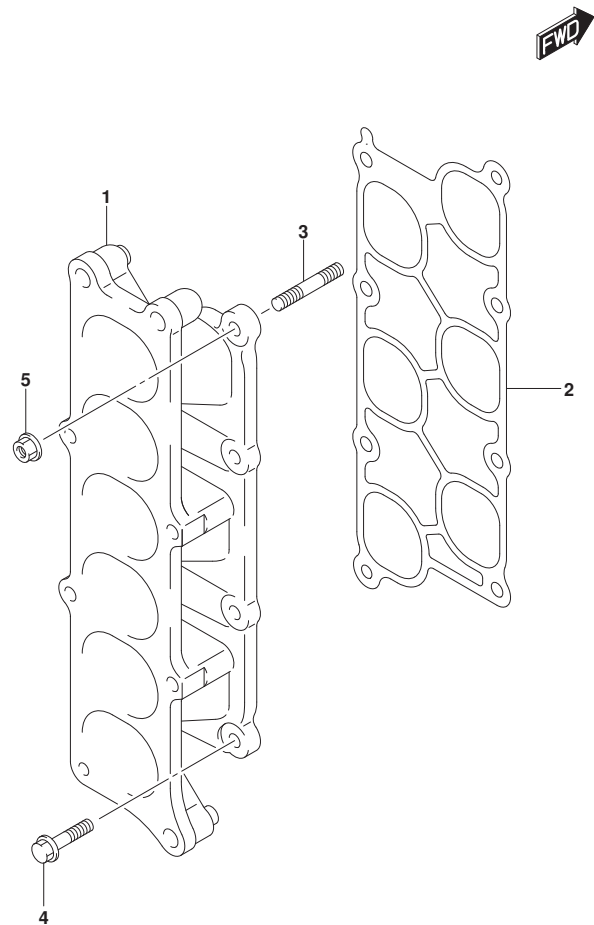


FIG. 122A (1-B-11) インテークマニホールド

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	13111-98L00	マニホールド, インテーク	1		
2	13119-98L00	ガスケット, インテークマニホールド	1		
3	09108-08143	ボルト, スタッド (L:35)	2		
4	09116-08175	ボルト (8X35)	6		
5	08316-1008C	ナット	2		

FIG.136A

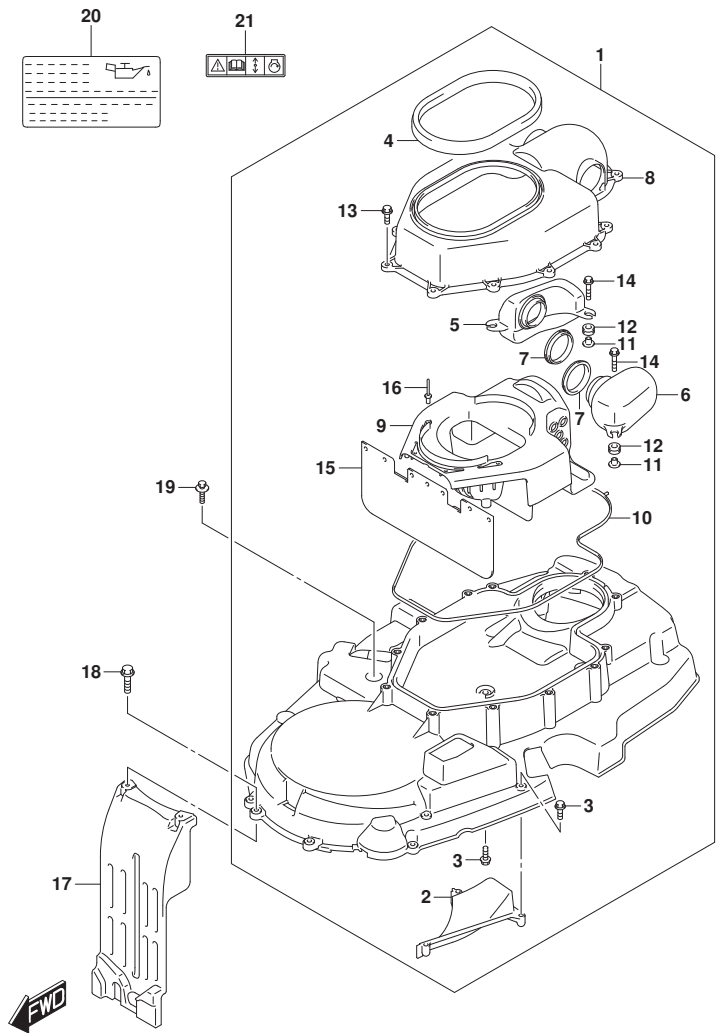


FIG. 136A (1-B-12) リンギギヤカバー

見出番号	品番	品名	使用個数	備考	標準作業時間
1	11510-98L20	カバー, リンギギヤ	1		
2	11514-98J00	プレート, リンギギヤカバー	1		
3	11517-98J00	スクリュー	6		
4	11531-98L00	シール, サイレンサアツパ	1	アツパ	
5	13761-98L00	レゾネータ, スターボート	1	STBD	
6	13762-98L00	レゾネータ, ボート	1	PORT	
7	13766-98L00	クロメツト, レゾネータ	2		
8	13811-98L00	サイレンサ, アツパカバー	1	アツパ	
9	13812-98L01	サイレンサ, インナ	1		
10	13851-98L00	シール, サイレンサ	1		
11	09169-06062	ワッシャ (6.3X17X1.6)	4		
12	09320-09016	クッション (9X18X9.5)	4		
13	01550-0620C	ボルト (6X20)	8		
14	01550-0630C	ボルト (6X30)	4		
15	13824-98L10	サイレンサ, インナフロント	1		
16	09229-04055	リベット	4		
17	11522-98L01	カバー, リンギギヤフロント	1		
18	01550-0625C	ボルト (6X25)	4		
19	09103-06551	ボルト (6X30)	4		
20	61494-93J01	ラベル, オイル/クリアランス	1		
21	69711-93E11	ラベル, S. I. G. P. (S. I. G. P.)	1		

FIG.140A

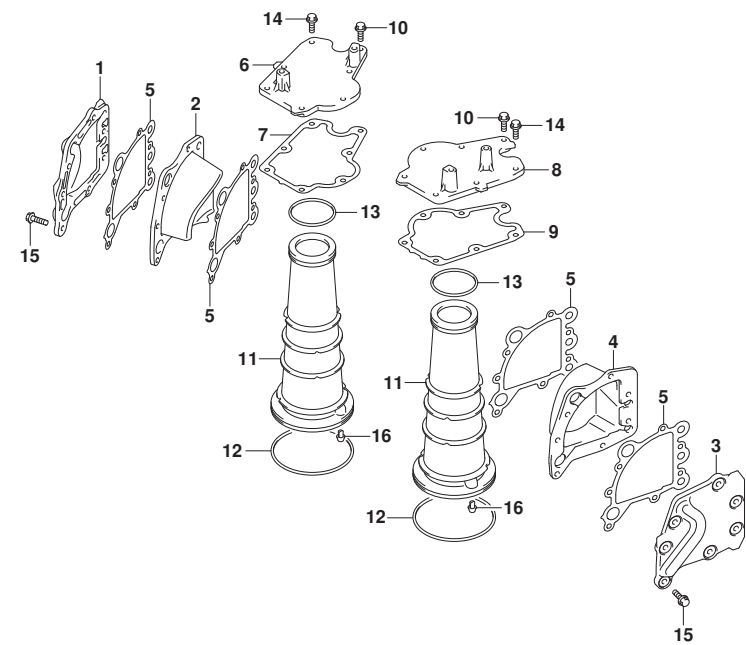


FIG. 140A (1-B-13) エキゾーストカバー

見出番号	品番	品名	使用個数	備考	標準作業時間
1	14141-98L00	カバー,エキゾーストアウタスターボート	1	STBD	
2	14161-98L00	カバー,エキゾーストインナスターボート	1	STBD	
3	14142-98L00	カバー,エキゾーストアウタボート	1	PORT	
4	14162-98L00	カバー,エキゾーストインナボート	1	PORT	
5	14151-98L00	ガスケット,エキゾーストカバー	4		
6	14171-98L00	カバー,エキゾーストアツハスターボート	1	STBD	
7	14181-98L01	ガスケット,エキゾーストアツハカバースターボート	1	STBD	
8	14172-98L00	カバー,エキゾーストアツハボート	1	PORT	
9	14182-98L01	ガスケット,エキゾーストアツハカバーボート	1	PORT	
10	09116-06531	ボルト (6X20)	2		
11	14111-98L01	パイプ,エキゾーストインナ	2		
12	09280-00049	リング (D:3.5, ID:99.6)	2		
13	09280-55001	リング (D:3.5, ID:54.4)	2		
14	01550-0620C	ボルト (6X20)	12		
15	01550-0625C	ボルト (6X25)	14		
16	14112-98L00	クワシヨン,エキゾーストパイプ	4		

FIG.144B

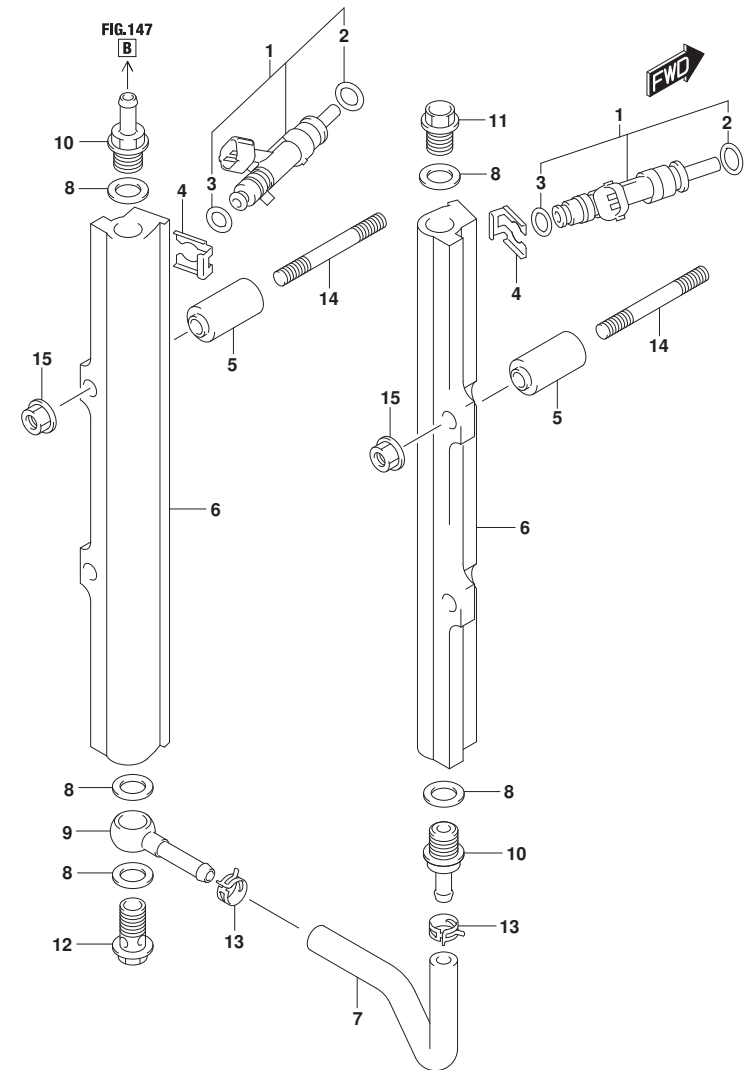


FIG. 144B (1-B-14) フューエルインジクタ

見出番号	品番	品名	使用個数	備考	標準作業時間
1	15710-98L10	インジクタアツシ、フューエル	12		
2	15716-82M00	.Oリング	12	07	
3	15717-82M00	.Oリング	12	77ハ-	
4	15715-98L00	クリツフ、インジクタ	12		
5	15735-98L00	インシユレータ、デリバリハイフ	4		
6	15751-98L00	ハイフ、デリハリ	2		
7	15756-98L00	ホース、フューエル	1	DLVY TO DLVY	
8	15762-93J00	ガスケット、デリハリハイフ	5		
9	15830-77EA0	ジヨイント、フューエルメイン	1		
10	15831-93J01	ユニオン、デリハリハイフ	2		
11	09247-14041	ブラグ (14X14)	1		
12	09360-14009	ユニオン (14X27)	1		
13	09401-11425	クリツフ	2		
14	09108-08189	ホルト、スタツト (L:55)	4		
15	08316-1008C	ナツト	4		

FIG.147B


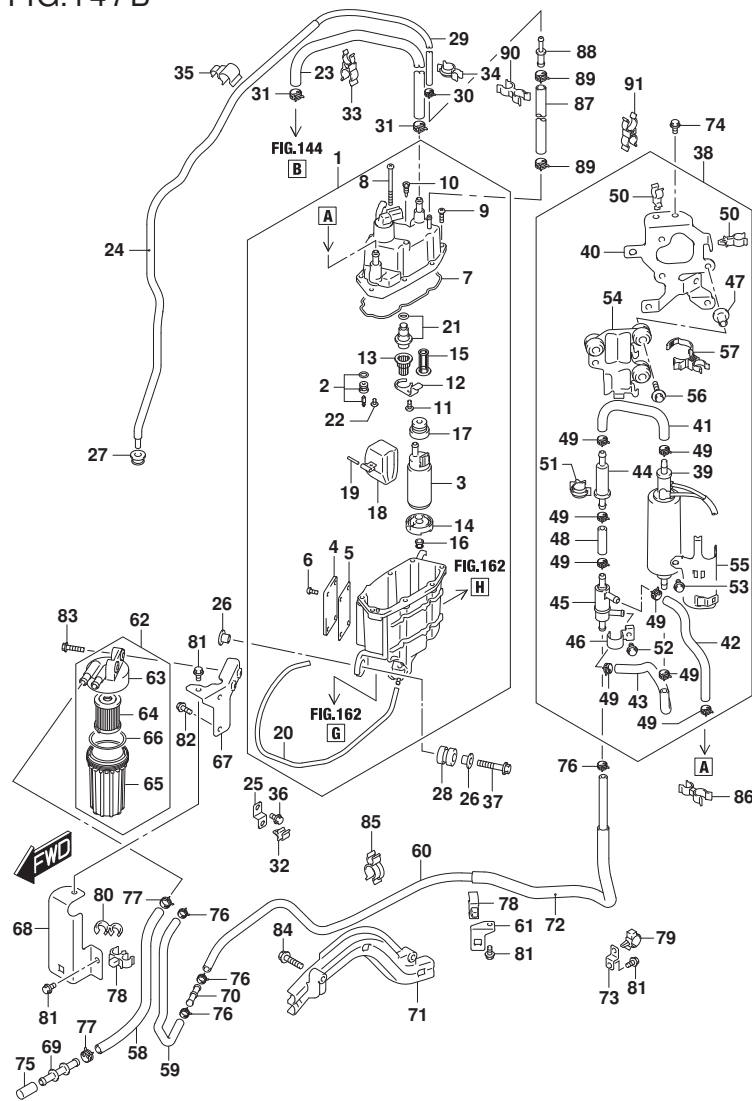


FIG. 147B (1-B-15) フューエルポンプ / フューエルベーパーセパレータ

見出番号	品番	品名	使用個数	備考	標準作業時間
1	15600-98L21	セパレータアツシ, フューエルベーパー	1		
2	13370-93J10	.バルブアツシ, ニードル	1		
3	15200-98L00	.ポンプアツシ, フューエル	1		
4	15612-98L00	.カバー	1		
5	15613-98L00	.ガasket	1		
6	15614-98L00	.スクリュー	4		
7	15626-93J00	.ガasket, セパレータ	1		
8	15627-93J00	.スクリュー	1		
9	15628-99E00	.スクリュー (L:15)	6		
10	15629-99E10	.スクリュー, ドレーン	2		
11	15631-98L00	.スクリュー	1		
12	15638-98L00	.プレート	1		
13	15639-98L00	.カバー	1		
14	15641-98L01	.スベーサ	1		
15	15642-88L10	.フィルタ	1		
16	15642-90J00	.フィルタ	1		
17	15647-98L00	.ブツシユ, フューエルポンプ	1		
18	15650-93J00	.フロートアツシ	1		
19	15654-99E00	.ヒート	1		
20	15683-98L00	.ホース, ドレーン	1		
21	15760-98L00	.レギュレータ, フューエルフ レツヤ	1		
22	02142-0408B	.スクリュー	1		
23	15681-98L01	.ホース, フューエル	1		
24	18498-98L21	.ブロータ, エバホーホース (9.5X11.5X825)	1		
25	36617-93J10	.ブラケット, ハーネス	1		
26	09169-08042	.ワッシャ (8.5X22X2)	6		
27	09320-08520	.クワシヨ	1		
28	09320-12094	.クワシヨ	3		
29	09352-50003-06A	.ホース (5X8.2X1060)	1		
30	09401-08412	.クリツブ	1		
31	09401-11425	.クリツブ	2		
32	09403-07323	.クランブ	1		
33	09408-00056	.クリツブ (D1:12, D2:8)	1		
34	09408-00142	.クリツブ	1		
35	09408-00198	.クランブ	3		

FIG.147B

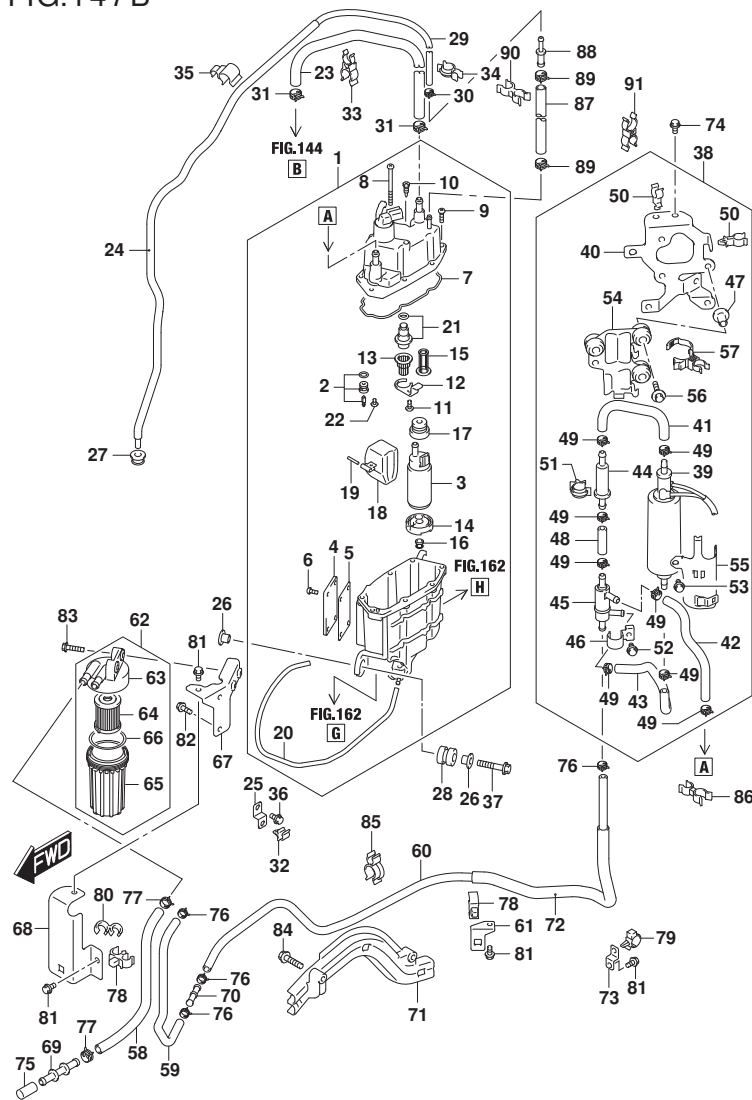

DF350A_000_024_147B
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG. 147B (1-B-16) フューエルポンプ/フューエルベーパーセパレータ

見出番号	品番	品名	使用個数	備考	標準作業時間
36	01550-0612C	ホルト (6X12)	1		
37	01550-0840C	ホルト (8X40)	3		
38	15100-98L13	ポンプセット, フューエル	1		
39	15100-98J00	ポンプアッシ, フューエル	1		
40	15116-98L10	ブラケット, フューエルポンプ	1		
41	15632-98L10	ホース, フューエル	1		
42	15635-98L01	ホース, フューエル	1		
43	15637-98L10	ホース, フューエル	1		
44	15643-98L00	フィルタ, フューエル	1		
45	15645-93J10	ハルブ, チェツク	1		
46	15674-98L01	クリップ, チェツクハルブ	1		
47	09169-06093	ワッシャ	3		
48	09343-70503-040	ホース (7X12X40)	1	FILTER TO VALVE	
49	09401-11423	クリップ	8		
50	09403-13310	クランプ	2		
51	09403-16307	クランプ	1		
52	01550-0612C	ホルト (6X12)	1		
53	01570-06127	ホルト	1		
54	15114-93J00	ブラケット, フューエルポンプ NO. 1	1		
55	15115-93J02	ブラケット, フューエルポンプ NO. 2	1		
56	09116-06524	ホルト (M6)	3		
57	09408-00337	クランプ, フューエルホース	1		
58	15191-98L20	ホース, フューエル	1		
59	15192-98L00	ホース, フューエル	1		
60	15193-98L00	ホース, フューエル	1		
61	15198-98L00	ブラケット, フューエルホース	1		
62	15410-98L00	フィルタ, フューエル	1		
63	15411-93J10	キャップ, フューエルフィルタ	1		
64	15412-93J10	フィルタアッシ, フューエル	1		
65	15413-98L00	ケースアッシ, フューエルフィルタ	1		
66	15415-93J10	シール, フューエルフィルタNO. 1	1		
67	15421-98L01	ブラケット, フューエルフィルタ	1		
68	15423-98L00	ガード, フューエルホース	1		
69	15830-98J01	ジヨイント, フューエルホース	1		
70	15831-96J00	ユニオン, 2ウェイフューエルホース	1		

DF350A_000_024

FIG.147B

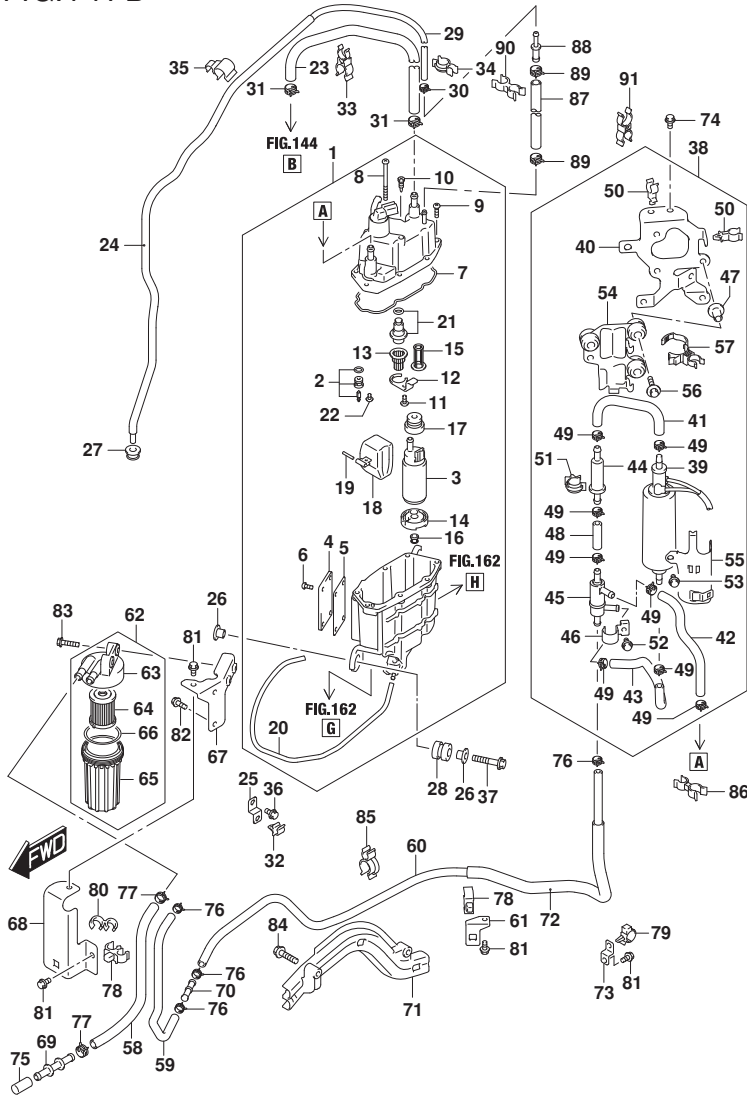


FIG.147B (1-C-2) フューエルポンプ / フューエルベーパーセパレータ

見出番号	品番	品名	使用個数	備考	標準作業時間
71	15852-98L00	ガイド, フューエルホース	1		
72	18498-99E11	プロテクタ, フューエルホース (L:610)	1	L:610->450	
73	36617-93J10	ブラケット, ハーネス	1		
74	09103-06267	ボルト (6X18)	2		
75	09251-09009	プラグ (OD:13.6)	1		
76	09401-11423	クリップ	4		
77	09401-14409	クリップ	2		
78	09403-13308	クランプ	2		
79	09403-17403	クランプ	1		
80	09408-00121	クランプ	1		
81	01550-0612C	ボルト (6X12)	4		
82	01550-0616C	ボルト (6X16)	2		
83	01550-0625C	ボルト (6X25)	2		
84	01550-0630C	ボルト (6X30)	2		
85	09408-00142	クリップ	1		
86	09408-00054	クランプ	1		
87	09343-70503-600	ホース (7X12X600)	1	L:600->240	
88	15695-98L00	ユニオン, エバホレーション	1		
89	09401-11423	クリップ	2		
90	09408-00050	クリップ (ID:12X2)	1		
91	09408-00173	クランプ	2		

FIG.160B

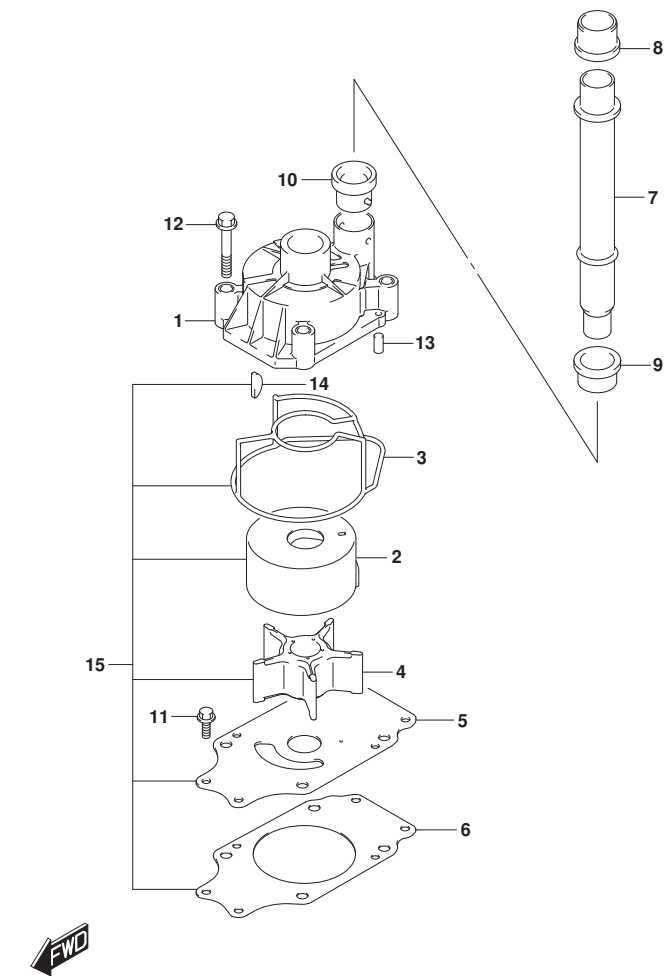


FIG. 160B (1-C-3) ウォータポンプ

見出番号	品番	品名	使用個数	備考	標準作業時間
1	17410-93J01	ケース, ウォータポンプ	1		
2	17413-93J02	スリーブ, ウォータポンプ ケース	1		
3	17416-93J01	シール, ウォータポンプ ケース	1		
4	17461-93J01	インペラ, ウォータポンプ	1		
5	17471-87M00	パネル, ホンダ ケースアンダ	1		
6	17472-87M00	ガスケット, ホンダ ケースパネル	1		
7-1	17560-98L00	チューブ, ウォータ	1	X-TRANSOM	
7-2	17560-98L10	チューブ, ウォータ	1	XX-TRANSOM	
8	17562-98L00	プッシュ, ウォータチューブ アッパ	1	アッパ	
9	17563-98L00	プッシュ, ウォータチューブ ロア	1	ロア	
10	17564-93J01	プッシュ, ウォータポンプ ケース	1		
11	29116-93J00	ボルト (6X20)	4		
12	09116-08131	ボルト (8X45)	4		
13	09202-06031	ピン (6X12)	2		
14	09420-05009	キー	1		
15	17400-87M00	キット, ウォータポンプ リペア	1	オプション	

FIG.162A

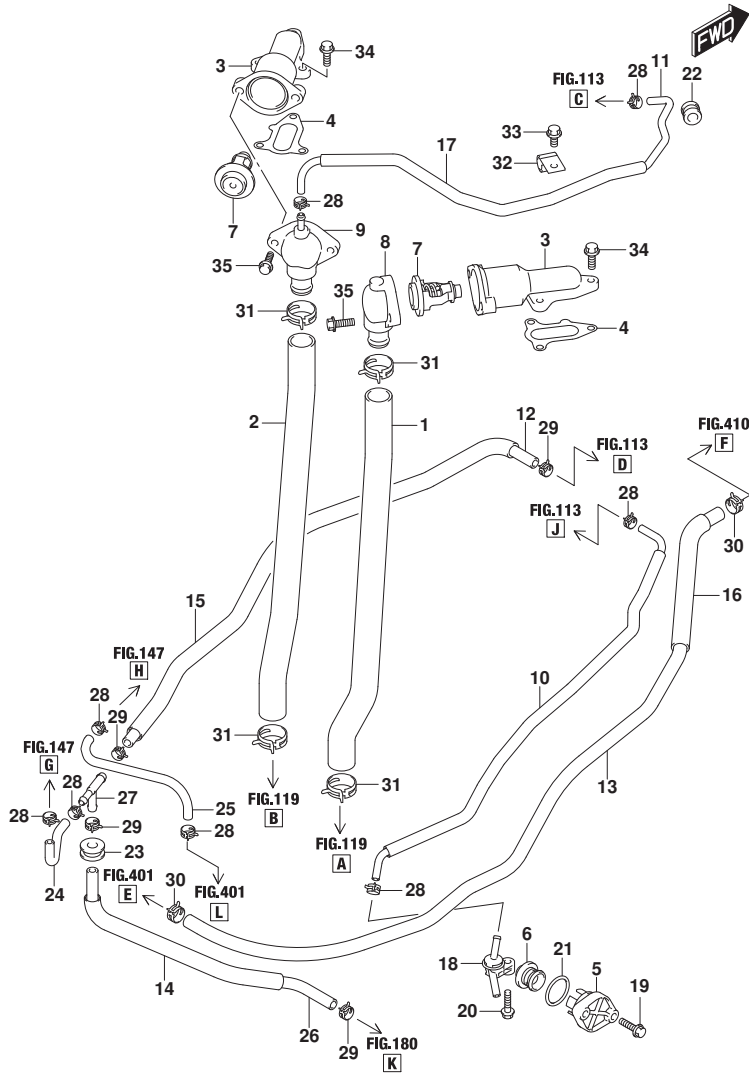


FIG.162A (1-C-4) サーマスタット

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	11196-98L00	ホース, ウォータリターンスターボート	1	STBD	
2	11197-98L00	ホース, ウォータリターンボート	1	PORT	
3	17581-98L00	パイプ, ウォータアウトレット	2		
4	17582-93J00	ガスケット, ウォータアウトレットパイプ	2		
5	17611-90J00	カバー, ウォータフレスシャベル	1		
6	17660-98L01	バルブ, ウォータフレス	1		
7-1	17670-98L20	サーモスタット, ウォータ60°C (60°C)	2		
7-2	17670-98L10	サーモスタット, ウォータ70°C (70°C)	2	オプション	
8	17680-98L00	カバー, サーマスタット	1	STBD	
9	17680-98L10	カバー, サーマスタット	1	PORT	
10	17710-98L00	ホース, ウォータ	1	CASE TO W/I	
11	17712-98L00	ホース, ウォータ	1	CASE JKT TO THERM O	
12	17714-98L00	ホース, ウォータ	1	3WAY TO CASE JKT	
13	17915-98L00	ホース, ウォータフラス	1		
14	18498-99E11	ブローケット, フューエルホース (L:610)	1	L:610->320	
15	18498-99E11	ブローケット, フューエルホース (L:610)	1	L:610->540	
16	18498-87J51	ブローケット, エバホース (L:160)	1		
17	18498-96L41	ブローケット (10.2X11.8X430)	1		
18	51170-98L00	ブローケット, ウォータインジケータ	1		
19	09116-06121	ホルト (6X25)	2		
20	09116-06121	ホルト (6X25)	1		
21	09280-26006	Oリング (D:3.1, ID:26.4)	1		
22	09320-09059	クッション (9X18X14)	1		
23	09320-10076	クッション (10X24X11)	1		
24	09352-50006-600	ホース (5X9X600)	1	3WAY TO VST, L:600 ->110	
25	09352-50006-600	ホース (5X9X600)	1	VST TO E/H COVER, L:600->170	
26	09352-70119-600	ホース (7X11X600)	1	OIL PAN TO 3WAY, L: :600->400	
27	09367-08005	3ウェイ	1		
28	09401-08413	クリップ	8		
29	09401-11424	クリップ	4		
30	09401-13425	クリップ	2		

FIG.162A


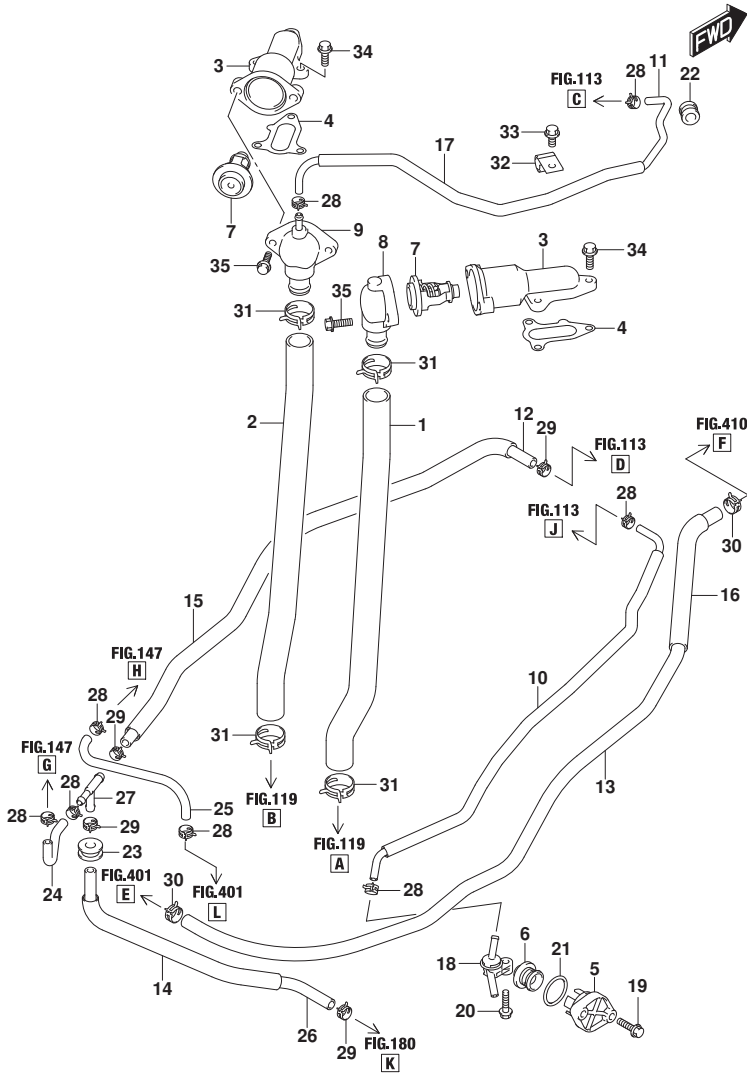


FIG. 162A (1-C-5) サーマスタット

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
31	09401-25406	クリップ	4		
32	09403-13414	クランプ	2		
33	01550-0612C	ボルト (6X12)	2		
34	01550-0620C	ボルト (6X20)	6		
35	01550-0620C	ボルト (6X20)	4		

FIG.163A

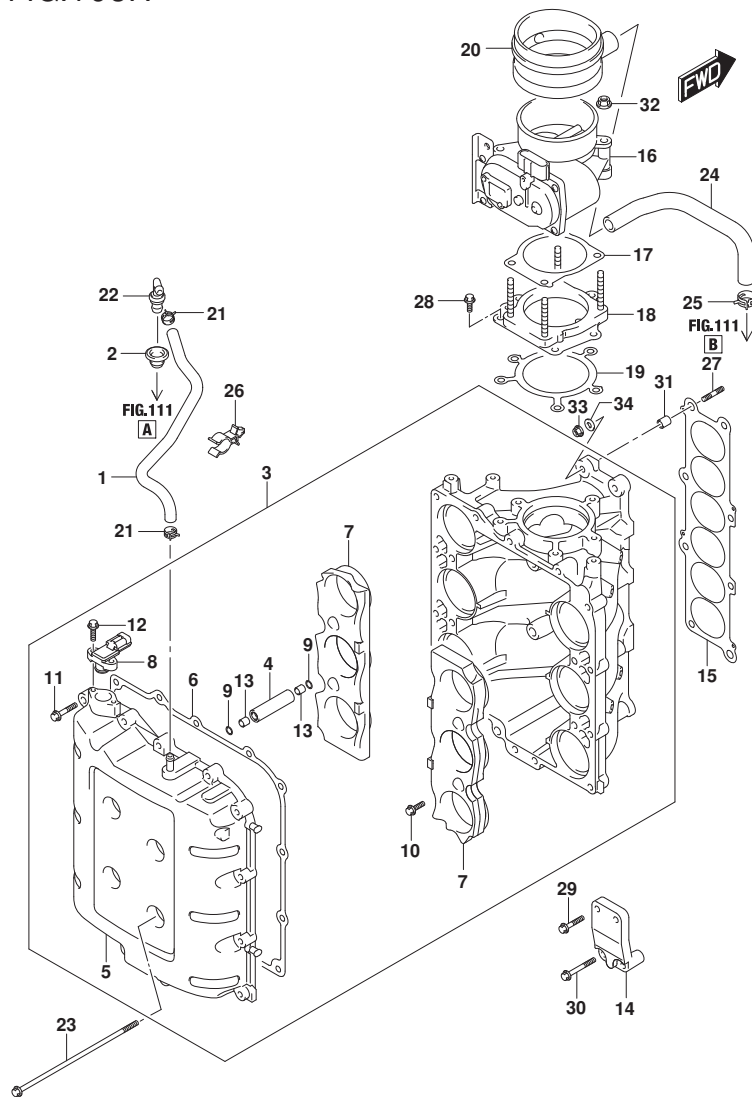

DF350A_000_024_163A
THROTTLE BODY

FIG.163A (1-C-6) スロットルホデー

見出番号	品番	品名	使用個数	備考	標準作業時間
1	11193-98J01	ホース, PCV	1		
2	11198-98L00	シール, PCVバルブ	1		
3	13100-98L10	コレクタ, アツシ	1		
4	13137-98J00	.スベ-サ, コレクタ	4		
5	13140-98L00	.カバ- , コレクタ	1		
6	13147-98J00	.ガスケツト, コレクタカバ-	1		
7	13180-98J01	.フアネル, エアコレクタ	2		
8	18590-68H00	.センサ, プレツジヤ	1		
9	09280-10009	.オリンク (D:1.3, ID:9.8)	8		
10	01550-0816C	.ボルト (8X16)	4		
11	01550-0835C	.ボルト (8X35)	10		
12	09103-05028	.ボルト (5X20)	2		
13	04211-11129	.ピ-ン (11X12)	8		
14	13134-98J00	ブラケツト, コレクタ	1		
15	13139-98J01	ガスケツト, コレクタ	1		
16	13300-98L00	ホデーアツシ, スロットル	1		
17	13343-98J20	ガスケツト, スロットルホデー	1		
18	13315-98J11	ダンパ, スロットルホデー	1		
19	13421-98L00	ガスケツト, スロットルホデー	1		
20	13813-98L01	ゲロメツト, スロットルホデー	1		
21	09401-13423	クリツブ	2		
22	18118-93J00	バルブ, PCV	1		
23	09103-08370	ボルト (8X250)	6		
24	11174-98L01	ホース, プレ-サ	1		
25	09401-18410	クリツブ	1		
26	09403-13310	クランプ	1		
27	01421-0835C	ボルト, スタツト	2		
28	01550-0816C	ボルト (8X16)	5		
29	01550-0835C	ボルト (8X35)	2		
30	01550-0860C	ボルト	2		
31	04211-11129	ピ-ン (11X12)	2		
32	09159-08136	ナツト (M8)	4		
33	08316-1008C	ナツト	2		
34	09160-08161	ワツシヤ (8.2X23X3.2)	2		

DF350A_000_024

FIG.175A

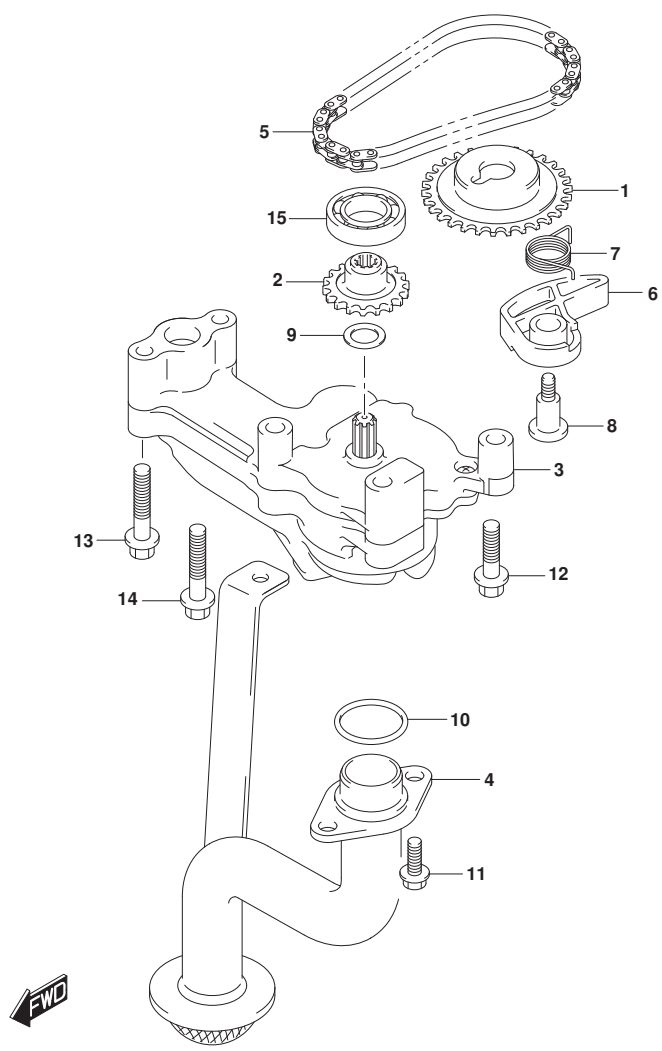


FIG. 175A (1-C-7) オイルポンプ

見出番号	品番	品名	使用個数	備考	標準作業時間
1	12632-93J11	スプロケット, オイルポンプドライブ (NT:32)	1		
2	16113-93J10	スプロケット, オイルポンプドライブ (NT:18)	1		
3	16400-93J20	ポンプアブ, オイル	1		
4	16520-93J00	ストレーナ, オイルポンプ	1		
5	16760-93J00	チェーン, オイルポンプドライブ	1		
6	16781-93J00	テンション, オイルポンプチェーン	1		
7	16782-93J00	スプリング, オイルポンプテンション	1		
8	16783-93J01	ホルト, オイルポンプテンション	1		
9	09181-12158	シム (12X20X0.5)	1		
10	09280-22020	Oリング (D:2.4, ID:21.8)	2		
11	01550-0616A	ホルト (6X16)	3		
12	01550-0845A	ホルト	1		
13	01550-0865A	ホルト	3		
14	01550-0885A	ホルト	1		
15	08110-60020	ベアリング	1		

FIG.180A

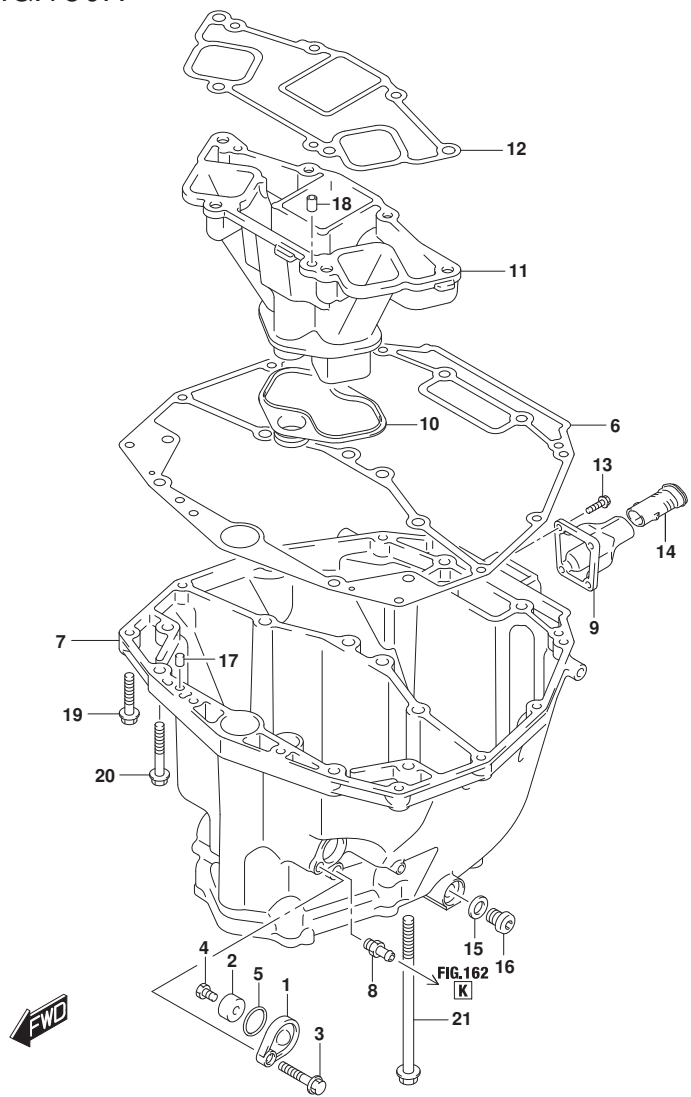


FIG. 180A (1-C-8) オイルパン

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	11261-93J10	カバー, プ ロテクションアノード	1		
2-1	55321-87J01	アノード, プ ロテクション	1		
2-2	55321-87J11	アノード (MAGNESIUM)	1	オプション	
3	29103-93J30	ボルト (8X25)	1		
4	09128-06094	ボルト (6X14)	1		
5	09280-22019	リング (D:1.9, ID:21.8)	1		
6	11489-98L00	ガ スケット, オイルパン	1		
7-1	11501-98L00-YAY	パン, オイル (ブラック)	1	BODY COLOR:YAY	
7-2	11501-98L00-QTN	パン, オイル (ホワイト)	1	BODY COLOR:QTN	
8	11591-98L00	ユニオン, オイルパン	1		
9	11541-93J00-YAY	パイプ, エキゾースト (ブラック)	1		
10	14154-93J02	シール, エキゾーストチューブ	1		
11	14211-98L00	チューブ, エキゾースト	1		
12	14212-98L00	ガ スケット, エキゾーストチューブ	1		
13	29116-93J00	ボルト (6X20)	4		
14	11435-98L01	パイプ, エキゾーストレリーズ	1		
15	09168-12012	ガ スケット (12.5X20X2.5)	1		
16	09248-12009	ブラケット (12X18.65)	1		
17	09202-08006	ピン (8X12)	2		
18	09202-08006	ピン (8X12)	2		
19	09116-08128	ボルト (8X40)	10		
20	09116-10176	ボルト (10X44)	4		
21	09116-10187	ボルト (10X200)	2		

FIG.204B

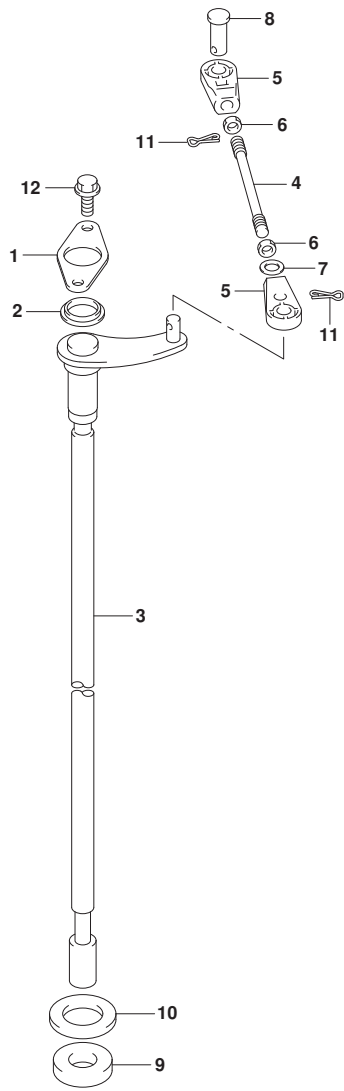


FIG. 204B (1-C-9) クラッチシャフト

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	21152-98L00	ブ レート, クラッチシャフト	1		
2	21153-98L00	ブ ッシュ, クラッチシャフト	1		
3	21210-98L01	シャフト, クラッチ	1		
4	21241-98L00	リンク, クラッチレバ ー	1		
5	67467-98L00	コネクタ, クラッチリンク	2		
6	09140-06023	ナット (6X3. 6)	2		
7	09160-08091	ワッシャ (8. 5X14X1. 0)	1		
8	09200-08074	ピ ン (8X17. 3)	1		
9	09262-17019	ベ アリング (17X35X8)	1		
10	09282-22008	シール, オイル (22X38X6)	1		
11	09385-08004	ピ ン, スナック (L: 19)	2		
12	01550-0616C	ホ ルト (6X16)	2		



FIG.206B

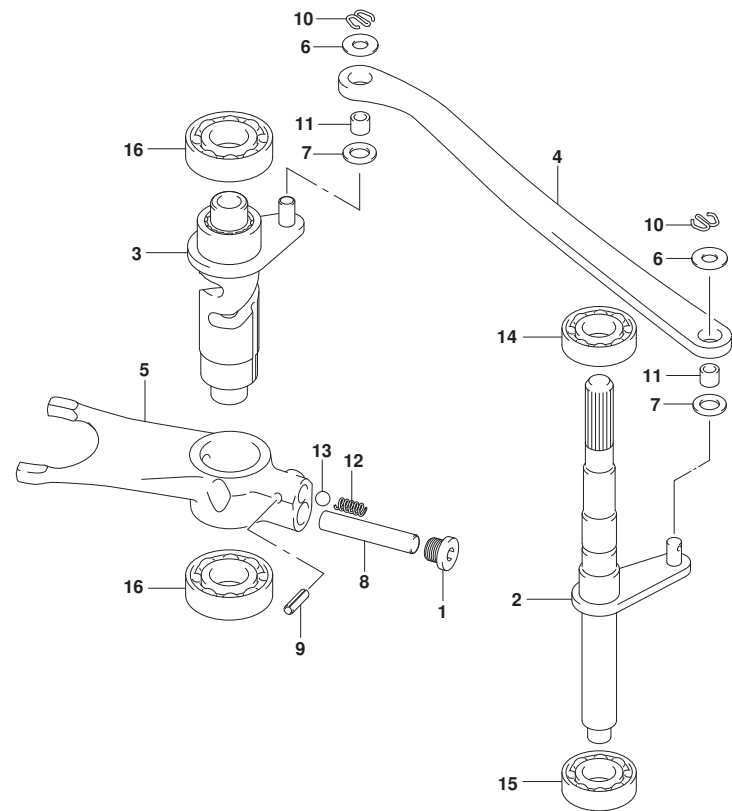


FIG. 206B (1-C-10) クラッチロッド

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	09248-10007	ブ ラグ	1		
2-1	25110-98L00	ロッド, シフト	1	X-TRANSOM	
2-2	25110-98L10	ロッド, シフト	1	XX-TRANSOM	
3	25300-87M00	カム, シフト	1		
4	25315-87M00	リンク, シフトカムアーム	1		
5	25411-87M00	フォーク, シフト	1		
6	09160-06094	ワッシャ (6. 5X15X1. 0)	2		
7	09160-08091	ワッシャ (8. 5X14X1. 0)	2		
8	09202-07003	ピン	1		
9	09205-04014	ピン (4X14)	1		
10	09204-01006	ピン	2		
11	25214-98L00	ブ ヅシユ, シフトリンク	2		
12	09440-05031	スプ リング	1		
13	06111-07004	ホ ール	1		
14	08113-60020	ベ アリング	1		
15	08113-62000	ベ アリング	1		
16	08113-60020	ベ アリング	2		



FIG.220B

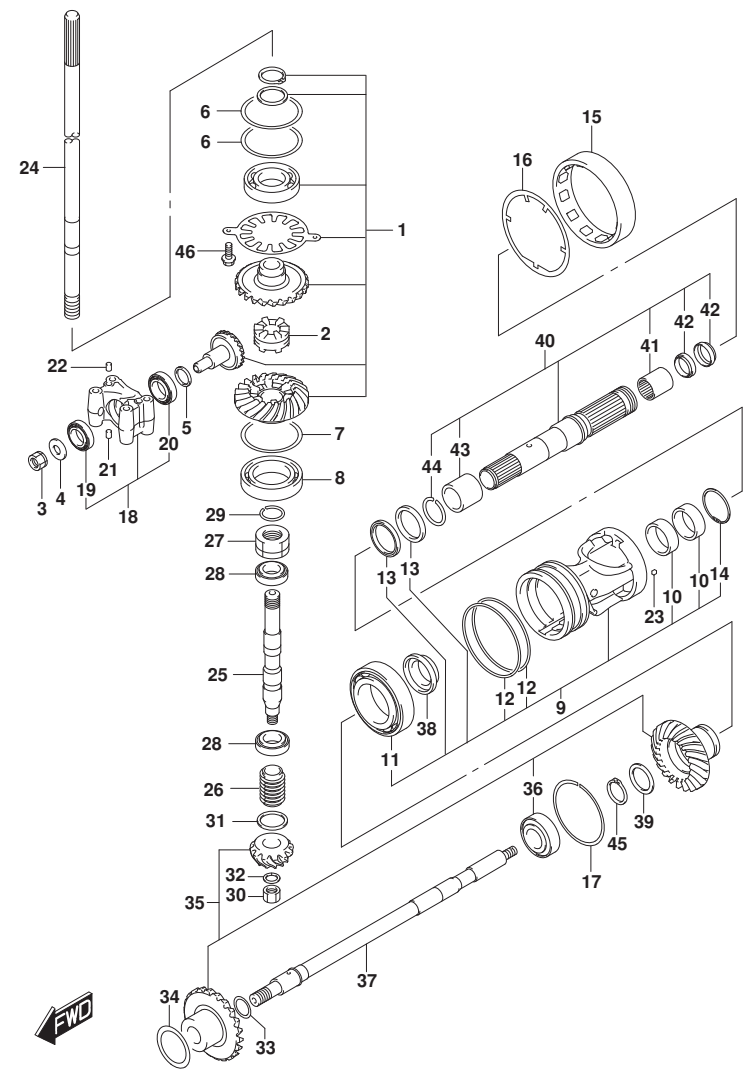


FIG. 220B (1-C-11) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	25500-87811	ギヤ/ピニオンセット, リハース	1		
2	25711-98L00	シフト, クラッチツグ	1		
3	09159-16027	ナット (M16)	1		
4	09160-16059	ワッシャ	2		
5-1	09181-25130	シム (25X32X0.5)	1		
5-2	09181-25051	シム (25X34X0.6)	1		
5-3	09181-25052	シム (25X34X0.65)	1		
5-4	09181-25053	シム (25X34X0.7)	1		
5-5	09181-25054	シム (25X34X0.75)	1		
5-6	09181-25055	シム (25X34X0.8)	1		
5-7	09181-25056	シム (25X34X0.85)	1		
5-8	09181-25057	シム (25X34X0.9)	1		
5-9	09181-25058	シム (25X34X0.95)	1		
5-10	09181-25059	シム (25X34X1)	1		
5-11	09181-25060	シム (25X34X1.05)	1		
5-12	09181-25061	シム (25X34X1.1)	1		
5-13	09181-25062	シム (25X34X1.15)	1		
5-14	09181-25063	シム (25X34X1.2)	1		
6-1	09181-65001	シム (T:0.50)	1		
6-2	09181-65002	シム (T:0.55)	1		
6-3	09181-65003	シム (T:0.60)	1		
6-4	09181-65004	シム (T:0.65)	1		
6-5	09181-65005	シム (T:0.70)	1		
6-6	09181-65006	シム (T:0.75)	1		
6-7	09181-65007	シム (T:0.80)	1		
6-8	09181-65008	シム (T:0.85)	1		
6-9	09181-65009	シム (T:0.90)	1		
6-10	09181-65010	シム (T:0.95)	1		
7-1	09181-77003	シム (77X90X0.5)	1		
7-2	09181-77004	シム (77X90X0.55)	1		
7-3	09181-77005	シム (77X90X0.6)	1		
7-4	09181-77006	シム (77X90X0.65)	1		
7-5	09181-77007	シム (77X90X0.7)	1		
7-6	09181-77008	シム (77X90X0.75)	1		
7-7	09181-77009	シム (77X90X0.8)	1		

FIG.220B

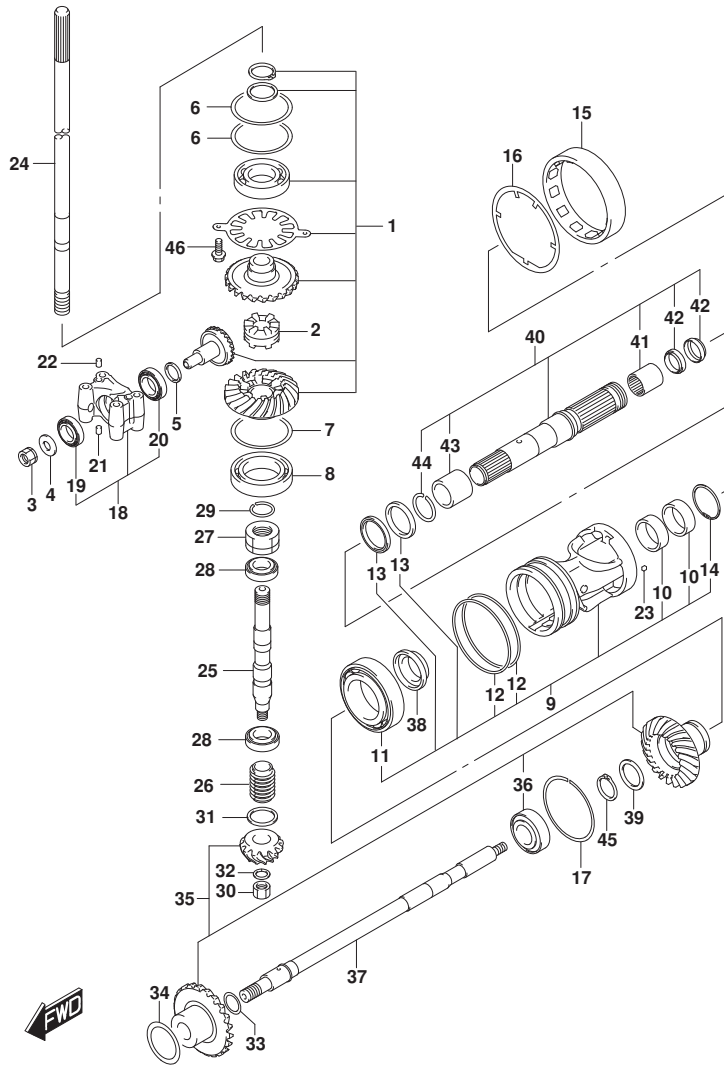


FIG. 220B (1-C-12) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
7-8	09181-77010	シム (77X90X0.85)	1		
7-9	09181-77011	シム (77X90X0.9)	1		
7-10	09181-77012	シム (77X90X0.95)	1		
7-11	09181-77013	シム (77X90X1)	1		
7-12	09181-77014	シム (77X90X1.05)	1		
7-13	09181-77015	シム (77X90X1.1)	1		
8	09262-55002	ベアリング (55X90X18)	1		
9	56120-98L10	ハウジング, プロップシャフトベアリング	1		
10	09263-45005	ベアリング (45X55X20)	2		
11	09265-50002	ベアリング (50X90X21.75)	1		
12	09280-00047	リング (D:3, ID:109)	1		
13	09282-45001	シール (45X60X8)	2		
14	08331-41559	サークリツブ	1		
15	56122-98L00	ストッパ, プロップシャフトベアリングハウジング	1		
16	56123-98L00	ワッシャ, プロップシャフトベアリングハウジング N	1		
17-1	56126-98L00	ワッシャ, プロップシャフトBRGハウジング (T:1.9)	1		
17-2	56126-98L10	ワッシャ, プロップシャフトBRGハウジング (T:2.0)	1		
17-3	56126-98L20	ワッシャ, プロップシャフトBRGハウジング (T:2.1)	1		
17-4	56126-98L30	ワッシャ, プロップシャフトBRGハウジング (T:2.2)	1		
17-5	56126-98L40	ワッシャ, プロップシャフトBRGハウジング (T:2.3)	1		
17-6	56126-98L50	ワッシャ, プロップシャフトBRGハウジング (T:2.4)	1		
17-7	56126-98L60	ワッシャ, プロップシャフトBRGハウジング (T:2.5)	1		
17-8	56126-98L70	ワッシャ, プロップシャフトBRGハウジング (T:2.6)	1		
18	56150-87M00	ハウジング, リハースビニオンベアリング	1		
19	09265-25038	ベアリング (25X47X15)	1		
20	09265-25048	ベアリング (25X52X16.25)	1		
21	04221-08129	ピン	1		
22	04221-08129	ピン	2		
23	09421-04008	キー	1		
24-1	57110-98L20	シャフト, ドライブアツパ	1	X-TRANSOM アツパ-	
24-2	57110-98L30	シャフト, ドライブアツパ	1	XX-TRANSOM アツパ-	
25	57113-87M00	シャフト, ドライブロア	1	ロア	
26	57133-87M00	カラー, ドライブシャフト	1		

FIG.220B

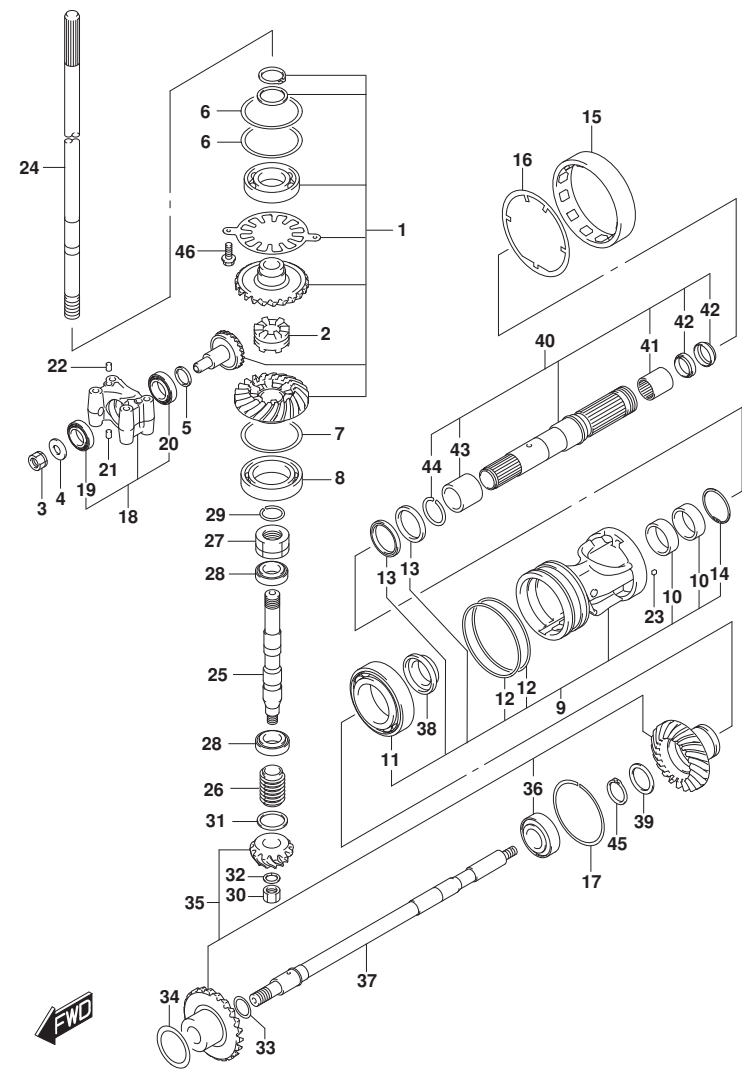


FIG. 220B (1-C-13) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
27	09159-27001	ナット, トﾞ ライブ シャフト㊦7 (M27)	1	㊦7	
28	09265-28006	ベアリング (28X52X16)	1	PART OF FIG. 407B REF. 9	
29	09380-24007	サーキット	1		
30	09159-16027	ナット (M16)	1		
31-1	09181-29003	ｼﾑ (29X50X0. 5)	1		
31-2	09181-29004	ｼﾑ (29X50X0. 6)	1		
31-3	09181-29005	ｼﾑ (29X50X0. 65)	1		
31-4	09181-29006	ｼﾑ (29X50X0. 7)	1		
31-5	09181-29007	ｼﾑ (29X50X0. 75)	1		
31-6	09181-29008	ｼﾑ (29X50X0. 8)	1		
31-7	09181-29009	ｼﾑ (29X50X0. 85)	1		
31-8	09181-29010	ｼﾑ (29X50X0. 9)	1		
31-9	09181-29011	ｼﾑ (29X50X0. 95)	1		
31-10	09181-29012	ｼﾑ (29X50X1. 05)	1		
32	08221-16256	ｼﾑ	1		
33-1	09181-25051	ｼﾑ (25X34X0. 6)	1		
33-2	09181-25052	ｼﾑ (25X34X0. 65)	1		
33-3	09181-25053	ｼﾑ (25X34X0. 7)	1		
33-4	09181-25054	ｼﾑ (25X34X0. 75)	1		
33-5	09181-25055	ｼﾑ (25X34X0. 8)	1		
33-6	09181-25056	ｼﾑ (25X34X0. 85)	1		
33-7	09181-25057	ｼﾑ (25X34X0. 9)	1		
33-8	09181-25058	ｼﾑ (25X34X0. 95)	1		
33-9	09181-25059	ｼﾑ (25X34X1)	1		
33-10	09181-25060	ｼﾑ (25X34X1. 05)	1		
33-11	09181-25061	ｼﾑ (25X34X1. 1)	1		
33-12	09181-25062	ｼﾑ (25X34X1. 15)	1		
33-13	09181-25063	ｼﾑ (25X34X1. 2)	1		
33-14	09181-25130	ｼﾑ (25X32X0. 5)	1		
34-1	09181-50020	ｼﾑ (T:0. 45)	1		
34-2	09181-50021	ｼﾑ (T:0. 50)	1		
34-3	09181-50022	ｼﾑ (T:0. 55)	1		
34-4	09181-50023	ｼﾑ (T:0. 60)	1		
34-5	09181-50024	ｼﾑ (T:0. 65)	1		

FIG.220B

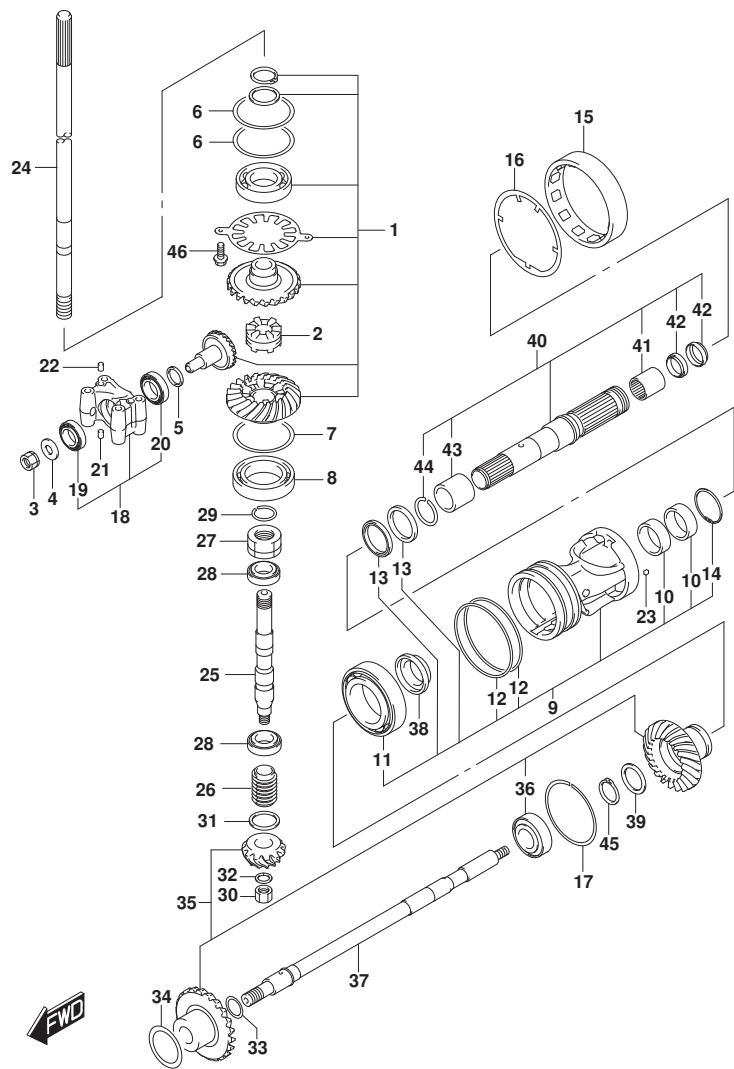


FIG. 220B (1-C-14) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
34-6	09181-50025	シム (T:0.70)	1		
34-7	09181-50026	シム (T:0.75)	1		
34-8	09181-50027	シム (T:0.80)	1		
34-9	09181-50028	シム (T:0.85)	1		
34-10	09181-50029	シム (T:0.95)	1		
35	57301-98810	ギヤセット, コントラ	1		
36	09265-30024	.ヘ アリク* (30X62X21.25)	1		
37	57610-98L00	シャフト, フロント ライン	1		
38	57622-98L00	スベ-サ, フロント シャフト	1		
39	09160-36007	ワッシャ (32X47X2)	1		
40	57600-98840	シャフトセット, フロント ラウタ	1		
41	09263-30067	.ヘ アリク*	2		
42	09289-30012	.オイルシール	2		
43	09300-40003	.フ ヅシ (40X45X40)	1		
44	09380-40004	.リング, スナツ*	1		
45	57635-98L00	ストッパ, フロント ラシャフト	1		
46	01550-06167	ホルト (6X16)	2		

NOTE 1:
FROM 32501F-440001 UPTO 32501F-440185
FROM 35001F-440001 UPTO 35001F-440577

FIG.220D

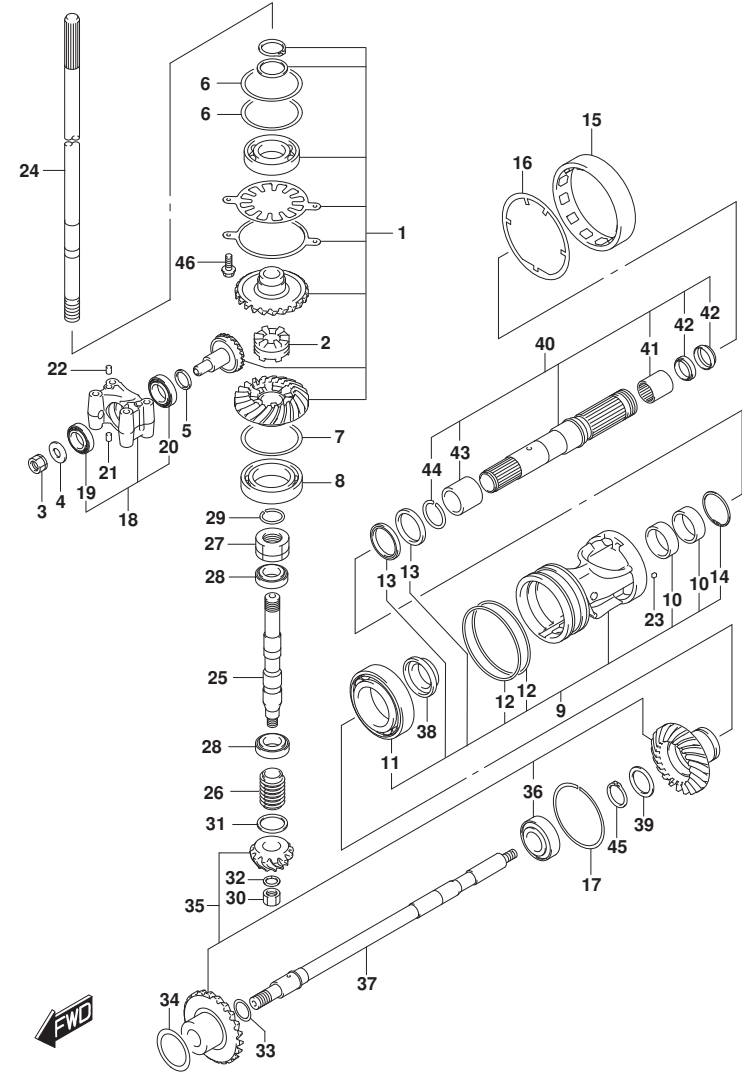


FIG. 220D (1-C-15) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	25500-87820	ギヤ/ピニオンセット, リハース	1		
2	25711-98L00	シフト, クラッチツグ	1		
3	09159-16027	ナット (M16)	1		
4	09160-16059	ワッシャ	2		
5-1	09181-25130	シム (25X32X0.5)	1		
5-2	09181-25051	シム (25X34X0.6)	1		
5-3	09181-25052	シム (25X34X0.65)	1		
5-4	09181-25053	シム (25X34X0.7)	1		
5-5	09181-25054	シム (25X34X0.75)	1		
5-6	09181-25055	シム (25X34X0.8)	1		
5-7	09181-25056	シム (25X34X0.85)	1		
5-8	09181-25057	シム (25X34X0.9)	1		
5-9	09181-25058	シム (25X34X0.95)	1		
5-10	09181-25059	シム (25X34X1)	1		
5-11	09181-25060	シム (25X34X1.05)	1		
5-12	09181-25061	シム (25X34X1.1)	1		
5-13	09181-25062	シム (25X34X1.15)	1		
5-14	09181-25063	シム (25X34X1.2)	1		
6-1	09181-65001	シム (T:0.50)	1		
6-2	09181-65002	シム (T:0.55)	1		
6-3	09181-65003	シム (T:0.60)	1		
6-4	09181-65004	シム (T:0.65)	1		
6-5	09181-65005	シム (T:0.70)	1		
6-6	09181-65006	シム (T:0.75)	1		
6-7	09181-65007	シム (T:0.80)	1		
6-8	09181-65008	シム (T:0.85)	1		
6-9	09181-65009	シム (T:0.90)	1		
6-10	09181-65010	シム (T:0.95)	1		
7-1	09181-77003	シム (77X90X0.5)	1		
7-2	09181-77004	シム (77X90X0.55)	1		
7-3	09181-77005	シム (77X90X0.6)	1		
7-4	09181-77006	シム (77X90X0.65)	1		
7-5	09181-77007	シム (77X90X0.7)	1		
7-6	09181-77008	シム (77X90X0.75)	1		
7-7	09181-77009	シム (77X90X0.8)	1		

FIG.220D

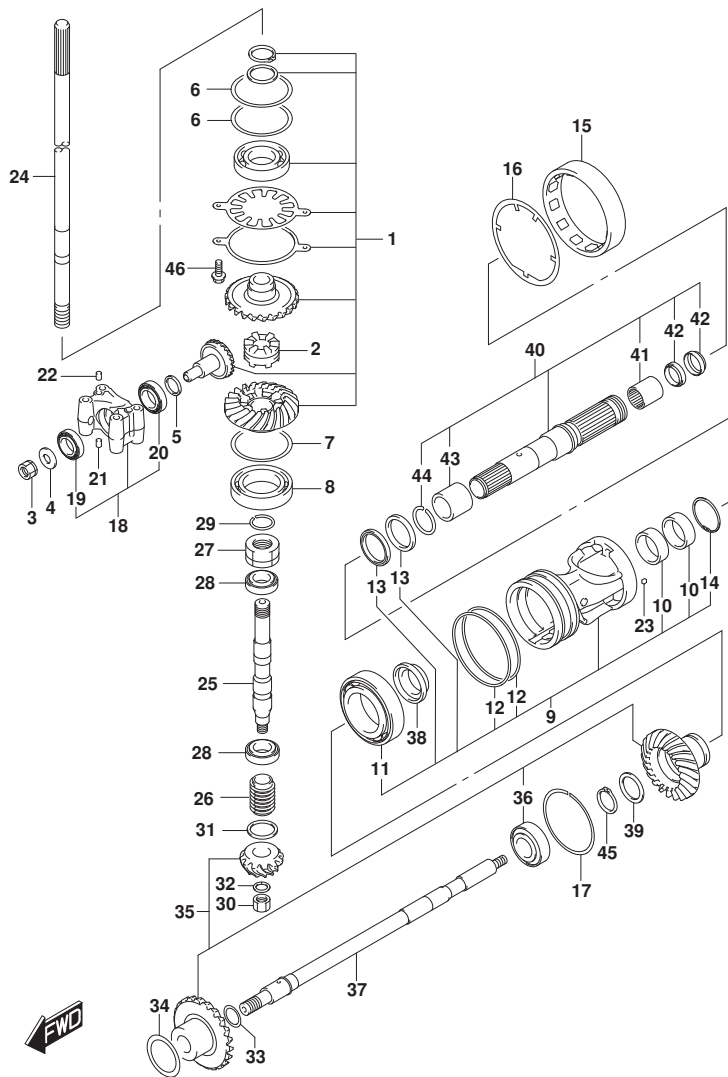


FIG. 220D (1-C-16) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
7-8	09181-77010	シム (77X90X0. 85)	1		
7-9	09181-77011	シム (77X90X0. 9)	1		
7-10	09181-77012	シム (77X90X0. 95)	1		
7-11	09181-77013	シム (77X90X1)	1		
7-12	09181-77014	シム (77X90X1. 05)	1		
7-13	09181-77015	シム (77X90X1. 1)	1		
8	09262-55002	ベアリング (55X90X18)	1		
9	56120-98L10	ハウジング, プ ロツプ シャフトベアリング	1		
10	09263-45005	.ベアリング (45X55X20)	2		
11	09265-50002	.ベアリング (50X90X21. 75)	1		
12	09280-00047	. Oリング (D:3, ID:109)	1		
13	09282-45001	. シール (45X60X8)	2		
14	08331-41559	. サークリツブ	1		
15	56122-98L00	ストツパ, プ ロツプ シャフトベアリング ハウジング	1		
16	56123-98L00	ワツシヤ, プ ロツプ シャフトベアリング ハウジング N	1		
17-1	56126-98L00	ワツシヤ, プ ロベ ラシャフトBRGハウジング (T:1. 9)	1		
17-2	56126-98L10	ワツシヤ, プ ロベ ラシャフトBRGハウジング (T:2. 0)	1		
17-3	56126-98L20	ワツシヤ, プ ロベ ラシャフトBRGハウジング (T:2. 1)	1		
17-4	56126-98L30	ワツシヤ, プ ロベ ラシャフトBRGハウジング (T:2. 2)	1		
17-5	56126-98L40	ワツシヤ, プ ロベ ラシャフトBRGハウジング (T:2. 3)	1		
17-6	56126-98L50	ワツシヤ, プ ロベ ラシャフトBRGハウジング (T:2. 4)	1		
17-7	56126-98L60	ワツシヤ, プ ロベ ラシャフトBRGハウジング (T:2. 5)	1		
17-8	56126-98L70	ワツシヤ, プ ロベ ラシャフトBRGハウジング (T:2. 6)	1		
18	56150-87M00	ハウジング, リハースビニオンベアリング	1		
19	09265-25038	.ベアリング (25X47X15)	1		
20	09265-25048	.ベアリング (25X52X16. 25)	1		
21	04221-08129	ピン	1		
22	04221-08129	ピン	2		
23	09421-04008	キー	1		
24-1	57110-98L20	シャフト, ドライブアツパ	1	X-TRANSOM アツパ-	
24-2	57110-98L30	シャフト, ドライブアツパ	1	XX-TRANSOM アツパ-	
25	57113-87M00	シャフト, ドライブロツ	1	ロツ	
26	57133-87M00	カラー, ドライブシャフト	1		

FIG.220D

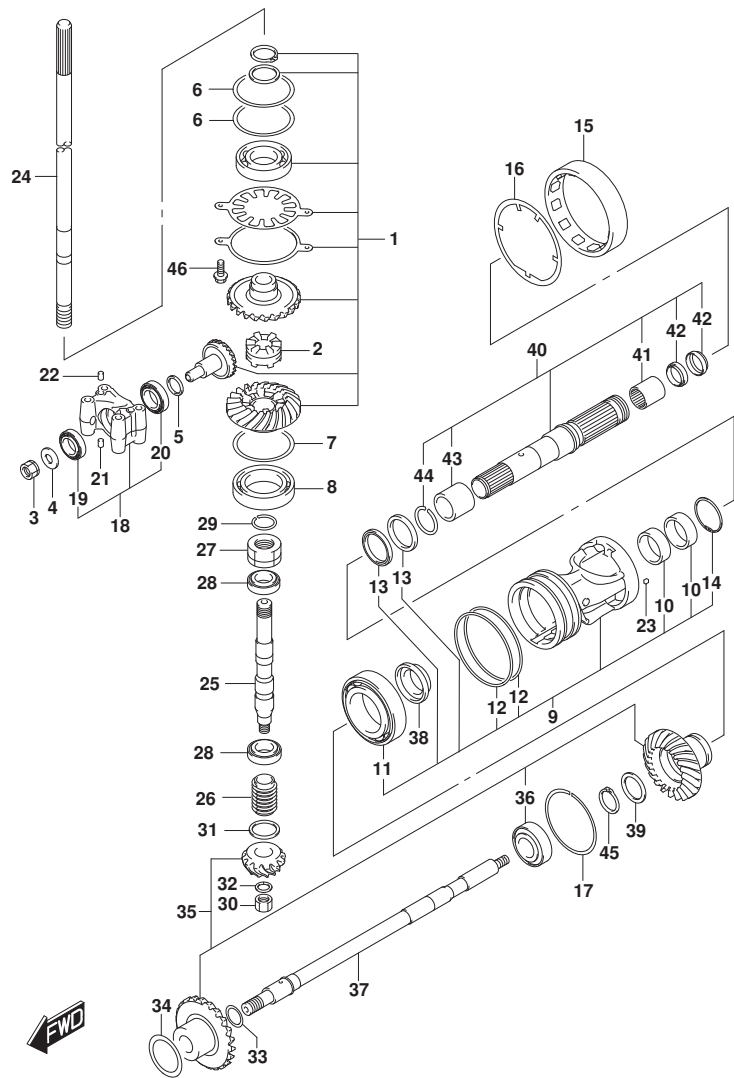


FIG. 220D (1-D-2) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
27	09159-27001	ナット, トﾞライブ シヤフト㊦7 (M27)	1	㊦7	
28	09265-28006	ベアリング (28X52X16)	1	PART OF FIG. 407B REF. 9	
29	09380-24007	サクラッパ	1		
30	09159-16027	ナット (M16)	1		
31-1	09181-29003	ｼﾑ (29X50X0. 5)	1		
31-2	09181-29004	ｼﾑ (29X50X0. 6)	1		
31-3	09181-29005	ｼﾑ (29X50X0. 65)	1		
31-4	09181-29006	ｼﾑ (29X50X0. 7)	1		
31-5	09181-29007	ｼﾑ (29X50X0. 75)	1		
31-6	09181-29008	ｼﾑ (29X50X0. 8)	1		
31-7	09181-29009	ｼﾑ (29X50X0. 85)	1		
31-8	09181-29010	ｼﾑ (29X50X0. 9)	1		
31-9	09181-29011	ｼﾑ (29X50X0. 95)	1		
31-10	09181-29012	ｼﾑ (29X50X1. 05)	1		
32	08221-16256	ｼﾑ	1		
33-1	09181-25051	ｼﾑ (25X34X0. 6)	1		
33-2	09181-25052	ｼﾑ (25X34X0. 65)	1		
33-3	09181-25053	ｼﾑ (25X34X0. 7)	1		
33-4	09181-25054	ｼﾑ (25X34X0. 75)	1		
33-5	09181-25055	ｼﾑ (25X34X0. 8)	1		
33-6	09181-25056	ｼﾑ (25X34X0. 85)	1		
33-7	09181-25057	ｼﾑ (25X34X0. 9)	1		
33-8	09181-25058	ｼﾑ (25X34X0. 95)	1		
33-9	09181-25059	ｼﾑ (25X34X1)	1		
33-10	09181-25060	ｼﾑ (25X34X1. 05)	1		
33-11	09181-25061	ｼﾑ (25X34X1. 1)	1		
33-12	09181-25062	ｼﾑ (25X34X1. 15)	1		
33-13	09181-25063	ｼﾑ (25X34X1. 2)	1		
33-14	09181-25130	ｼﾑ (25X32X0. 5)	1		
34-1	09181-50020	ｼﾑ (T:0. 45)	1		
34-2	09181-50021	ｼﾑ (T:0. 50)	1		
34-3	09181-50022	ｼﾑ (T:0. 55)	1		
34-4	09181-50023	ｼﾑ (T:0. 60)	1		
34-5	09181-50024	ｼﾑ (T:0. 65)	1		

FIG.220D


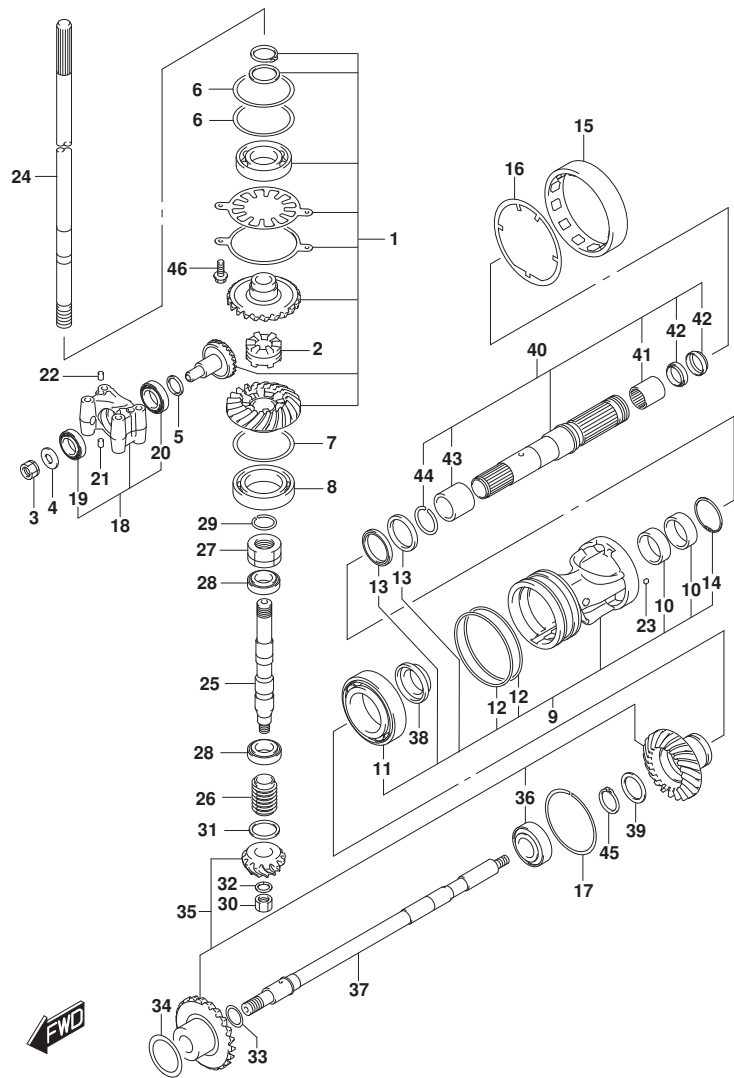


FIG. 220D (1-D-3) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
34-6	09181-50025	シム (T:0.70)	1		
34-7	09181-50026	シム (T:0.75)	1		
34-8	09181-50027	シム (T:0.80)	1		
34-9	09181-50028	シム (T:0.85)	1		
34-10	09181-50029	シム (T:0.95)	1		
35	57301-98810	ギヤセット, コントラ	1		
36	09265-30024	.ヘ アリク* (30X62X21.25)	1		
37	57610-98L00	シャフト, フロント ライン	1		
38	57622-98L00	スベ-サ, フロント シャフト	1		
39	09160-36007	ワッシャ (32X47X2)	1		
40	57600-98840	シャフトセット, フロント ラウタ	1		
41	09263-30067	.ヘ アリク*	2		
42	09289-30012	.オイルシール	2		
43	09300-40003	.フ ヲシユ (40X45X40)	1		
44	09380-40004	.リング, スナツフ	1		
45	57635-98L00	ストッパ, フロント ラシャフト	1		
46	01550-06167	ホルト (6X16)	2		

NOTE 1:
FROM 32501F-440186
FROM 35001F-440578

FIG.301A

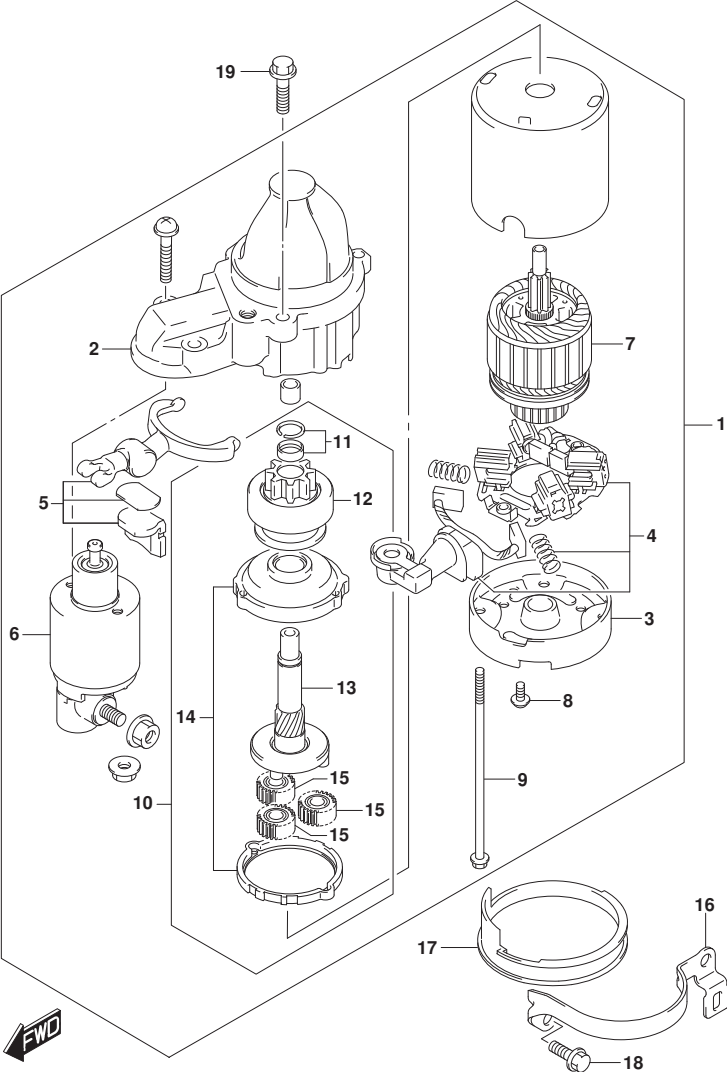

DF350A_000_024_301A
STARTING MOTOR

FIG. 301A (1-D-4) スターティングモータ

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	31100-98L10	モータアツシ, スターティング	1		
2	31150-98L00	. ケ-ス, キ`ヤ	1		
3	31170-92J00	. ハウジ`ンク, リヤ	1		
4	31173-98L00	. ホルダ`アツシ, フ`ラシ	1		
5	31191-63J00	. レバ`-アツシ	1		
6	31220-98L10	. スイツチアツシ	1		
7	31311-63J00	. アマチュア	1		
8	31192-92J00	. スクリュセツト	1		
9	31261-75F10	. ホ`ルト	2		
10	31340-98L00	. クラツチセツト, スターティングモータ	1		
11	31314-86030	. . ストツパ`セツト	1		
12	31320-98L00	. . ビ`ニオン	1		
13	31341-98L00	. . シヤフト, ビ`ニオン	1		
14	31343-63J00	. . インターナルキ`ヤ	1		
15	31344-63J00	. . キ`ヤアツシ	3		
16	31912-98L00	パ`ント, スタータモータ	1		
17	31918-92J01	タ`ンパ`, ロ7	1	ロ7	
18	01550-0820C	ホ`ルト (8X20)	2		
19	01550-0830C	ホ`ルト	2		

DF350A_000_024

FIG.303A

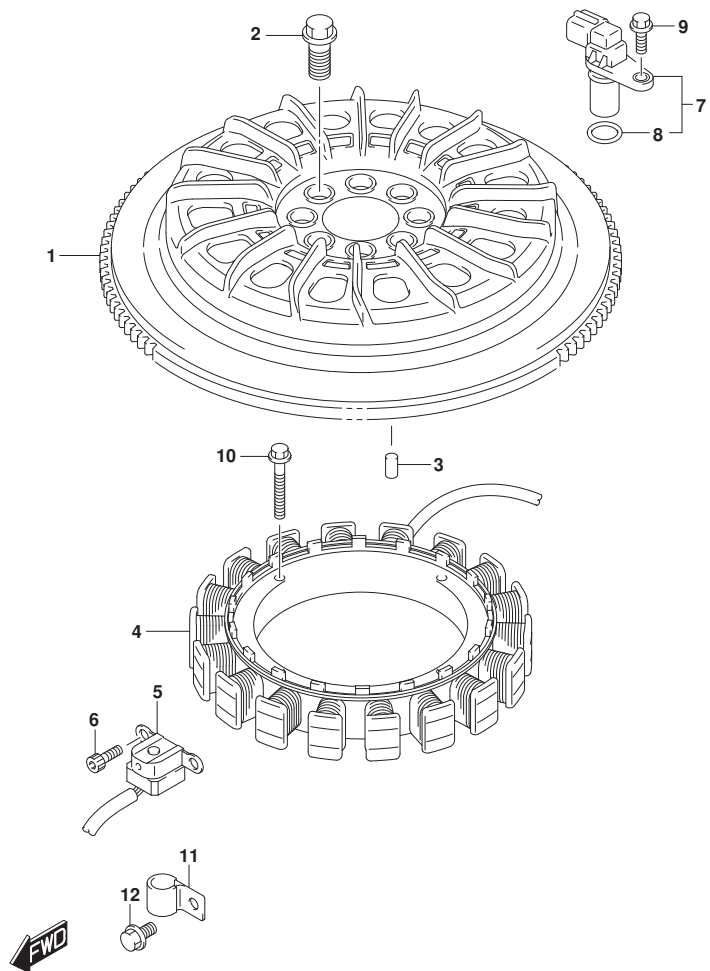


FIG. 303A (1-D-5) マグネト

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	32102-98J11	フライホイール, マグネト	1		
2	09103-12125	ホルト (12X26)	8		
3	09202-06031	ピン (6X12)	1		
4	32120-98L01	コイル, ハンダリチャージング	1		
5	32160-98L00	コイル, イグニッションタイミング	1		
6	09106-05030	ホルト (5X10)	2		
7	33220-98J00	センサアツシ, カムホシシヨシ	3		
8	33221-42F00	. Oリング	3		
9	01550-0616C	ホルト (6X16)	3		
10	09103-06231	ホルト (6X35)	4		
11	09403-13414	クランプ	2		
12	01550-0612C	ホルト (6X12)	2		

FIG.310A

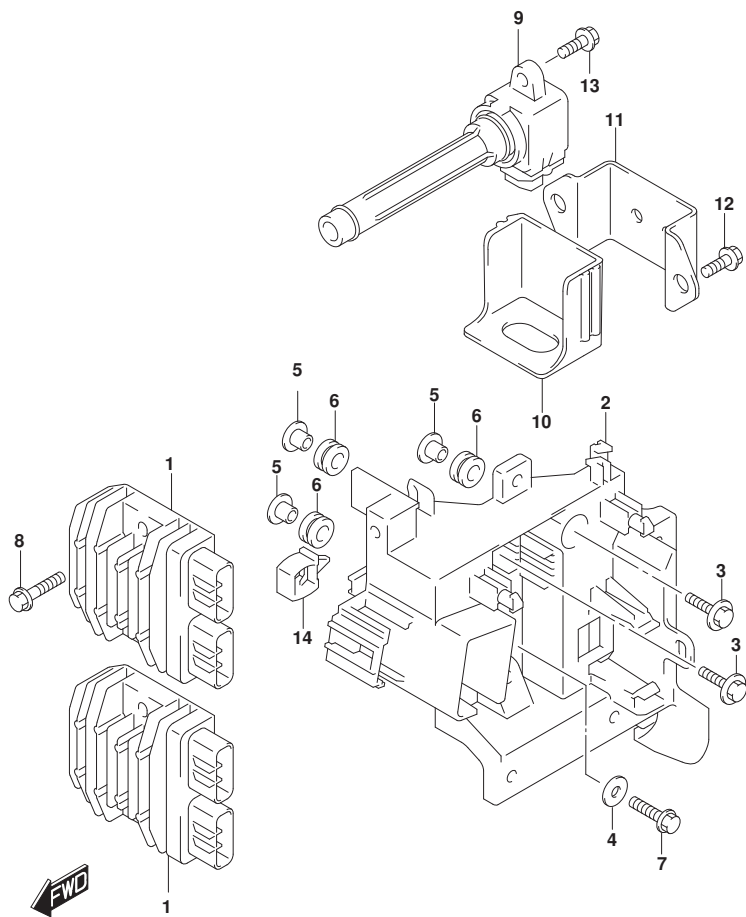


FIG. 310A (1-D-6) レクチファイア/イクニション コイル

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	32800-26J02	レクチファイアアツシ	2		
2	32890-98L00	ホルダ*, エレクトリツカハ* ーツ	1		
3	09116-06202	ボ* ルト (6X25)	3		
4	09160-06084	ワツシヤ (6. 5X18X1. 6)	1		
5	09169-06062	ワツシヤ (6. 3X17X1. 6)	4		
6	09320-09016	クツシヨ*ン (9X18X9. 5)	4		
7	01550-06257	ボ* ルト (6X25)	1		
8	01550-0625C	ボ* ルト (6X25)	4		
9	33410-98L00	コイルアツシ, イク* ニツシヨ*ン	6		
10	33411-98L10	クツシヨ*ン, イク* ニツシヨ*ンコイルコネクタ	6		
11	33414-98L00	ブ* ラケツト, イク* ニツシヨ*ンコイル	5		
12	01547-06127	ボ* ルト	10		
13	01550-0620C	ボ* ルト (6X20)	6		
14	09403-12412	クランプ*	1		

FIG.315B

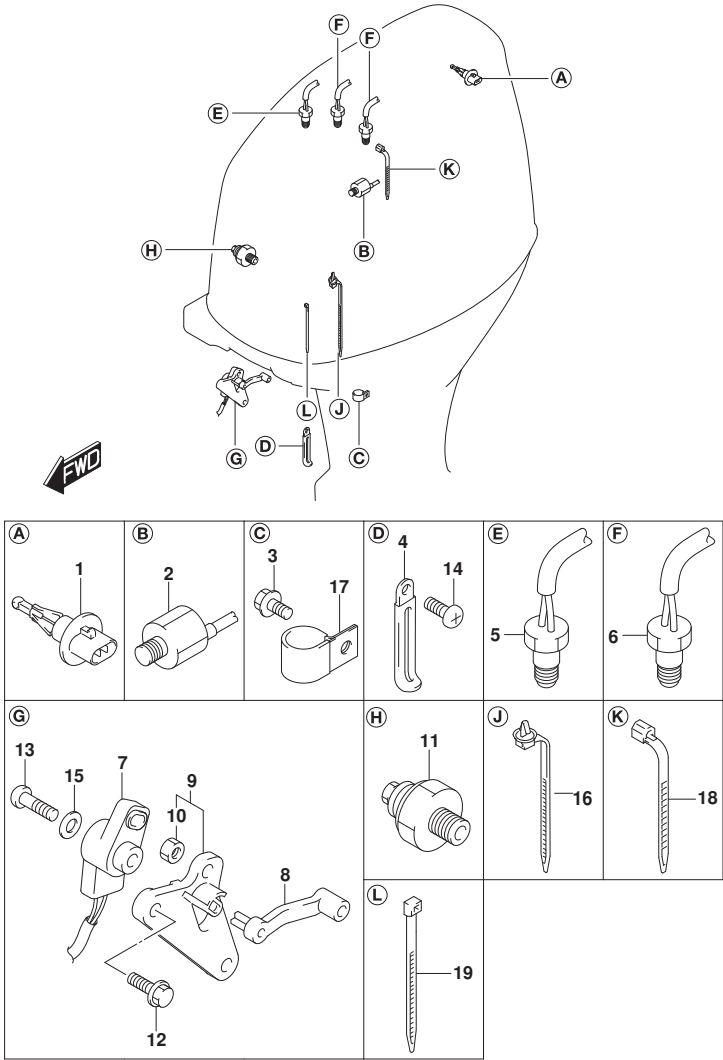


FIG. 315B (1-D-7) センサ

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	13650-52G00	センサ, インレットエアテンパ° レチャ	1		
2	18640-98L01	センサアツシ, ノツク	1		
3	29103-93J00	ホ° ルト (6X12)	1	PTT MOTOR LEAD CL AMP	
4	29404-93J11	クランブ° (L:65)	1	PTT MOTOR LEAD	
5	34830-87J20	センサ, テンバ° レチャ	1	EXHAUST TEMP	
6	34830-87J20	センサ, テンバ° レチャ	1	CYLINDER TEMP	
7	34840-98J03	センサアツシ, トリム/チルト	1		
8	34841-88L01	レバ° -, トリムセンサ	1		
9	34845-88L02	ブ° ラケット, トリムセンサ	1		
10	09140-05005	. ナツト (M5)	1		
11	37820-99E02	スイツチアツシ, オイルブ° レツシヤ	1		
12	09103-06093	ホ° ルト (6X20)	2		
13	09125-05048	スクリュ (5X16)	1		
14	09125-06063	スクリュ (6X10)	1		
15	09160-05029	ワツシヤ (5. 5X12X0. 8)	1		
16	09407-12414	クランブ°	1		
17	09403-19412	クランブ°	1		
18	09407-14403	クランブ° (L:125)	1		
19	09407-14407	クランブ° (L:145)	2		

FIG.322A

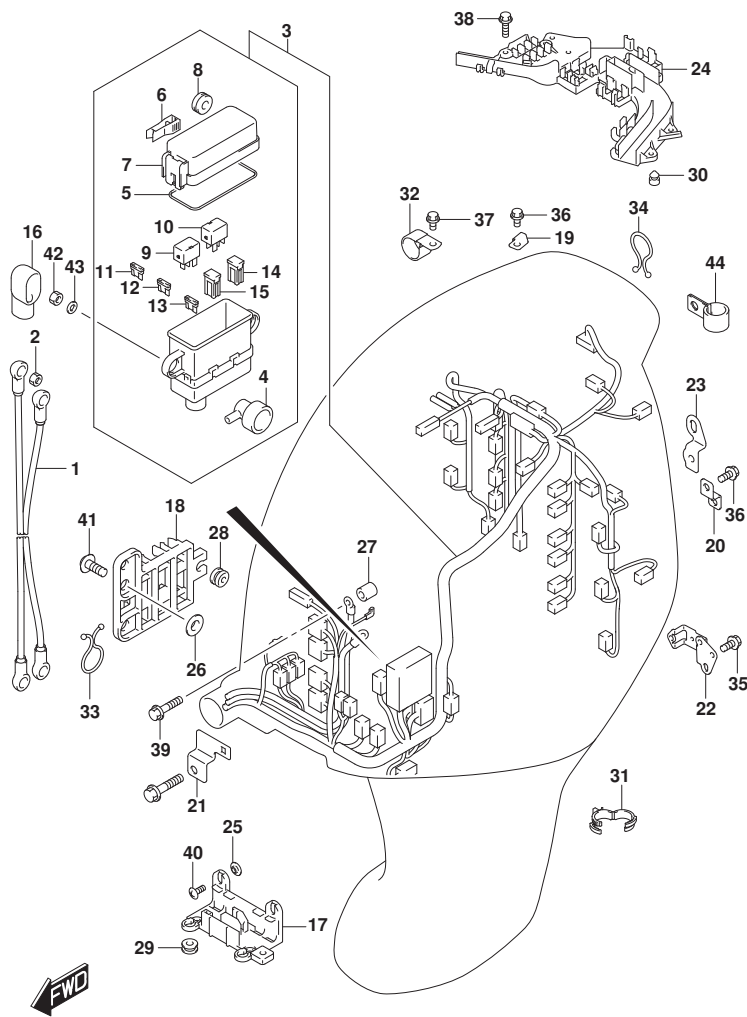


FIG. 322A (1-D-8) ハーネス

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	33810-98L01	ケーブルアッシ, スタータモータ	1		
2	08316-10087	ナット	1		
3	36610-98L40	ハーネスアッシ, ワイヤリング	1		
4	36618-43410	キヤツプ, オイルプレッシャスイツチ (40X70)	1		
5	36721-98L10	オリング, アツバカバー	1		
6	36737-98L00	ブレーラ, フューズ	1		
7	36738-98L00	カバー, フューズケースアツバ	1		
8	09320-08510	クツシヨシ (8. 5X20X8)	2		
9	38860-76F01	リレーアッシ	1	FOR MAIN	
10	38860-76F01	リレーアッシ	1	FOR START	
11	09481-10504	フューズ (10A)	2		
12	09481-15504	フューズ (15A)	4		
13	09481-30504	フューズ (30A)	3		
14	09481-40403	フューズ (40A)	1		
15	09481-60403	フューズ (60A)	2		
16	36612-96J01	キヤツプ, ターミナル	1		
17	36616-98L01	ホルダ, ケーブル	1		
18	36616-98L10	ホルダ, コネクタ	1		
19	36617-88L00	ブラケツト, PTTケーブルクランフ	1		
20	36617-93J10	ブラケツト, ハーネス	3		
21	36617-98L10	ブラケツト, ハーネス	1		
22	36617-98L30	ブラケツト, ハーネス	1		
23	36617-98L50	ブラケツト, ハーネス	2		
24	36626-98L00	ホルダ, メインハーネス	1		
25	09169-06053	ワツシヤ (6. 3X16X1)	2		
26	09169-06053	ワツシヤ (6. 3X16X1)	2		
27	09180-08229	スベーサ (8. 1X16X17)	1		
28	09320-04013	クツシヨシ	1		
29	09320-08517	クツシヨシ	2		
30	09321-06036	クツシヨシ	1		
31	09403-25001	クランフ	1		
32	09403-26402	クランフ	1		
33	09408-00008	クリツプ (ID: 20)	3		
34	09408-00327	クリツプ, ハーネス (ID: 42)	4		
35	01547-06127	ホルト	2		

FIG.322A

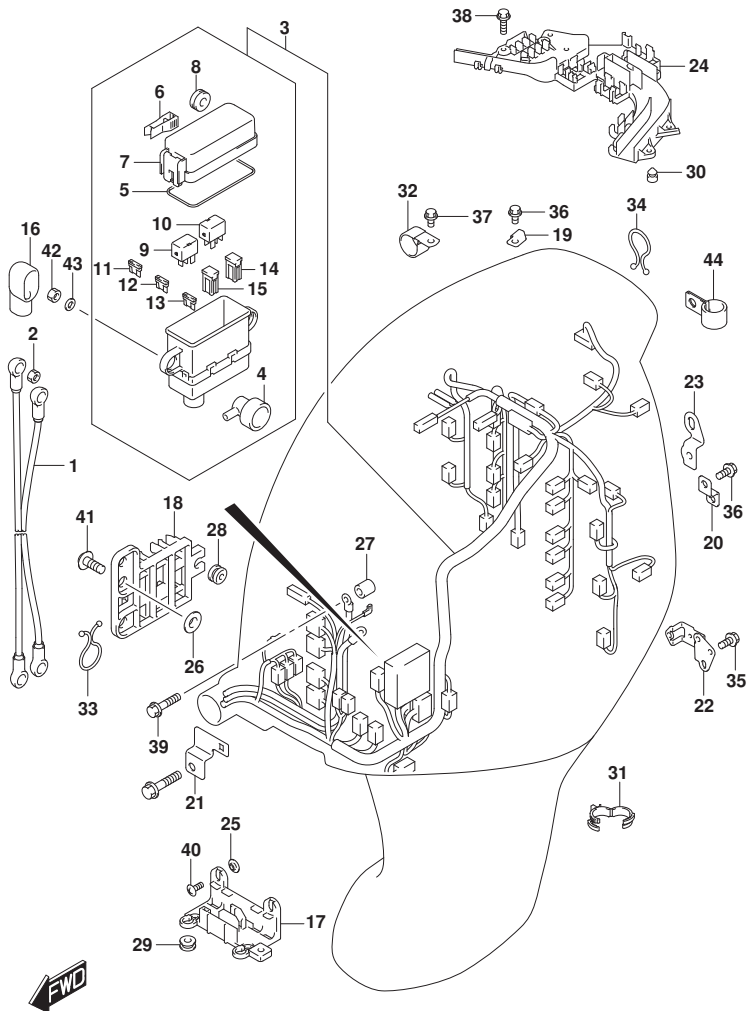


FIG. 322A (1-D-9) ハーネス

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
36	01550-0612C	ホ ルト (6X12)	7		
37	01550-0612C	ホ ルト (6X12)	1		
38	01550-0620C	ホ ルト (6X20)	4		
39	01550-08357	ホ ルト (8X35)	1		
40	02142-06167	スクリュ (6X16)	2		
41	02142-06167	スクリュ (6X16)	2		
42	08310-00067	ナット	1		
43	08321-01067	ワッシャ, ロック	1		
44	09403-14416	クランプ, ハーネス	2		

DF350A_000_024_326A
PTT SWITCH/ENGINE CONTROL UNIT



DF350A_000_024

見出番号	品番	品名	使用個数	備考	標準作業時間
1	37722-93J13	スイッチアツシ, チルトリミット	1		
2	29125-93J00	スクリュー (6X12)	1		
3	37850-92J00	スイッチアツシ, PTT	1		
4	37856-92J00	. テープ, PTTスイッチ	1		
5	37857-92J01	フック, PTTスイッチ	1		
6	09403-09330	クランプ	1		
7	38410-93J21	リレーアツシ, PTT	1		
8	38415-93J20	ホルダ, PTTリレー	1		
9-1	33920-98L60	ユニット, エンジンコントロール	1	DF350A	
9-2	33920-98LH0	ユニット, エンジンコントロール	1	DF325A	
10	33924-98L00	ホルダ, エンジンコントロールユニット	1		
11	33925-98J00	クワシヨン, エンジンコントロールユニット	1		
12	38800-98L01	アクチュエータアツシ, シフト	1		
13	38831-98L00	ガイド, アクチュエータケーブル	1		
14	38892-98L00	タンバ, シフトアクチュエータ	1		
15	38895-98L11	ブラケット, シフトアクチュエータ	1		
16	38895-98L20	ブラケット, アクチュエータアツパ	1		
17	01550-0612C	ボルト (6X12)	3		
18	09116-06215	ボルト (6X30)	2		
19	09169-06062	ワッシャ (6. 3X17X1. 6)	2		
20	09320-09016	クワシヨン (9X18X9. 5)	4		
21	09407-14407	クランプ (L: 145)	2		
22	01550-0616C	ボルト (6X16)	3		
23	01550-0625C	ボルト (6X25)	2		
24	01560-0830C	ボルト	4		
25	19115-98L00	ホルダ, アクチュエータ	1		
26	19116-98L00	ブラケット, アクチュエータホルダ	1		
27	09116-08137	ボルト (8X22)	2		
28	09206-11006	ピン (8. 4X11X8)	2		
29	01550-0835C	ボルト (8X35)	3		
30	01550-0840C	ボルト (8X40)	1		
31	38860-76F01	リレーアツシ	2		
32	38915-90J00	ホルダ, リレー	2		

FIG.331B

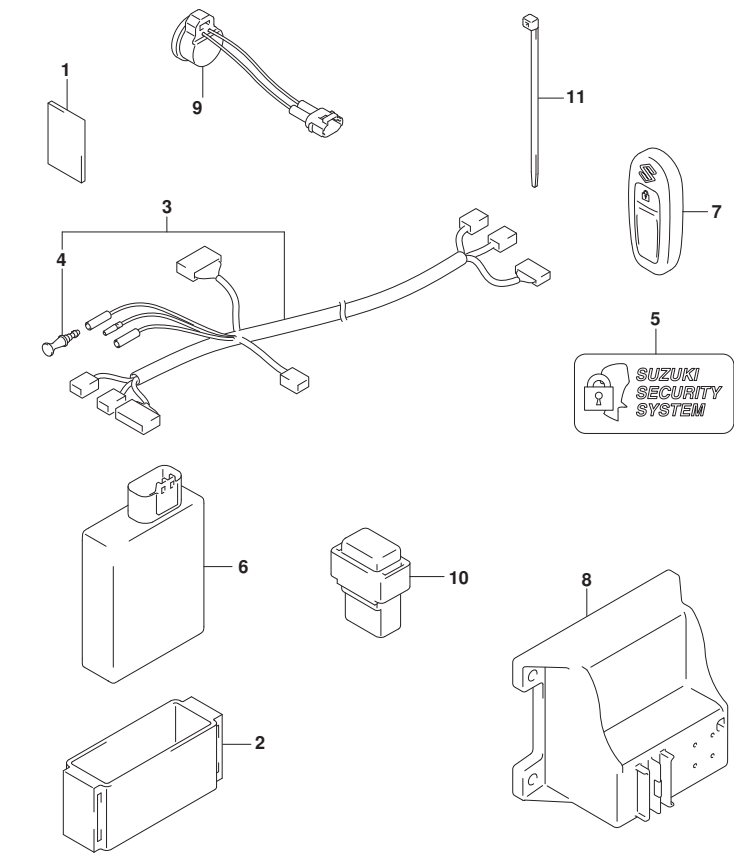


FIG. 331B (1-D-11) キーレススタート

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	32851-93J00	クッション, リード ワイヤ	1		
2	32980-38F00	クッション, CDIユニット	1		
3	36623-98LA0	ハーネスアツシ, キーレススタートコントロール	1		
4	36615-96300	. ターミナル	1		
5	37117-96L00	デ カール, キーレススタート	2		
6	37171-98L10	コントローラアツシ, キーレススタート (315MHZ)	1		
7	37172-96L11	リモコンアツシ, キーレススタート (315MHZ)	2		
8	37173-96L10	ホルダ, キーレススタートパ ーツ	1		
9	38500-93J90	プ ー ザー, ウォーニング	1		
10	38860-96L01	リレーアツシ, キーレススタート	1		
11	09407-14407	クランプ (L:145)	1		

FIG.335B


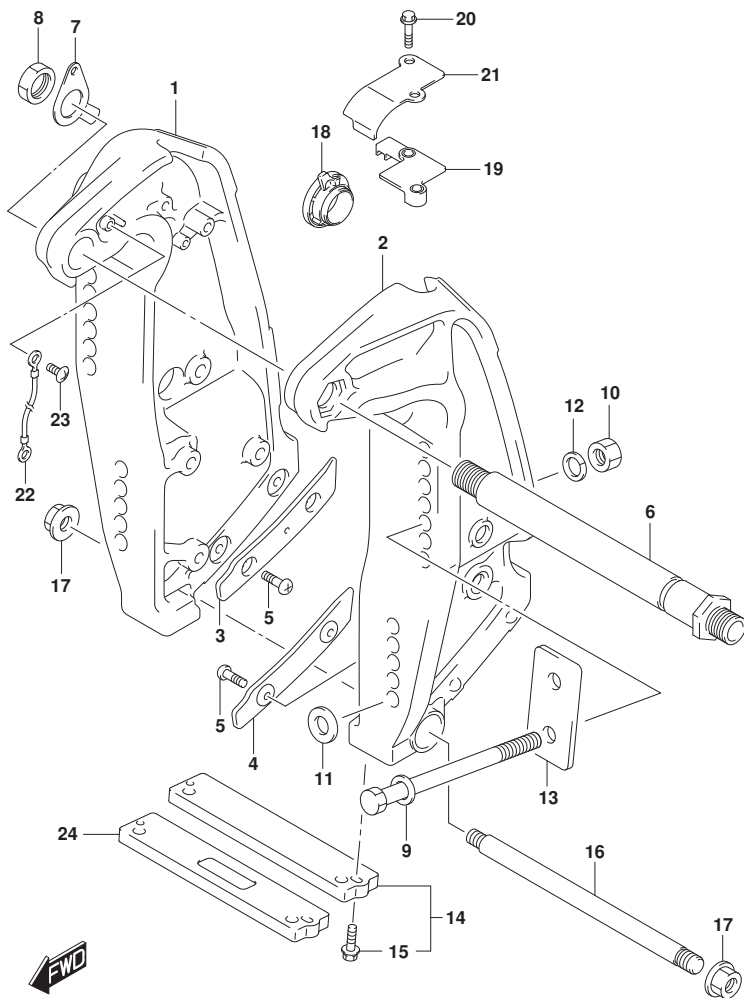


FIG. 335B (1-D-12) クランプ°ブ°ラケット

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1-1	41111-98L00-YAY	ブ°ラケット, クランプ°スターホ°ード° (ブ°ラック)	1	STBD	
1-2	41111-98L00-QTN	ブ°ラケット, クランプ°スターホ°ード° (ホ°ワイト)	1	STBD	
2-1	41121-98L00-YAY	ブ°ラケット, クランプ°ホ°ード° (ブ°ラック)	1	PORT	
2-2	41121-98L00-QTN	ブ°ラケット, クランプ°ホ°ード° (ホ°ワイト)	1	PORT	
3	41117-93J02	ブ°レート, クランプ°ブ°ラケットロ°ア°スターホ°ード°	1	STBD	
4	41122-93J02	ブ°レート, クランプ°ブ°ラケットロ°ア°ホ°ード°	1	PORT	
5	09125-06063	スクリュ (6X10)	4		
6	41130-93J12	シヤフト, クランプ°ブ°ラケット	1		
7	41135-93J11	ワヅシヤ, クランプ°ブ°ラケットシヤフト	1		
8	09159-22006	ナツト (M22)	1		
9-1	09100-12086	ホ°ルト (12. 7X150)	6		
9-2	09100-12085	ホ°ルト (12. 7X115)	1	オ°ブ°ショ°ン	
9-3	09100-12092	ホ°ルト (12. 7X75)	1	オ°ブ°ショ°ン	
9-4	09100-12125	ホ°ルト (12. 7X170)	1	オ°ブ°ショ°ン	
9-5	09100-12126	ホ°ルト (12. 7X190)	1	オ°ブ°ショ°ン	
10	09159-12062	ナツト (12. 7X19)	6		
11	09160-13022	ワヅシヤ (13. 2X45X3)	4		
12	09160-13021	ワヅシヤ (13. 2X26X3)	6		
13	41155-93J02	ブ°レート, トランサム	2		
14	55320-94900	ア°ノ°ード°セツト, クランプ°ブ°ラケット	1		
15	09116-06121	.ホ°ルト (6X25)	2		
16	45421-87D03	ビ°ン, チルトロツク	1		
17	09159-14020	ナツト	2		
18	48140-93J01	カムア°ヅシ, チルトリミツトスイツチ	1		
19	48144-93J00	ホ°ルタ°, チルトリミツトスイツチ	1		
20	09103-06278	ホ°ルト (6X25)	2		
21	48145-93J00	カバ°ー, チルトリミツトスイツチ	1		
22	36894-87D00	リ°ード° (L: 165)	1	CLAMP TO SWIVEL	
23	09125-06063	スクリュ (6X10)	2		
24	55321-94910	ア°ノ°ード° (MAGNESIUM)	1	オ°ブ°ショ°ン	

FIG.336B

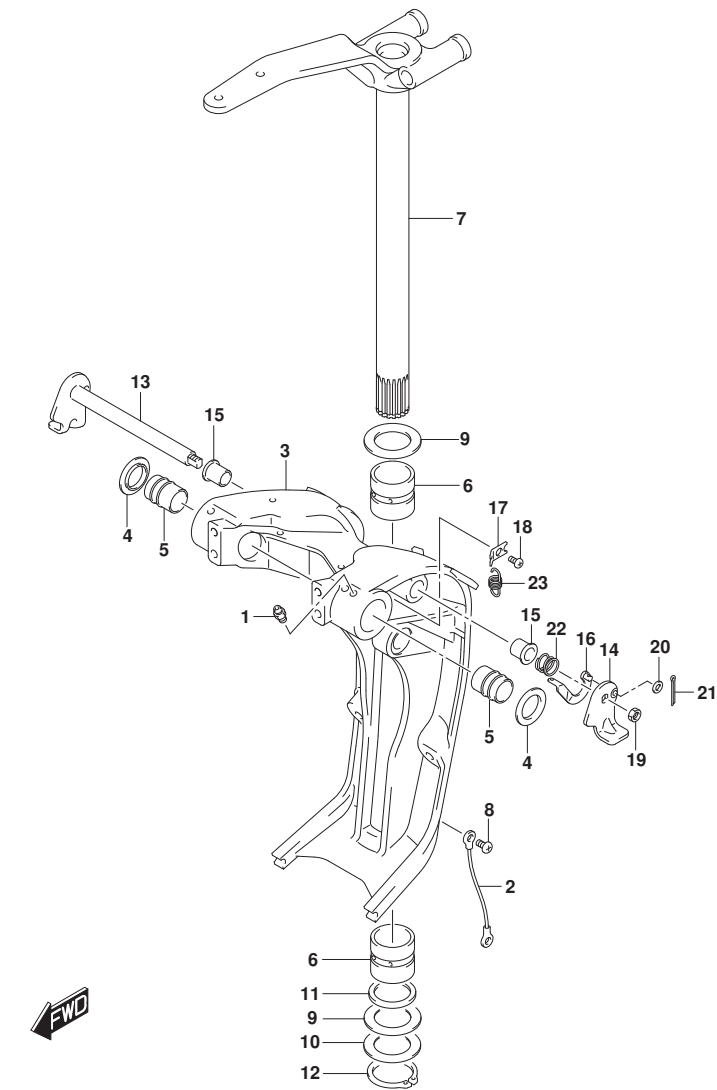


DF350A_000_024_336B
SWIVEL BRACKET

FIG. 336B (1-D-13) スイベルブラケット

見出番号	品番	品名	使用個数	備考	標準作業時間
1	22511-99011	ニツフル, グリース	4		
2	36894-87D00	リート (L:165)	1	SWIVEL TO MOUNT B RKT	
3-1	43111-93J24-YAY	ブラケット, スイベル (ブラック)	1	BODY COLOR:YAY	
3-2	43111-93J24-QTN	ブラケット, スイベル (ホワイト)	1	BODY COLOR:QTN	
4	43114-93J00	ワッシャ, スイベルツクランフ ブラケット	2		
5	43211-93J11	ブッシュ, クランフシャフトスイベル	2		
6	43711-97E11	ブッシュ, ステアリング	2		
7-1	43750-93J03-YAY	ブラケット, ステアリング (ブラック)	1	BODY COLOR:YAY	
7-2	43750-93J03-QTN	ブラケット, ステアリング (ホワイト)	1	BODY COLOR:QTN	
8	09125-06063	スクリュー (6X10)	1		
9	09160-39004	ワッシャ (39.5X65.5X1)	2		
10	09181-39001	シム (39.5X64X0.30)	AR		
11	09282-39001	シール, オイル (39X51X5)	1		
12	09380-38003	サークリップ	1		
13	41220-93J12	レバー, チルトロツク	1		
14	41234-93J12	レバー, チルトロツクホート	1	PORT	
15	41224-95E01	ブッシュ, チルトストツバ ロット	2		
16	41230-96J00	リンク, チルトロツクレバー	1		
17	41233-95E10	ブラケット, チルトロツクスフリンク	1		
18	09125-06063	スクリュー (6X10)	1		
19	09140-10032	ナット (M10)	1		
20	09160-06082	ワッシャ (6.5X13X1.0)	1		
21	09204-01006	ピン	1		
22	09440-19028	スフリンク	1		
23	09443-10043	スフリンク	1		

DF350A_000_024

FIG.337B

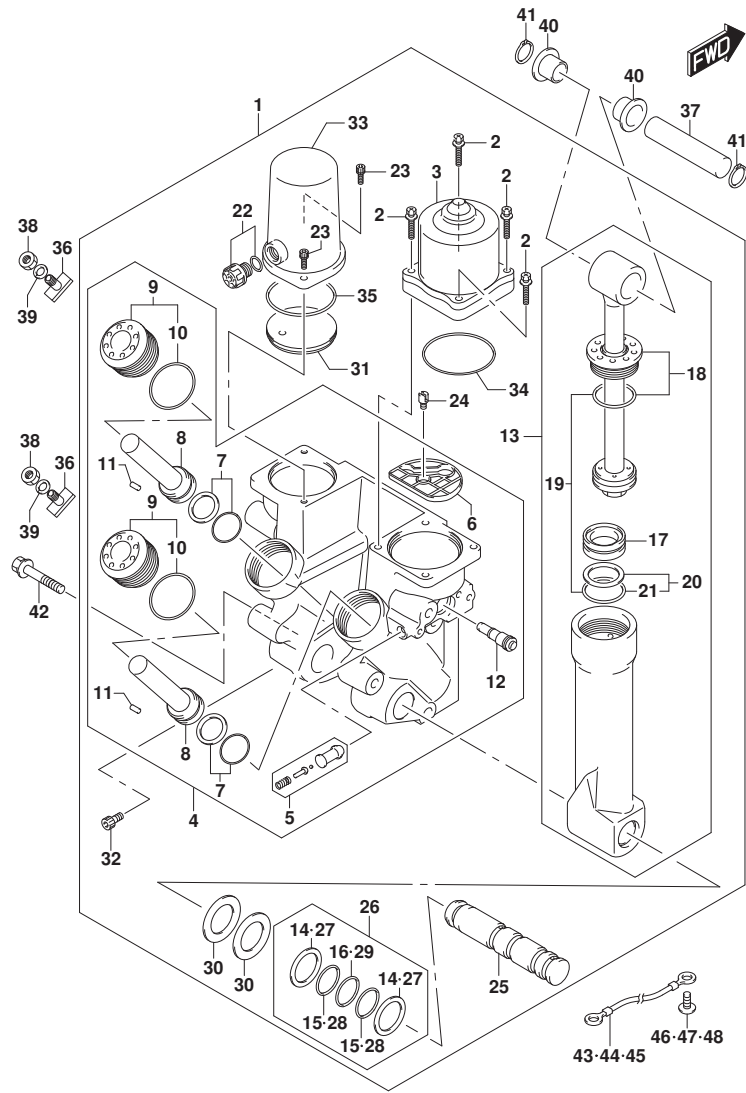

DF350A_000_024_337B
TRIM CYLINDER

FIG. 337B (1-D-14) トリムシリンダ*

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	48000-98L06	トリムアツシ, ハ ワーウイズ* チルト	1		
2	31281-92J10	. ボ* ルト, スルー	4		
3	38100-98L01	. モータアツシ, PTT	1		
4	48500-98L04	. マニホ-ルト* アツシ	1		
5	48320-93J00	. . . ハ* ルフ* セツト, アツツ* フ* ロー	1		
6	48582-95E01	. . . フイルタ	1		
7	48605-93J00	. . . オリヅク* セツト	1		
8	48610-98L00	. . . ヒ* ストン/ラム	2		
9	48630-98L02	. . . ロツト* ガ* イト*	2		
10	48633-93J00	. . . オリヅク*	2		
11	48691-93J00	. . . チェツクハ* ルフ*	1		
12	48864-98L01	. . . マニユアルハ* ルフ*	1		
13	48400-98L00	. シリンダ* アツシ	1		
14	48451-93J00	. . . ハ* ツクアツツ* リンク*	2		
15	48452-93J00	. . . オリヅク*	2		
16	48452-93J10	. . . オリヅク*	1		
17	48650-93J00	. . . ヒ* ストン, フリー	1		
18	48401-98L00	. . . ヒ* ストンロツト* サフ* アツシ	1		
19	48405-93J00	. . . オリヅク* セツト	1		
20	48627-93J00	. . . オリヅク* セツト	1		
21	48427-87D00	 オリヅク*, ヒ* ストン	1		
22	48572-87J10	. フ* ラク*	1		
23	48862-87J20	. . . ボ* ルト, リザ* -ハ*	2		
24	48583-95E00	. . . シ* ヨイント, ト* ライフ*	1		
25	48121-93J20	. . . シヤフト	1		
26	48125-93J10	. . . オリヅク* セツト	1		
27	48451-93J00	. . . ハ* ツクアツツ* リンク*	4		
28	48452-93J00	. . . オリヅク*	4		
29	48452-93J10	. . . オリヅク*	2		
30	48126-93J00	. . . フツシヤ, チルトシリンダ* ツ-マニホ-ルト*	2		
31	48573-93J00	. . . カハ* -	1		
32	48128-93J11	. . . ボ* ルト	1		
33	48571-93J00	. . . リザ* -ハ* タンク	1		
34	48585-95E00	. . . オリヅク*	1		
35	48585-98L00	. . . オリヅク*	1		

DF350A_000_024

FIG.337B

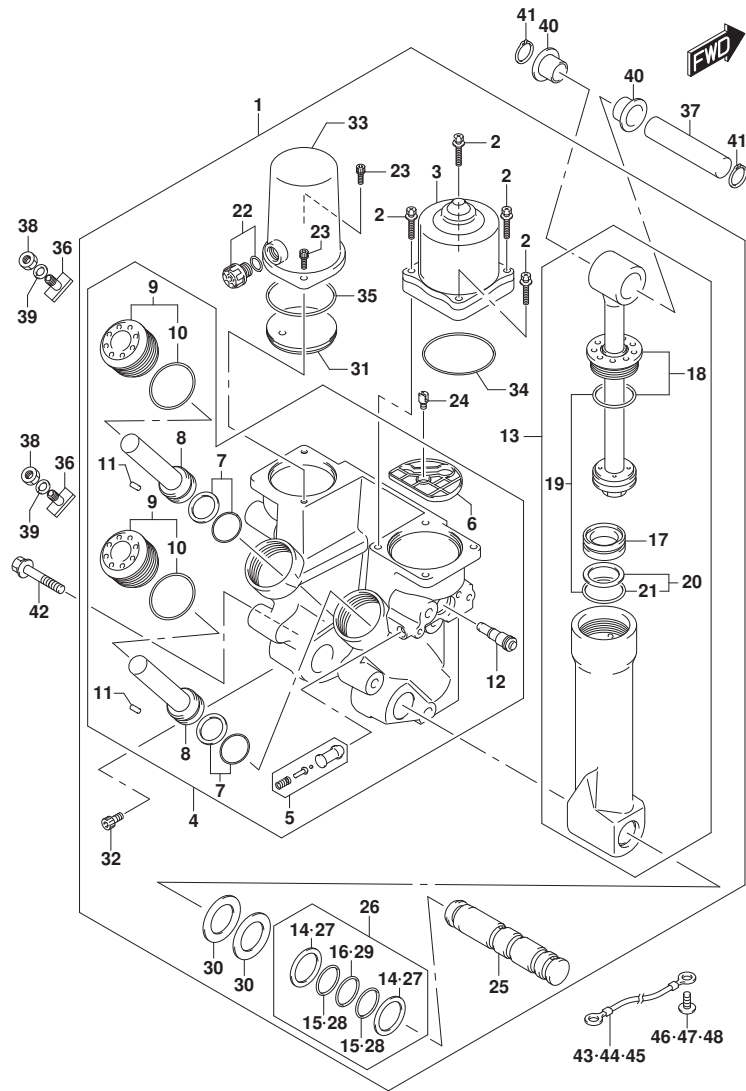


FIG. 337B (1-D-15) トリムシリンダ*

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
36	48311-93J01	パッド, トリムシリンダ ラム	2		
37	48321-93J00	シャフト, ฟิลトシリンダ アッパ	1	アッパ -	
38	09140-10031	ナット (M10)	2		
39	09162-10005	ワッシャ, ロック (10. 2X18. 4X2. 5)	2		
40	09306-24001	ブッシュ	2		
41	09380-21002	サークリップ	2		
42	09116-10175	ホルト (10X50)	8		
43	36894-87D00	リート (L: 165)	1		
44	36895-87D01	リート (L: 230)	1		
45	36895-87D01	リート (L: 230)	1		
46	09125-06063	スクリュー (6X10)	1		
47	09125-06063	スクリュー (6X10)	1		
48	09125-06063	スクリュー (6X10)	1		

FIG.340B

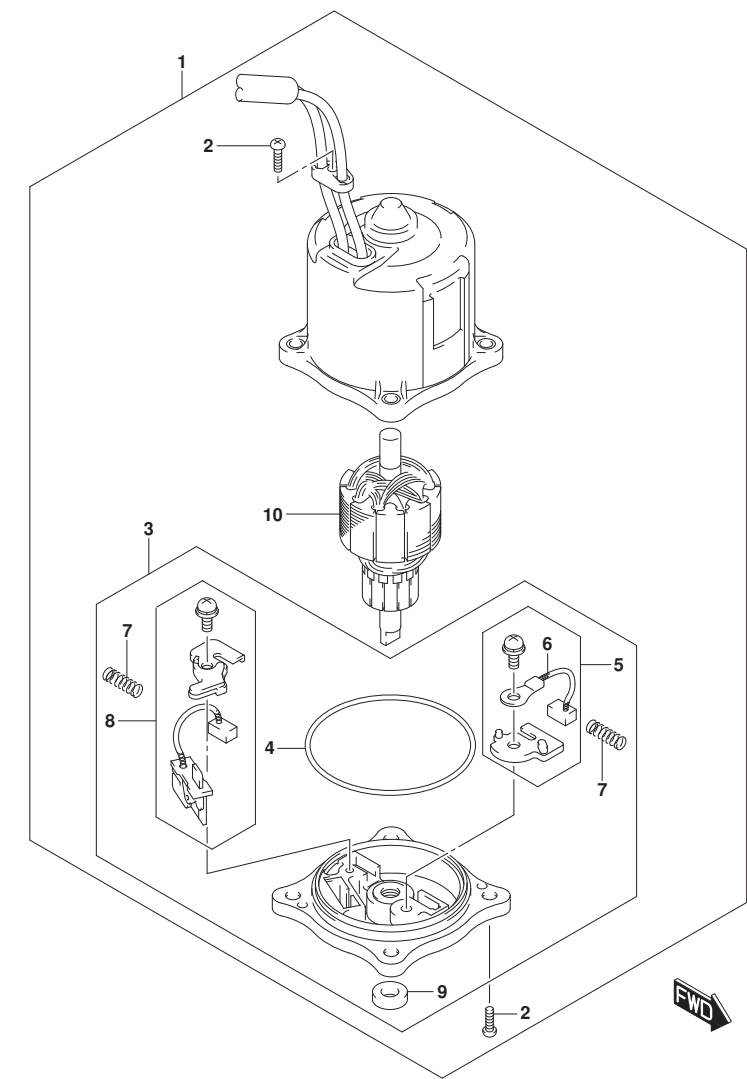


FIG. 340B (1-D-16) PTTモータ

見出番号	品番	品名	使用個数	備考	標準 作業時間
1	38100-98L01	モータアツシ, PTT	1		
2	31111-94900	. スクリュ	3		
3	31173-94920	. ホルダ アツシ, フ ラシ	1		
4	31123-94910	. . Oリング	1		
5	31133-90J10	. . フ ラシアツシ	1		
6	31133-94910	. . . フ ラシ	1		
7	31135-94900	. . スプ リンク	2		
8	31136-90J20	. . フ レーカアツシ	1		
9	33799-97E00	. . シール, オイル	1		
10	31311-93J00	. アマチュア	1		

FIG.401B

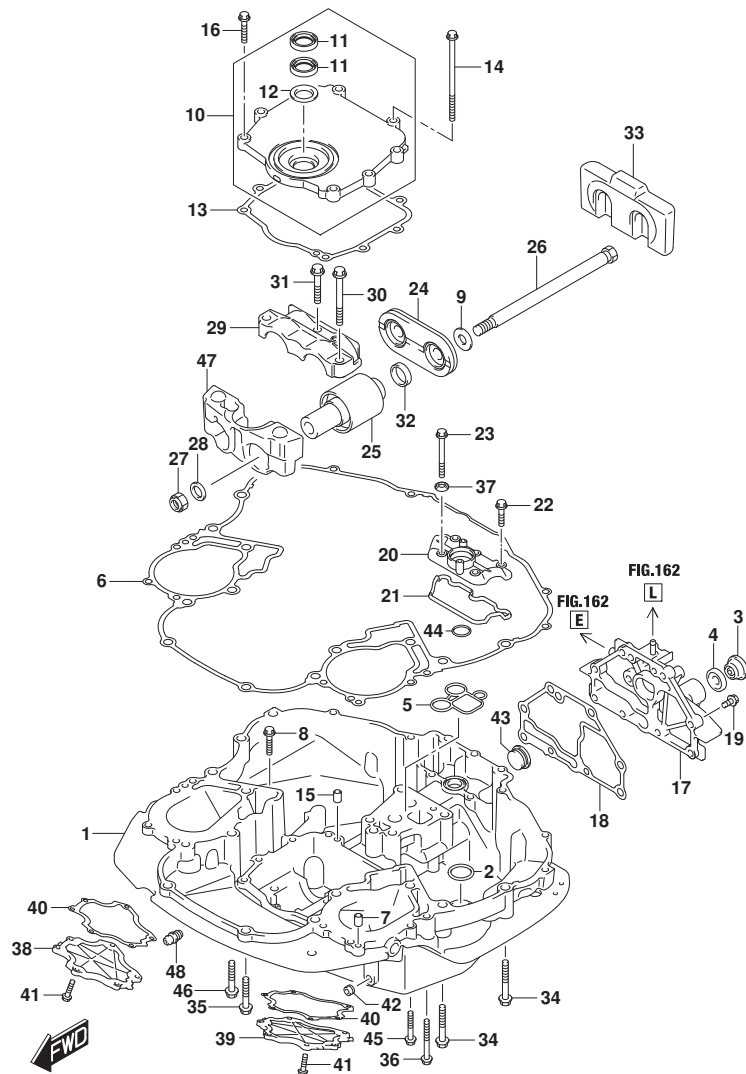


FIG. 401B (1-E-2) エンジンホルダー

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	51111-98L01-YAY	ホルダー, エンジン (ブラック)	1	BODY COLOR:YAY	
1-2	51111-98L01-Y5S	ホルダー, エンジン (ホワイト)	1	BODY COLOR:QTN	
2	16519-93J00	シール, エンジンホルダー オイル	1		
3	17913-93J00	ブラケット, ウォータ	1		
4	17914-93J01	ガスケット, ウォータブラケット	1		
5	51116-98L00	シール, ウォータリターン	1		
6	51211-98L00	ガスケット, エンジンホルダー	1		
7	09206-08001	ピン (8X11)	2		
8	01550-1050A	ボルト	4		
9	09160-14076	ワッシャ (14, 5X32X3)	2		
10	51120-98L00	カバー, マウントオイルシール	1		
11	51124-93J01	シール, オイル	2		
12	51125-93J00	スクレーパー	1		
13	51123-98L00	ガスケット, マウントオイルシールカバー	1		
14	09103-08109	ボルト (8X120)	2		
15	09206-08001	ピン (8X11)	2		
16	01550-0830A	ボルト (8X30)	6		
17	51140-98L00-YAY	カバー, エンジンホルダー (ブラック)	1		
18	51142-98L00	ガスケット, エンジンホルダーカバー	1		
19	09116-08122	ボルト (8X30)	8		
20	51151-98L00	カバー, エンジンホルダーアツパ	1	アツパ-	
21	51152-98L00	シール, エンジンホルダーアツパカバー	1	アツパ-	
22	01550-0830C	ボルト	3		
23	01550-0860C	ボルト	2		
24	54120-98L00	プレート, アツパマウント	1	アツパ-	
25	54130-98L01	マウント, アツパ	2	アツパ-	
26	54112-93J00	ボルト, マウント (14X220)	2	アツパ-	
27	29159-93J00	ナット (M14)	2	アツパ-	
28	09160-15051	ワッシャ (15X24X3)	2		
29	54137-93J02	カバー, アツパマウント	1	アツパ-	
30	09116-10135	ボルト (10X95)	2		
31	09116-10175	ボルト (10X50)	1		
32	54127-98L00	マウント, アツパサイド	2	アツパ-	
33	54140-98J11	マウント, アツパスラストリハース	1	アツパ-	
34	09116-10137	ボルト (10X70)	6		

FIG.401B

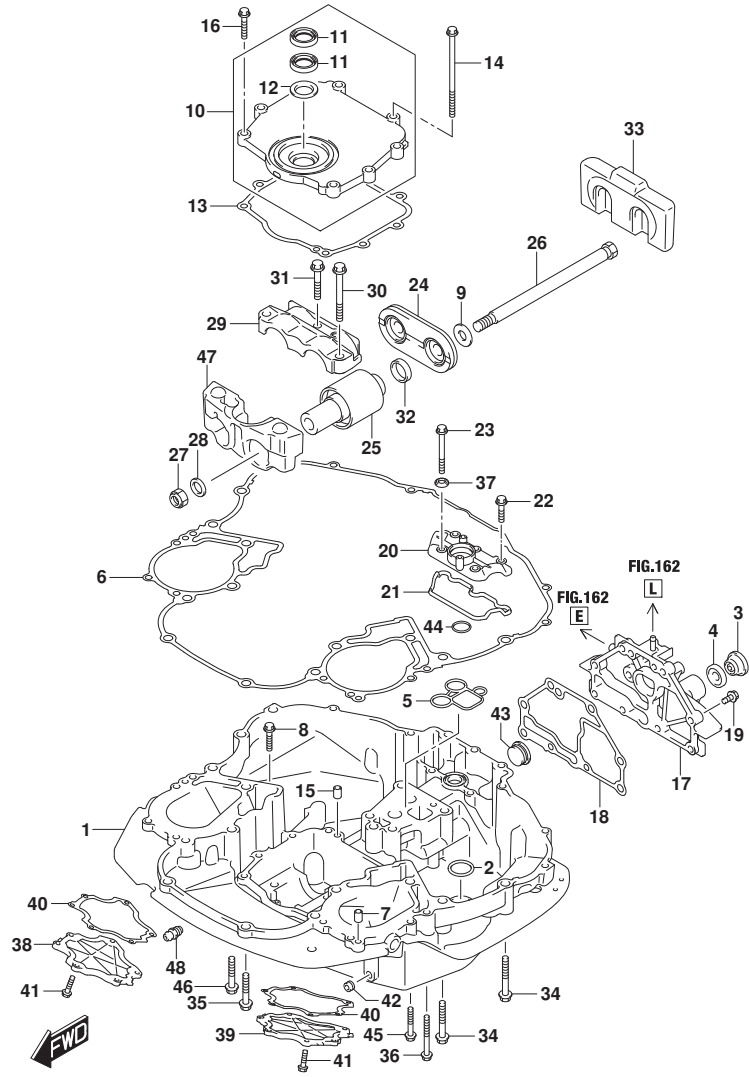


FIG. 401B (1-E-3) エンジンホルダー

見出番号	品番	品名	使用個数	備考	標準作業時間
35	09116-10175	ボルト (10X50)	4		
36	09116-08126	ボルト (8X65)	2		
37	09169-08038	ワッシャ (8. 3X15X3)	2		
38	51161-98L00	カバー, エンジンホルダーウオータジヤケツトスターボート	1	STBD	
39	51165-98L00	カバー, エンジンホルダーウオータジヤケツトボート	1	PORT	
40	51162-98L00	ガスケット, エンジンホルダーウオータジヤケツトカバー	2		
41	09116-06516	ボルト (6X25)	12		
42	09246-08006	ブラグ	2		
43	09248-26003	ブラグ	1		
44	09280-26014	Oリング (D:2. 4, ID:25. 8)	1		
45	09116-08131	ボルト (8X45)	4		
46	09116-10135	ボルト (10X95)	2		
47	54180-98L01	マウント, アッパースイト	1	アッパース	
48	22511-99011	ニツブル, ケーリース	1		

FIG.405B

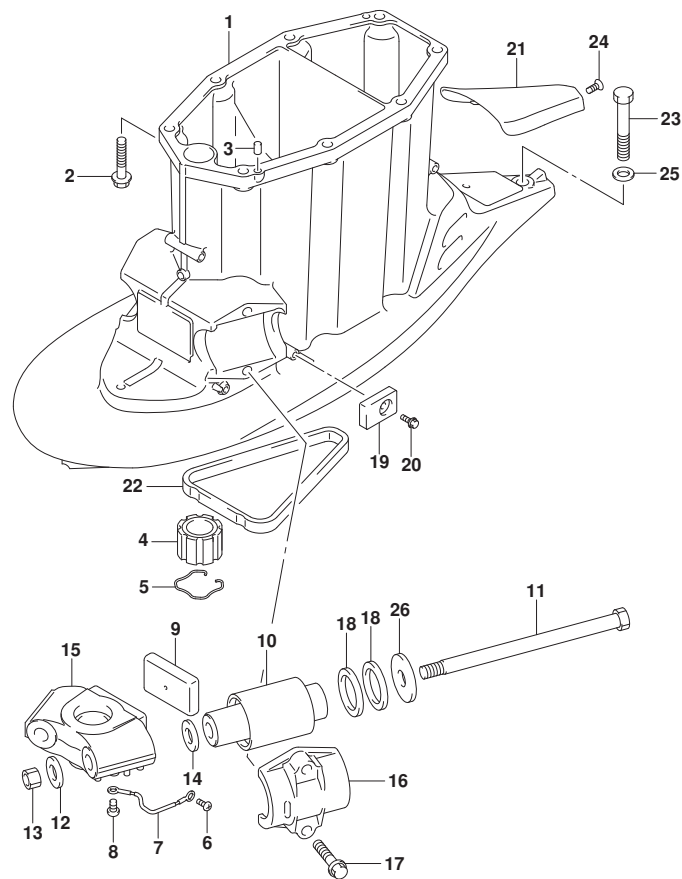


FIG. 405B (1-E-4) ドライブシャフトハウジング (X-TRANSMO)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1-1	52111-98L00-YAY	ハウジング, ドライブシャフト (ﾌﾞﾗｯｸ)	1	BODY COLOR:YAY	
1-2	52111-98L00-QTN	ハウジング, ドライブシャフト (ﾎﾜｲﾄ)	1	BODY COLOR:QTN	
2	09116-10176	ﾎｰﾙﾄ (10X44)	8		
3	09202-08006	ﾋﾞｰﾝ (8X12)	2		
4	57130-87D10	ﾌﾞﾗｯｼｭ, ﾉﾞﾗｲﾌﾞｼｬﾌﾄ	1		
5	09387-39002	ﾘﾝｸﾞ	1		
6	09125-06063	ｽｸﾘｭ (6X10)	1		
7	36894-87D00	ﾘｰﾄﾞ (L:165)	1	MT BRKT TO HSG	
8	09125-06063	ｽｸﾘｭ (6X10)	1		
9	54151-98L00	ﾏｳﾝﾄ, ﾛｱｽﾄﾗｽﾄ	1	ﾛ7	
10	54160-98L00	ﾏｳﾝﾄ, ﾛｱ	2	ﾛ7	
11	54112-93J00	ﾎｰﾙﾄ, ﾏｳﾝﾄ (14X220)	2	ﾛ7	
12	09160-14073	ﾜｯｼﾔ (14. 5X34X3)	2		
13	29159-93J00	ﾅｯﾄ (M14)	2	ﾛ7	
14	09160-14073	ﾜｯｼﾔ (14. 5X34X3)	2		
15-1	54211-98L00-YAY	ﾌﾞﾗｹｯﾄ, ﾛｱﾏｳﾝﾄ (ﾌﾞﾗｯｸ)	1	ﾛ7	
				BODY COLOR:YAY	
15-2	54211-98L00-QTN	ﾌﾞﾗｹｯﾄ, ﾛｱﾏｳﾝﾄ (ﾎﾜｲﾄ)	1	ﾛ7	
				BODY COLOR:QTN	
16	54221-93J00	ｶﾊﾞｰ, ﾛｱﾏｳﾝﾄ	2	ﾛ7	
17	09116-10175	ﾎｰﾙﾄ (10X50)	4		
18	54165-98L00	ｽﾄｯﾊﾟ, ﾛｱｽﾄﾗｽﾄﾘﾊﾞｰｽ	4	ﾛ7	
19	55321-93J01	ｱﾉｰﾄﾞ, ﾌﾞﾛｯｸｼｮﾝ	1		
20	09116-06236	ﾎｰﾙﾄ (6X16)	1		
21-1	52115-98L00-YAY	ｷｬｯﾌﾟ, ﾉﾞﾗｲﾌﾞｼｬﾌﾄﾏｳﾝﾄ (ﾌﾞﾗｯｸ)	1	BODY COLOR:YAY	
21-2	52115-98L00-QTN	ｷｬｯﾌﾟ, ﾉﾞﾗｲﾌﾞｼｬﾌﾄﾏｳﾝﾄ (ﾎﾜｲﾄ)	1	BODY COLOR:QTN	
22	52118-98L10	ｼｰﾙ, ﾉﾞﾗｲﾌﾞｼｬﾌﾄﾏｳﾝﾄ	1		
23	09100-12124	ﾎｰﾙﾄ (12X75)	2		
24	09120-06016	ｽｸﾘｭ (M6)	1		
25	09160-12066	ﾜｯｼﾔ (12. 5X22X2. 5)	2		
26	09160-16055	ﾜｯｼﾔ (16X50X4)	2		



FIG.405D


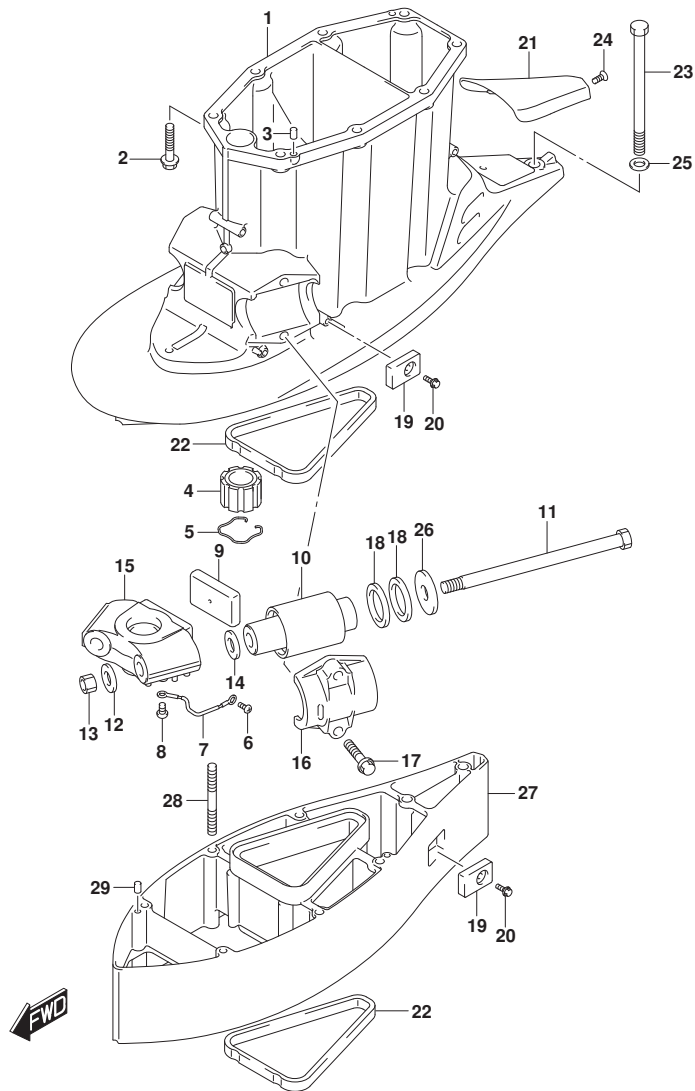


FIG. 405D (1-E-5) ドライブシャフトハウジング (XX-TRANSOM)

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	52111-98L00-YAY	ハウジング, ドライブシャフト (ブラック)	1	BODY COLOR:YAY	
1-2	52111-98L00-QTN	ハウジング, ドライブシャフト (ホワイト)	1	BODY COLOR:QTN	
2	09116-10176	ボルト (10X44)	8		
3	09202-08006	ピン (8X12)	2		
4	57130-87D10	ワッシャー, ドライブシャフト	1		
5	09387-39002	リング	1		
6	09125-06063	スクリュ (6X10)	1		
7	36894-87D00	リート (L:165)	1	MT BRKT TO HSG	
8	09125-06063	スクリュ (6X10)	1		
9	54151-98L00	マウント, ロアスラスト	1	07	
10	54160-98L00	マウント, ロア	2	07	
11	54112-93J00	ボルト, マウント (14X220)	2	07	
12	09160-14073	ワッシャー (14.5X34X3)	2		
13	29159-93J00	ナット (M14)	2	07	
14	09160-14073	ワッシャー (14.5X34X3)	2		
15-1	54211-98L00-YAY	ブラケット, ロアマウント (ブラック)	1	07	
				BODY COLOR:YAY	
15-2	54211-98L00-QTN	ブラケット, ロアマウント (ホワイト)	1	07	
				BODY COLOR:QTN	
16	54221-93J00	カバー, ロアマウント	2	07	
17	09116-10175	ボルト (10X50)	4		
18	54165-98L00	ストッパ, ロアスラストリバー	4	07	
19	55321-93J01	アノード, プロテクション	2		
20	09116-06236	ボルト (6X16)	2		
21-1	52115-98L00-YAY	キャップ, ドライブシャフトハウジング (ブラック)	1	BODY COLOR:YAY	
21-2	52115-98L00-QTN	キャップ, ドライブシャフトハウジング (ホワイト)	1	BODY COLOR:QTN	
22	52118-98L10	シール, ドライブシャフトハウジング	2		
23	54166-95J02	ボルト, マウント (12X200)	2		
24	09120-06016	スクリュ (M6)	1		
25	09160-12066	ワッシャー (12.5X22X2.5)	2		
26	09160-16055	ワッシャー (16X50X4)	2		
27-1	52131-98L00-YAY	ケース, エクステンション (ブラック)	1	BODY COLOR:YAY	
27-2	52131-98L00-QTN	ケース, エクステンション (ホワイト)	1	BODY COLOR:QTN	
28	09108-10115	ボルト, スタッド (10X167)	6		
29	09202-08006	ピン (8X12)	2		

DF350A_000_024_407B
GEAR CASE



DF350A_000_024

見出番号	品番	品名	使用個数	備考	標準作業時間
1	17630-87M00	フィルタ, ウォータホートフロント	1		
2	17633-87M00	. キヤツプ, ウォータフィルタ	1		
3	09140-04007	. ナツト	1		
4	17631-87M00	フィルタ, ウォータホートサイド	1		
5	17632-87M00	フィルタ, ウォータスターホートサイド	1		
6	17638-87M00	フィルタ, ウォータスターホートフロントサイド	1		
7	25230-94300	マグネットセット, キヤケース	2		
8	25232-94300	. マグネット, キヤケース	2		
9-1	55100-87810-YAY	ケースセット, キヤ (ブラック)	1	INCLUDE FIG. 220B REF. 28 BODY COLOR: YAY	
9-2	55100-87810-QTN	ケースセット, キヤ (ホワイト)	1	INCLUDE FIG. 220B REF. 28 BODY COLOR: QTN	
10	57710-98L00	. ヘアリングアツシ, コントラビニオン	1		
11	09265-50001	. ヘアリング (50X90X32)	1		
12	55128-87M00	ブラケット, トレーン	1		
13	55131-87M00	ハイク, オイルチェンジャー	1		
14	55132-87M00	ハイク, オイルチェンジャー	1		
15	55134-87M00	ブラケット, オイルチェンジャー	1		
16	55321-87J01	アノード, フロテクション	1		
17	55321-93J01	アノード, フロテクション	4		
18	09116-06236	ホルダー (6X16)	4		
19	09116-10150	ホルダー (10X55)	6	X-TRANSOM	
20	09125-04020	スクリュ (4X50)	1		
21	09128-06094	ホルダー (6X14)	1		
22	09132-04034	スクリュ (4X18)	1		
23	09168-10038	ガスケット (9. 4X16. 5X2)	3		
24	09202-08006	ピン (8X12)	2		
25	09248-10008	ブラケット (10X7. 5)	2		
26	09280-08005	リング (D: 1. 7, ID: 7. 7)	2		
27	09280-21014	リング (D: 1. 2, ID: 20. 8)	1		
28	09352-70119-100	ホース (7X11X100)	1		
29	09401-11424	クリップ	2		
30	09140-10031	ナット (M10)	6	XX-TRANSOM	

FIG.407B

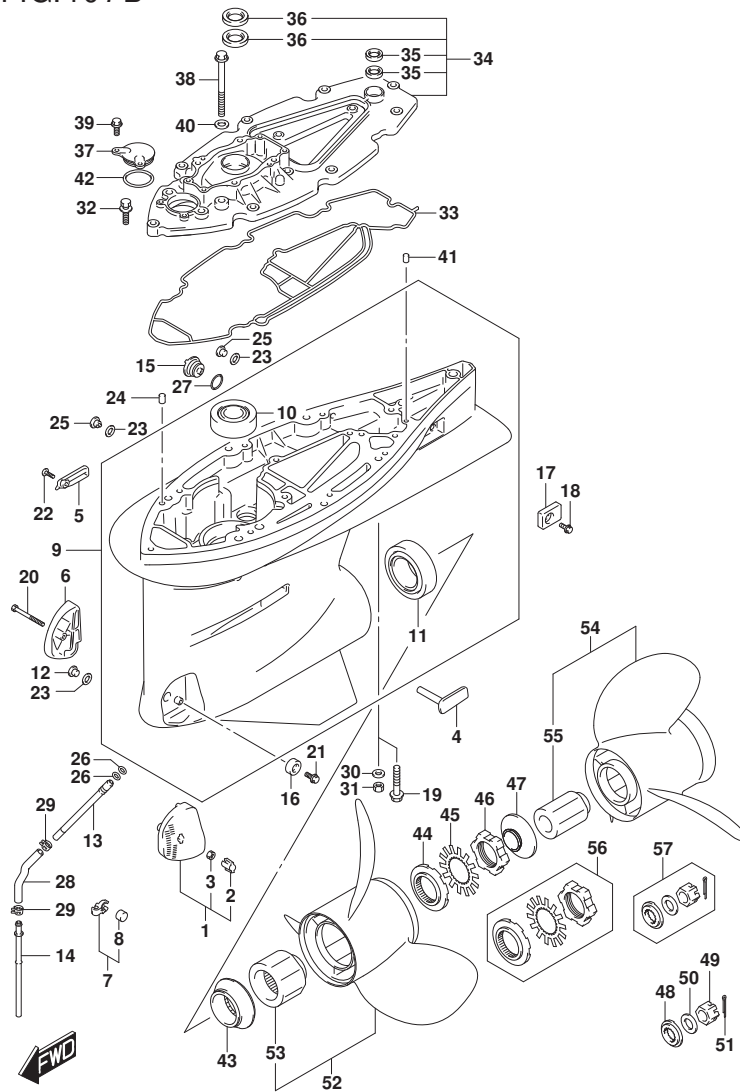


FIG. 407B (1-E-7) ギヤケース

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
31	09160-10165	ワッシャ (10. 5X19X2)	6	XX-TRANSOM	
32	29116-93J10	ボルト (8X35)	11		
33	55122-87M00	シール, ドライブシャフトへアリングハウジング	1		
34	56130-87M00	ハウジング, ドライブシャフトへアリング	1		
35	51124-93J01	シール, オイル	2		
36	09282-15010	シール, オイル (14. 7X25X6. 5)	2		
37	56138-87M00	キャップ, ウォータンレット	1		
38	09103-10461	ボルト (10X107)	4		
39	09116-06236	ボルト (6X16)	2		
40	09169-10023	ワッシャ	4		
41	09202-06031	ピン (6X12)	1		
42	09280-40019	リング (D:3. 5, ID:39. 7)	1		
43	58531-98L00	ストッパ, フロントプロペラブッシュ	1		
44	58541-98L10	SPACER, FRONT PROPELLER NUT	1		
45	58551-98L00	ストッパ, フロントプロペラナット	1		
46	58561-98L01	ナット, フロントプロペラ	1		
47	58631-98L00	ストッパ, リヤプロペラブッシュ	1		
48	58641-98L10	SPACER, REAR PROPELLER NUT	1		
49	09141-18005	ナット (M18)	1		
50	09160-18019	ワッシャ (18. 5X32X2. 5)	1		
51	09204-03003	ピン (D:3. 6, L:25)	1		
52-1	58500-98L00	プロペラ, フロント (3X15-1/2X21)	1		
52-2	58500-98L10	プロペラ, フロント (3X15-1/2X22. 5)	1		
52-3	58500-98L20	プロペラ, フロント (3X15-1/2X24)	1		
52-4	58500-98L30	プロペラ, フロント (3X15-1/2X25. 5)	1		
52-5	58500-98L40	プロペラ, フロント (3X15-1/2X27)	1		
52-6	58500-98L50	プロペラ, フロント (3X15-1/2X28. 5)	1		
52-7	58500-98L60	プロペラ, フロント (3X15-1/2X19. 5)	1		
52-8	58500-98L70	プロペラ, フロント (3X15-1/2X30)	1		
52-9	58500-98L80	プロペラ, フロント (3X15-1/2X31. 5)	1		
52-10	58500-98L90	プロペラ, フロント (3X15-1/2X18)	1		
52-11	58500-98LA0	プロペラ, フロント (3X15-1/2X12)	1		
52-12	58500-98LB0	プロペラ, フロント (3X15-1/2X15)	1		
52-13	58500-98LC0	プロペラ, フロント (3X15-1/2X16. 5)	1		
53	58520-98L00	ブッシュ, フロントプロペラ	1		

FIG.407B

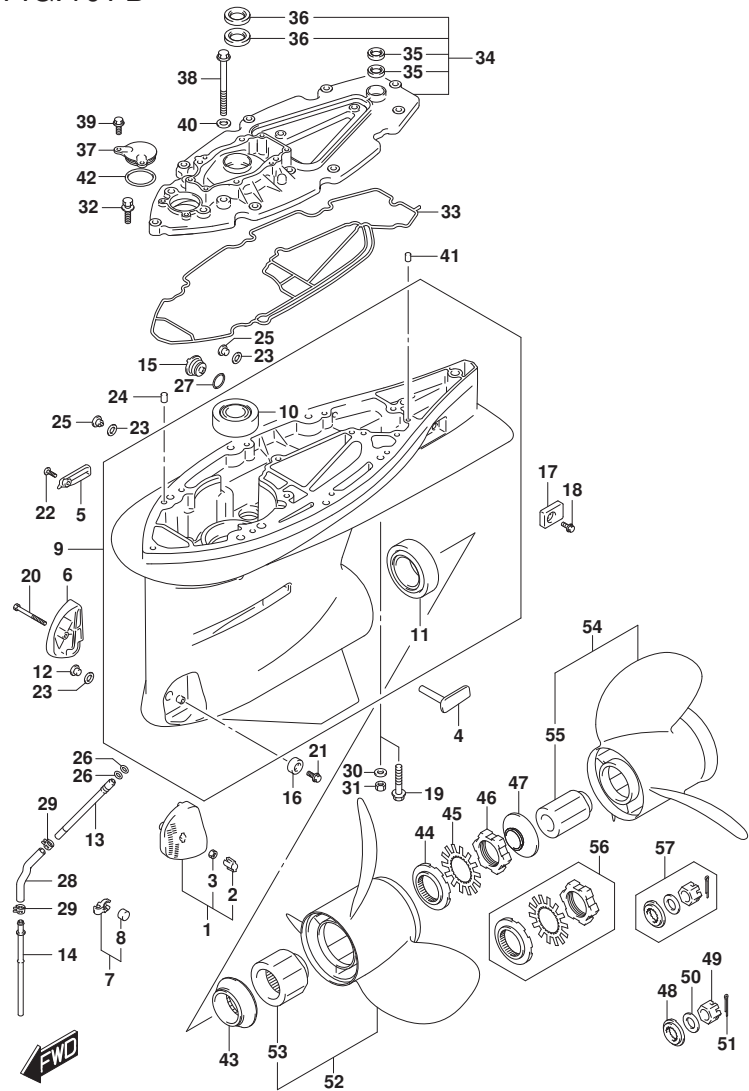


FIG. 407B (1-E-8) ギヤケース

見出番号	品番	品名	使用個数	備考	標準作業時間
54-1	58600-98L01	ブローラ, リヤ (3X15-1/2X21)	1		
54-2	58600-98L11	ブローラ, リヤ (3X15-1/2X22.5)	1		
54-3	58600-98L21	ブローラ, リヤ (3X15-1/2X24)	1		
54-4	58600-98L31	ブローラ, リヤ (3X15-1/2X25.5)	1		
54-5	58600-98L41	ブローラ, リヤ (3X15-1/2X27)	1		
54-6	58600-98L51	ブローラ, リヤ (3X15-1/2X28.5)	1		
54-7	58600-98L61	ブローラ, リヤ (3X15-1/2X19.5)	1		
54-8	58600-98L71	ブローラ, リヤ (3X15-1/2X30)	1		
54-9	58600-98L81	ブローラ, リヤ (3X15-1/2X31.5)	1		
54-10	58600-98L91	ブローラ, リヤ (3X15-1/2X18)	1		
54-11	58600-98LA1	ブローラ, リヤ (3X15-1/2X12)	1		
54-12	58600-98LB1	ブローラ, リヤ (3X15-1/2X15)	1		
54-13	58600-98LC1	ブローラ, リヤ (3X15-1/2X16.5)	1		
55	58620-98L00	.ブローラ, リヤブローラ	1		
56	58540-98L01	ギョ, フロントブローラナット	1	オプション	
57	58640-98L00	ギョ, リヤブローラナット	1	オプション	
58	25700-87M10	ギョ, ギヤケースシーリング	1	オプション, イラストに示す	

This diagram illustrates the assembly of a boat hull, showing various components and their installation points. The parts are numbered as follows:

- 46**: Legend for the top section, showing a triangle symbol and a book icon.
- 11**: Upper hull section.
- 18**: Bolt for upper hull section.
- 45**: Bolt for upper hull section.
- 15**: Bolt for upper hull section.
- 6**: Main hull section.
- 26**, **33**, **38**, **39**, **25**, **40**, **37**, **29**, **36**, **35**, **34**, **7**: Various components and fasteners for the main hull section.
- 14**: Bolt for main hull section.
- 4**: Main hull section.
- 22**, **30**, **35**, **37**, **36**, **9**, **34**, **21**, **12**, **23**: Various components and fasteners for the main hull section.
- 8**: Main hull section.
- 38**, **32**, **39**, **40**, **33**, **27**: Various components and fasteners for the main hull section.
- FIG. 162**: Reference to a specific assembly step or view.
- 44**, **41**, **43**: Various components and fasteners for the main hull section.
- 1**, **2**, **36**, **28**, **35**, **34**, **20**, **19**: Various components and fasteners for the main hull section.
- 39**, **38**, **24**, **40**, **33**, **39**, **31**: Various components and fasteners for the main hull section.
- 13**, **10**, **16**: Various components and fasteners for the main hull section.
- 3**: Main hull section.
- 17**: Bolt for main hull section.
- 5**: Main hull section.
- 16**: Bolt for main hull section.
- 42**: Bolt for main hull section.
- FWD**: Forward direction indicator.

見出番号	品番	品名	使用個数	備考	標準作業時間
1	17913-93J00	ﾌﾞﾗｯｸ*, ﾕｵｰﾀ	1		
2	17914-93J01	ｶﾞｽｹｯﾄ, ﾕｵｰﾀﾌﾞﾗｯｸ*	1		
3-1	61131-98L02-YAY	ｶﾊﾞｰ, ﾀｲﾙﾊﾞﾝｽﾀｰﾎｰﾄﾞ* (ﾌﾞﾗｯｸ)	1	STBD	
				BODY COLOR:YAY	
3-2	61131-98L02-QTN	ｶﾊﾞｰ, ﾀｲﾙﾊﾞﾝｽﾀｰﾎｰﾄﾞ* (ﾎﾜｲﾄ)	1	BODY COLOR:QTN	
4	61134-98L00	ｼｰﾙ, ﾍﾞﾝｼﾞﾝﾎﾙﾀﾞ	1		
5-1	61140-98L03-YAY	ｶﾊﾞｰ, ﾀｲﾙﾊﾞﾝｽﾀｰﾎｰﾄﾞ (ﾌﾞﾗｯｸ)	1	PORT	
				BODY COLOR:YAY	
5-2	61140-98L03-QTN	ｶﾊﾞｰ, ﾀｲﾙﾊﾞﾝｽﾀｰﾎｰﾄﾞ (ﾎﾜｲﾄ)	1	BODY COLOR:QTN	
6-1	61810-98L10-YAY	ｶﾊﾞｰ, ﾀﾞｲﾄﾞｽﾀｰﾎｰﾄﾞ* (ﾌﾞﾗｯｸ)	1	BODY COLOR:YAY	
6-2	61810-98L10-QTN	ｶﾊﾞｰ, ﾀﾞｲﾄﾞｽﾀｰﾎｰﾄﾞ* (ﾎﾜｲﾄ)	1	BODY COLOR:QTN	
7	61814-98L00	ﾌﾞﾛﾂｸﾀ, ﾀﾞｲﾄﾞ ｶﾊﾞｰ	2		
8-1	61820-98L00-YAY	ｶﾊﾞｰ, ﾀﾞｲﾄﾞ ｾﾞｰﾄﾞ (ﾌﾞﾗｯｸ)	1	PORT	
				BODY COLOR:YAY	
8-2	61820-98L00-QTN	ｶﾊﾞｰ, ﾀﾞｲﾄﾞ ｾﾞｰﾄﾞ (ﾎﾜｲﾄ)	1	BODY COLOR:QTN	
9	61827-98L00	ﾎﾙﾀﾞ, ﾀﾞｲﾄﾞ ｶﾊﾞｰ	1		
10	61830-98L00-YAY	ﾊﾞﾈﾙ, ｳﾛﾝﾄ (ﾌﾞﾗｯｸ)	1	BODY COLOR:YAY	
11-1	61830-98L00-QTN	ﾊﾞﾈﾙ, ｳﾛﾝﾄ (ﾎﾜｲﾄ)	1	BODY COLOR:QTN	
11-2	61861-98L01-20H	ﾊﾞﾈﾙ, ﾘﾔ (ｼﾙﾊﾞｰ)	1		
12	01550-0816C	ﾎｰﾙﾄ (8X16)	2		
13	09116-08170	ﾎｰﾙﾄ (8X60)	2		
14	09139-06249	ｽｸﾘｭ	8		
15	09111-06253	ﾎｰﾙﾄ (M6)	4		
16	09139-06135	ｽｸﾘｭ (6X17)	9		
17	09139-06136	ｽｸﾘｭ (6X65)	2		
18	09139-06135	ｽｸﾘｭ (6X17)	2		
19	09169-08050	ｳｯｼﾞﾔ (1D:8.5)	2		
20	09320-11023	ｸﾜｼｵﾝ	2		
21	09321-10049	ｸﾜｼｵﾝ	2		
22	09409-05302-5PK	ｸﾘｯﾌﾟ (ﾌﾞﾗｯｸ)	2		
23	09329-14003	ｸﾜｼｵﾝ (14X20X9)	1		
24	61632-93J00	ｼﾔﾌﾄ, ﾍﾞﾝｼﾞﾝ ｶﾊﾞｰ-ﾌｳｯｸ	1		
25	61632-98L00	ｼﾔﾌﾄ, ﾍﾞﾝｼﾞﾝ ｶﾊﾞｰ-ﾌｳｯｸｽﾀｰﾎｰﾄﾞ*	1		
26-1	61633-93J00-YAY	ﾚﾊﾞｰ, ｳｯｸﾘﾔｽﾀｰﾎｰﾄﾞ* (ﾌﾞﾗｯｸ)	1	STBD	
				BODY COLOR:YAY	

FIG.410A

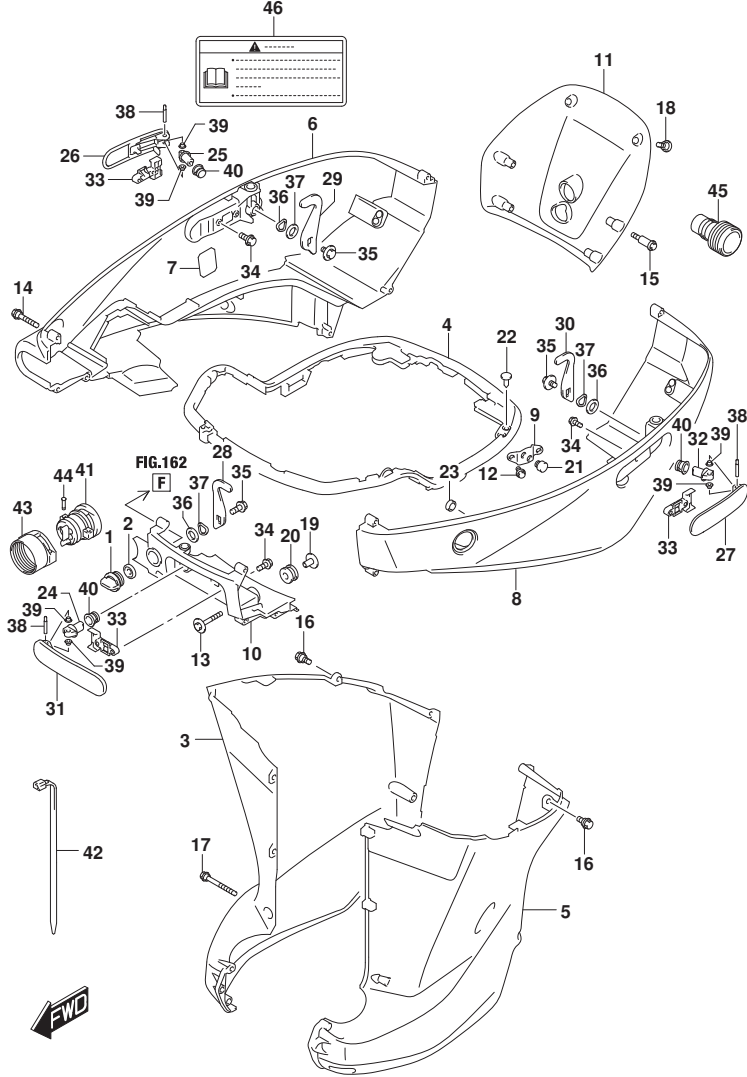


FIG. 410A (1-E-10) サイドカバー

見出番号	品番	品名	使用個数	備考	標準作業時間
26-2	61633-93J00-QTN	レバー, フックリヤスターボート (ホワイト)	1	BODY COLOR:QTN	
27-1	61634-93J00-YAY	レバー, フックリヤボート (ブラック)	1	PORT BODY COLOR:YAY	
27-2	61634-93J00-QTN	レバー, フックリヤボート (ホワイト)	1	BODY COLOR:QTN	
28	61641-93J10	フック, エンジンカバー (REAR STBD/FRONT)	1		
29	61641-93J10	フック, エンジンカバー (REAR STBD/FRONT)	1	STBD	
30	61641-93J20	フック, エンジンカバー-リヤボート (REAR PORT)	1		
31-1	61645-93J01-YAY	レバー, フックフロント (ブラック)	1	BODY COLOR:YAY	
31-2	61645-93J01-QTN	レバー, フックフロント (ホワイト)	1	BODY COLOR:QTN	
32	61652-98L00	シャフト, エンジンカバー-フックボート	1	PORT	
33	61673-93J02	ラッチ, フックレバー	3		
34	09103-05026	ボルト (5X10)	6		
35	09116-06127	ボルト (6X12)	3		
36	09160-13014	ワッシャ (13.2X25X1)	3		
37	09164-14008	ワッシャ	3		
38	09202-04022	ピン	3		
39	09306-04005	ブッシュ	6		
40	09306-13007	ブッシュ	3		
41	61124-98L30	グロメット, リモコンハーネス	1		
42	09407-20405	クランプ (L:202)	1		
43	67361-90J10	アダプタ, ホース (RIGGING)	1		
44	09208-06011	ピン (RIGGING)	2		
45	17917-87L00	コネクタ, フラッシュウオータ	1		
46	61458-99E51	ラベル, エンジンカバー	1		

FIG.420A

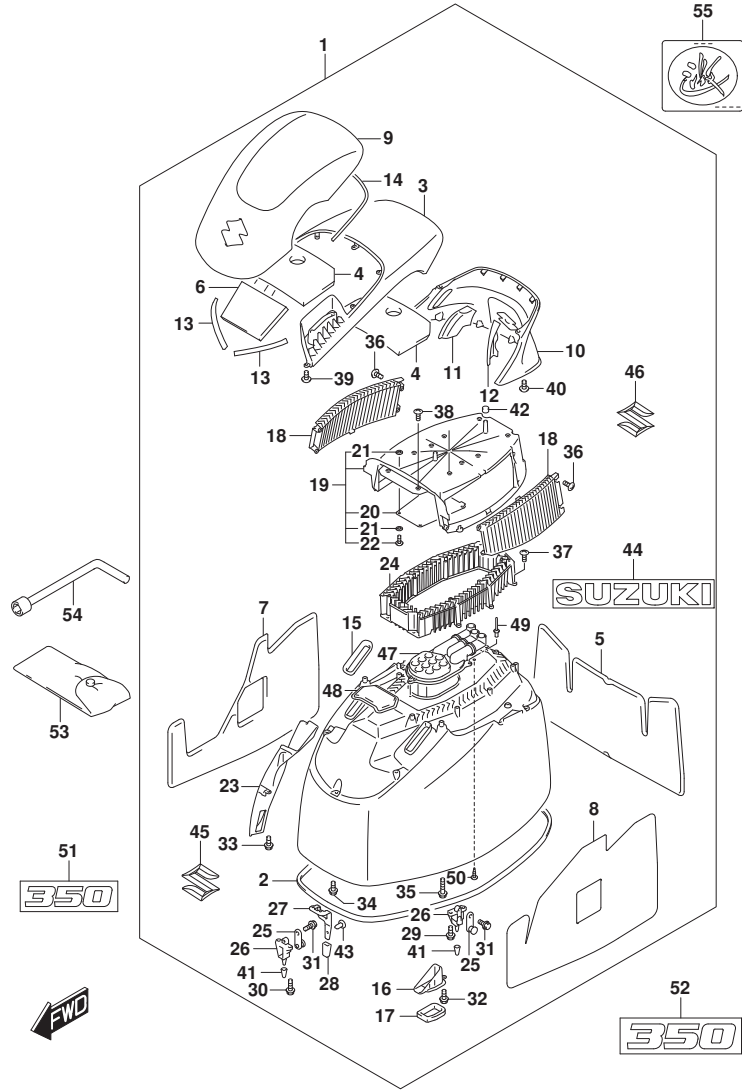


FIG. 420A (1-E-11) エンジンカバー (DF350A)

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	61420-98823-AML	カバーセット, エンジン (シルバー/ブラック)	1	BODY COLOR:YAY	
1-2	61420-98823-B5H	カバーセット, エンジン (WHITE/SILVER)	1	BODY COLOR:QTN	
2	61414-98L00	シール, エンジンカバーストリップ	1		
3-1	61421-98L00-YAY	カバー, エンジンストリップリヤ (ブラック)	1	BODY COLOR:YAY	
3-2	61421-98L00-QTN	カバー, エンジンストリップリヤ (ホワイト)	1	BODY COLOR:QTN	
4	61425-98L00	サイレンサ, ツフカバー	2		
5	61426-98L10	サイレンサ, エンジンカバー	1		
6	61427-98L00	サイレンサ, エンジンカバー	1		
7	61428-98L00	サイレンサ, エンジンカバースターボート	1		
8	61429-98L00	サイレンサ, エンジンカバーボート	1		
9	61430-98L00-20H	カバー, エンジンストリップフロント (シルバー)	1		
10	61432-98L00-20H	カバーニッシュ, エアインテーク (シルバー)	1		
11	61433-98L00	カバー, エアインテークスターボート	1		
12	61434-98L00	カバー, エアインテークボート	1		
13	61437-98L00	シール, エアインテーク	2		
14	61438-98L01	シール, エンジンカバーストリップ	1		
15	61439-98L00	シール, エアインテークNO. 2	2		
16	61475-98L00	ガイド, エアインテーク	1		
17	61476-98L00	シール, エアインテークNO. 1	1		
18	61561-98L00	ルーバ, エアインテークアウト	2		
19	61560-98L00	フレーム, エアインテーク	1		
20	61563-98L00	サイレンサ, エアインテーク	1		
21	09160-04029	ワッシャ	8		
22	09229-04018	リベット	4		
23	61565-98L00	タクト, エアインテーク	1		
24	61591-98L00	ルーバ, エアインテークインナ	1		
25	61610-98L00	フラスチ	3		
26	61621-93J01	ブラケット, フラスチ	3		
27	61682-98L00	スタンド, エンジンカバー	1		
28	61683-98L00	クッション, エンジンカバースタンド	1		
29	01547-0616C	ボルト	4		
30	01547-0620C	ボルト	2		
31	01550-0616C	ボルト (6X16)	3		
32	01550-0616C	ボルト (6X16)	1		
33	01550-0616C	ボルト (6X16)	2		

FIG.420A

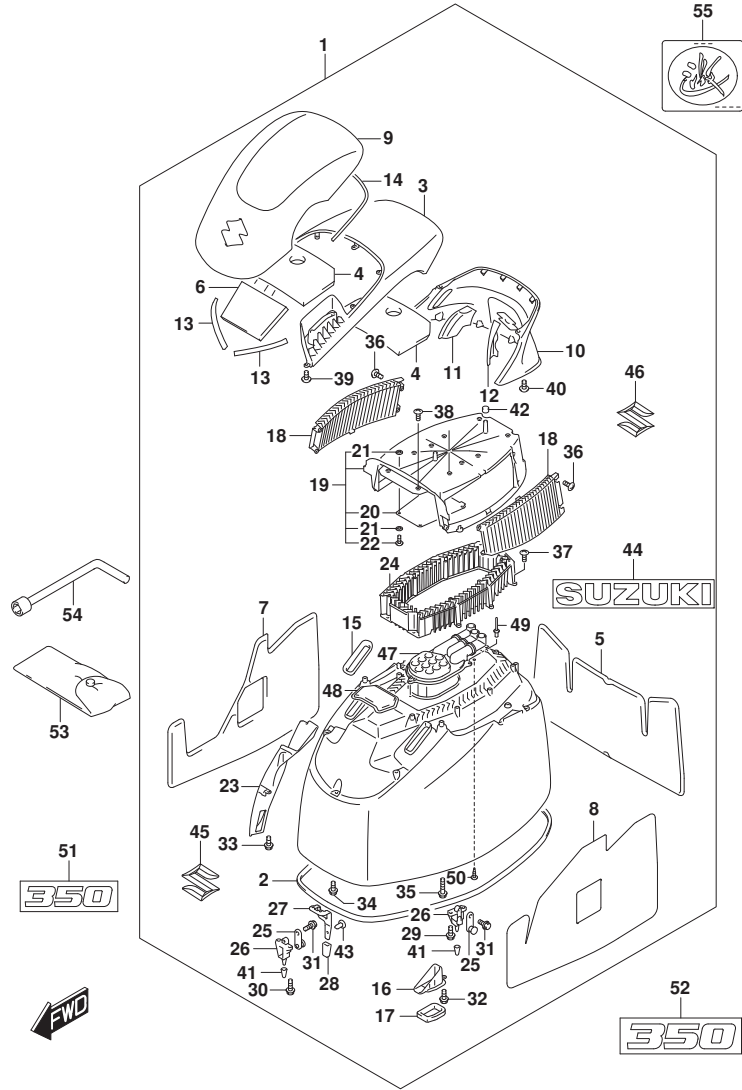


FIG. 420A (1-E-12) エンジンカバー (DF350A)

見出番号	品番	品名	使用個数	備考	標準作業時間
34	01550-0616C	.ボルト (6X16)	3		
35	01550-0630C	.ボルト (6X30)	2		
36	03542-06169	.スクリュー (6X19)	8		
37	03542-06169	.スクリュー (6X19)	9		
38	03542-06169	.スクリュー (6X19)	14		
39	03542-06169	.スクリュー (6X19)	7		
40	03542-06169	.スクリュー (6X19)	13		
41	09329-10024	.クッション	3		
42	09329-12006	.クッション	2		
43	09409-05302-5PK	.クリップ (フック)	1		
44	61441-98L00	.マーク, スター	2		
45	68111-93J00	.エンブレム, S	1		
46	77811-63J00-OPG	.エンブレム, マークS (クロム)	1		
47	61416-98L10	.ガード, エアインテーク	1		
48	6142A-98L00	.サイレンサ, エンジンアツパ フロント	1		
49	09229-04018	.リベット	3		
50	03542-06169	.スクリュー (6X19)	1		
51	61422-98L00	マーク, エンブレムフロント	1		
52	61435-98L00	マーク, エンブレムリヤ	1		
53	09800-81835	ツールセット	1		
54	09816-00175	レンチ, ホックス (8)	1		
55-1	61424-98L01	マーク, エンブレム	1	BODY COLOR:YAY	
55-2	61424-98L20	マーク, エンブレム	1	BODY COLOR:QTN	

FIG.420C

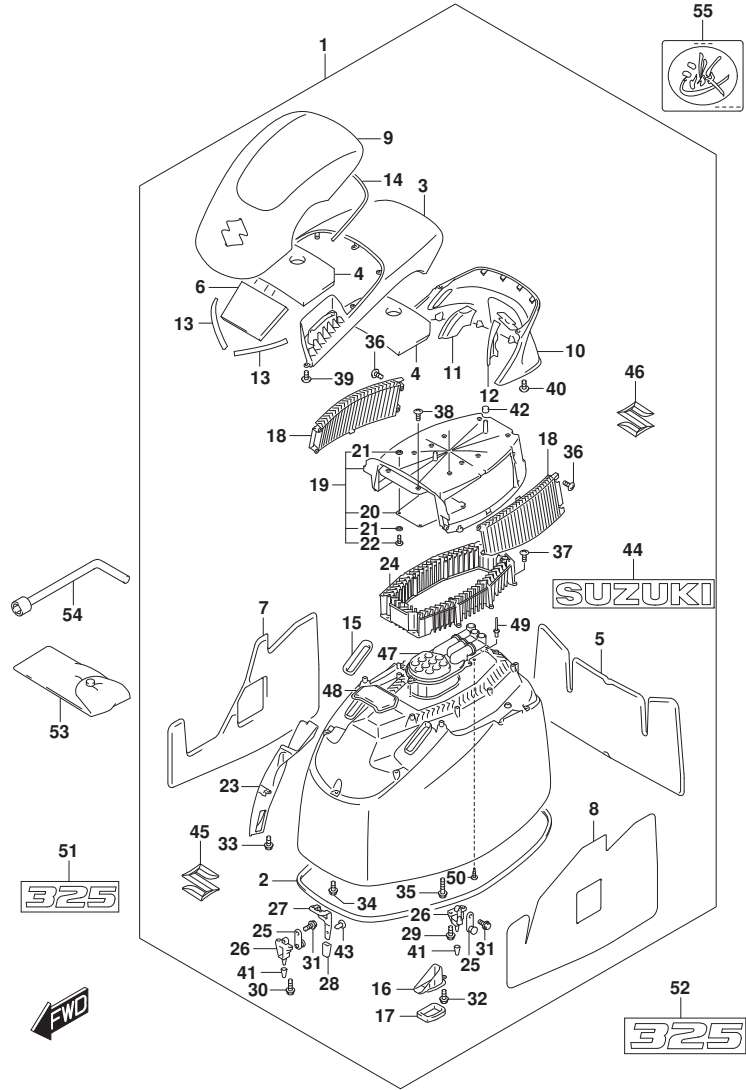


FIG. 420C (1-E-13) エンジンカバー (DF325A)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1-1	61420-98823-AML	カバーセット, エンジン (シルバー/ブラック)	1	BODY COLOR:YAY	
1-2	61420-98823-B5H	カバーセット, エンジン (WHITE/SILVER)	1	BODY COLOR:QTN	
2	61414-98L00	シール, エンジンカバー・ストリップ	1		
3-1	61421-98L00-YAY	カバー, エンジン・ストリップ リヤ (ブラック)	1	BODY COLOR:YAY	
3-2	61421-98L00-QTN	カバー, エンジン・ストリップ リヤ (ホワイト)	1	BODY COLOR:QTN	
4	61425-98L00	サイレンサ, トップカバー	2		
5	61426-98L10	サイレンサ, エンジンカバー	1		
6	61427-98L00	サイレンサ, エンジンカバー	1		
7	61428-98L00	サイレンサ, エンジンカバー・スターホート	1		
8	61429-98L00	サイレンサ, エンジンカバー・ホート	1		
9	61430-98L00-20H	カバー, エンジン・ストリップ フロント (シルバー)	1		
10	61432-98L00-20H	カバー・ニッシュ, エアインテーク (シルバー)	1		
11	61433-98L00	カバー, エアインテーク・スターホート	1		
12	61434-98L00	カバー, エアインテーク・ホート	1		
13	61437-98L00	シール, エアインテーク	2		
14	61438-98L01	シール, エンジンカバー・トップ	1		
15	61439-98L00	シール, エア・ンチレータNO. 2	2		
16	61475-98L00	ガイド, エア・ンチレータ	1		
17	61476-98L00	シール, エア・ンチレータNO. 1	1		
18	61561-98L00	ルーバ, エアインテーク・アウト	2		
19	61560-98L00	フレーム, エアインテーク	1		
20	61563-98L00	サイレンサ, エアインテーク	1		
21	09160-04029	ワッシャ	8		
22	09229-04018	リベット	4		
23	61565-98L00	ダクト, エアインテーク	1		
24	61591-98L00	ルーバ, エアインテーク・インナ	1		
25	61610-98L00	フラスタ	3		
26	61621-93J01	ブラケット, フラスタ	3		
27	61682-98L00	スタンド, エンジンカバー	1		
28	61683-98L00	クッション, エンジンカバー・スタンド	1		
29	01547-0616C	ボルト	4		
30	01547-0620C	ボルト	2		
31	01550-0616C	ボルト (6X16)	3		
32	01550-0616C	ボルト (6X16)	1		
33	01550-0616C	ボルト (6X16)	2		

FIG.420C

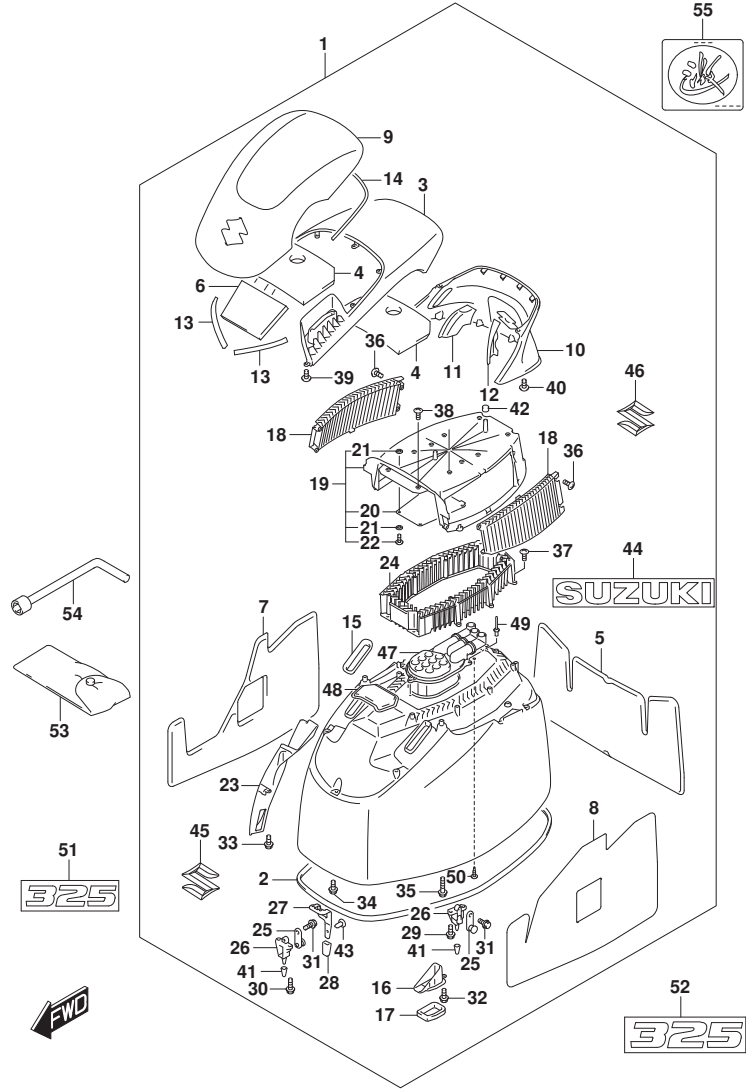


FIG. 420C (1-E-14) エンジンカバー (DF325A)

見出番号	品番	品名	使用個数	備考	標準作業時間
34	01550-0616C	.ボルト (6X16)	3		
35	01550-0630C	.ボルト (6X30)	2		
36	03542-06169	.スクリュー (6X19)	8		
37	03542-06169	.スクリュー (6X19)	9		
38	03542-06169	.スクリュー (6X19)	14		
39	03542-06169	.スクリュー (6X19)	7		
40	03542-06169	.スクリュー (6X19)	13		
41	09329-10024	.クッション	3		
42	09329-12006	.クッション	2		
43	09409-05302-5PK	.クリップ (フック)	1		
44	61441-98L00	.マーク, スター	2		
45	68111-93J00	.エンブレム, S	1		
46	77811-63J00-OPG	.エンブレム, マークS (クロム)	1		
47	61416-98L10	.ガード, エアインテーク	1		
48	6142A-98L00	.サイレンサ, エンジンアツパ フロント	1		
49	09229-04018	.リベット	3		
50	03542-06169	.スクリュー (6X19)	1		
51	61422-98L60	マーク, エンブレムフロント	1		
52	61435-98L60	マーク, エンブレムリヤ	1		
53	09800-81835	ツールセット	1		
54	09816-00175	レンチ, ホックス (8)	1		
55-1	61424-98L01	マーク, エンブレム	1	BODY COLOR:YAY	
55-2	61424-98L20	マーク, エンブレム	1	BODY COLOR:QTN	

FIG.430A

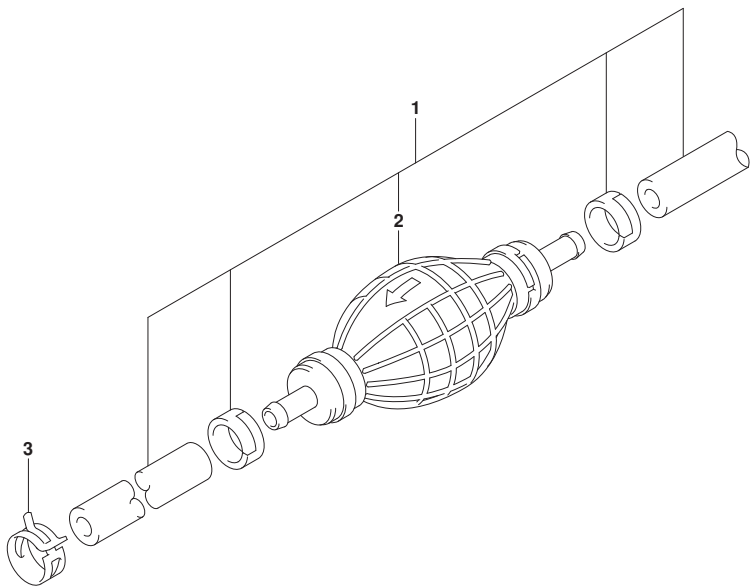


FIG. 430A (1-E-15) フューエルホース

見出番号	品番	品名	使用個数	備考	標準作業時間
1	65700-93J14	ホース, フューエル	1		
2	65770-93J13	. ホ ` ンフ ` , スクイズ `	1		
3	09401-14409	クリップ `	2		

FIG.520A

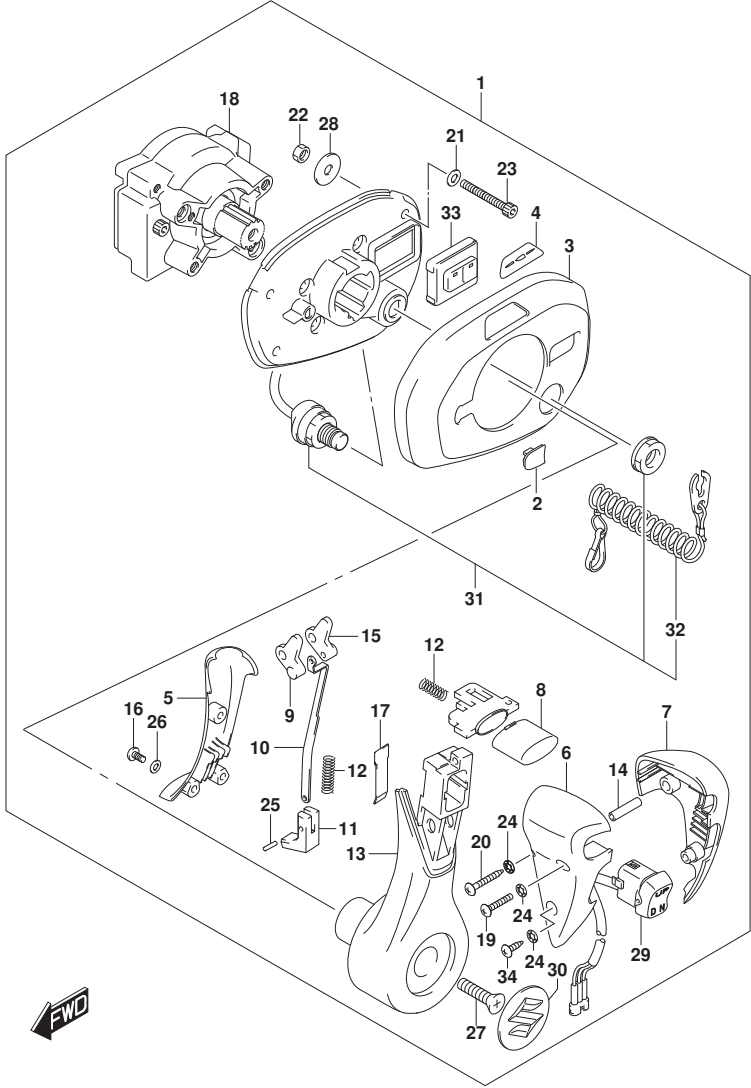


FIG. 520A (1-E-16) オプション:フラッシュマウントリモコン

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	67200-98L20	リモコンアッシ, フラッシュマウント	1		
2	67272-98L20	. ケ' ロメツト, リモコンカバー	1		
3	67264-98L00	. カバー, トップベース	1		
4	67284-98L20	. . マーク, ハンドルレバー	1		
5	67263-98J20	. カバー, レバー	1		
6	67261-98J20	. ケ' リツプ', A	1		
7	67261-98J30	. ケ' リツプ', B	1		
8	67265-98J00	. ボ' タン, ニュートラルロック	1		
9	67255-98J00	. リンク, ニュートラルロックNO. 1	1		
10	67258-98J00	. フ' レート, ジョイント	1		
11	67256-98L00	. フ' ロック, ニュートラルロック	1		
12	67259-98J00	. スフ' リンク'	3		
13	67251-98J20	. レバー, ハンドル	1		
14	67294-98J00	. スペーサ	1		
15	67254-98J00	. リンク, ニュートラルロックNO. 2	1		
16	67296-98JA0	. スクリュ (4X10)	3		
17	67234-98J00	. フ' レート, レバー	1		
18	67211-98J20	. ハウジング'	1		
19	67296-98JB0	. スクリュ (4X30)	1		
20	67227-98J20	. スクリュ (4X35)	1		
21	67288-98J50	. ワツシヤ, フ' レーン	4		
22	67287-98J00	. ナット	4		
23	67226-98J10	. ボ' ルト (6X50)	4		
24	67288-98J60	. ワツシヤ, INTERNALTOOTH (M4)	3		
25	67238-98J00	. ビ' ン	2		
26	67288-98J00	. ワツシヤ, POTENTIOMETER	3		
27	67296-98J60	. スクリュ (8X30)	1		
28	67288-94310	. ワツシヤ (6. 5X24X2)	4		
29	37850-98J03	. スイツチアッシ, PTT	1		
30	67257-98J00	. マーク, レバー	1		
31	37820-98L00	. スイツチアッシ, エマシ' エンシ	1		
32	37823-98L01	. . フ' レートアッシ, エマシ' エンシスイツチロック	1		
33	37130-98L20	. スイツチアッシ, ボ' ートコントロール	1		
34	67227-98L00	. スクリュ	1		

This exploded view diagram illustrates the assembly of the rear panel. The components are numbered 1 through 23. The assembly process involves connecting various cables (1, 2, 3, 4, 5, 6, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23) to the rear panel (7) and the device chassis (8). The rear panel is then secured with screws (9, 10, 11) and the device chassis is attached to the rear panel. The final assembly is shown in the bottom right corner, with the device chassis (8) and the rear panel (7) connected to the device (22).

見出番号	品番	品名	使用個数	備考	標準作業時間
1	36620-98L00	ワイヤアツシ、リモートコントロール (L: 6500)	1		
2	33830-98J11	セツト、ハゝツテリアイソレタリドゝ	1		
3	09407-10404	. クランプ (L: 100)	2		
4	09481-40401	. フューズ (40A)	1		
5	33925-98L00	クツシヨシ、エンジツンコントロールユニット	AR		
6	33926-98L00	レジスタ、ターミナル	AR		
7	36623-98L00	ハーネスアツシ、BCMNO. 1シンケゝル	1		
8	36615-96300	. ターミナル	7		
9	36770-98L03	コントロールアツシ、ボゝートエレクトリツク	1		
10	36775-98L00	ホルダゝ、BCM	AR		
11	36776-98L00	ホルダゝ、BCM	AR		
12	36622-98L00	ハーネスアツシ、デゝユアルステイシヨシメイン	AR		
13	09481-10501	. フューズ (10A)	AR		
14	36624-98L00	ハーネスアツシ、BCMNO. 2シンケゝル	1		
15	36615-96300	. ターミナル	7		
16	36621-98L00	ハーネスアツシ、デゝユアルエンジツン	AR		
17	36623-98L30	ハーネスアツシ、BCMNO. 17オゝマルチヅゝル	1		
18	36615-96300	. ターミナル	5		
19	36624-98L10	ハーネスアツシ、BCMNO. 2マルチ	1		
20	36615-96300	. ターミナル	2		
21	36612-98J20	コネクタ、カウシタセレクト	AR		
22	36990-87D00	TERMINAL SET, WITH SLEEVE	1		
23	36667-96L60	ワイヤ、ケゝジゝエクステシヨシ	1		

FIG.523A

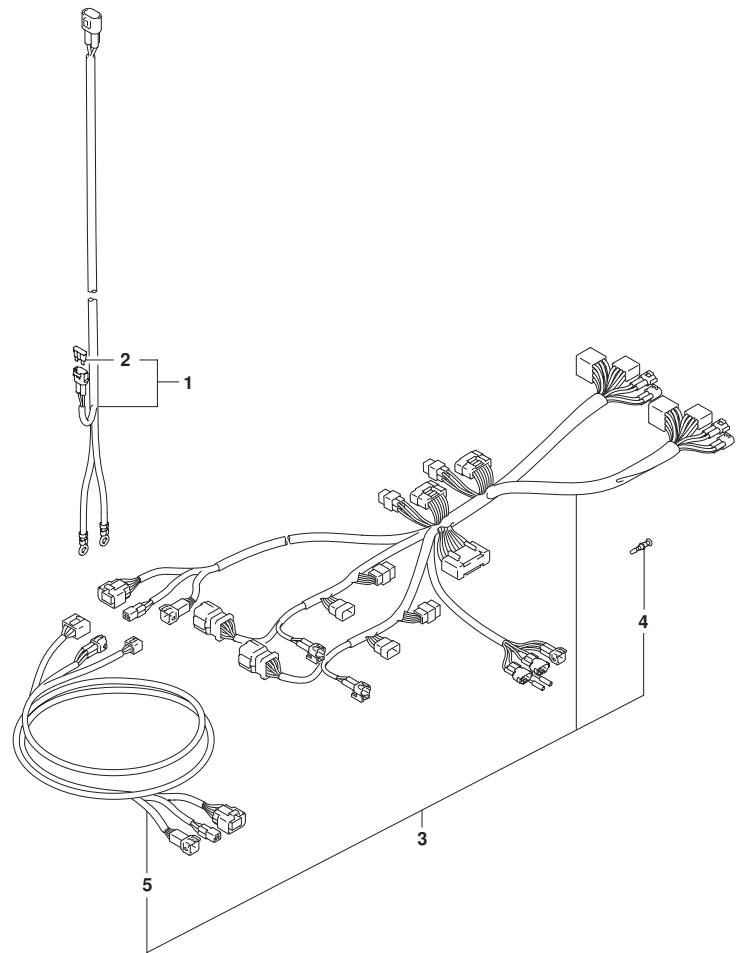


FIG. 523A (1-F-3) オプション:ハーネス(2)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1-1	36625-98J10	ワイヤアツシ, ハﾟ ッテリ (L:2250)	AR		
1-2	36625-98J20	ワイヤアツシ, ハﾟ ッテリ (L:6100)	AR		
2	09481-30504	. フューズ (30A)	AR		
3	36623-98L40	ハーネスアツシ, BCMNO. 1ｸﾞｱﾄﾞﾟﾙﾌﾟﾙ	1		
4	36615-96300	. タｰﾐﾅﾙ	7		
5	36627-98L00	. ハｰﾈｽ, リﾓｺﾝｴｸｽﾃﾝｼｮﾝ	1		

FIG.530A

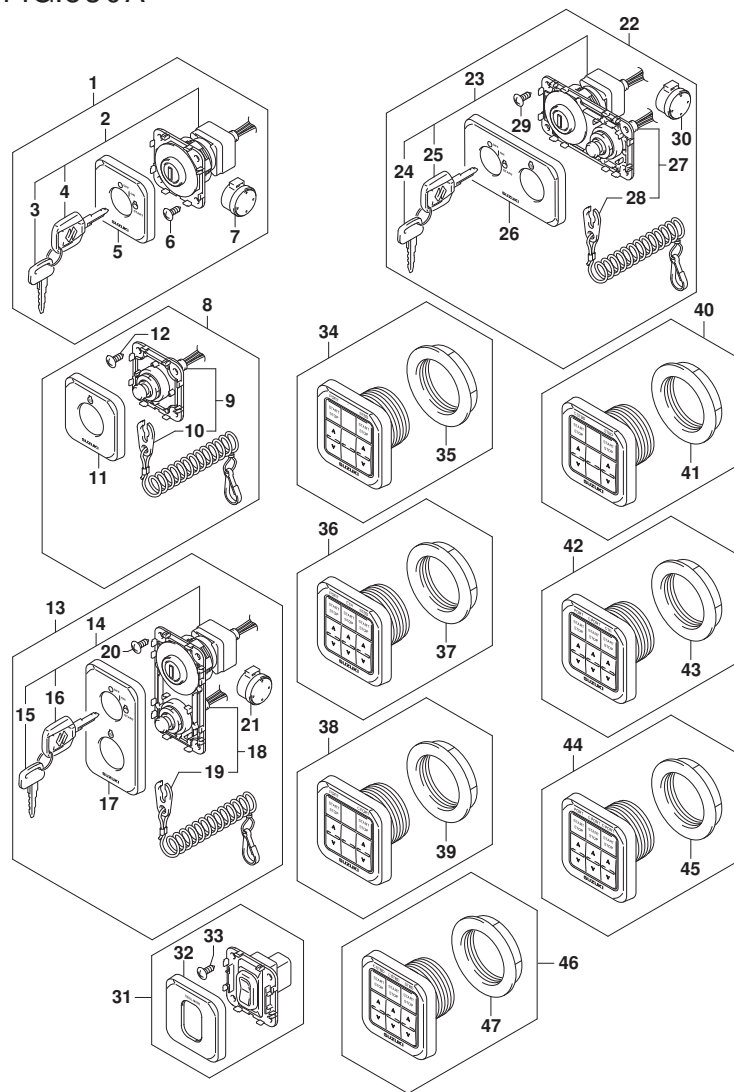


FIG. 530A (1-F-4) オプション:スイッチ

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	37100-98L00	ハネルアツシ, メインスイッチ	1		
2	37110-98L00	スイッチアツシ, メイン	1		
3-1	37141-99E00	.. キー (931)	1		
3-2	37141-99E10	.. キー (932)	1		
3-3	37141-99E20	.. キー (933)	1		
3-4	37141-99E30	.. キー (934)	1		
3-5	37141-99E40	.. キー (935)	1		
3-6	37141-99E50	.. キー (936)	1		
3-7	37141-99E60	.. キー (937)	1		
3-8	37141-99E70	.. キー (938)	1		
3-9	37141-99E80	.. キー (939)	1		
3-10	37141-99E90	.. キー (940)	1		
3-11	37141-99EA0	.. キー (941)	1		
3-12	37141-99EB0	.. キー (942)	1		
4-1	37141-98L00	.. キー (931)	1		
4-2	37141-98L10	.. キー (932)	1		
4-3	37141-98L20	.. キー (933)	1		
4-4	37141-98L30	.. キー (934)	1		
4-5	37141-98L40	.. キー (935)	1		
4-6	37141-98L50	.. キー (936)	1		
4-7	37141-98L60	.. キー (937)	1		
4-8	37141-98L70	.. キー (938)	1		
4-9	37141-98L80	.. キー (939)	1		
4-10	37141-98L90	.. キー (940)	1		
4-11	37141-98LA0	.. キー (941)	1		
4-12	37141-98LB0	.. キー (942)	1		
5	37138-98L00	.. カバー, メインスイッチハネル	1		
6	03142-05169	.. スクリュー	4		
7	38500-93J90	.. プザー, ウォーニング	1		
8	37803-98L00	ハネルアツシ, エマシ エンシスイッチ	1		
9	37820-98L00	.. スイッチアツシ, エマシ エンシ	1		
10	37823-98L01	.. プレートアツシ, エマシ エンシスイッチロック	1		
11	37832-98L00	.. カバー, エマシ エンシスイッチハネル	1		
12	03142-05169	.. スクリュー	4		
13	37100-98L10	ハネルアツシ, メインスイッチ	1		

FIG.530A


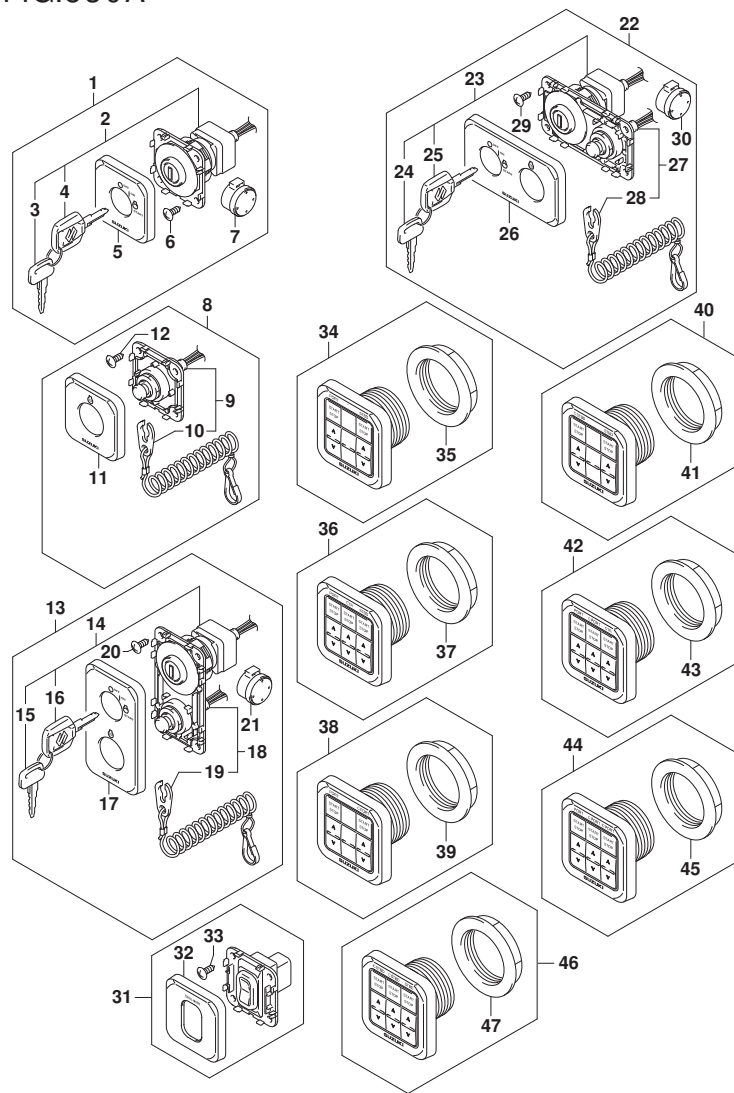


FIG. 530A (1-F-5) オプション:スイッチ

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
14	37110-98L00	.. スイッチアツシ, メイン	1		
15-1	37141-99E00	.. キー (931)	1		
15-2	37141-99E10	.. キー (932)	1		
15-3	37141-99E20	.. キー (933)	1		
15-4	37141-99E30	.. キー (934)	1		
15-5	37141-99E40	.. キー (935)	1		
15-6	37141-99E50	.. キー (936)	1		
15-7	37141-99E60	.. キー (937)	1		
15-8	37141-99E70	.. キー (938)	1		
15-9	37141-99E80	.. キー (939)	1		
15-10	37141-99E90	.. キー (940)	1		
15-11	37141-99EA0	.. キー (941)	1		
15-12	37141-99EB0	.. キー (942)	1		
16-1	37141-98L00	.. キー (931)	1		
16-2	37141-98L10	.. キー (932)	1		
16-3	37141-98L20	.. キー (933)	1		
16-4	37141-98L30	.. キー (934)	1		
16-5	37141-98L40	.. キー (935)	1		
16-6	37141-98L50	.. キー (936)	1		
16-7	37141-98L60	.. キー (937)	1		
16-8	37141-98L70	.. キー (938)	1		
16-9	37141-98L80	.. キー (939)	1		
16-10	37141-98L90	.. キー (940)	1		
16-11	37141-98LA0	.. キー (941)	1		
16-12	37141-98LB0	.. キー (942)	1		
17	37138-98L10	.. カバ -, メインスイッチハ° ネルハ° ーチカル	1		
18	37820-98L00	.. スイッチアツシ, エマシ° エンシ	1		
19	37823-98L01	.. プ° レードアツシ, エマシ° エンシスイッチロック	1		
20	03142-05169	.. スケリュ	4		
21	38500-93J90	.. プ° ザ° -, ウオーニング°	1		
22	37100-98L20	ハ° ネルアツシ, メインスイッチHORIZ	1		
23	37110-98L00	.. スイッチアツシ, メイン	1		
24-1	37141-99E00	.. キー (931)	1		
24-2	37141-99E10	.. キー (932)	1		
24-3	37141-99E20	.. キー (933)	1		

FIG.530A

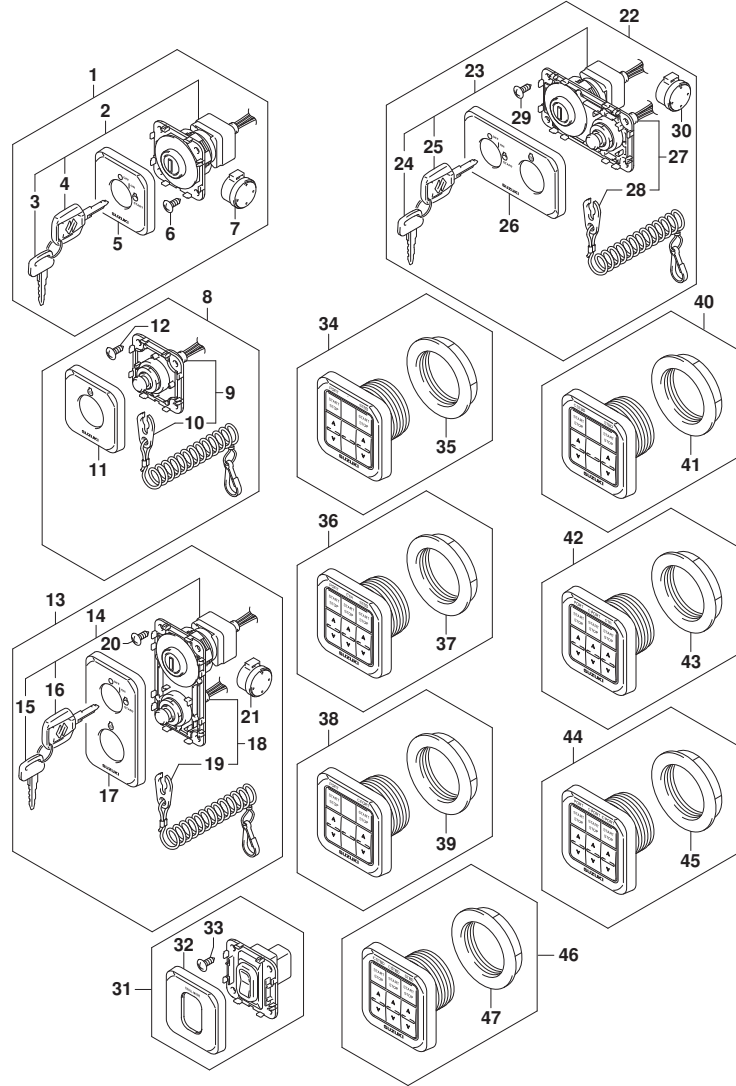


DF350A_000_024_530A
OPT:SWITCH

FIG. 530A (1-F-6) オプション:スイッチ

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
24-4	37141-99E30	.. キー (934)	1		
24-5	37141-99E40	.. キー (935)	1		
24-6	37141-99E50	.. キー (936)	1		
24-7	37141-99E60	.. キー (937)	1		
24-8	37141-99E70	.. キー (938)	1		
24-9	37141-99E80	.. キー (939)	1		
24-10	37141-99E90	.. キー (940)	1		
24-11	37141-99EA0	.. キー (941)	1		
24-12	37141-99EB0	.. キー (942)	1		
25-1	37141-98L00	.. キー (931)	1		
25-2	37141-98L10	.. キー (932)	1		
25-3	37141-98L20	.. キー (933)	1		
25-4	37141-98L30	.. キー (934)	1		
25-5	37141-98L40	.. キー (935)	1		
25-6	37141-98L50	.. キー (936)	1		
25-7	37141-98L60	.. キー (937)	1		
25-8	37141-98L70	.. キー (938)	1		
25-9	37141-98L80	.. キー (939)	1		
25-10	37141-98L90	.. キー (940)	1		
25-11	37141-98LA0	.. キー (941)	1		
25-12	37141-98LB0	.. キー (942)	1		
26	37138-98L20	.. カバー, メインスイッチハネルHORIZ	1		
27	37820-98L00	.. スイッチアッシ, エマシエンシ	1		
28	37823-98L01	.. プレートアッシ, エマシエンシスイッチロック	1		
29	03142-05169	.. スクリュー	4		
30	38500-93J90	.. プザー, ウォーニング	1		
31	37860-98L00	ハネネルアッシ, トローリングコントロールスイッチ	1		
32	37865-98L00	.. カバー, トローリングコントロールスイッチ	1		
33	03142-05169	.. スクリュー	4		
34	37120-98L00	ハネネルアッシ, ディュアル	1		
35	37112-98J10	.. ナット	1		
36	37120-98L10	ハネネルアッシ, トリプル	1		
37	37112-98J10	.. ナット	1		
38	37120-98L20	ハネネルアッシ, クアドルプルポート	1		
39	37112-98J10	.. ナット	1		

FIG.530A

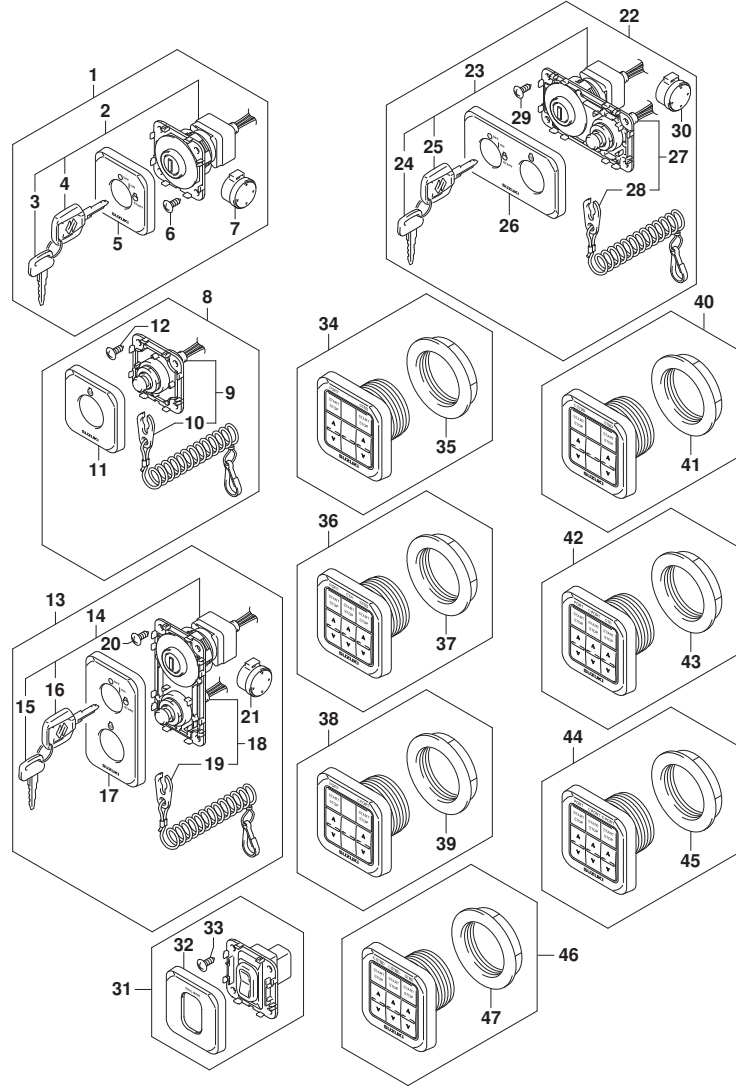

DF350A_000_024_530A
OPT:SWITCH

FIG. 530A (1-F-7) オプション:スイッチ

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
40	37120-98L30	パネルアツシ, クアド`ル`ルスターホ`ード`	1		
41	37112-98J10	. ナツト	1		
42	37120-98L40	パネルアツシ, QUINTUPLE	1		
43	37112-98J10	. ナツト	1		
44	37120-98L50	パネルアツシ, SEXTUPLEホ`ード`	1		
45	37112-98J10	. ナツト	1		
46	37120-98L60	パネルアツシ, SEXTUPLEスターホ`ード`	1		
47	37112-98J10	. ナツト	1		

This exploded view diagram illustrates the components of the Suzuki Security System and their assembly sequence. The components are numbered 1 through 26, and the assembly steps are indicated by arrows.

- Step 1:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 2:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 3:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 4:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 5:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 6:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 7:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 8:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 9:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 10:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 11:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 12:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 13:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 14:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 15:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 16:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 17:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 18:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 19:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 20:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 21:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 22:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 23:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 24:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.
- Step 25:** The alarm unit (1) is shown with the siren (2) being attached to its rear. A screw (3) is used to secure the siren.
- Step 26:** The alarm unit (1) is mounted onto the main control panel (4) using a screw (5). A coiled cable (7) is connected to the panel.


The components shown include:

- 1: Alarm unit
- 2: Siren
- 3: Screw
- 4: Main control panel
- 5: Screw
- 6: Coiled cable
- 7: Coiled cable
- 8: Screw
- 9: Alarm unit
- 10: Siren
- 11: Main control panel
- 12: Coiled cable
- 13: Screw
- 14: Alarm unit
- 15: Siren
- 16: Main control panel
- 17: Coiled cable
- 18: Alarm unit
- 19: Siren
- 20: Main control panel
- 21: Coiled cable
- 22: Alarm unit
- 23: Siren
- 24: Main control panel
- 25: Coiled cable
- 26: Alarm unit

The diagram also includes a label for the **SUZUKI SECURITY SYSTEM** and a warning symbol indicating that the system should be installed by a qualified technician.

見出番号	品番	品名	使用個数	備考	標準作業時間
1	37290-98L00	ﾊﾞﾈﾙｱｯｼﾞ, ﾍﾞﾝｼﾞﾝｽﾀｰﾄｽｲｯﾁ	1		
2	37292-98L00	..ｶﾊﾞｰ, ﾍﾞﾝｼﾞﾝｽﾀｰﾄﾊﾞﾈﾙ	1		
3	03142-05169	..ｽｸﾘﾕ	4		
4	37290-98L10	ﾊﾞﾈﾙｱｯｼﾞ, ﾍﾞﾝｼﾞﾝｽﾀｰﾄｽｲｯﾁﾊﾞｰﾁｶﾙ	1		
5	37292-98L10	..ｶﾊﾞｰ, ﾍﾞﾝｼﾞﾝｽﾀｰﾄﾊﾞﾈﾙﾊﾞｰﾁｶﾙ	1		
6	37820-98L00	..ｽｲｯﾁｱｯｼﾞ, ﾍﾞﾝｼﾞﾝ	1		
7	37823-98L01	..ﾌﾞﾚｰﾄﾞｱｯｼﾞ, ﾍﾞﾝｼﾞﾝｽｲｯﾁﾛｯｸ	1		
8	03142-05169	..ｽｸﾘﾕ	4		
9	37290-98L20	ﾊﾞﾈﾙｱｯｼﾞ, ﾍﾞﾝｼﾞﾝｽﾀｰﾄｽｲｯﾁHORIZ	1		
10	37292-98L20	..ｶﾊﾞｰ, ﾍﾞﾝｼﾞﾝｽﾀｰﾄﾊﾞﾈﾙHORIZ	1		
11	37820-98L00	..ｽｲｯﾁｱｯｼﾞ, ﾍﾞﾝｼﾞﾝ	1		
12	37823-98L01	..ﾌﾞﾚｰﾄﾞｱｯｼﾞ, ﾍﾞﾝｼﾞﾝｽｲｯﾁﾛｯｸ	1		
13	03142-05169	..ｽｸﾘﾕ	4		
14	37105-98L15	ｷｯﾄ, ﾎｰﾚｽｽﾀｰﾄ (315MHZ)	1		
15	32980-38F00	..ｸﾞﾅｼｮﾝ, CDIﾕﾆｯﾄ	1		
16	36623-98LA0	..ﾊｰﾈｽｱｯｼﾞ, ﾎｰﾚｽｽﾀｰﾄｺﾝﾄﾛｰﾙ	1		
17	36615-96300	..ﾀｰﾐﾅﾙ	1		
18	37173-96L10	..ﾎﾙﾀﾞ, ﾎｰﾚｽｽﾀｰﾄﾊﾟｰﾂ	1		
19	38860-96L01	..ﾘﾚｰｱｯｼﾞ, ﾎｰﾚｽｽﾀｰﾄ	1		
20	32851-93J00	..ｸﾞﾅｼｮﾝ, ﾘｰﾄﾞﾜｲﾔ	1		
21	09407-14407	..ｸﾗﾝﾌﾟ (L:145)	1		
22	37117-96L00	..ﾃﾞｰｶｰﾙ, ﾎｰﾚｽｽﾀｰﾄ	2		
23	37171-98L10	..ｺﾝﾄﾛｰﾗｰｱｯｼﾞ, ﾎｰﾚｽｽﾀｰﾄ (315MHZ)	1		
24	37172-96L11	..ﾘﾓｺﾝｱｯｼﾞ, ﾎｰﾚｽｽﾀｰﾄ (315MHZ)	2		
25	38500-93J90	..ﾌﾞｻﾞｰ, ﾜｵｰﾆﾝｸﾞ	1		
26	36627-98L20	..ﾊｰﾈｽ, CANﾍﾞｸｽﾃﾝｼｮﾝ	1		

FIG.540A

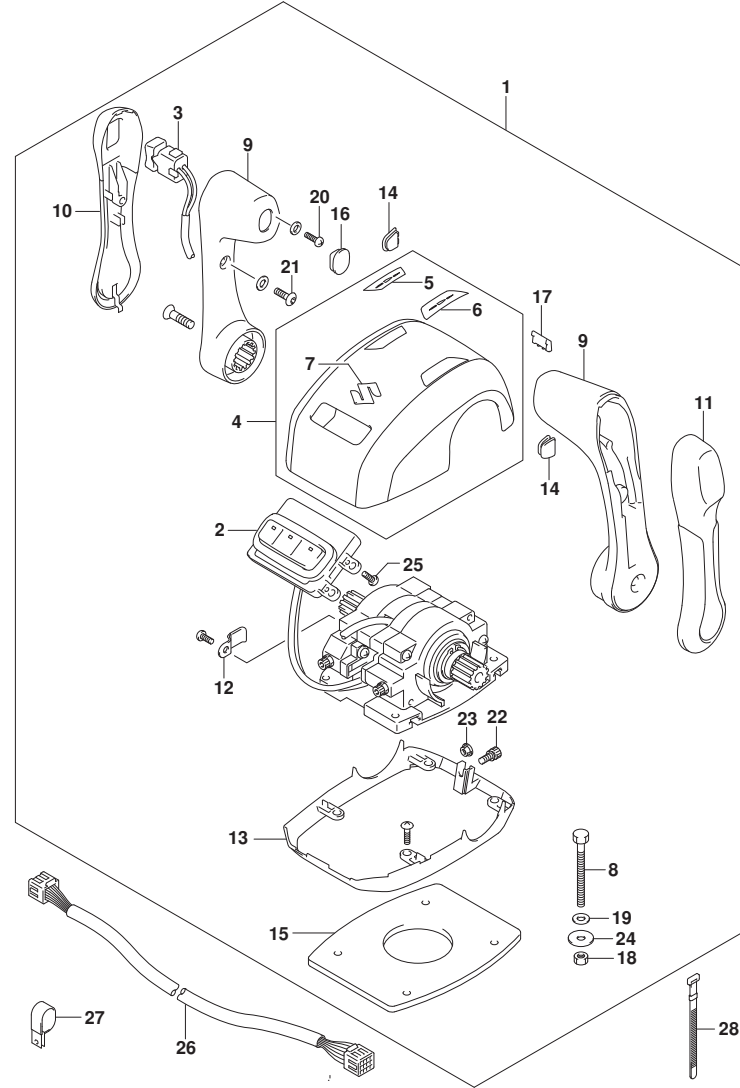


DF350A_000_024_540A
OPT:REMOTE CONTROL ASSYDUAL

FIG. 540A (1-F-9) オプション:リモートコントロールアッシーユアル

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	67200-98L10	リモコンアッシー, マルチフットツフマウント	1		
2	37130-98L10	. スイツチアッシー, ホートコントロール	1		
3	37850-98L00	. スイツチアッシー, PTT	1		
4	67212-98L10	. カハ, リモコンアッシー	1		
5	67284-98L00	. . マーク, ハンドルレハ	1		
6	67284-98L10	. . マーク, ハンドルレハ	1		
7	68111-88L00	. . エンブレム, マーク	1		
8	67226-98J00	. ホルト (5X50)	4		
9	67261-98L00	. クリツプ, リモコンNO. 1	2		
10	67261-98L10	. クリツプ, リモコンNO. 2	1		
11	67261-98L20	. クリツプ, リモコンNO. 3	1		
12	67269-98L00	. クランフ, リート	1		
13	67271-98L10	. カハ, リモコンホトム	1		
14	67272-98L10	. クロメツト, リモコンカハ	2		
15	67273-98L10	. ハツキンク, リモコン	1		
16	67277-98L10	. クロメツト, リモコンクリツプ	2		
17	67277-98L20	. クロメツト, リモコンホトムカハ	1		
18	67287-92E00	. ナツト (M5)	6		
19	67288-98J40	. ワツシヤ, ホトムカハ	12		
20	67296-98J50	. スクリュ (5X18)	6		
21	67296-98L00	. スクリュ (5X12)	3		
22	67296-98L10	. ホルト, アッシーカハ (5X12)	1		
23	67297-98J00	. ナツト, アッシーカハホルト (M5)	1		
24	67288-92E50	. ワツシヤ	4		
25	67296-88D00	. スクリュ	4		
26-1	36620-98L00	ワイヤアッシー, リモートコントロール (L:6500)	1		
26-2	36620-98L10	ワイヤアッシー, リモートコントロール (L:9500)	1		
26-3	36620-98L20	ワイヤアッシー, リモートコントロールエクステンション (L:2000)	1		
27	09403-13402	. クランフ (ID:13)	15		
28	09407-08401	. クランフ (L:80)	1		

DF350A_000_024

FIG.543A

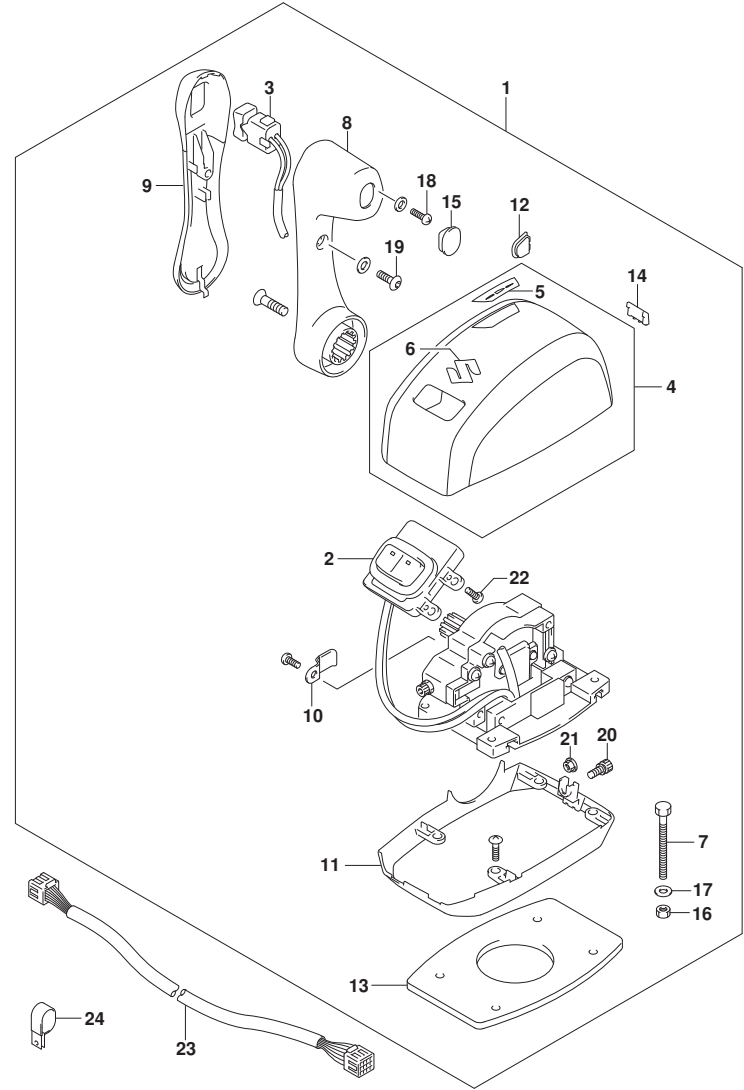

DF350A_000_024_543A
OPT:REMOTE CONTROL ASSY SINGLE

FIG. 543A (1-F-10) オプション:リモート コントロール アツシ シンｸﾞﾙ

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	67200-98L00	リモコンアツシ, シンｸﾞﾙ トツﾌﾞ ﾏｳﾝﾄ	1		
2	37130-98L00	. ﾏﾞ ﾘﾂﾌﾞ, ﾎｰﾄ ﾕﾝﾄﾛｰﾙ	1		
3	37850-98L00	. ﾏﾞ ﾘﾂﾌﾞ, ﾘﾓﾝ	1		
4	67212-98L00	. ﾕﾊﾞｰ, ﾘﾓﾝ ﾏﾞ ﾘﾂﾌﾞ	1		
5	67284-98L00	. . ﾏｰｸ, ﾎﾝﾄ ﾕﾊﾞｰ	1		
6	68111-88L00	. . ﾈﾝﾌ ﾚﾑ, ﾏｰｸ	1		
7	67226-98J00	. ﾎ ﾕﾙﾄ (5X50)	4		
8	67261-98L00	. ﾕ ﾘﾂﾌﾞ, ﾘﾓﾝ NO. 1	1		
9	67261-98L10	. ﾕ ﾘﾂﾌﾞ, ﾘﾓﾝ NO. 2	1		
10	67269-98L00	. ﾕﾗﾝﾌ, ﾘｰﾄ	1		
11	67271-98L00	. ﾕﾊﾞｰ, ﾘﾓﾝ ﾎ ﾕﾙﾄ	1		
12	67272-98L00	. ﾕ ﾘﾓﾝ, ﾘﾓﾝ ﾕﾊﾞｰ	1		
13	67273-98L00	. ﾎ ﾕ ﾕ ﾕ ﾕ, ﾘﾓﾝ	1		
14	67277-98L00	. ﾕ ﾘﾓﾝ, ﾘﾓﾝ ﾕﾊﾞｰ	1		
15	67277-98L10	. ﾕ ﾘﾓﾝ, ﾘﾓﾝ ﾕ ﾕ ﾕ ﾕ	1		
16	67287-92E00	. ﾕ ﾕ ﾕ (M5)	5		
17	67288-98J40	. ﾕ ﾕ ﾕ, ﾕ ﾕ ﾕ ﾕ ﾕ	9		
18	67296-98J50	. ﾕ ﾕ ﾕ (5X18)	3		
19	67296-98L00	. ﾕ ﾕ ﾕ (5X12)	2		
20	67296-98L10	. ﾕ ﾕ ﾕ, ﾕ ﾕ ﾕ ﾕ ﾕ (5X12)	1		
21	67297-98J00	. ﾕ ﾕ ﾕ, ﾕ ﾕ ﾕ ﾕ ﾕ ﾕ ﾕ (M5)	1		
22	67296-88D00	. ﾕ ﾕ ﾕ	4		
23-1	36620-98L00	ﾜｲﾔ ﾕ ﾕ ﾕ, ﾘﾓﾝ ﾕﾝﾄﾛｰﾙ (L: 6500)	1		
23-2	36620-98L10	ﾜｲﾔ ﾕ ﾕ ﾕ, ﾘﾓﾝ ﾕﾝﾄﾛｰﾙ (L: 9500)	1		
23-3	36620-98L20	ﾜｲﾔ ﾕ ﾕ ﾕ, ﾘﾓﾝ ﾕﾝﾄﾛｰﾙ ﾕ ﾕ ﾕ ﾕ ﾕ ﾕ ﾕ (L: 2000)	1		
24	09403-13402	ﾕ ﾕ ﾕ (ID: 13)	10		

FIG.585A

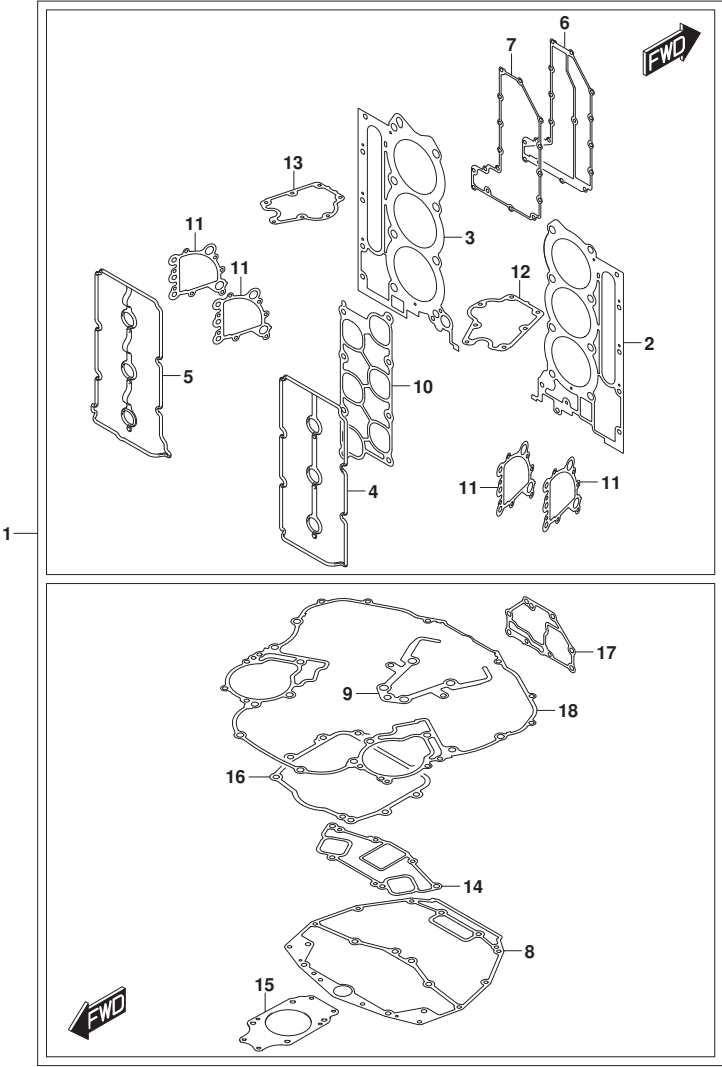


FIG. 585A (1-F-11) オプション:ガasket セット

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	11410-98860	ガasketセット	1		
2	11141-98L00	.ガasket, シリンダヘッドスターボート	1	STBD	
3	11142-98L00	.ガasket, シリンダヘッドポート	1	PORT	
4	11179-93J00	.ガasket, シリンダヘッドカバースターボート	1	STBD	
5	11189-93J00	.ガasket, シリンダヘッドカバーポート	1	PORT	
6	11332-98L00	.ガasket, クランクケースウォーターポンプカバー	1		
7	11333-98L00	.ガasket, クランクケースオイルカバー	1		
8	11489-98L00	.ガasket, オイルパン	1		
9	12778-98L00	.ガasket, タイミングチェーンガイドベース	1		
10	13119-98L00	.ガasket, インテークマニホールド	1		
11	14151-98L00	.ガasket, エキゾーストカバー	4		
12	14181-98L01	.ガasket, エキゾーストアツパカバースターボート	1	STBD	
13	14182-98L01	.ガasket, エキゾーストアツパカバーポート	1	PORT	
14	14212-98L00	.ガasket, エキゾーストチューブ	1		
15	17472-87M00	.ガasket, ホンフケースパネ	1		
16	51123-98L00	.ガasket, マウントオイルシールカバー	1		
17	51142-98L00	.ガasket, エンジンホルダカバー	1		
18	51211-98L00	.ガasket, エンジンホルダ	1		

FIG.601A

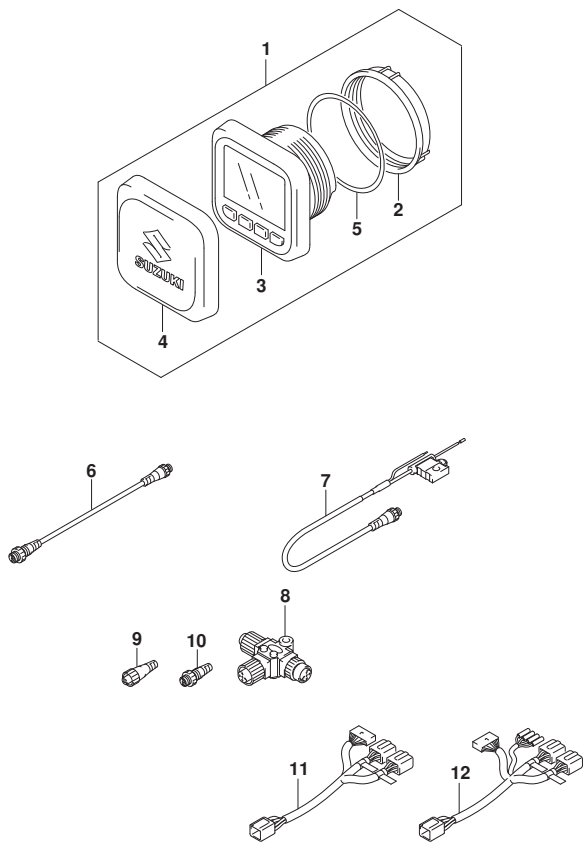


FIG. 601A (1-F-12) オプション:マルチ ファンクション ゲージ (1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	34011-96L44	ゲージ セット, マルチ	AR		
2	34112-96L00	. ナット, ゲージ	AR		
3	34193-96L00	. ベーゼ ル, ゲージ	AR		
4	34211-96L00	. カバ ー, ゲージ	AR		
5	34825-96L00	. ハ ッキン グ, ゲージ	AR		
6	36662-88L10	ワイヤ, 2エクステンション	1		
7	36663-88L00	ハーネスアツシ, ネットワークハ ワー	1		
8	36664-88L00	コネクタ, プ ランチ	1		
9	36665-88L00	ユニット, レジ スタヒ ーメイル	1		
10	36665-88L10	ユニット, レジ スタメル	1		
11	36667-96L40	ワイヤ, テ ュアルゲ ージ アダ プ タ	1		
12	36667-96L50	ワイヤ, テ ュアルゲ ージ アダ プ タ	1		

FIG.602A

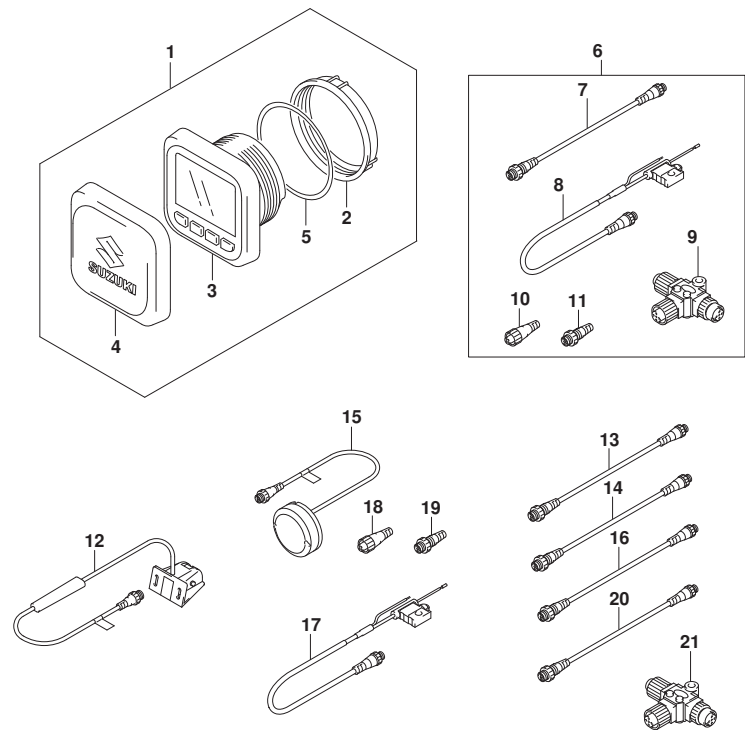


FIG. 602A (1-F-13) オプション:マルチ ファンクション ゲージ (2)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	34011-96L44	ゲージセット, マルチ	1		
2	34112-96L00	. ナット, ゲージ	1		
3	34193-96L00	. ベゼル, ゲージ	1		
4	34211-96L00	. カバー, ゲージ	1		
5	34825-96L00	. ハブ, ツキンク, ゲージ	1		
6	36001-88L00	セット, ワイヤ	1		
7	36662-88L10	. ワイヤ, 2エクステンション	1		
8	36663-88L00	. ハーネスアツシ, ネットワークハブ	1		
9	36664-88L00	. コネクタ, プランチ	1		
10	36665-88L00	. ユニツト, レジスタヒール	1		
11	36665-88L10	. ユニツト, レジスタヒール	1		
12	34190-88L00	センサアツシ, ハブ	1		
13	36662-88L20	ワイヤ, 6エクステンション	1		
14	36662-88L30	ワイヤ, 15エクステンション	1		
15	39950-88L02	モジュールアツシ, GPSレシーバ	1		
16	36662-88L00	ワイヤ, 25エクステンション	1		
17	36663-88L00	. ハーネスアツシ, ネットワークハブ	1		
18	36665-88L00	. ユニツト, レジスタヒール	1		
19	36665-88L10	. ユニツト, レジスタヒール	1		
20	36662-88L10	ワイヤ, 2エクステンション	1		
21	36664-88L00	コネクタ, プランチ	1		