

ま え が き

このパーツカタログは、スズキ船外機 DF300AP/250AP 型の補給取扱い部品を収録してあります。

エンジン諸元	4 サイクル	6 気筒	排気量	(内径 × 行程 98 mm × 89 mm)
			4028 cm ³	

DF300AP					
機 種 記 号	年 式	型 式	トランサム	色	実 施 号 機
DF300AP		30002P	L, X, XX	OEP, Y5S	30002P-610001 ~
			X, XX	YKV	

DF250AP					
機 種 記 号	年 式	型 式	トランサム	色	実 施 号 機
DF250AP		25003P	X, XX	OEP, Y5S	25003P-610001 ~

パーツカタログのご使用について

1. 記号および略語

1 - 1. サイズ等

A	: 用品	L	: 長さ、リンク数、容積	US	: アンダサイズ
AR	: 必要量	NT	: 歯 数	W	: 巾
D	: 線 径	OD	: 外 径	W/	: 同時使用
E.NO.	: エンジン番号	OPT	: オプション	#	: 直送品
F.NO.	: フレーム番号	OS	: オーバサイズ	*	: 直売品
H	: 高 さ	STD	: スタンダード	~	: より、から
ID	: 内 径	T	: 厚 さ		
12×34×5 : 内径×外径×厚さ(巾、長さ)					

1 - 2. メーカー名

CHKK	: 中央発条	NGK	: 日本特殊陶業
DID	: 大同工業	NHK	: 日本発条
DK	: 大金製作所	RK	: 高砂チェン
FB	: 古河電池	TEN	: 富士通テン
IRC	: 井上護謄工業	TR	: 東海理化電機製作所
KYB	: 萱場工業	YB	: 湯浅電池
NABCO	: 日本エアブレーキ		

1 - 3. 構成部品の表示

品 番	品 名
× × × × × - × × × × ×	○ ○ ○ アッシ
× × × × × - × × × × ×	・ ○ ○ ○ ○
× × × × × - × × × × ×	・ ○ ○ ○ ○
	↑ 構成部品(インナパーツ)を示します。

1 - 4. 部品変更

備考欄の品番の前の→印は変更部品相互の互換性を表示します。

→○○○○○-○○○○○.....「～より統一」を示し、旧 $\frac{\text{旧品番}}{\text{新品番}}$ 新です。

→○○○○○-○○○○○.....「～に統一」を示し、旧 $\frac{\text{旧品番}}{\text{新品番}}$ 新です。

1 - 5. 修正使用

ホース、チューブ等で寸法表示の→印は修正使用を表示します。

(例) L:200→180.....200を180に修正して使用します。

2. 部品変更のお知らせ

部品が新設または変更となった場合、サービス・部品ニュース、統一部品一覧表などでご案内いたします。

販売店様にあっては、弊社代理店にお問い合わせください。

3. 部品の注文

部品ご注文の場合は、このパーツカタログをご参照の上、次の点にご留意され、正確にご注文ください。


- 3 - 1. 品番、品名および数量
- 3 - 2. フレーム番号およびエンジン番号と型式番号（年式）
- 3 - 3. 部品メーカー（電装部品、保安部品など）

注 分解図は、補給部品索引のためのものです。分解、組立には使用しないで下さい。
補給部品の中で車種間の共通化により、一部生産車の部品と異なる場合があります。
あらかじめご了承ください。
記載事項は予告なく変更することがあります。あらかじめご了承ください。

I.Dプレートの説明

I.Dプレートには下記の項目が刻印されています。

より正確な部品発注のため 機種名、型式、製造番号(号機)を確認下さい。

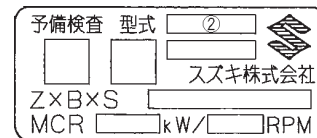

機種名を示します。(例) DF300AP


型式を示します。(例) 30002P

製造番号(号機)を示します。(例) 610001

I.Dプレート


取付位置：ブラケット、クランプ

FIG.111A

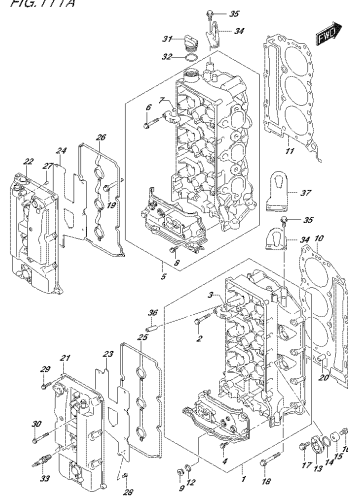


OPTIONAL PART 111A
CYLINDER HEAD

FIG.113A

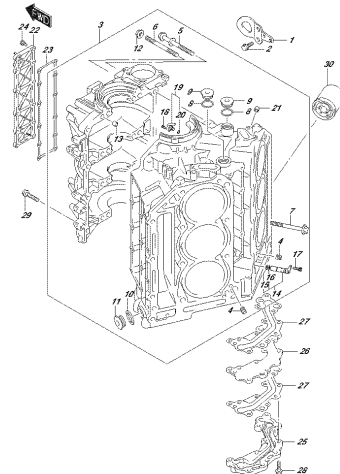


OPTIONAL PART 113A
CYLINDER BLOCK

FIG.116A

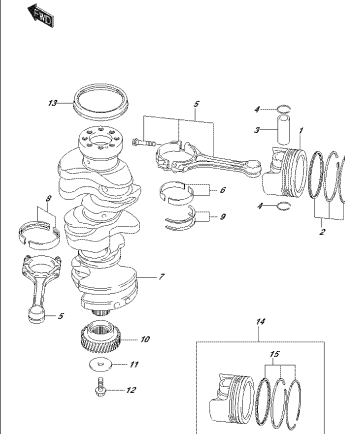


OPTIONAL PART 116A
CRANKSHAFT

FIG.119A

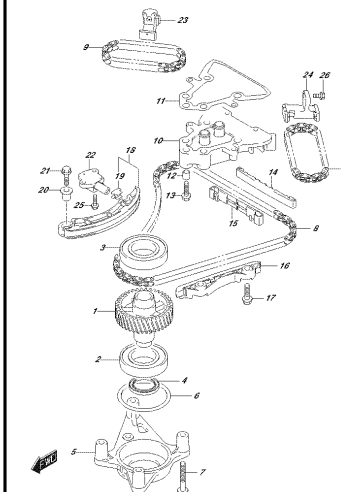


OPTIONAL PART 119A
TIMING CHAIN

FIG.121A

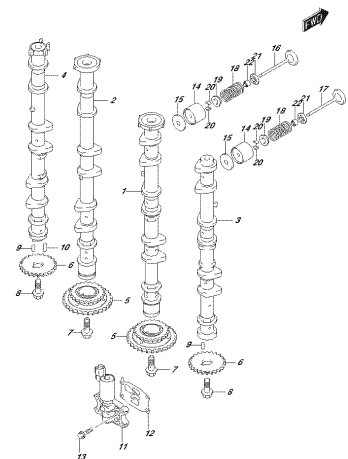


OPTIONAL PART 121A
CAMSHAFT

FIG.122A

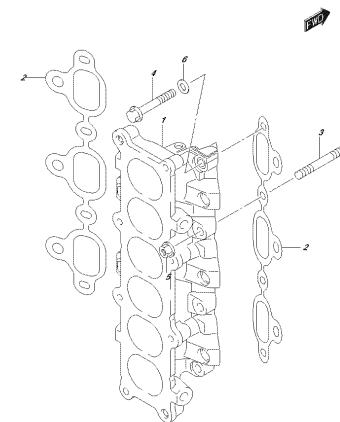


OPTIONAL PART 122A
PISTON AND CONNECTING ROD

FIG.136A

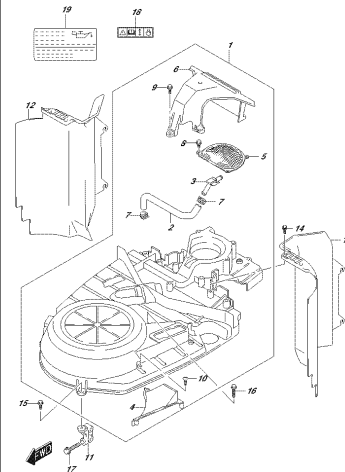


OPTIONAL PART 136A
TIMING BELT AND TENSIONER

FIG.140A

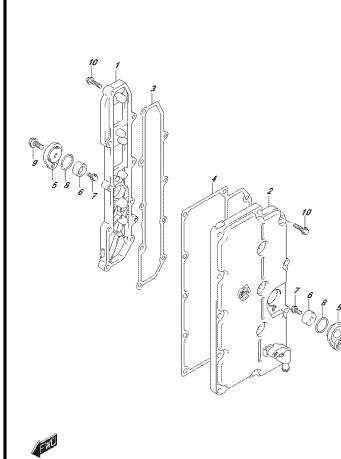


OPTIONAL PART 140A
TIMING CHAIN

FIG.144A

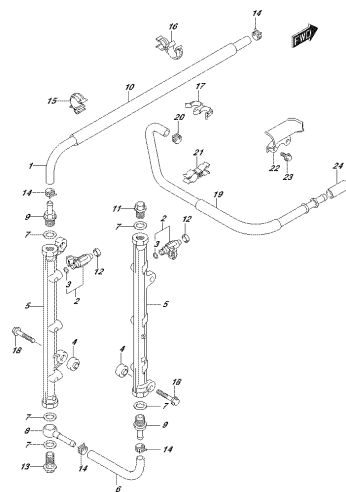


OPTIONAL, ORO, D1/E, 144A
FUEL INJECTOR

FIG.147A

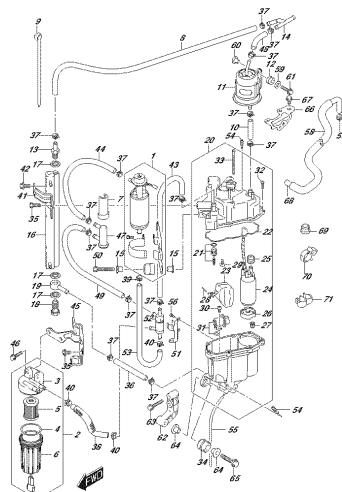


OPTIONAL, ORO, D1/E, 147A
FUEL PUMP/FUEL VALVE/SPRING

FIG.160A

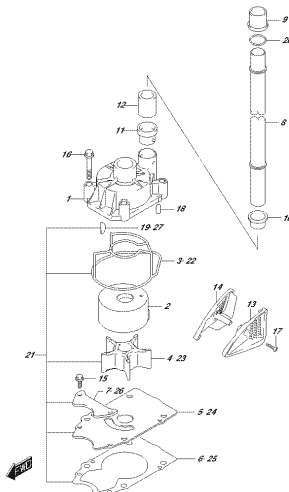


OPTIONAL, ORO, D1/E, 160A
WATER PUMP

FIG.162A

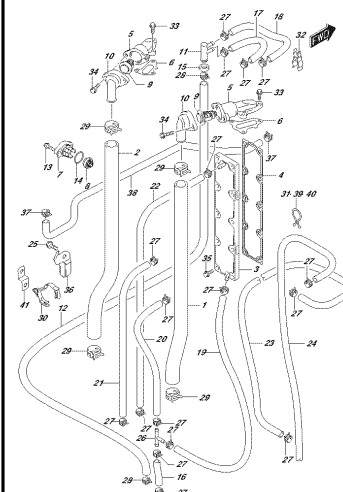


OPTIONAL, ORO, D1/E, 162A
PRESSURE CONTROL

FIG.163A

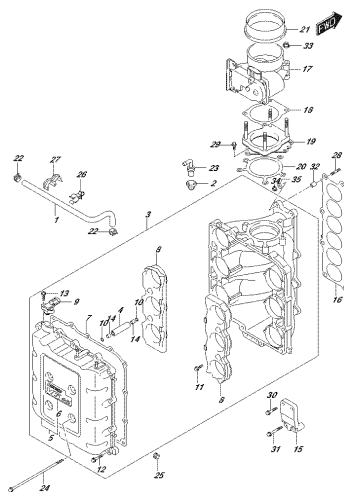


OPTIONAL, ORO, D1/E, 163A
PRESSURE CONTROL

FIG.175A

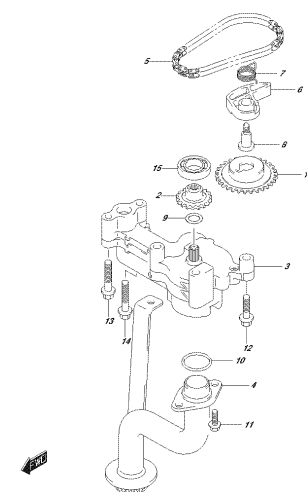


OPTIONAL, ORO, D1/E, 175A
OIL PUMP

FIG.180A

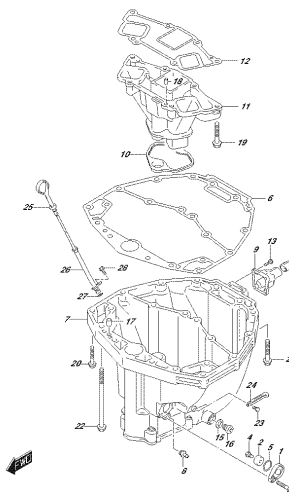


OPTIONAL, ORO, D1/E, 180A
OIL PUMP

FIG.204A

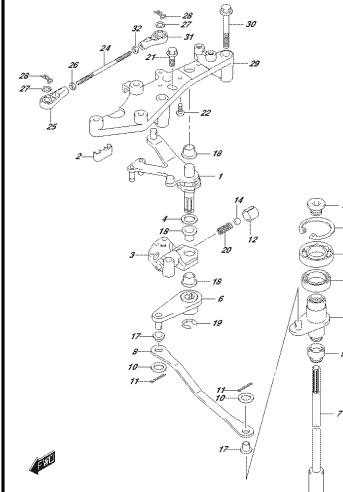


OPTIONAL, ORO, D1/E, 204A
CLUTCH ASSEMBLY

FIG.206A

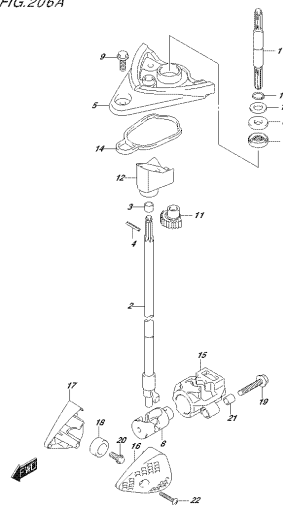


OPTIONAL_040_0146_0064
CELL COVERED

FIG.206B

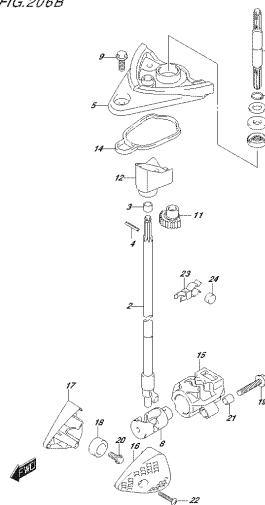


OPTIONAL_040_0146_0069
CELL COVERED

FIG.220A

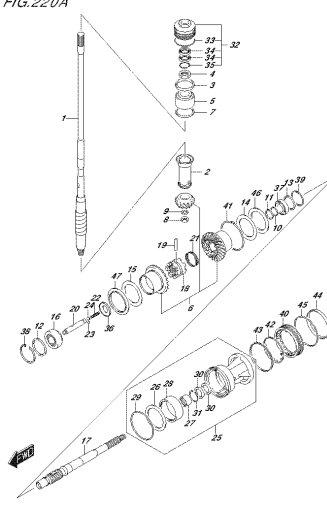


OPTIONAL_040_0146_0084
ITRA45003071

FIG.220B

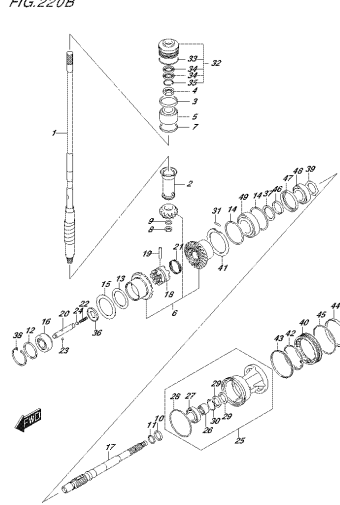


OPTIONAL_040_0146_0089
ITRA45003071

FIG.301A

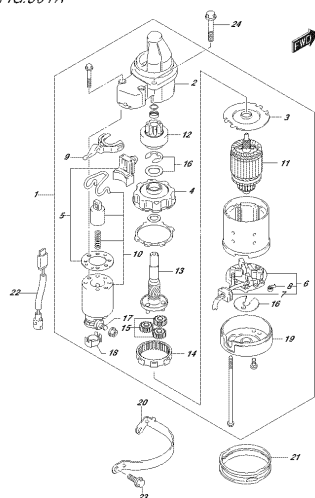


OPTIONAL_040_0146_3014
STARTING MOTOR

FIG.303A

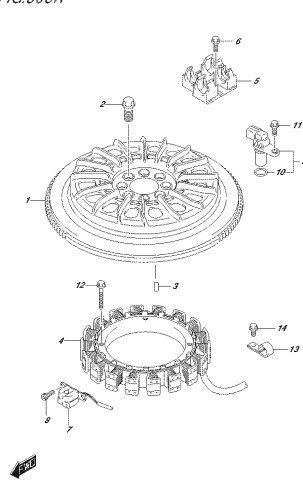


OPTIONAL_040_0146_3034
HANDWHEEL

FIG.310A

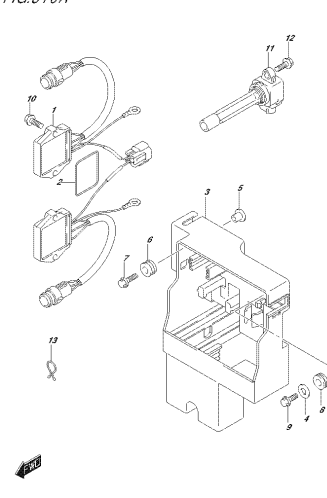


OPTIONAL_040_0146_3104
RECUPERATION COIL

FIG.315A

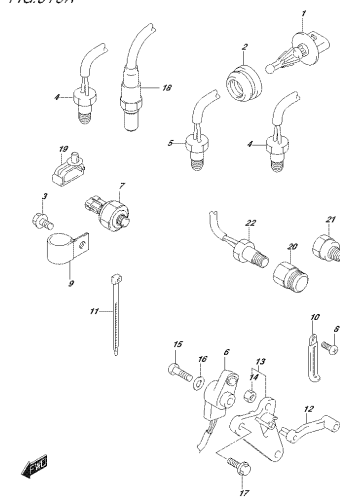


OPTIONAL_040_0146_3154
SEALING

FIG.315B

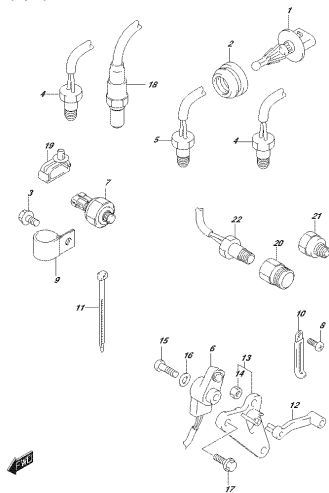


OPTIONAL, 016_315B
DETACH

FIG.315C

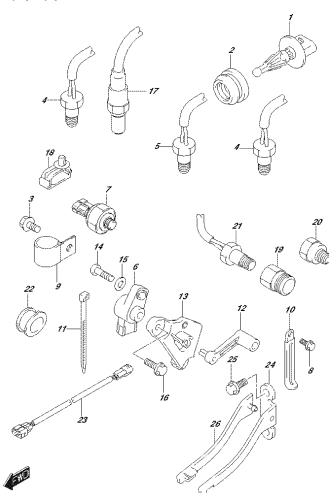


OPTIONAL, 016_315C
DETACH

FIG.322A

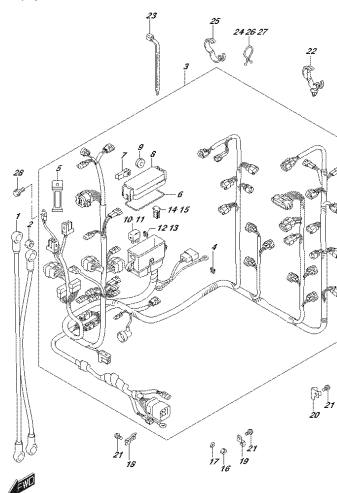


OPTIONAL, 016_322A
HARDED

FIG.326A

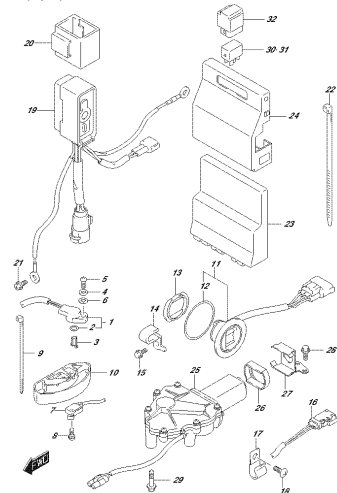


OPTIONAL, 016_326A
PITCHING/REVERSE CONTROL UNIT

FIG.326B

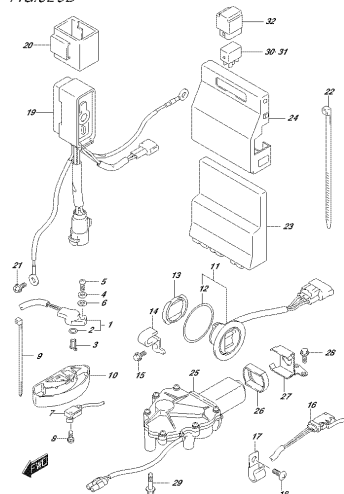


OPTIONAL, 016_326B
PITCHING/REVERSE CONTROL UNIT

FIG.331A

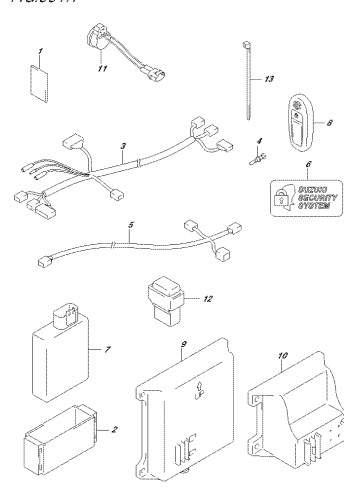


OPTIONAL, 016_331A
KEYLESSSTART

FIG.335A

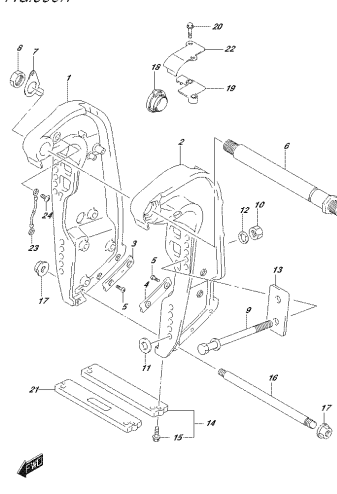


OPTIONAL, 016_335A
CLAMPBRACKET

FIG.335B

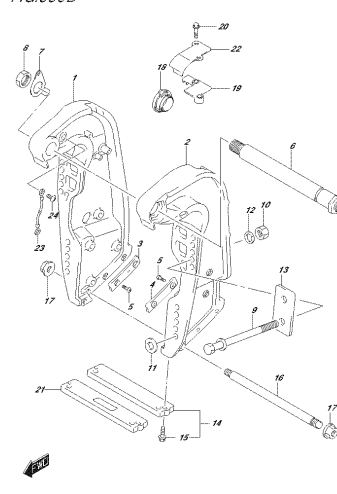


OPTIONAL, 016_335B
CLAMPBRACKET

FIG.340B

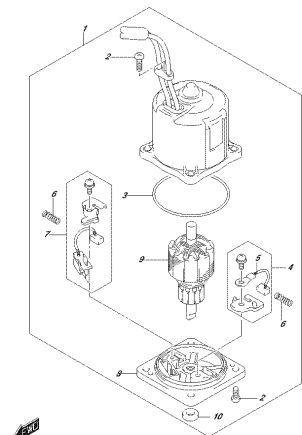


OPTIONAL, 016, 340B
PTT MOTOR

FIG.340C

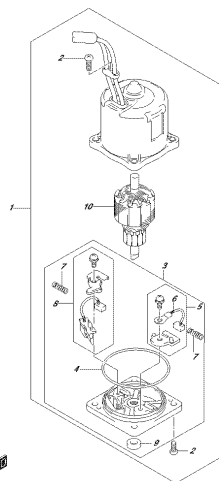


OPTIONAL, 016, 340C
PTT MOTOR

FIG.401A

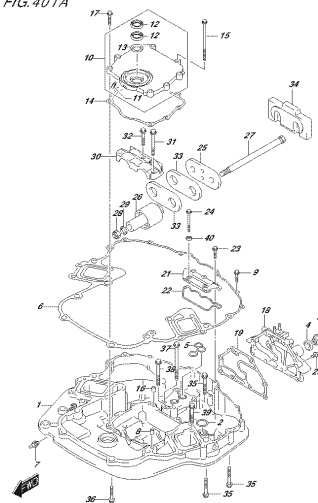


OPTIONAL, 016, 401A
DIAPHRAGM

FIG.405A

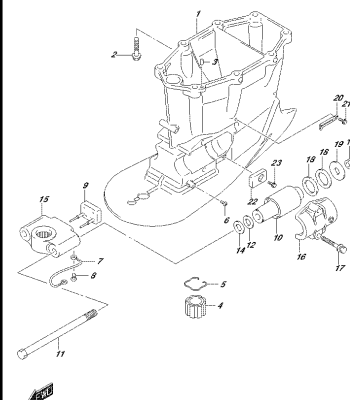


OPTIONAL, 016, 405A
DIAPHRAGM

FIG.405B

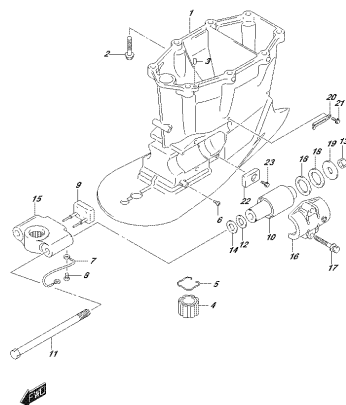


OPTIONAL, 016, 405B
DIAPHRAGM

FIG.405C

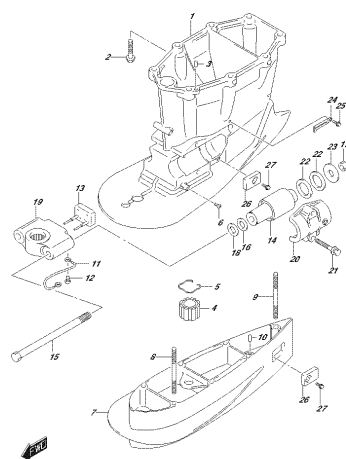


OPTIONAL, 016, 405C
DIAPHRAGM

FIG.405D

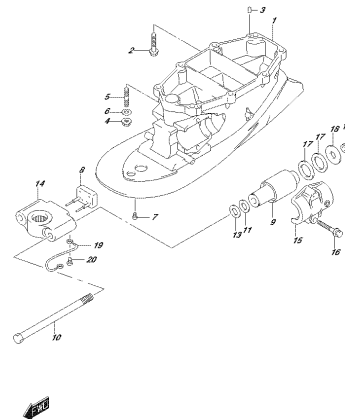


OPTIONAL, 016, 405D
DIAPHRAGM

FIG.407A

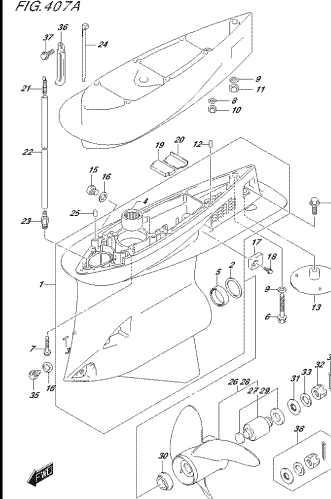


OPTIONAL, 016, 407A
DIAPHRAGM

FIG.407B

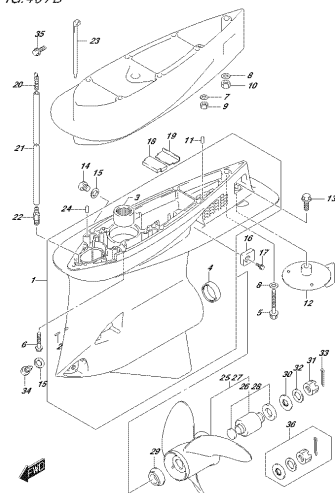


OPTIONAL PART, 407B
ENGINE COVER

FIG.410A

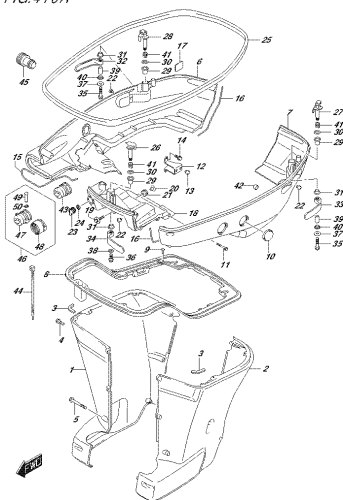


OPTIONAL PART, 410A
SIDE COVER

FIG.410B

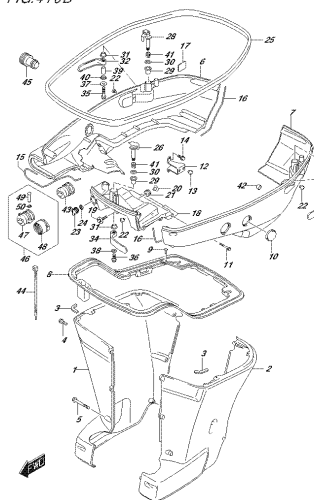


OPTIONAL PART, 410B
SIDE COVER

FIG.410C

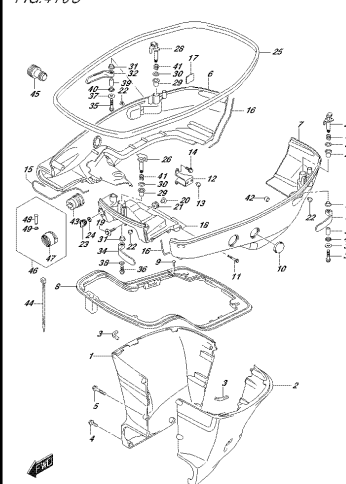


OPTIONAL PART, 410C
SIDE COVER

FIG.420A

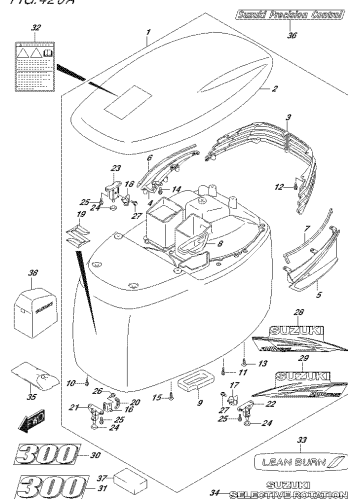


OPTIONAL PART, 420A
ENGINE COVER

FIG.420B

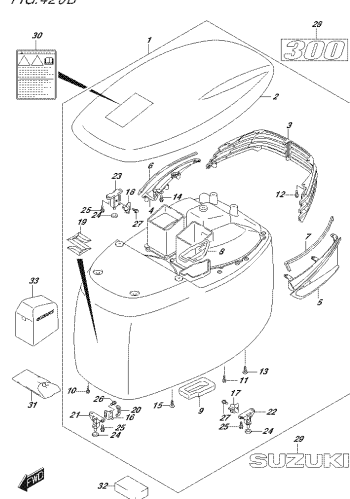


OPTIONAL PART, 420B
ENGINE COVER

FIG.420C

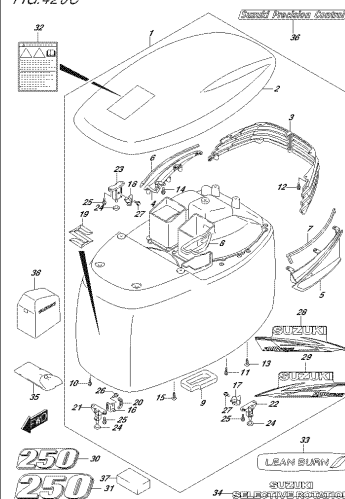


OPTIONAL PART, 420C
ENGINE COVER

FIG.430A

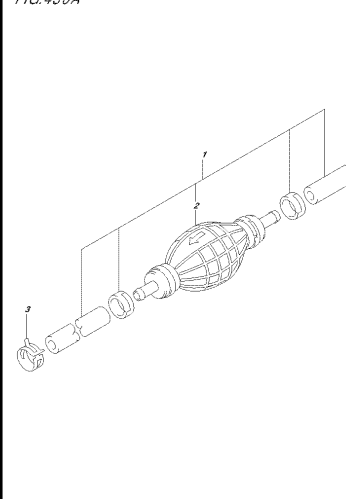


OPTIONAL PART, 430A
FUEL LINE

FIG.502A

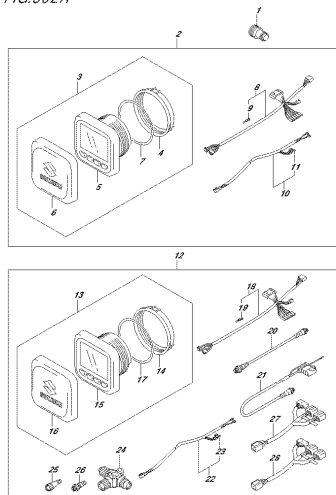


OPTIONAL, 040, 016, 8034
OPTIMIZER (1)

FIG.503A

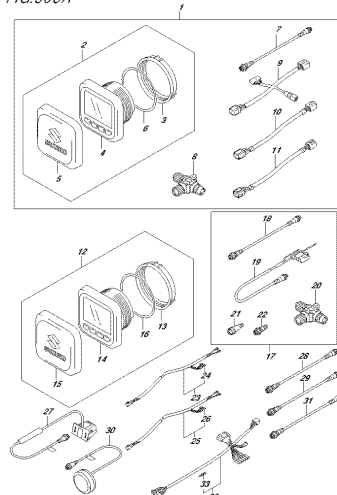


OPTIONAL, 040, 016, 8034
OPTIMIZER (2)

FIG.520A

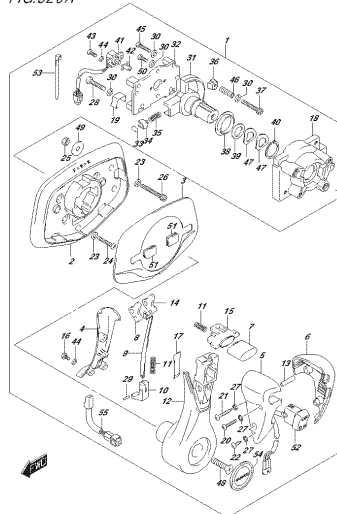


OPTIONAL, 040, 016, 8034
OPTIMIZER/ACTUATOR/REVERSE (1)

FIG.522A

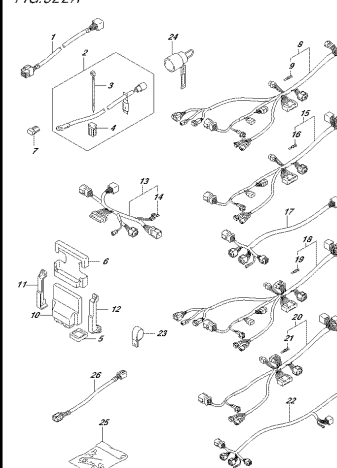


OPTIONAL, 040, 016, 8034
OPTIMIZER/REVERSE (1)

FIG.523A

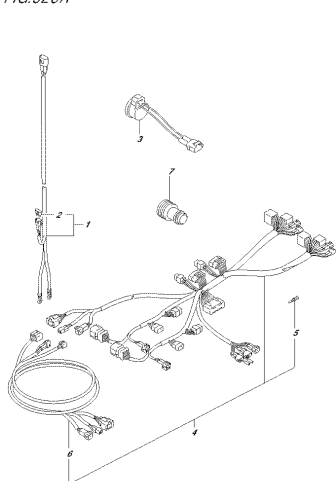


OPTIONAL, 040, 016, 8034
OPTIMIZER/REVERSE (2)

FIG.530A

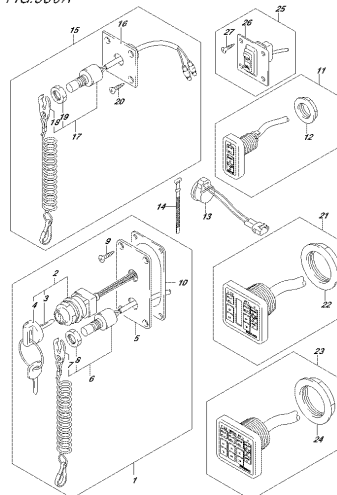


OPTIONAL, 040, 016, 8034
OPTIMIZER

FIG.535A

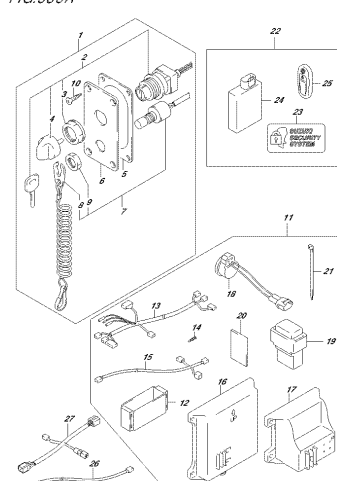


OPTIONAL, 040, 016, 8034
OPTIMIZER/LESSOR

FIG.540A

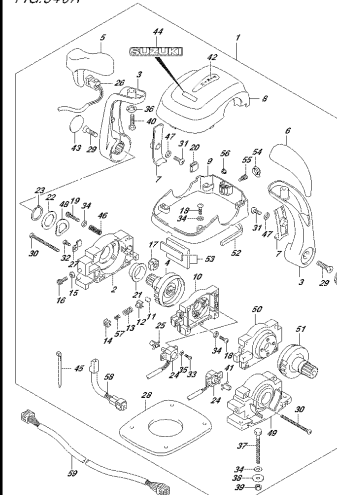


OPTIONAL, 040, 016, 8034
OPTIMIZER/CONTROL ASSY/CLC

FIG. 543A

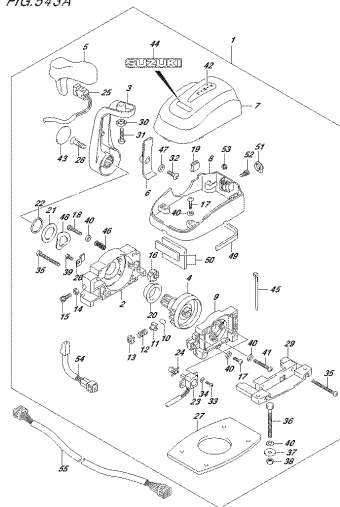

DP3004_002_01R_3434
OPTEREMOTE CONTROL ASSYSINGLE

FIG. 585A

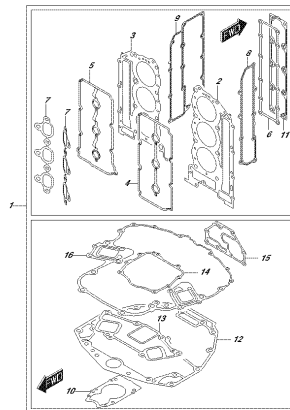

DP3024_002_01B_SBSA
OFFGASKETSET

FIG.111A

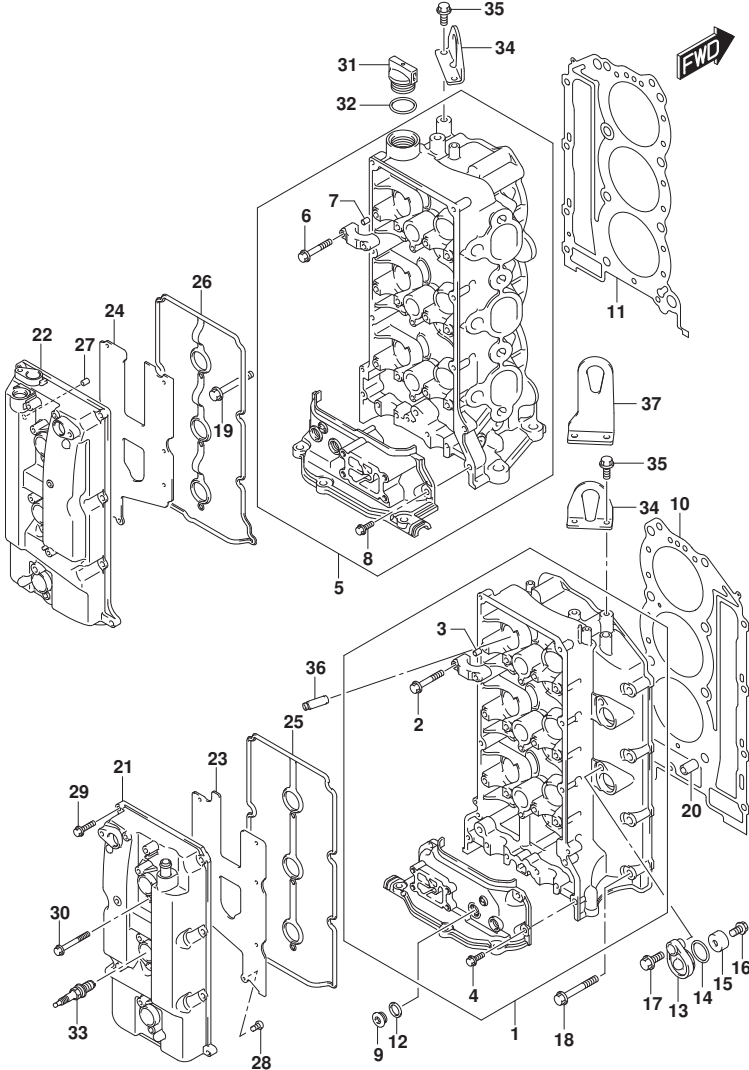


FIG. 111A (1-B-2) シリンダヘッド

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	11101-98J03	ヘッド アツシ, シリンダ スターホート	1		
2	11128-90J00	ホ ルト, カムシャフトハウジング (6X39)	16		
3	09206-08001	ピ ン (8X11)	14		
4	01550-06207	ホ ルト	4		
5	11103-98J03	ヘッド アツシ, シリンダ ホート	1		
6	11128-90J00	ホ ルト, カムシャフトハウジング (6X39)	16		
7	09206-08001	ピ ン (8X11)	14		
8	01550-06207	ホ ルト	2		
9	11116-93J01	プ ラグ	4		
10	11141-98J10	ガ スケット, シリンダ ヘッド スターホート	1		
11	11142-98J10	ガ スケット, シリンダ ヘッド ホート	1		
12	09168-16009	ガ スケット (16X22X0.8)	4		
13	11261-93J00	カバ ー, プ ロテクションノード	4		
14	09280-22019	リング (D:1.9, ID:21.8)	4		
15	55321-87J01	アノード, プ ロテクション	4		
16	09103-06281	ホ ルト (6X14)	4		
17	01550-08207	ホ ルト	4		
18	01550-08607	ホ ルト	5		
19	01550-08607	ホ ルト	4		
20	09206-14004	ピ ン (14X11.4X23)	4		
21	11170-93J01	カバ ー, シリンダ ヘッド スターホート	1		
22	11180-98J01	カバ ー, シリンダ ヘッド ホート	1		
23	11173-93J00	プ レート, プ リーザ スターホート	1		
24	11183-93J00	プ レート, プ リーザ ホート	1		
25	11179-93J00	ガ スケット, シリンダ ヘッド カバースターホート	1		
26	11189-93J00	ガ スケット, シリンダ ヘッド カバホート	1		
27	09206-08001	ピ ン (8X11)	1		
28	02112-0612A	スクリュ	14		
29	01547-06257	ホ ルト	16		
30	01547-06507	ホ ルト	6		
31	11382-93J00	キャツプ, オイルフライ	1		
32	09280-26006	リング (D:3.1, ID:26.4)	1		
33	#09482-00427	スバークプラグ (NGK, BKR6E)	6	NGK	
34	11291-93J00	フック, エンジン	2		
35	01550-08207	ホ ルト	4		

FIG.111A


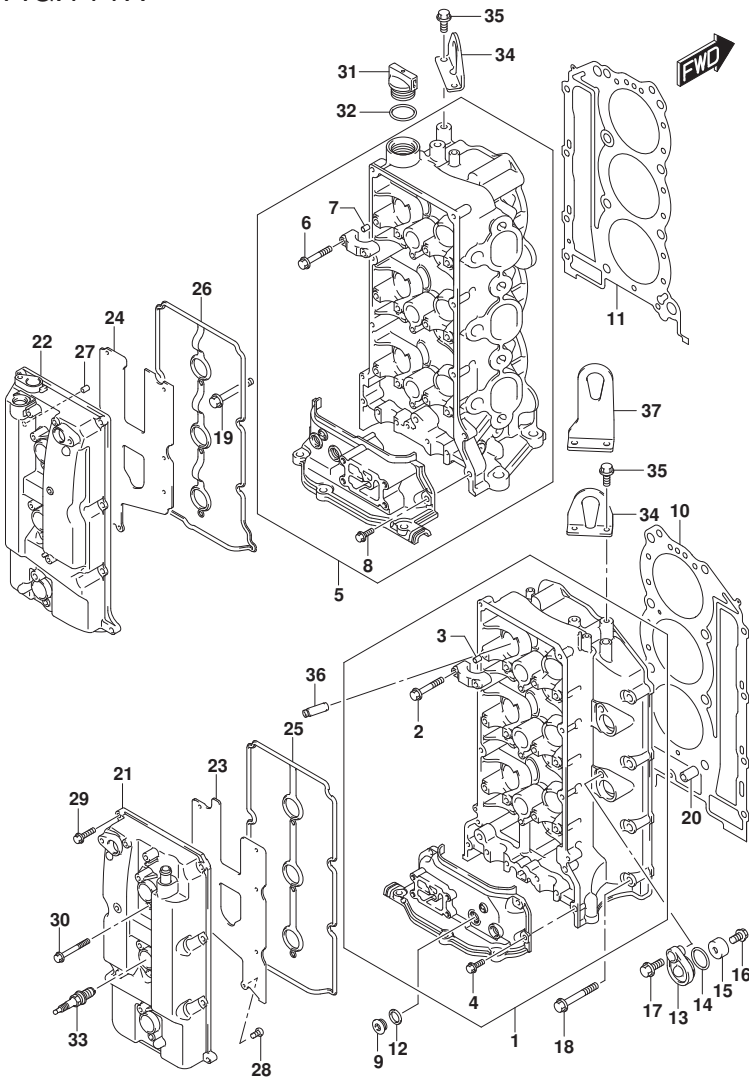


FIG. 111A (1-B-3) シリンダーヘッド

見出番号	品番	品名	使用個数	備考	標準作業時間
36	11115-93J10-001	ガイド、バルブ (OS)	24	オブション	
37	11291-98J00	フック、エンジン	1	オブション	

FIG.113A

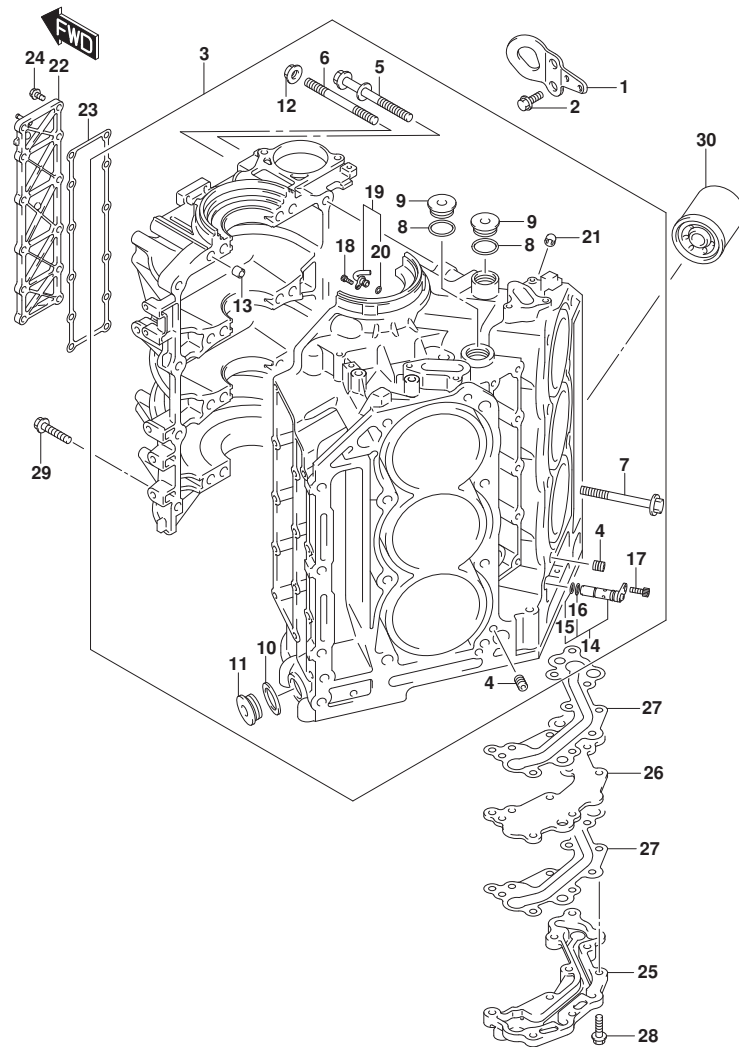

DF300A_000_016_113A
CYLINDER BLOCK

FIG.113A (1-B-4) シリンダーブロック

見出番号	品番	品名	使用個数	備考	標準作業時間
1	11293-98J00	フック, エンジンスロット	1		
2	01550-08207	ボルト	2		
3	11301-98J30	ブロックセット, シリンダー	1		
4	11112-93J00	ブロック, オイルパンチユリ	2		
5	11117-93J10	ボルト, クランクケース	12		
6	11117-98J10	ボルト, クランクケーススタッド	4		
7	11119-93J00	ボルト, シリンダーヘッド	16		
8	11217-85FA0	ガスケット, M26ブロック	3		
9	09248-26001	ブロック (M26)	3		
10	09160-18031	ワッシャー (18.5X28X2.6)	2		
11	09248-18006	ブロック (18X8)	2		
12	09159-10116	ナット	4		
13	09206-13019	ピン (10.4X13X16)	5		
14	16700-93J00	バルブ, ピストンピン	1		
15	09280-10009	リング (D:1.3, ID:9.8)	1		
16	09280-10016	リング (D:1.9, ID:9.8)	1		
17	07130-0616A	ボルト	1		
18	07130-0510A	ボルト	6		
19	11390-98J00	ピン, ピストンクランク	6		
20	09280-06005	リング (D:1.9, ID:5.7)	6		
21	09246-05006	ブロック (1/8PT, H:8)	1		
22	11330-93J01	カバー, クランクケースウオータシヤセット	1		
23	11332-93J00	ガスケット, クランクケースウオータシヤセットカバー	1		
24	01550-06207	ボルト	12		
25	16430-93J00	カバー, オイルギヤリ	1		
26	16431-93J00	プレート, オイルギヤリ	1		
27	16433-93J00	ガスケット, オイルギヤリ	2		
28	01550-0835A	ボルト	9		
29	01550-08457	ボルト	8		
30	16510-96J00	フィルタアツシ, オイル	1		

DF300A_000_016

FIG.116A

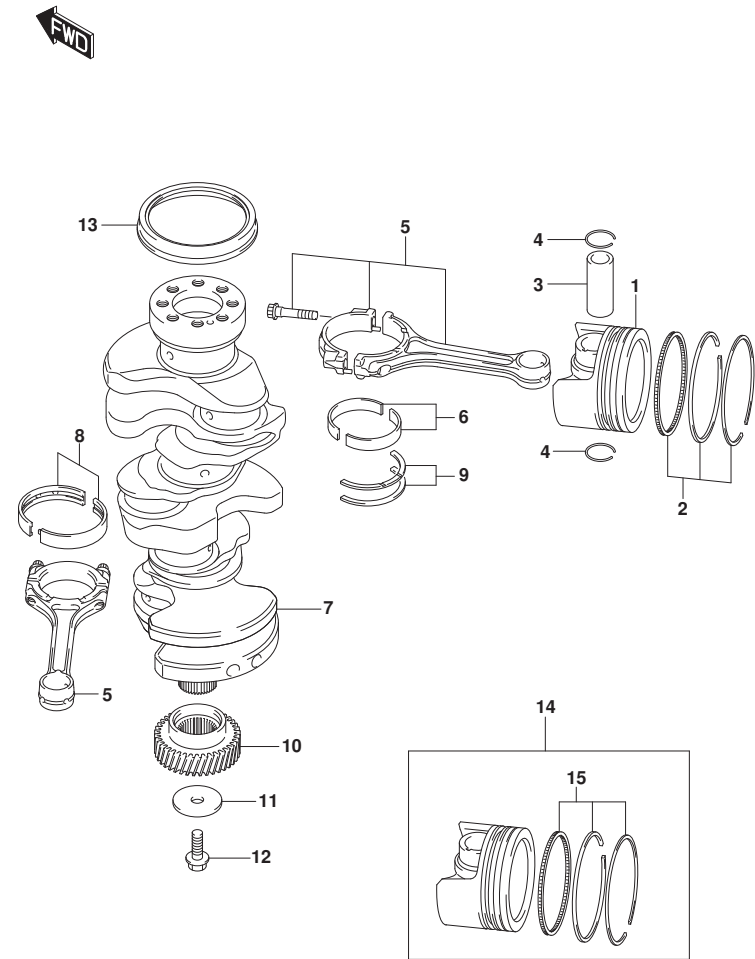


FIG.116A (1-B-5) クランクシャフト

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	12111-98J00-0B0	ピストン	6		
2	12140-98J00	リング セット, ピストン	6		
3	12151-02F00	ピン, ピストン	6		
4	09381-22010	スナッブ リング	12		
5	12160-98J00	コネクチング ロッド アツシ	6		
6-1	12100-98810-0A0	ベアリング セット, コネクチング ロッド	6	グリーン	
6-2	12100-98810-025	ベアリング セット, コネクチング ロッド US0. 25	6	オフション	
7	12220-98J00	クランクシャフト	1		
8-1	12340-98J00-0A0	ベアリング セット, カラー: ブラック	4	ブラック	
8-2	12340-98J00-0B0	ベアリング セット, カラー: ナン	4	NON	
8-3	12340-98J00-0C0	ベアリング セット, カラー: イエロー	4	イエロー	
8-4	12340-98J00-0D0	ベアリング セット, カラー: ブルー	4	ブルー	
8-5	12340-98J00-0E0	ベアリング セット, カラー: ピンク	4	PINK	
8-6	12300-98810-0AA	ベアリング セット, クランクシャフト (アンダ サイズ)	4	OPT, RED/BLACK	
8-7	12300-98810-0BA	ベアリング セット, クランクシャフト (アンダ サイズ)	4	OPT, RED	
8-8	12300-98810-0CA	ベアリング セット, クランクシャフト (アンダ サイズ)	4	OPT, RED/YELLOW	
8-9	12300-98810-0DA	ベアリング セット, クランクシャフト (アンダ サイズ)	4	OPT, RED/BLUE	
8-10	12300-98810-0EA	ベアリング セット, クランクシャフト (アンダ サイズ)	4	OPT, RED/PINK	
9-1	12300-98821	ベアリング セット, クランクスラスト	1		
9-2	12300-98821-012	ベアリング セット, クランクスラスト	1	オフション	
10	12242-98J00	ギヤ, トライブ	1		
11	09160-10104	ワッシャ (10. 5X50X3. 2)	1		
12	01550-1025A	ホルト	1		
13	09283-91001	オイルシール	1		
14	12100-98J00-050	ピストンセット (OS: 0. 5)	6	オフション	
15	12140-98J00-050	・リング セット, ピストン (OS: 0. 50)	6	オフション	

FIG.119A

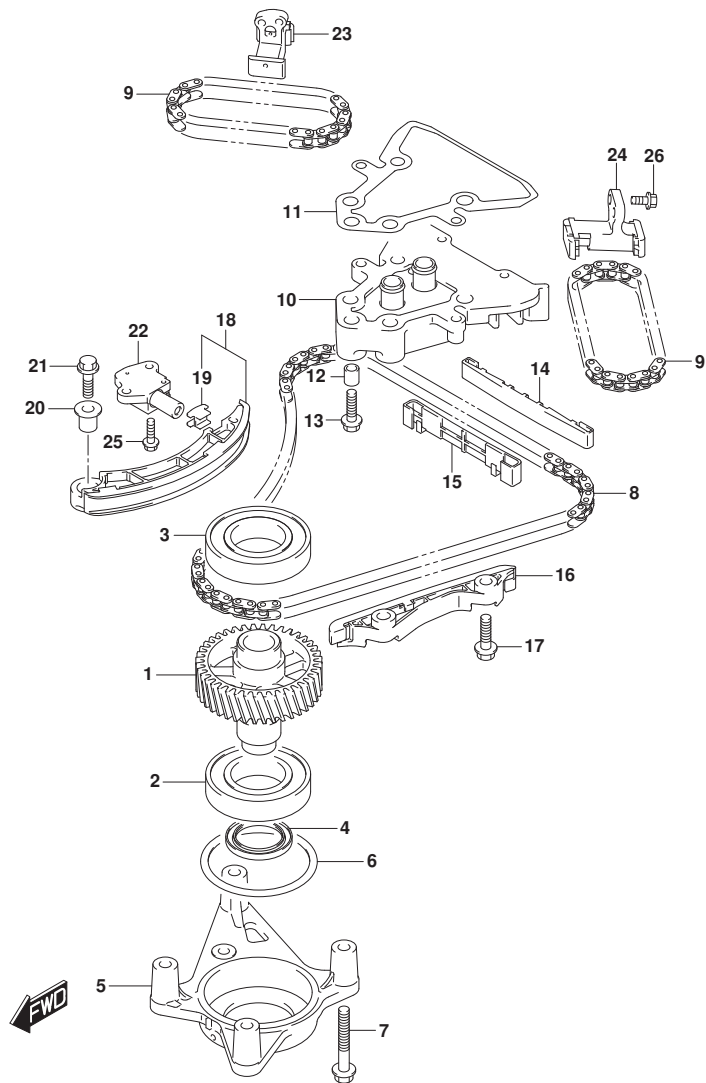


FIG.119A (1-B-6) タイミングチェーン

見出番号	品番	品名	使用個数	備考	標準作業時間
1	12730-98J02	ギヤ, トリフン	1		
2	09262-40018	ベアリング (40X80X18)	1	ロア	
3	09262-40017	ベアリング (40X80X18)	1	アッパー	
4	09283-32044	オイルシール	1		
5	12734-93J00	ホルダ, トリフンギヤ	1		
6	09280-70012	Oリング (D: 5.7)	1		
7	01550-0855A	ホルト	4		
8	12761-93J00	チェーン, タイミング ファースト	1		
9	12762-93J00	チェーン, タイミング セカンド	2		
10	12770-93J00	ベース, T/Cガイド NO. 1	1		
11	12778-93J00	ガイドスロット, タイミングチェーンガイド ベース	1		
12	04211-13149	ピン	2		
13	01550-0830A	ホルト	2		
14	12771-93J00	シュー, タイミングチェーンアツパ	1		
15	12775-93J00	シュー, タイミングチェーンロア	1		
16	12772-93J00	ガイド, タイミングチェーン NO. 2	1		
17	01550-0830A	ホルト	2		
18	12810-93J00	テンションアツジ, タイミングチェーン	1		
19	12813-73G00	バネ, タイミングチェーンテンション	1		
20	12812-90J00	スベラー, タイミングチェーンテンション	1		
21	01550-0830A	ホルト	1		
22	12831-93J01	アシヤスタツジ, テンション NO. 1	1		
23	12832-93J00	テンションアツジ, スターホート	1		
24	12833-93J00	テンションアツジ, ホート	1		
25	01550-0620A	ホルト	2		
26	01550-0620A	ホルト	4		

FIG.121A

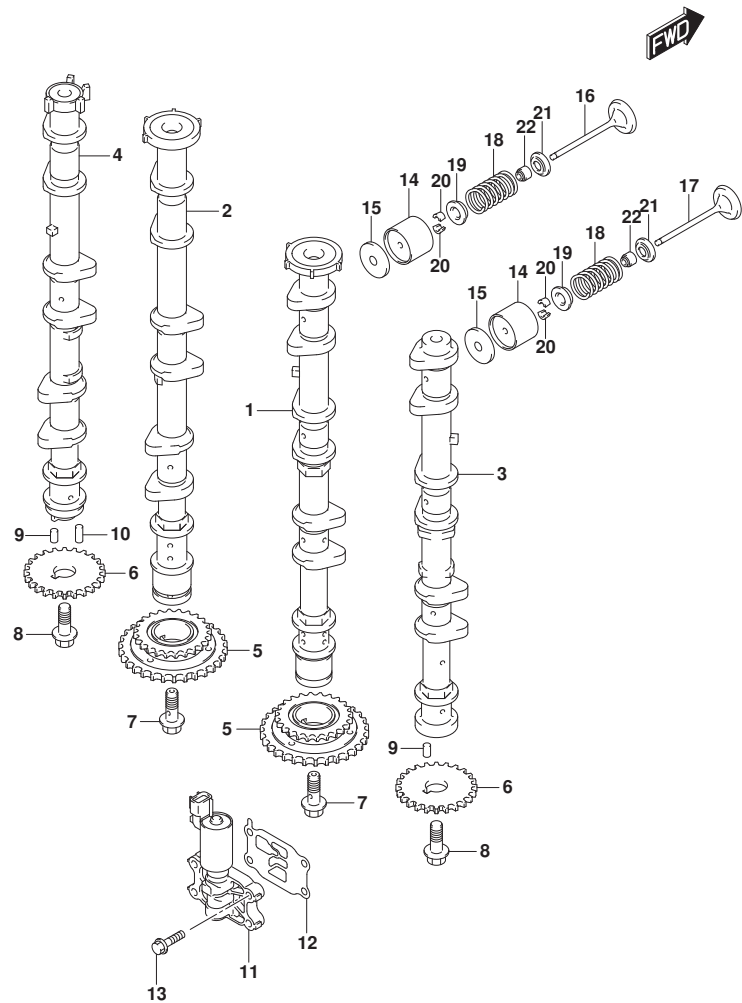


FIG.121A (1-B-7) カムシャフト

見出番号	品番	品名	使用個数	備考	標準作業時間
1	12701-98J10	カムシャフト, インテークスターボート	1		
2	12705-98J10	カムシャフト, インテークボート	1		
3	12721-98J10	カムシャフト, エキゾーストスターボート	1		
4	12729-98J20	カムシャフト, エキゾーストボート	1		
5	12740-93J00	スプロケットアッシ, カムタイミング	2		
6	12748-93J00	スプロケット, カムシャフト	2		
7	12753-93J00	ボルト, インテークカムシャフト	2		
8	12749-93J00	ボルト, カムシャフト	2		
9	09202-05032	ピン (5X12)	3		
10	09261-05006	ピン (5X18)	1		
11	16550-93J00	バルブ, オイルコントロール	2		
12	16555-93J00	ガスケット, オイルコントロールバルブ	2		
13	01550-06257	ボルト	8		
14	12891-93J00	タペット	24		
15-1	12892-93J00-218	シム, タペット (T:2. 175)	AR		
15-2	12892-93J00-220	シム, タペット (T:2. 200)	AR		
15-3	12892-93J00-223	シム, タペット (T:2. 225)	AR		
15-4	12892-93J00-225	シム, タペット (T:2. 250)	AR		
15-5	12892-93J00-228	シム, タペット (T:2. 275)	AR		
15-6	12892-93J00-230	シム, タペット (T:2. 300)	AR		
15-7	12892-93J00-233	シム, タペット (T:2. 325)	AR		
15-8	12892-93J00-235	シム, タペット (T:2. 350)	AR		
15-9	12892-93J00-238	シム, タペット (T:2. 375)	AR		
15-10	12892-93J00-240	シム, タペット (T:2. 400)	AR		
15-11	12892-93J00-243	シム, タペット (T:2. 425)	AR		
15-12	12892-93J00-245	シム, タペット (T:2. 450)	AR		
15-13	12892-93J00-248	シム, タペット (T:2. 475)	AR		
15-14	12892-93J00-250	シム, タペット (T:2. 500)	AR		
15-15	12892-93J00-253	シム, タペット (T:2. 525)	AR		
15-16	12892-93J00-255	シム, タペット (T:2. 550)	AR		
15-17	12892-93J00-258	シム, タペット (T:2. 575)	AR		
15-18	12892-93J00-260	シム, タペット (T:2. 600)	AR		
15-19	12892-93J00-263	シム, タペット (T:2. 625)	AR		
15-20	12892-93J00-265	シム, タペット (T:2. 650)	AR		
15-21	12892-93J00-268	シム, タペット (T:2. 675)	AR		

FIG.121A

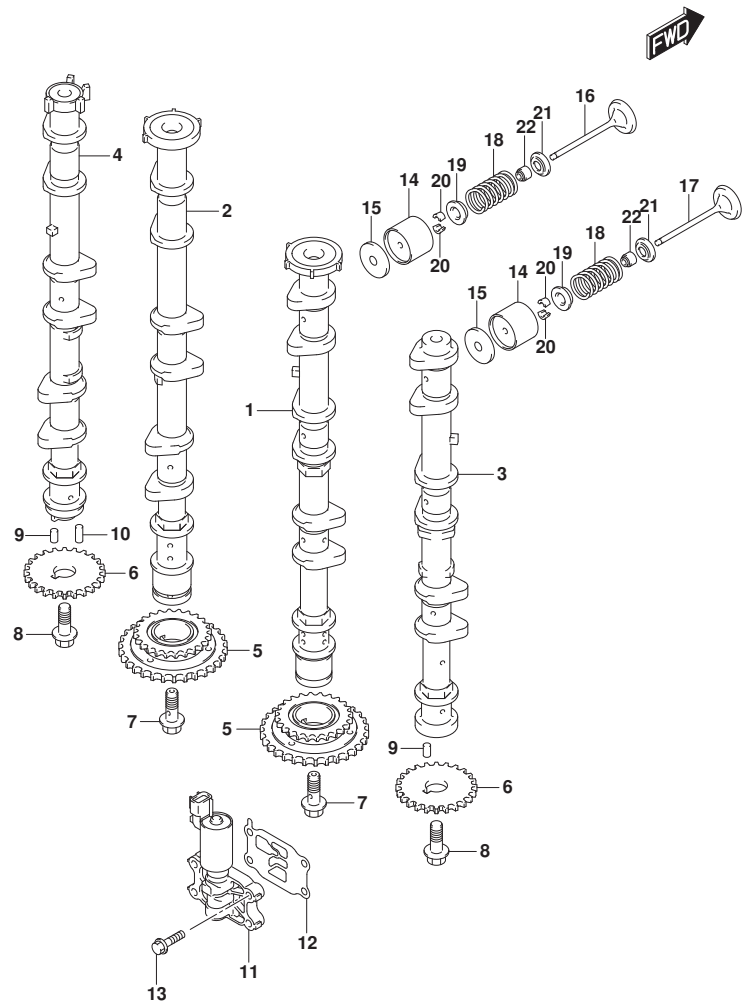


FIG. 121A (1-B-8) カムシャフト

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
15-22	12892-93J00-270	シム, タハ° ット (T: 2. 700)	AR		
15-23	12892-93J00-273	シム, タハ° ット (T: 2. 725)	AR		
15-24	12892-93J00-275	シム, タハ° ット (T: 2. 750)	AR		
15-25	12892-93J00-278	シム, タハ° ット (T: 2. 775)	AR		
15-26	12892-93J00-280	シム, タハ° ット (T: 2. 800)	AR		
15-27	12892-93J00-283	シム, タハ° ット (T: 2. 825)	AR		
15-28	12892-93J00-285	シム, タハ° ット (T: 2. 850)	AR		
15-29	12892-93J00-288	シム, タハ° ット (T: 2. 875)	AR		
15-30	12892-93J00-290	シム, タハ° ット (T: 2. 900)	AR		
15-31	12892-93J00-293	シム, タハ° ット (T: 2. 925)	AR		
15-32	12892-93J00-295	シム, タハ° ット (T: 2. 950)	AR		
15-33	12892-93J00-298	シム, タハ° ット (T: 2. 975)	AR		
15-34	12892-93J00-300	シム, タハ° ット (T: 3. 000)	AR		
16	12911-98J00	ハ° ルフ°, インターク	12		
17	12915-93J50	ハ° ルフ°, エキゾ° スト	12		
18	12921-93J10	スフ° リング°, ハ° ルフ°	24		
19	12931-78G00	リテーナ, ハ° ルフ° スフ° リング°	24		
20	12932-24400	コツタ, ハ° ルフ°	48		
21	12933-69G10	シート, ハ° ルフ° スフ° リング°	24		
22	09289-05012	オイルシール (5. 5X11. 5X9. 3)	24		

FIG.122A

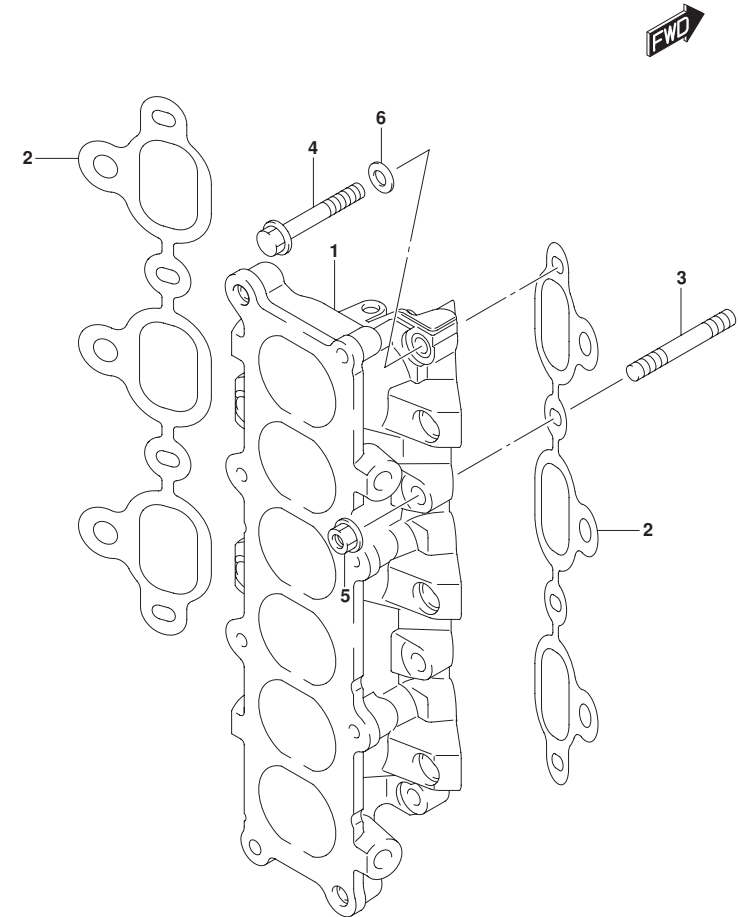


FIG. 122A (1-B-9) インテークマニホールド*

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	13110-98J10	マニホールド*, インテーク	1		
2	13119-98J00	ガスケット, インテークマニホールド*	2		
3	09108-08282	スタッド ボルト	4		
4	09103-08437	ボルト (8X65)	4		
5	09159-08136	ナット	4		
6	09160-08161	ワッシャー (8. 2X23X3. 2)	8		

FIG.136A

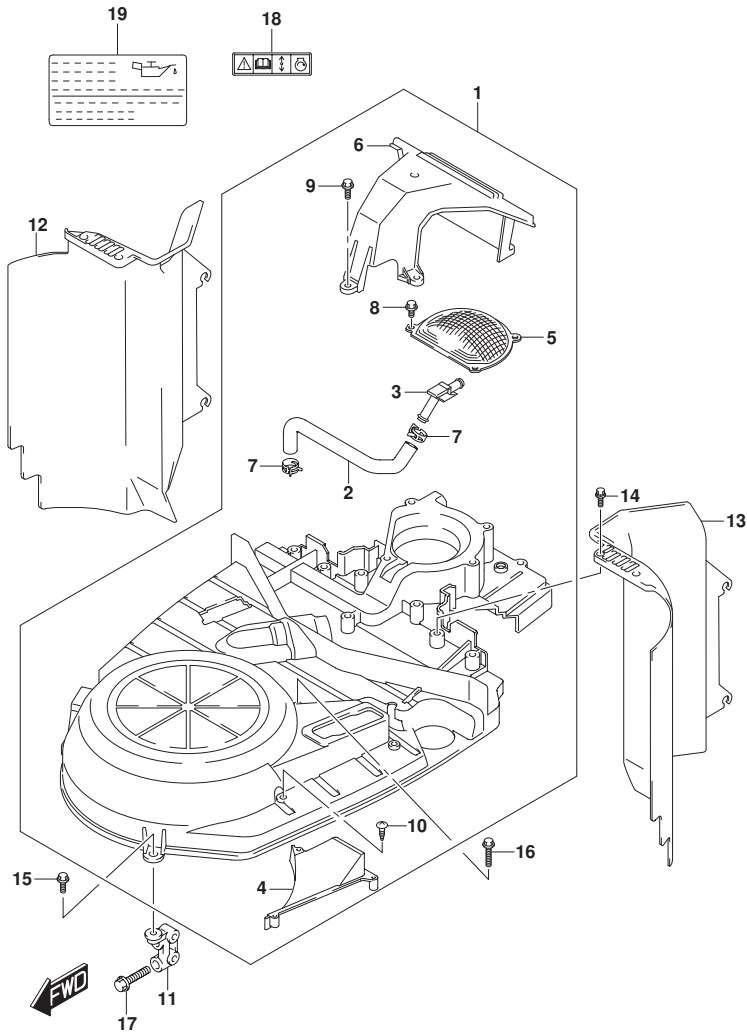


FIG. 136A (1-B-10) リンクギヤカバー

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	11510-98J02	カバー, リンクギヤ	1		
2	11174-98J00	・ホース, プリーザ	1		
3	11176-98J00	・ユニオン, プリーザ	1		
4	11514-98J00	・フレート, リンクギヤカバー	1		
5	13710-98J00	・アレスタ, フレーム	1		
6	13811-98J00	・サイレンサ, アツハカバー	1		
7	09401-18410	・クリップ	2		
8	01550-06127	・ボルト	4		
9	01550-06207	・ボルト	5		
10	11517-98J00	・スクリュー	3		
11	11515-93J00	ブレース, リンクギヤカバー	1		
12	13841-98J10	ガード, エアダクトスターボート	1		
13	13851-98J10	ガード, エアダクトボート	1		
14	01550-06207	ボルト	4		
15	01550-06207	ボルト	2		
16	01550-06407	ボルト	1		
17	01550-08357	ボルト	2		
18	69711-93E10	ラベル, S. I. G. P.	1		
19	61494-93J00	ラベル, オイル/クリアランス	1		

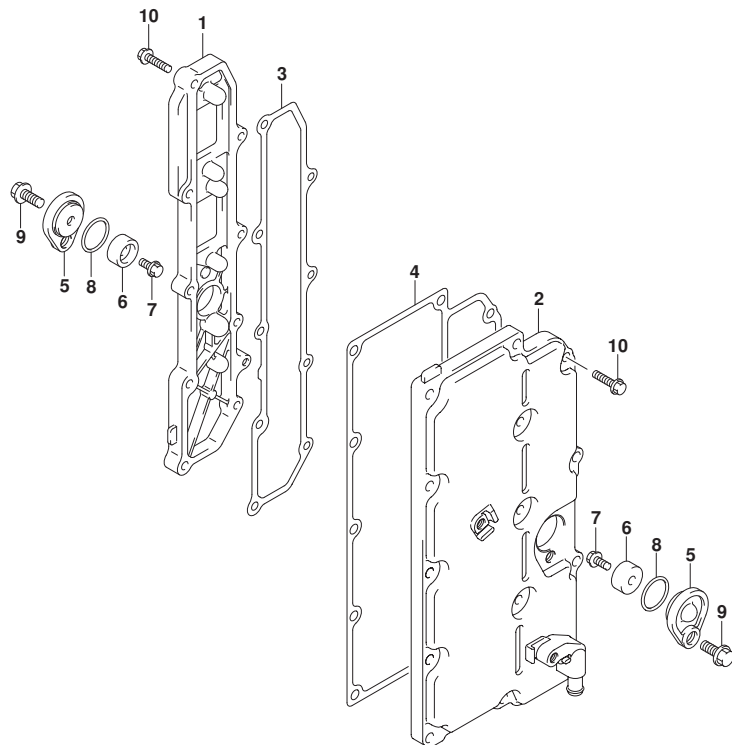


FIG. 140A (1-B-11) エキゾーストカハ-

見出番号	品番	品名	使用個数	備考	標準作業時間
1	14141-93J01	カバ ^レ 、エキゾ ^ー ースタ ^ホ ート [〃]	1		
2	14140-98J01	カバ ^レ 、エキゾ ^ー ースト ^ホ ート	1		
3	14151-93J00	ガ [〃] スケツト、エキゾ ^ー ーストカバ [〃] -(スタ ^ホ ート [〃])	1		
4	14152-93J00	ガ [〃] スケツト、エキゾ ^ー ーストカバ [〃] -(ホ [〃] ート)	1		
5	11261-93J00	カバ ^レ 、フ [〃] ロテクションアノード [〃]	2		
6	55321-87J01	アノード [〃] 、フ [〃] ロテクション	2		
7	09103-06281	ホ [〃] ルト (6X14)	2		
8	09280-22019	Oリング (D:1.9, ID:21.8)	2		
9	01550-08207	ホ [〃] ルト	2		
10	01550-06257	ホ [〃] ルト	23		

FIG.144A

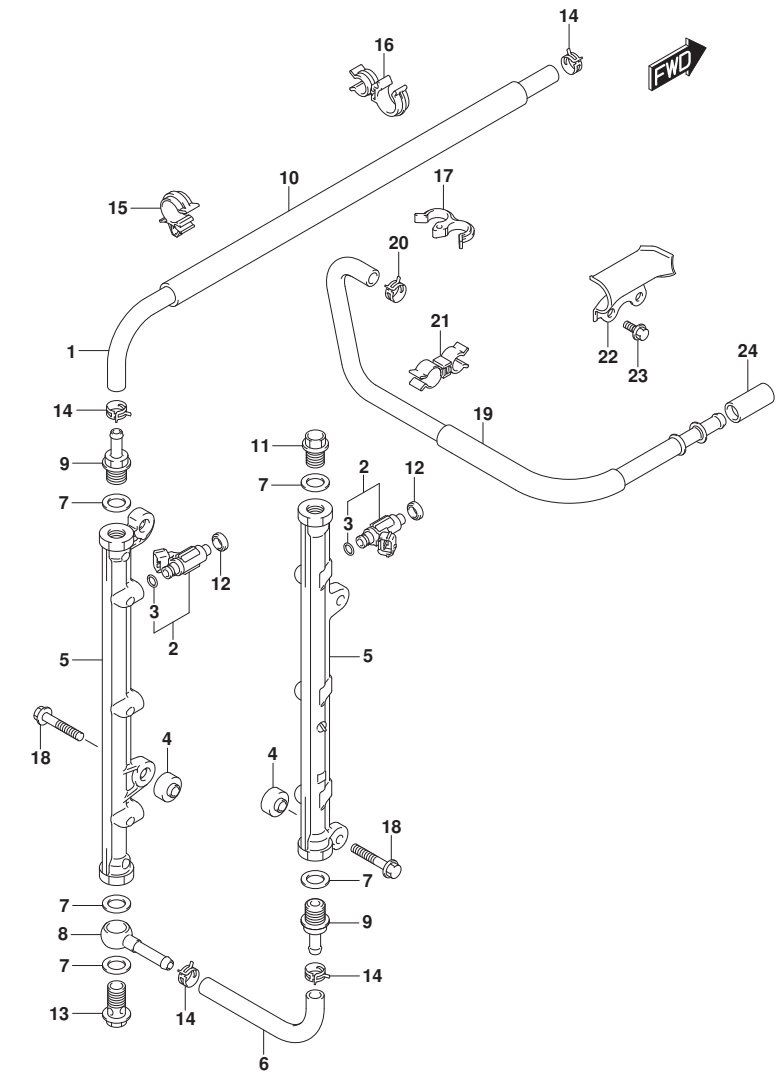


FIG. 144A (1-B-12) フューエルインジェクタ

見出番号	品番	品名	使用個数	備考	標準作業時間
1	15681-93J01	ホース, フューエル (3ウェイツ-デ リハ リハ イフ)	1		
2	15710-96J00	インジェクタアツシ, フューエル	6		
3	15717-16G00	・Oリング	6		
4	15735-58B00	インシユレータ, デ リハ リハ イフ	4		
5	15751-93J00	ハ イフ, デ リハ リ	2		
6	15756-93J01	ホース, フューエル (デ リハ リツ-デ リハ リ)	1		
7	15762-93J00	ガ スケツト, デ リハ リハ イフ	5		
8	15830-77EA0	ジ ョイント, フューエルメイン	1		
9	15831-93J00	ユニオン, デ リハ リハ イフ	2		
10	18498-93J00	ブ ロテクタ, フューエルホース (15. 4X18. 4X340)	1		
11	09247-14041	ブ ラグ (14X14)	1		
12	09320-08062	クツシヨ	6		
13	09360-14009	ユニオンホ ルト	1		
14	09401-11425	クリツフ	4		
15	09403-16307	クランフ	1		
16	09408-00105	クランフ	1		
17	09408-00155	クランフ	1		
18	01550-08407	ホ ルト	4		
19	15680-93J30	ホース, フューエルインレット (ツ-ファイルタ)	1		
20	09401-13423	クリツフ	1		
21	09408-00135	クリツフ	2		
22	15684-98J00	ガ イト, フューエルホース	1		
23	01550-06127	ホ ルト	2		
24	09251-09005	ブ ラグ	1		

FIG.147A

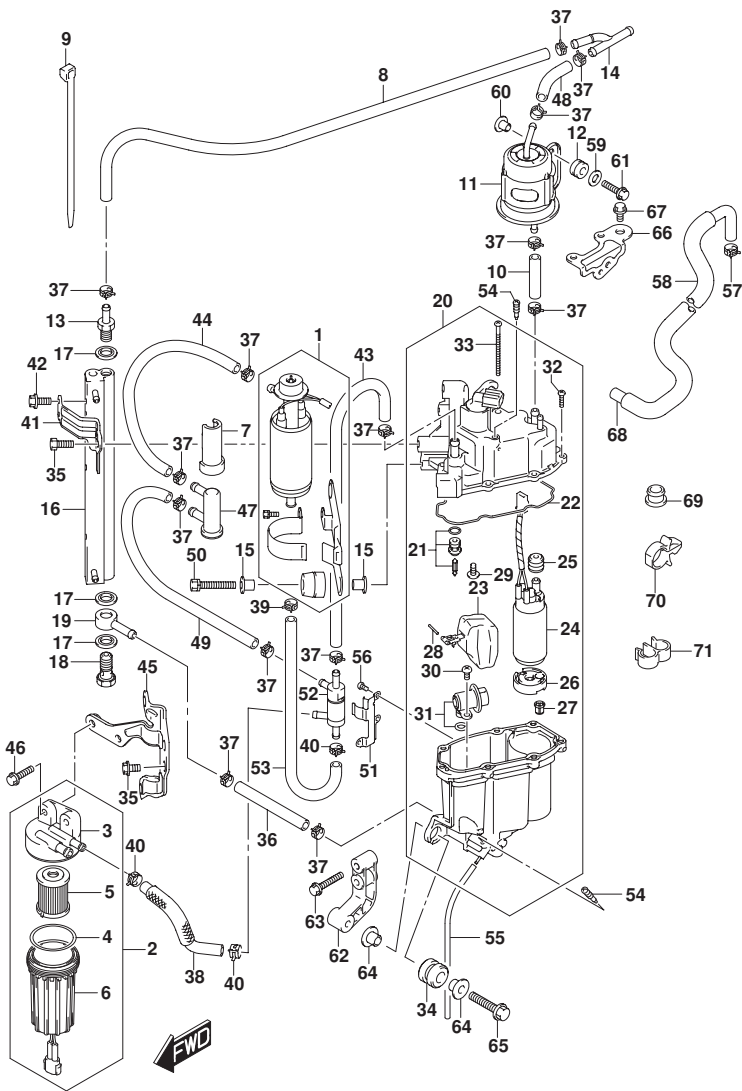


FIG. 147A (1-B-13) フューエルポンプ/フューエルベーパーセパレータ

見出番号	品番	品名	使用個数	備考	標準作業時間
1	15100-94900	ポンプアツシ, フューエル	1		
2	15410-93J10	フィルタ, フューエル, レフト	1		
3	15411-93J10	・キャツプ, フューエルフィルタ	1		
4	15415-93J10	・シール, フューエルフィルタNO. 1	1		
5	15412-93J10	・フィルタアツシ, フューエル	1		
6	15413-93J10	・ケースアツシ, フューエルフィルタ	1		
7	15644-93J00	カバー, フューエルフィルタ	3		
8	15633-93J20	ホース, フューエル (H)	1		
9	15646-93J00	クランプ, フューエルフィルタ	1		
10	09343-75001-600	ホース (7. 5X13. 5X600)	1	L: 600>65	
11	15440-93J00	フィルタ, フューエル	1		
12	09320-08501	クツシヨシ (8X18X10)	2		
13	15773-90J00	ユニオン, フューエルホース	1		
14	15830-93J00	ユニオン, スリーウェイフューエルホース	1		
15	09169-06062	ワツシヤ	4		
16	15770-93J00	クーラ, フューエル	1		
17	09168-12013	ガスケット (11. 8X22X1. 2)	3		
18	09360-12008	ホルト, 12X27	1		
19	09363-08004	ユニオン	1		
20	15600-98J00	セパレータアツシ, フューエルベーパー	1		
21	13370-93J00	・バルブアツシ, ニードル	1		
22	15626-93J00	・ガスケット, セパレータ	1		
23	15650-93J00	・フロートアツシ	1		
24	15200-98J00	・ポンプアツシ, フューエル (H)	1		
25	15647-93J00	・ブツシユ, フューエルポンプ	1		
26	15641-90J00	・スベーサ	1		
27	15642-90J00	・フィルタ	1		
28	15654-99E00	・ピン	1		
29	02142-0408B	・スクリュ	1		
30	02112-05107	・スクリュ	1		
31	15760-93J00	・レギュレータ, フューエルプレツシヤ	1		
32	15628-99E00	・スクリュ (L: 15)	6		
33	15627-93J00	・スクリュ	1		
34	09320-12072	クツシヨシ	3		
35	15675-93J00	ホルト, クーラブラケツト	3		

FIG.147A


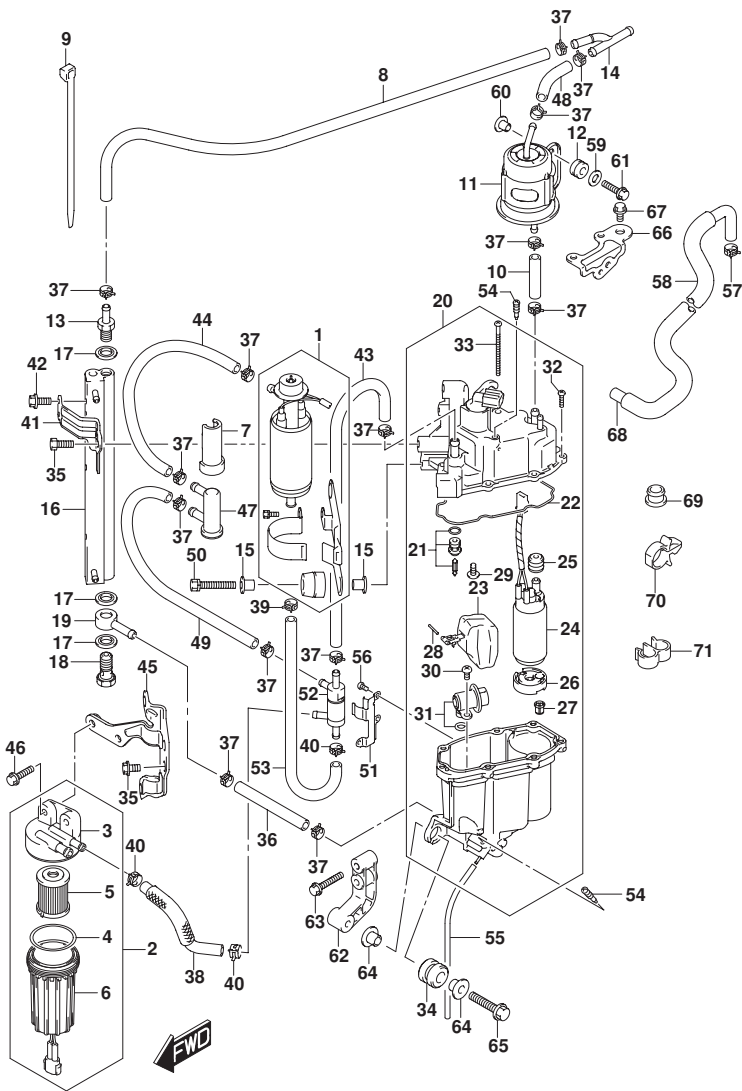


FIG. 147A (1-B-14) フューエルポンプ / フューエルベーパーセパレータ

見出番号	品番	品名	使用個数	備考	標準作業時間
36	09343-75001-600	ホース(7.5X13.5X600)	1	L:600>50	
37	09401-11414	クリップ(ID:11.5)	14		
38	15636-98J20	ホース,フューエル(L)	1		
39	15686-93J00	クリップ,フューエルホースNO.2	1		
40	15685-93J00	クリップ,フューエルホースNO.1	3		
41	15672-93J00	ブラケット,フューエルクーラ	1		
42	01500-06167	ホルト	4		
43	15635-93J20	ホース,フューエル(H)	1		
44	15632-93J20	ホース,フューエル(H)	1		
45	15673-98J00	ブラケット,フューエルフィルタ	1		
46	01550-06257	ホルト	2		
47	15643-93J00	フィルタ,フューエル,レフト	1		
48	09343-75001-600	ホース(7.5X13.5X600)	1	L:600>65	
49	15634-93J20	ホース,フューエル(H)	1		
50	01570-06357	ホルト	2		
51	15674-93J00	ブラケット,チエツクバルブ	1		
52	15645-93J00	バルブ,チエツク	1		
53	15637-93J20	ホース,フューエル(L)	1		
54	15629-99E10	スクリュ,ドレーン	2		
55	15683-87J00	ホース	1		
56	02112-0406B	スクリュ	3		
57	09401-08412	クリップ	1		
58	18498-93J10	プロテクタ(9.5X11.5X1130)	1		
59	09160-06084	ワッシャ(6.5X18X1.6)	2		
60	09169-06062	ワッシャ	2		
61	01500-06257	ホルト	2		
62	15671-93J00	ブラケット,ベーパーセパレータ	1		
63	01550-06357	ホルト	2		
64	09169-08042	ワッシャ	6		
65	01550-08407	ホルト	3		
66	18417-93J00	ブラケット,バルブ	1		
67	01550-06127	ホルト	2		
68-1	09352-50823-00B	ホース(5X8.2X2000)	1	L:2000>1230 FROM 25003P-61000	

FIG.147A

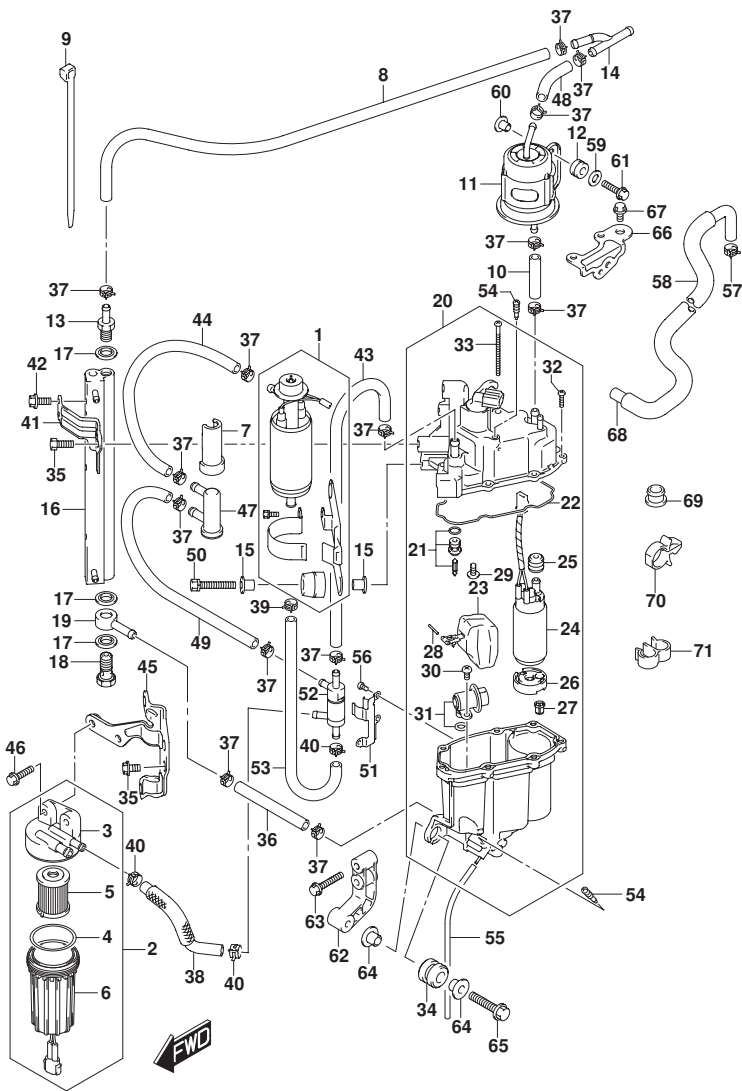

DF300A_000_016_147A
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG. 147A (1-B-15) フューエルポンプ/フューエルベーパーセパレータ

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
				UPTO 25003P-61184	
				9	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61051	
				2	
68-2	09343-50002-23A	ホース(5X8. 2X1230)	1	FROM 25003P-61185	
				0	
				FROM 30002P-61051	
				3	
69	09320-08086	クワシヨン	1		
70	09403-14304	クランプ	1		
71	09408-00043	クランプ	1		

DF300A_000_016

FIG.160A


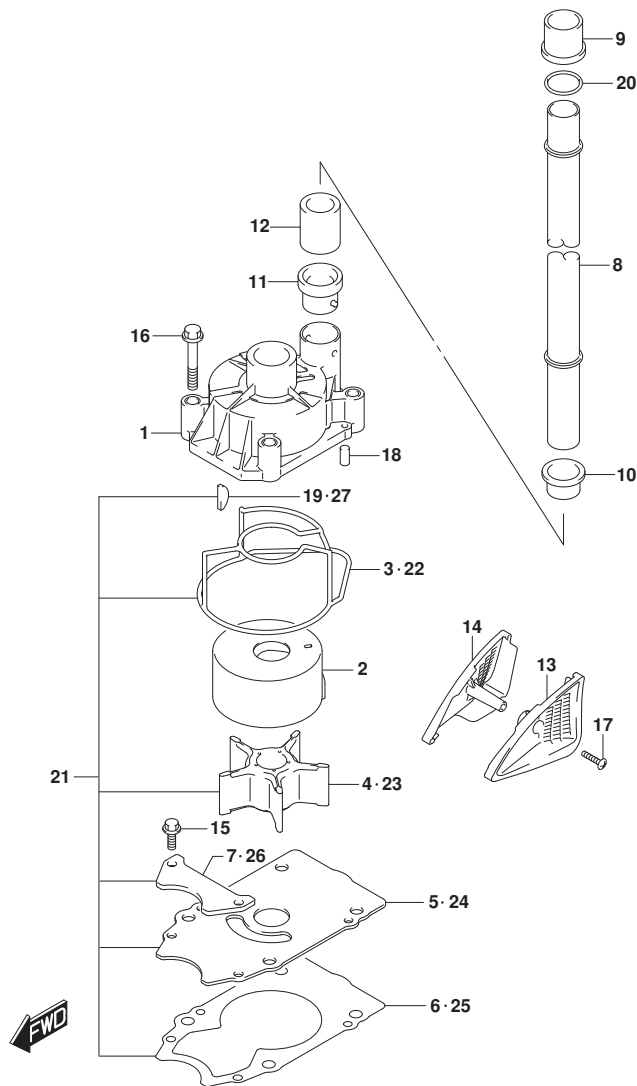


FIG.160A (1-B-16) ウォータポン

見出番号	品番	品名	使用個数	備考	標準作業時間
1	17410-93J01	ケース, ウォータポン	1		
2	17413-93J02	スリーブ, ウォータポン ケース	1		
3	17416-93J00	シーリング, ウォータポン ケース	1		
4	17461-93J00	インベラ, ウォータポン	1		
5	17471-98J01	ハネル, ホン ケースアンタ	1		
6	17472-98J00	ガスケツト, ホン ケースハネル	1		
7	17473-98J00	ハネル, ウォータポン NO. 2	1		
8-1	17561-93J03	チューブ, ウォータ (X)	1	X-TRANSOM	
8-2	17561-93J13	チューブ, ウォータ (XX)	1	XX-TRANSOM	
8-3	17561-93J21	チューブ, ウォータ (L)	1	DF300A:L-TRANSOM	
9	17562-93J01	ブッシュ, ウォータチューブ アツハ	1		
10	17563-93J00	ブッシュ, ウォータチューブ ロア	1		
11	17564-93J00	ブッシュ, ウォータポン ケース	1		
12	17612-93J00	スベーサ, ウォータチューブ	1		
13	17631-93L00	フィルタ, ウォータポン ートサイト	1		
14	17632-93L00	フィルタ, ウォータスターボート サイト	1		
15	29116-93J00	ホルト	2		
16	09116-08131	ホルト (8X45)	4		
17	09132-04034	タツヒング スクリユ	1		
18	09202-06031	ヒン (6X12)	2		
19	09420-05009	キー	1		
20	09168-20002	ガスケツト (20. 5X30X1. 5)	1	WATER TUBE UPPER	
21	17400-98J01	キツト, ウォータポン リハア	1	オフショ	
22	17416-93J00	シーリング, ウォータポン ケース	1	オフショ	
23	17461-93J00	インベラ, ウォータポン	1	オフショ	
24	17471-98J01	ハネル, ホン ケースアンタ	1	オフショ	
25	17472-98J00	ガスケツト, ホン ケースハネル	1	オフショ	
26	17473-98J00	ハネル, ウォータポン NO. 2	1	オフショ	
27	09420-05009	キー	1	オフショ	

FIG.162A

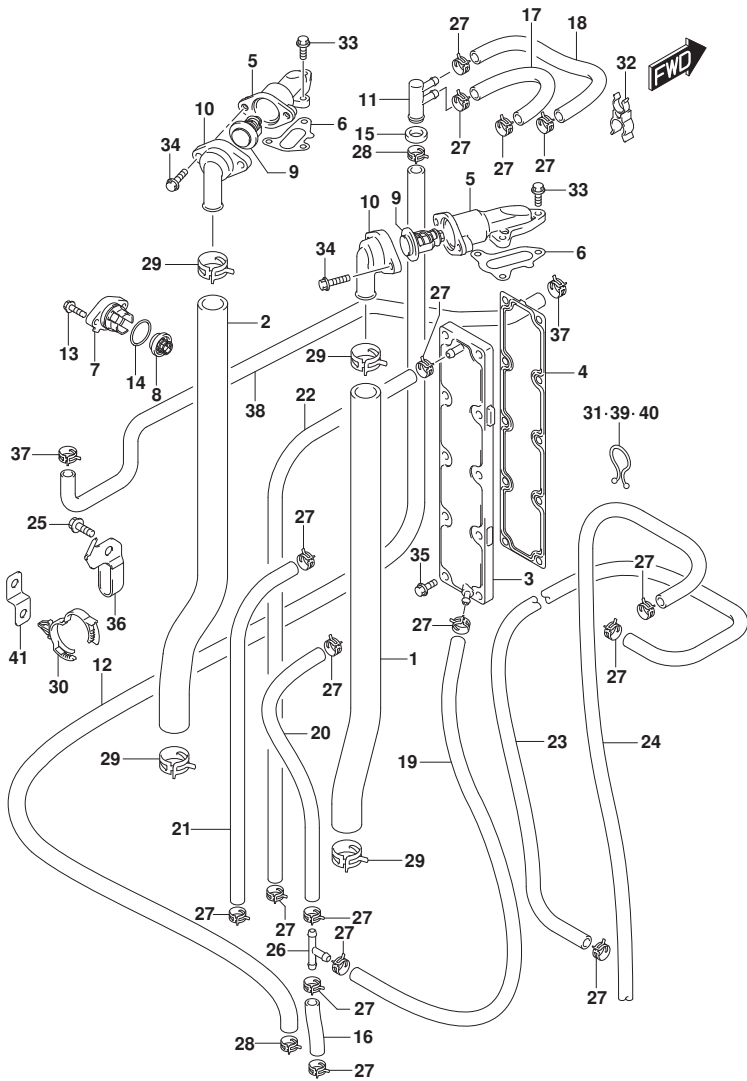


DF300A_000_016_162A
THERMOSTAT

FIG. 162A (1-C-2) サーマスタット

見出番号	品番	品名	使用個数	備考	標準作業時間
1	11196-93J00	ホース, ウォータリターンホースード	1		
2	11197-93J00	ホース, ウォータリターンホースード	1		
3	11270-93J00	プレート, シリンダ プ ロックウオータジ ヤケツト	1		
4	11272-93J00	ガスケット, シリンダ プ ロックウオータジ ヤケツト	1		
5	17581-93J00	パイプ, ウォータアウトレット	2		
6	17582-93J00	ガスケット, ウォータアウトレットパイプ	2		
7-1	17611-90J00-OEP	カバー, ウォータフ レジヤパ ルフ (フ ラック)	1	BODY COLOR: OEP, YK V	
7-2	17611-90J00-Y5S	カバー, ウォータフ レジヤパ ルフ (ホワイト)	1	BODY COLOR: Y5S	
8	17660-99E01	パ ルフ, ウォータフ レジヤ	1		
9-1	17670-90J20	サーモスタット, ウォータ 50°C	2		
9-2	17670-90J10	サーモスタット, ウォータ 71°C	1	オプション	
10	17681-93J00	カバー, サーマスタット	2		
11	17711-90J00	3ウェイ, ウォータホース	1		
12	17712-93J00	ホース, ウォータ (3ウェイツェー/E/Hカバー)	1		
13	09116-06121	ホルト (6X25)	2		
14	09280-26006	Oリング (D: 3. 1, ID: 26. 4)	1		
15	09320-12014	クワシオン	1		
16	09352-50903-600	ホース (5X9X600)	1	L: 600>60	
17	09352-50903-600	ホース (5X9X600)	1	L: 600>120	
18	09352-50903-600	ホース (5X9X600)	1	L: 600>190	
19	09352-50903-600	ホース (5X9X600)	1	L: 600>300	
20	09352-50903-600	ホース (5X9X600)	1	L: 600>330	
21	09352-50903-600	ホース (5X9X600)	1		
22	09352-50903-600	ホース (5X9X600)	1		
23	09352-50903-00B	ホース (5X9X2000)	1	L: 2000>850	
24	09352-50903-00B	ホース (5X9X2000)	1	L: 2000>1010	
25	01550-08127	ホルト	1		
26	09367-06002	ジョイント	1		
27	09401-08413	クリップ	18		
28	09401-14409	クリップ	2		
29	09401-25406	クリップ	4		
30	09403-25304	クランプ	1		
31	09408-00008	クリップ (ID: 20)	1		
32	09408-00056	クリップ	1		

DF300A_000_016

FIG.162A

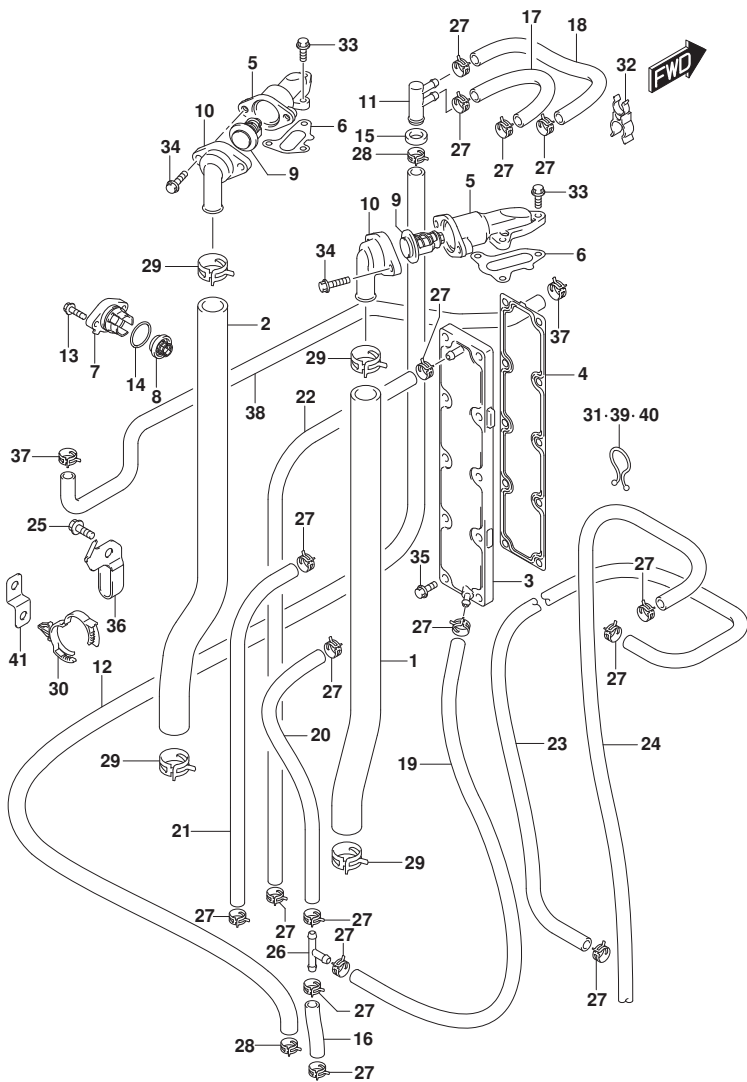


DF300A_000_016_162A
THERMOSTAT

FIG. 162A (1-C-3) サーマスタット

見出番号	品番	品名	使用個数	備考	標準作業時間
33	01550-06207	ボルト	6		
34	01550-06207	ボルト	4		
35	01550-06257	ボルト	10		
36	17713-98J00	ホルダ, ウォータホース	1		
37	09401-15414	クリップ	2		
38	17915-98J01	ホース, ウォータフラッシュ	1		
39	09408-00024	クリップ (ID:23)	1		
40	09408-00021	クリップ (ID:16)	1		
41	36617-93J10	ブラケット, ハーネス	1		

DF300A_000_016

FIG.163A

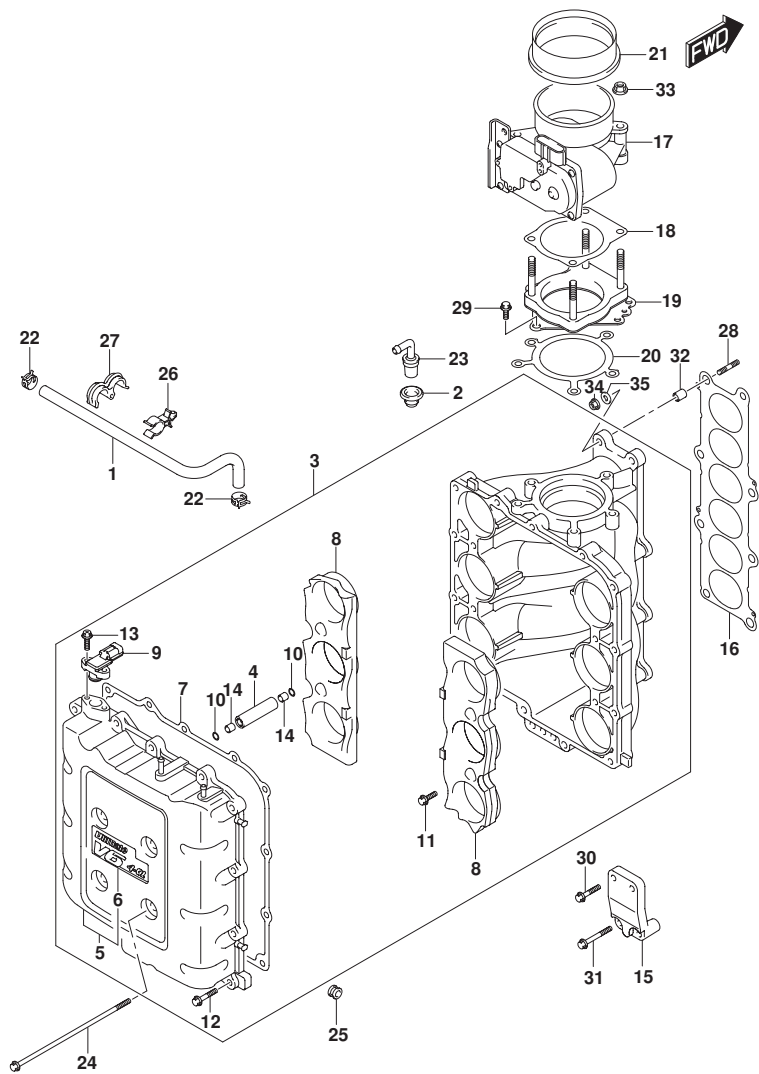

DF300A_000_016_163A
THROTTLE BODY

FIG. 163A (1-C-4) スロットルホデー

見出番号	品番	品名	使用個数	備考	標準作業時間
1	11193-98J00	ホース, PCV	1		
2	11198-58B00	シール, PCVハルブ	1		
3	13100-98J01	コレクタアツシ	1		
4	13137-98J00	・スベーサ, コレクタ	4		
5	13140-98J01	・カバー, コレクタ	1		
6	61436-98J00	・マーク, エンブレムV6 (4. 0L)	1		
7	13147-98J00	・ガスケット, コレクタカバー	1		
8	13180-98J00	・ファネル, エアコレクタ	2		
9	18590-68H00	・センサ, プレツシヤ	1		
10	09280-10009	・Oリング (D:1. 3, ID:9. 8)	8		
11	01550-08167	・ボルト	4		
12	01550-08357	・ボルト	11		
13	02162-05207	・スクリュ	2		
14	04211-11129	・ピン	8		
15	13134-98J00	ブラケット, コレクタ	1		
16	13139-98J01	ガスケット, コレクタ	1		
17	13310-98J00	ホデーアツシ, スロットル	1		
18	13343-98J10	ガスケット, スロットルホデー	1		
19	13315-98J00	ダンパ, スロットルホデー	1		
20	13421-98J00	ガスケット, スロットルホデー	1		
21	13813-98J00	グロメット, スロットルホデー	1		
22	09401-13423	クリツプ	2		
23	18118-93J00	ハルブ, PCV	1		
24	09103-08370	ボルト (8X250)	6		
25	09320-08076	グロメット	4		
26	09403-13310	クランフ	1		
27	09408-00155	クランフ	1		
28	01421-08357	スタツトボルト	2		
29	01550-08167	ボルト	5		
30	01550-08357	ボルト	2		
31	01550-08607	ボルト	2		
32	04211-11129	ピン	2		
33	09159-08136	ナツト	4		
34	08316-10087	ナツト	2		
35	09160-08161	ワツシヤ (8. 2X23X3. 2)	2		

DF300A_000_016

FIG.175A

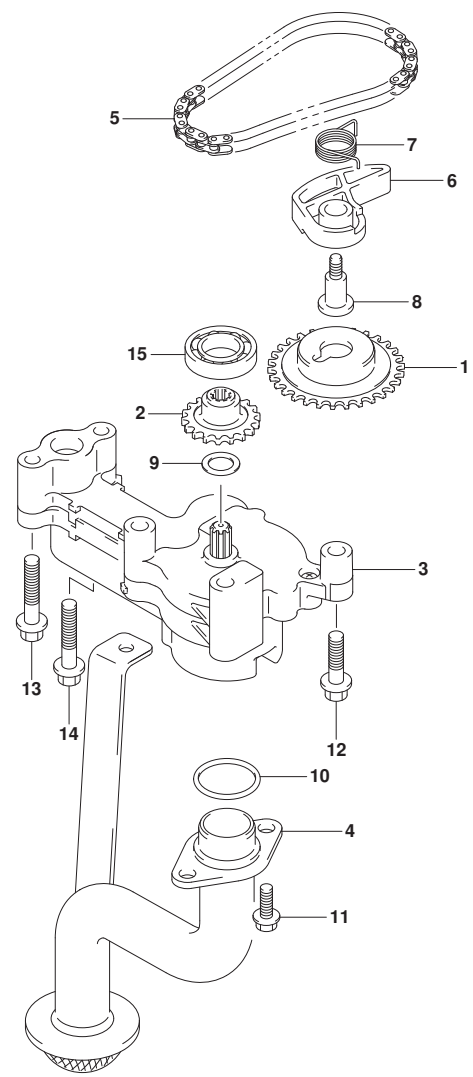


FIG. 175A (1-C-5) オイルポンプ

見出番号	品番	品名	使用個数	備考	標準作業時間
1	12632-93J11	スフ ロケツト, オイルポンプ トライブ	1		
2	16113-93J10	スフ ロケツト, オイルポンプ トライブ	1		
3	16400-93J02	ポンプ アツシ, オイル	1		
4	16520-93J00	ストレーナ, オイルポンプ	1		
5	16760-93J00	チェーン, オイルポンプ トライブ	1		
6	16781-93J00	テンシヨナ, オイルポンプ チェーン	1		
7	16782-93J00	スフ リンク, オイルポンプ テンシヨナ	1		
8	16783-93J01	ホルト, オイルポンプ テンシヨナ	1		
9	09181-12158	シム (12X20X0.5)	1		
10	09280-22020	Oリング (D:2.4, ID:21.8)	2		
11	01550-0616A	ホルト	3		
12	01550-0845A	ホルト	1		
13	01550-0865A	ホルト	3		
14	01550-0885A	ホルト	1		
15	08110-60020	ベアリング	1		

FIG.180A

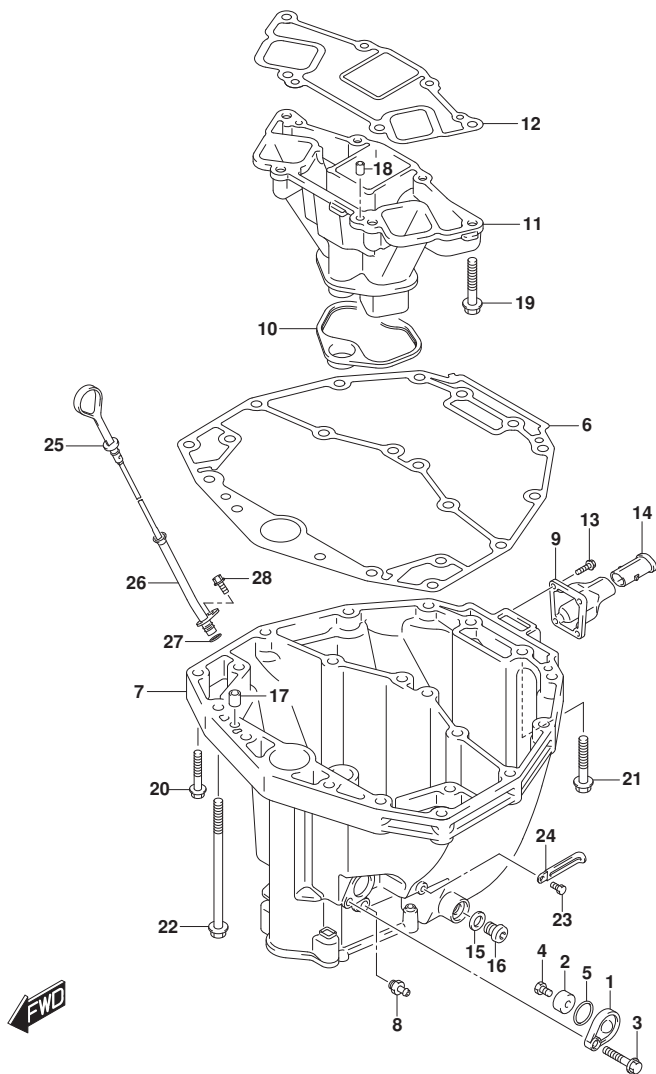


FIG. 180A (1-C-6) オイルパン

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1-1	11261-93J10-OEP	カバー, プ ロテクションアノード (ﾌﾞﾗｯｸ)	1	BODY COLOR: OEP, YK V	
1-2	11261-93J10-Y5S	カバー, プ ロテクションアノード (ﾎﾜｲﾄ)	1	BODY COLOR: Y5S	
2-1	55321-87J01	アノード, プ ロテクション	1		
2-2	55321-87J11	アノード (ﾏｸﾞﾈｼウム)	1	ｵﾌﾞｼｮﾝ	
3	29103-93J30	ﾎﾙﾄ	1		
4	09103-06281	ﾎﾙﾄ (6X14)	1		
5	09280-22019	ｵﾘﾝｸﾞ (D: 1. 9, ID: 21. 8)	1		
6	11489-93J00	ｶﾞｽｹｯﾄ, ｵｲﾙﾊﾟﾝ	1		
7-1	11501-93J02-OEP	ﾊﾟﾝ, ｵｲﾙ (ﾌﾞﾗｯｸ)	1	BODY COLOR: OEP, YK V	
7-2	11501-93J02-Y5S	ﾊﾟﾝ, ｵｲﾙ (ﾎﾜｲﾄ)	1	BODY COLOR: Y5S	
8	11591-93J10	ｳﾆｵﾝ, ｵｲﾙﾊﾟﾝ	1		
9-1	11541-93J00-OEP	ﾊﾞｲﾌﾞ, ｴｷｿｰｽﾄ (ﾌﾞﾗｯｸ)	1	BODY COLOR: OEP, YK V	
9-2	11541-93J00-Y5S	ﾊﾞｲﾌﾞ, ｴｷｿｰｽﾄ (ﾎﾜｲﾄ)	1	BODY COLOR: Y5S	
10	14154-93J01	ｼｰﾙ, ｴｷｿｰｽﾄﾁｭｰﾌﾞ	1		
11	14211-98J00	ﾁｭｰﾌﾞ, ｴｷｿｰｽﾄ	1		
12	14212-93J00	ｶﾞｽｹｯﾄ, ｴｷｿｰｽﾄﾁｭｰﾌﾞ	1		
13	29116-93J00	ﾎﾙﾄ	4		
14	11435-93J00	ﾊﾞｲﾌﾞ, ｴｷｿｰｽﾄﾚｰｽ	1		
15	09168-12012	ｶﾞｽｹｯﾄ (12. 5X20X2. 5)	1		
16	09248-12009	ﾌﾞﾗｸﾞ (12X18. 65)	1		
17	09202-08006	ﾋﾞﾝ (8X12)	2		
18	09202-08006	ﾋﾞﾝ (8X12)	2		
19	01550-1050A	ﾎﾙﾄ	4		
20	09116-08128	ﾎﾙﾄ (8X40)	10		
21	09116-10175	ﾎﾙﾄ (10X50)	2		
22	09116-10146	ﾎﾙﾄ (10X195)	4		
23	29103-93J00	ﾎﾙﾄ (6X12)	1		
24	29404-93J10	ｸﾗﾝﾌﾟ	1		
25	16910-93J00	ｹﾞｰｼﾞ, ｵｲﾙﾚﾍﾞﾙ	1		
26	16930-93J00	ｶﾞｲﾄﾞ, ｵｲﾙﾚﾍﾞﾙｹｰｼﾞ	1		
27	09280-09008	ｵﾘﾝｸﾞ (D: 2. 1, ID: 8. 8)	1		
28	01550-06127	ﾎﾙﾄ	1		

FIG.204A

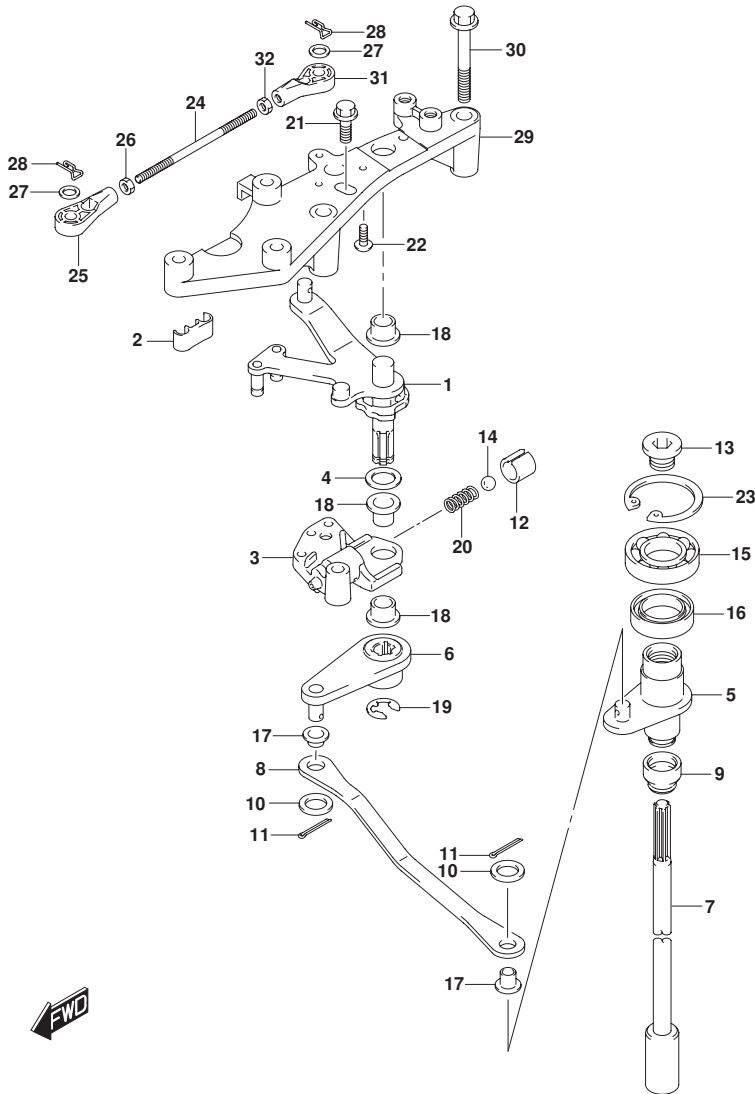


FIG. 204A (1-C-7) クラッチシャフト

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	21110-98J00	レバ ^ー 、クラッチ	1		
2	21131-93J00	ブ ^ッ シユ、クラッチレバ ^ー	1		
3	21151-93J00	ホルタ ^ー 、クラッチレバ ^ー	1		
4	09160-10148	ワッシャ (10X20X3)	1		
5	21210-98J01	シャフト、クラッチ	1		
6	21230-98J01	アーム、クラッチシャフト	1		
7-1	23111-93J00	ロツト ^ー 、クラッチ	1	X-TRANSOM, XX-TRAN SOM	
7-2	23111-93J10	ロツト ^ー 、クラッチ (L)	1	DF300A:L-TRANSOM	
8	23115-98J00	リンク、クラッチレバ ^ー	1		
9	25223-94400	シール、シフトロツト ^ー タ ^ー スト	1		
10	09160-06094	ワッシャ (6. 5X15X1. 0)	2		
11	09204-01006	コツタビ ^ン	2		
12	09205-10006	ビ ^ン	1		
13	09248-12011	ブ ^ラ グ ^ー (12X9)	1		
14	09260-10005	ホ ^ー ル	1		
15	09262-17019	ベ ^ア リング ^ー (17X35X8)	1		
16	09289-18001	オイルシール	1		
17	09306-06005	ブ ^ッ シユ	2		
18	09306-10001	ブ ^ッ シユ	3		
19	09383-08004	Eリング ^ー	1		
20	09440-07051	スフ ^ー リング ^ー	1		
21	01550-06207	ホ ^ー ルト	1		
22	02142-05107	スクリュ	2		
23	08331-41359	サークリツプ ^ー	1		
24	21241-98J10	リンク、クラッチレバ ^ー -NO. 2	1		
25	67467-89J01	コネクタ	1		
26	67471-99E00	ナツト、リモコンケーブ ^ル	1		
27	09160-06055	ワッシャ (7X12X1)	2		
28	09385-06012	スナツブ ^ー ビ ^ン	2		
29	19115-98J10	ホルタ ^ー 、クラッチレバ ^ー	1		
30	01550-08557	ホ ^ー ルト	2		
31	67467-89J10	コネクタ、リモコンケーブ ^ル NO. 2	1		
32	67471-99E10	ナツト、リモコンケーブ ^ル NO. 2	1		

FIG.206A

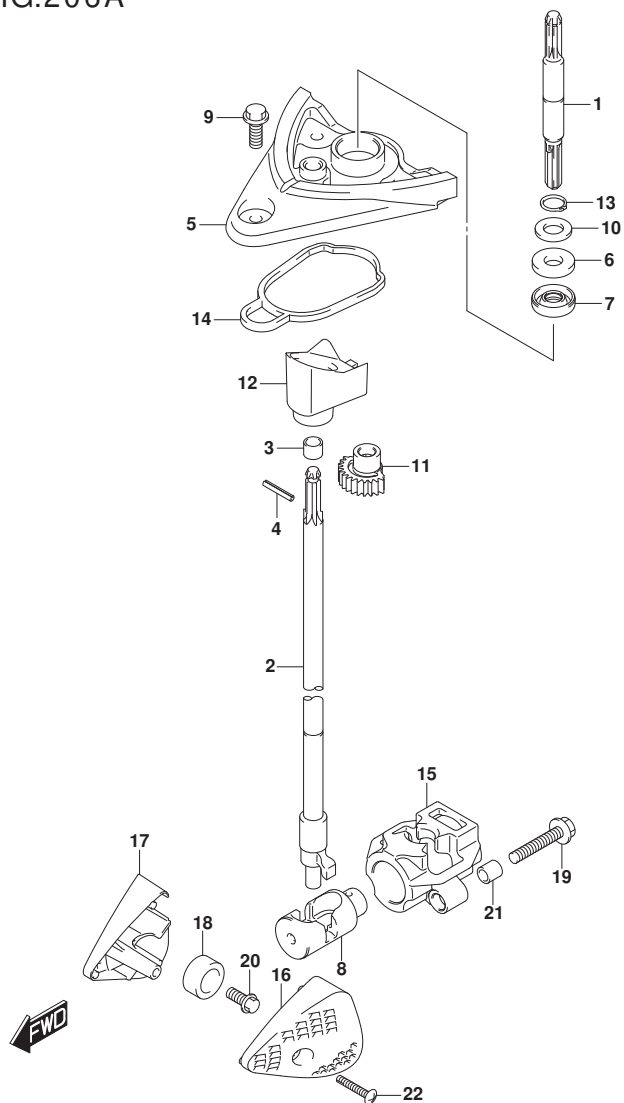


FIG. 206A (1-C-8) クラッチロッド* (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1-1	25112-93L00	ロッド*, シフト* ライブ* (L, X)	1	X-TRANSOM, DF300A: L-TRANSOM FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
1-2	25112-93L10	ロッド*, シフト* ライブ* (XX)	1	XX-TRANSOM FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
2	25130-93L00	ヨーク, シフト	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
3	25232-90J00	マグ* ネット, ギ* ヤス	2	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.206A


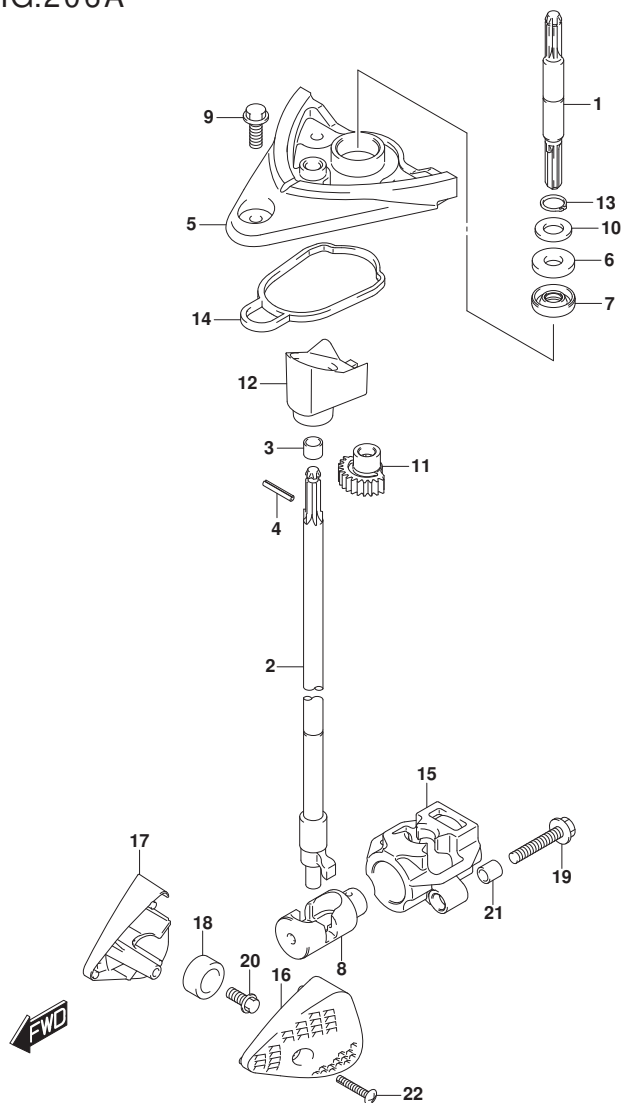


FIG. 206A (1-C-9) クラッチロッド* (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
4	09205-03004	ピン	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
5-1	25141-93L00-0EP	ハウジング*, シフトロッド* ガイド* (ブラック)	1	BODY COLOR: 0EP, YK V FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
5-2	25141-93L00-Y5S	ハウジング*, シフトロッド* ガイド* (ホワイト)	1	BODY COLOR: Y5S FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
6	25222-90J00	カバー-, シフトガイド* ハウジング* オイルシール	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.206A

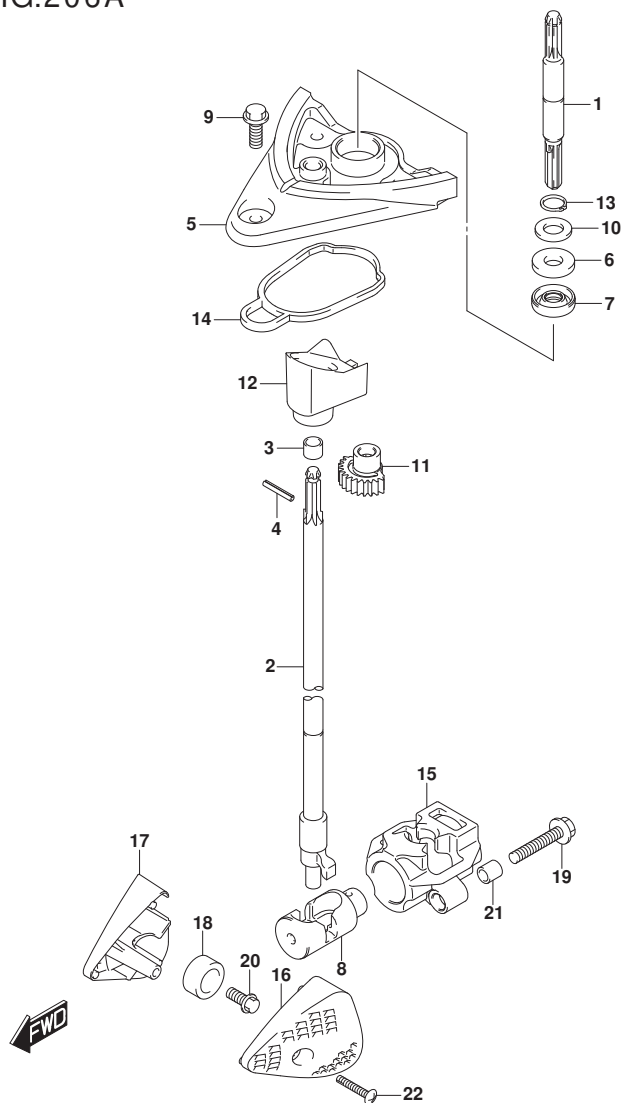

DF300A_000_016_206A
CLUTCHROD

FIG. 206A (1-C-10) クラッチロッド (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
7	09283-10011	オイルシール	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
8	25321-93L00	スライダ*, シフトホリゾンタル	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
9	29116-93J00	ホルト	3	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
10	09160-10082	ワッシャ (10. 5X19X2)	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
11	25113-93L00	ギヤ, シフトロッド*	2	FROM 25003P-61000 1 UPTO 25003P-61059	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.206A


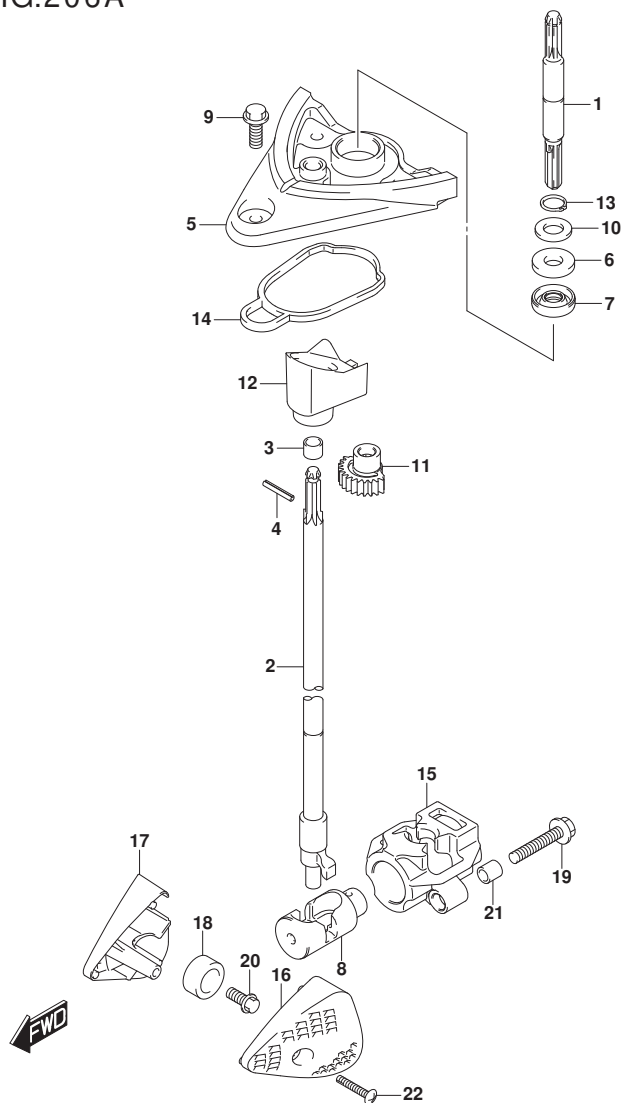


FIG. 206A (1-C-11) クラッチロッド (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
			1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
12	25215-93L00	ハウジング*, マグネ	1		
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
13	09383-07003	Eリング*, 7X14X1.2	3		
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
14	55122-93L00	シーリング*, シフトロッドガイドハウジング*	1		
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
15	56141-93L00	ハウジング*, シフトスライダ*	1		
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG. 206A (1-C-12) クラッチロツト* (SEE NOTE 1)

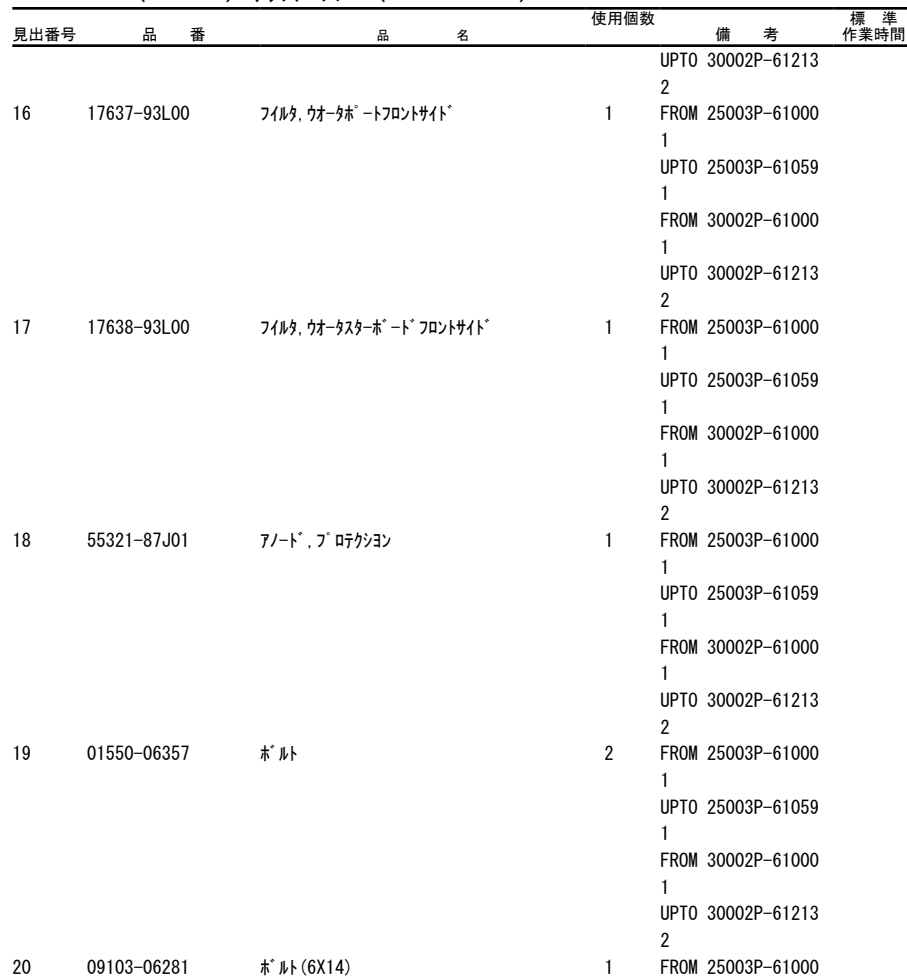

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.206A


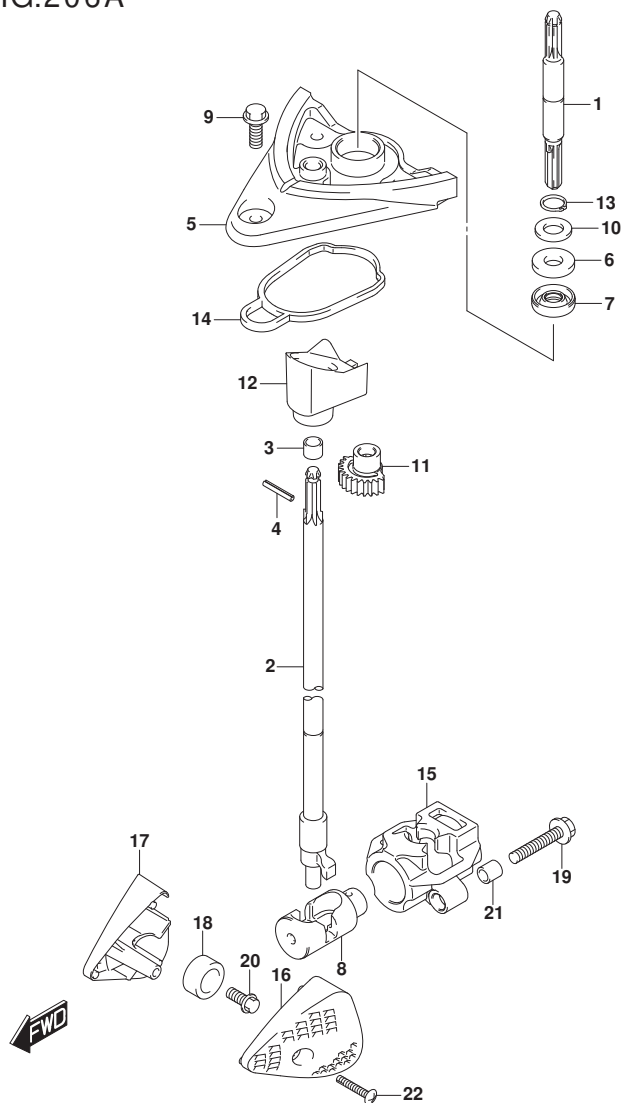


FIG. 206A (1-C-13) クラッチロッド (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
			1		
			1	UPTO 25003P-61059	
			1	FROM 30002P-61000	
			1	UPTO 30002P-61213	
			2		
21	09206-09012	ピン(7. 4X9X10)	2	FROM 25003P-61000	
			1	UPTO 25003P-61059	
			1	FROM 30002P-61000	
			1	UPTO 30002P-61213	
			2		
22	09132-04034	タッピング スクリュー	1	FROM 25003P-61000	
			1	UPTO 25003P-61059	
			1	FROM 30002P-61000	
			1	UPTO 30002P-61213	
			2		

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132
NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.206B

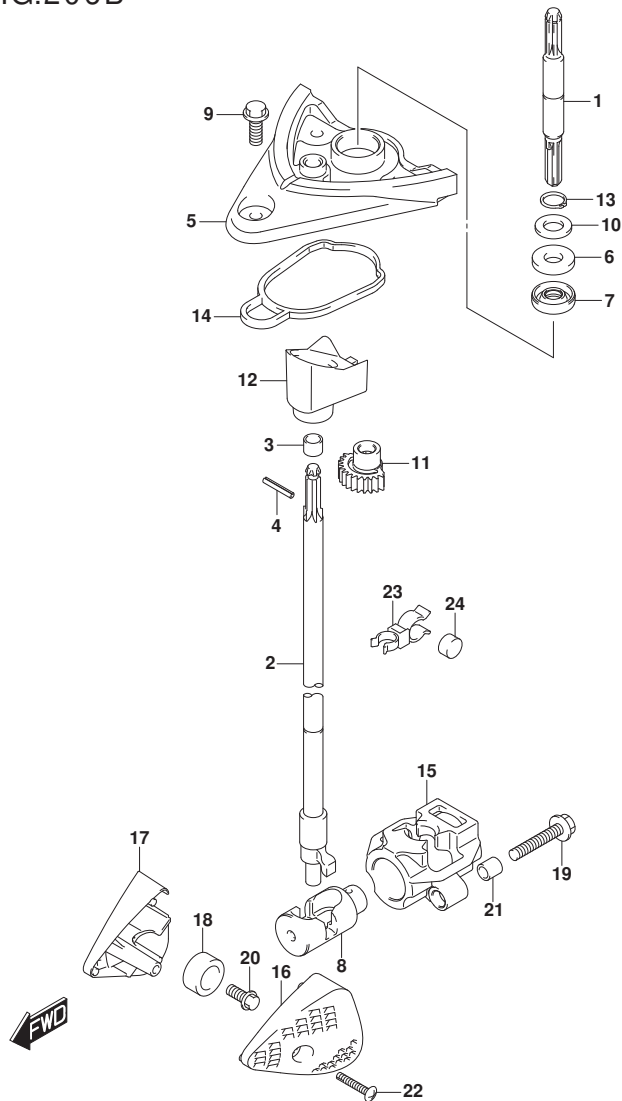

DF300A_000_016_206B
CLUTCHROD

FIG. 206B (1-C-14) クラッチロッド (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1-1	25112-93L00	ロッド, シフト ライフ (L, X)	1	X-TRANSOM, DF300A: L-TRANSOM FROM 25003P-61059 2 FROM 30002P-61213 3	
1-2	25112-93L10	ロッド, シフト ライフ (XX)	1	XX-TRANSOM FROM 25003P-61059 2 FROM 30002P-61213 3	
2	25130-93L00	ヨーク, シフト	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
3	25232-90J00	マグ ネット, キ ャーヌ	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
4	09205-03004	ピン	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
5-1	25141-93L00-0EP	ハウジング, シフトロッド ガイド (ブラック)	1	BODY COLOR:0EP, YK V FROM 25003P-61059 2 FROM 30002P-61213 3	
5-2	25141-93L00-Y5S	ハウジング, シフトロッド ガイド (ホワイト)	1	BODY COLOR:Y5S FROM 25003P-61059 2 FROM 30002P-61213 3	
6	25222-90J00	カバー, シフトガイド ハウジング オイルシール	1	FROM 25003P-61059	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.206B

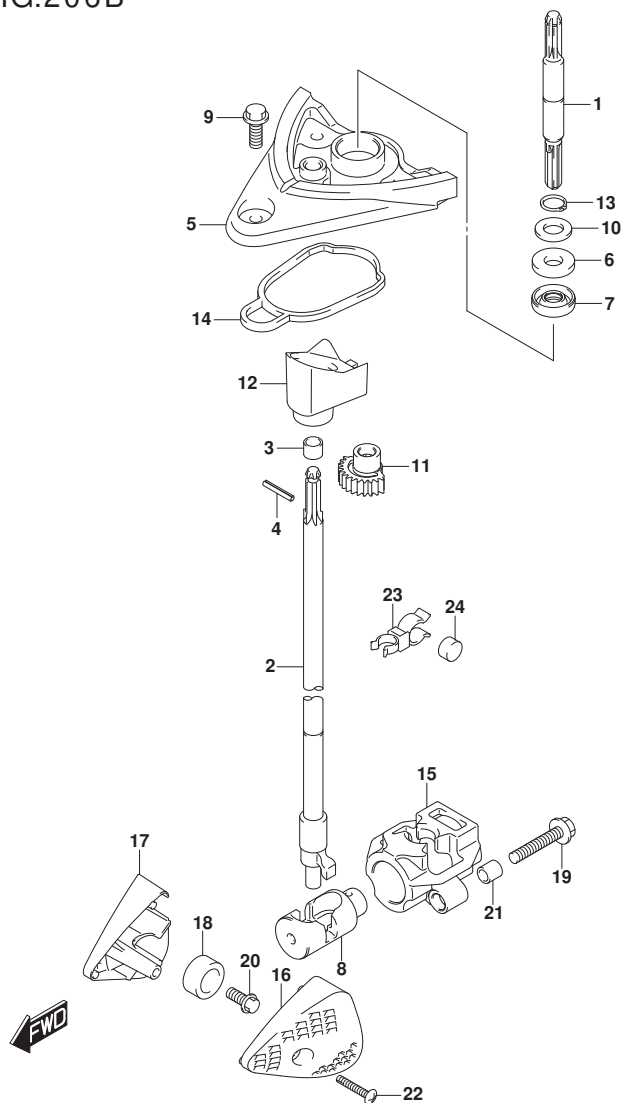


FIG. 206B (1-C-15) クラッチロッド (SEE NOTE 1)

見出番号	品番	品名	使用個数	備考	標準作業時間
			2	FROM 30002P-61213	
			3	FROM 25003P-61059	
7	09283-10011	オイルシール	1	FROM 30002P-61213	
			2	FROM 25003P-61059	
8	25321-93L00	スライダ*, シフトホリゾンタル	1	FROM 30002P-61213	
			2	FROM 25003P-61059	
			3	FROM 30002P-61213	
9	29116-93J00	ホルト	3	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3	FROM 25003P-61059	
10	09160-10082	ワッシャ(10. 5X19X2)	1	FROM 30002P-61213	
			2	FROM 25003P-61059	
			3	FROM 25003P-61059	
11	25113-93L00	ギヤ, シフトロッド*	2	FROM 30002P-61213	
			2	FROM 25003P-61059	
			3	FROM 25003P-61059	
12	25215-93L00	ハウジング*, マグネット	1	FROM 30002P-61213	
			2	FROM 25003P-61059	
			3	FROM 25003P-61059	
13	09383-07003	Eリング*, 7X14X1. 2	3	FROM 30002P-61213	
			2	FROM 25003P-61059	
			3	FROM 25003P-61059	
14	55122-93L00	シーリング*, シフトロッド* ガイド* ハウジング*	1	FROM 30002P-61213	
			2	FROM 25003P-61059	
			3	FROM 25003P-61059	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.206B

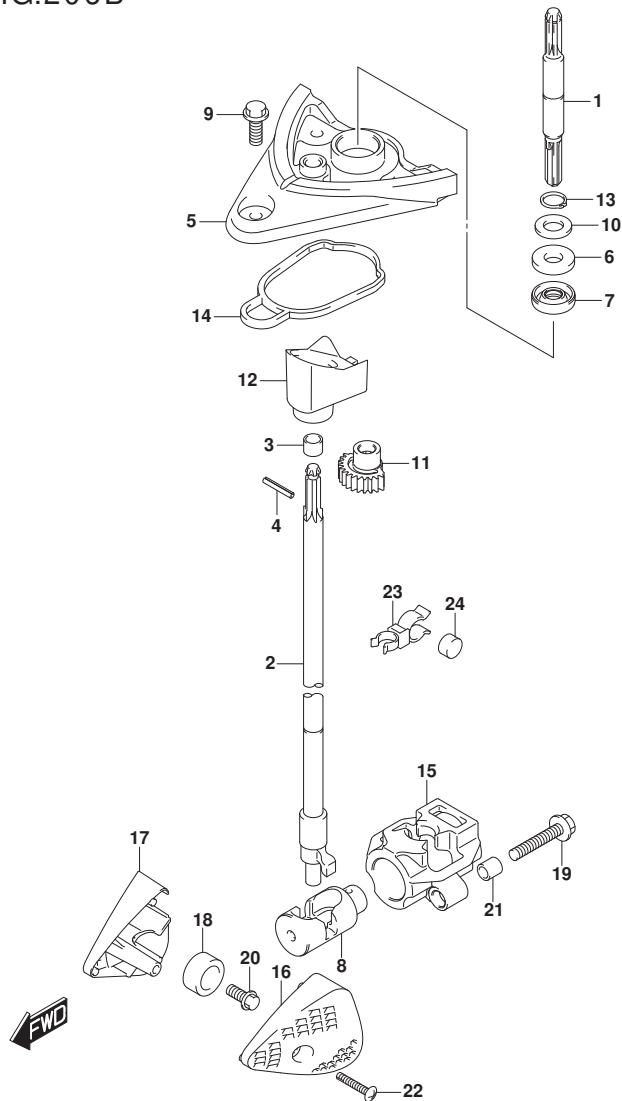


FIG. 206B (1-C-16) クラッチロッド* (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
15	56141-93L00	ハウジング*, シフトスライダ*	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
16	17637-93L00	フィルタ, ウォータホールド* フロントサイト*	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
17	17638-93L00	フィルタ, ウォータスターホールド* フロントサイト*	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
18	55321-87J01	アノード*, プロテクション	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
19	01550-06357	ホルト	2	FROM 25003P-61059 2 FROM 30002P-61213 3	
20	09103-06281	ホルト (6X14)	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
21	09206-09012	ピン (7. 4X9X10)	2	FROM 25003P-61059 2 FROM 30002P-61213 3	
22	09132-04034	タツピング スクリュー	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
23	25231-93L00	ホルダ*, マグネット	2	FROM 25003P-61059 2 FROM 30002P-61213	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.206B

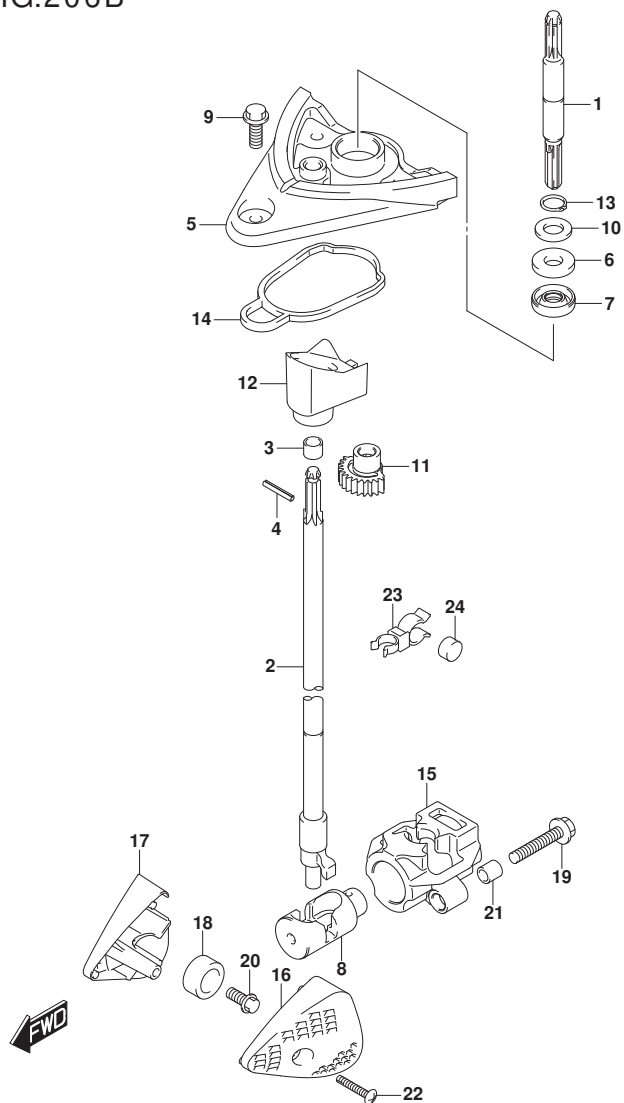


FIG. 206B (1-D-2) クラッチロッド* (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
24	25232-94300	マグネシウム、ギヤケース	2	FROM 25003P-61059	3
			2	FROM 30002P-61213	2
			3		3

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The central shaft (1) is the core component, with various parts numbered 1 through 47. The assembly includes a front housing (2) with a gear (9) and a seal (8). A series of gears (10, 11, 13, 14, 15, 18, 19, 21) are shown, along with bearings (3, 4, 5, 7, 12, 16, 20, 23, 26, 29, 30, 31, 33, 34, 35, 36, 37, 38, 39, 40, 42, 43, 44, 45, 46, 47). A 'FWD' arrow is located at the bottom left, indicating the front direction of the assembly.

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	57110-93L12	シャフト, トﾞ ライフ (X)	1	X-TRANSOM FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
1-2	57110-93L22	シャフト, トﾞ ライフ (XX)	1	XX-TRANSOM FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
2	57133-93L00	カラー, トﾞ ライフ シャフト	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
3	57134-93J00	スベ-サ, トﾞ ライフ シャフトベ- アリンク-	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
4	09159-28003	ナット	1	FROM 25003P-61000	

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

DF300A_000_016_220A
TRANSMISSION



DF300A_000_016

DF300A_000_016

FIG.220A

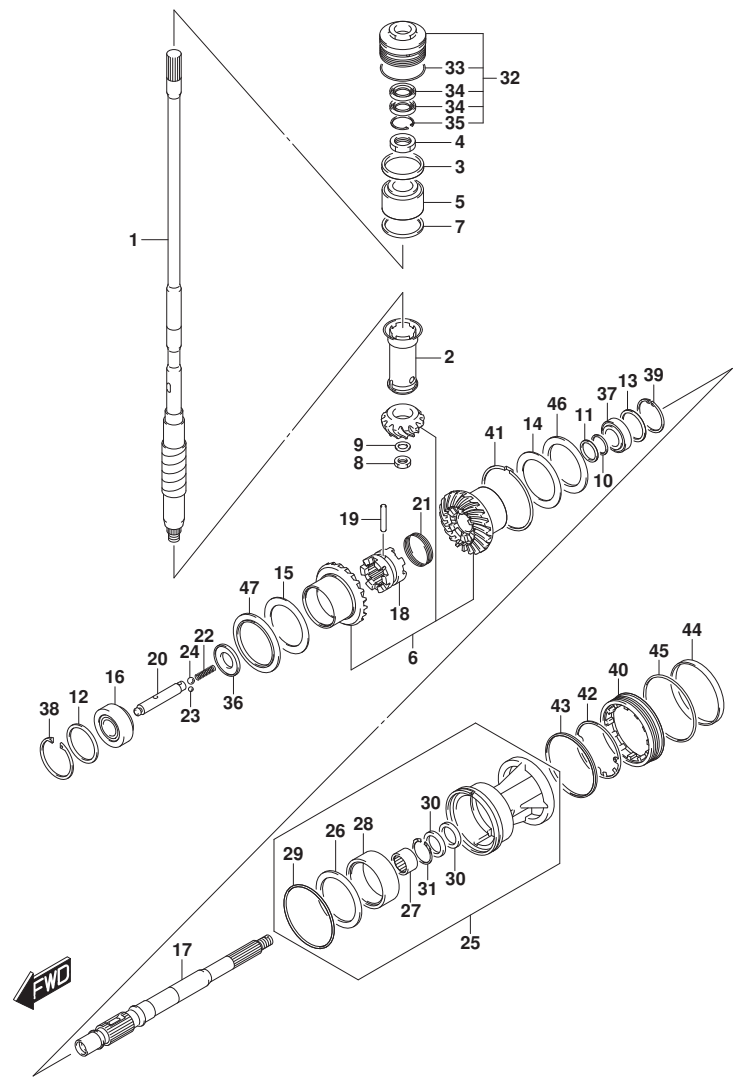


FIG. 220A (1-D-5) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
7-3	09181-60006	シム(60X66X0.55)	1	FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
				FROM 25003P-61000	
7-4	09181-60007	シム(60X66X0.6)	1	1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
7-5	09181-60008	シム(60X66X0.65)	1	UPTO 30002P-61213	
				2	
				FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
7-6	09181-60009	シム(60X66X0.7)	1	1	
				FROM 30002P-61000	
				1	
				UPTO 25003P-61059	
				1	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132


Exploded view diagram of a mechanical assembly. The diagram shows a central shaft (1) with various components. A 'FWD' arrow points to the left, indicating the front of the assembly. The components are numbered as follows:

- 1: Main shaft
- 2: Cap or cover
- 3, 4, 5, 7: Gears or bearings
- 6: Gear or bearing
- 8, 9: Small components
- 10, 11, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47: Various gears, bearings, and seals

見出番号	品番	品名	使用個数	備考	標準作業時間
7-7	09181-60010	ｼﾏ(60X66X0.75)	1	2 FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
7-8	09181-60011	ｼﾏ(60X66X0.8)	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
7-9	09181-60012	ｼﾏ(60X66X0.85)	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
7-10	09181-60013	ｼﾏ(60X66X0.9)	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
8	09140-16026	ﾅｯﾄ	1	FROM 25003P-61000 1	

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG. 220A (1-D-7) トランスミッション (SEE NOTE 1)

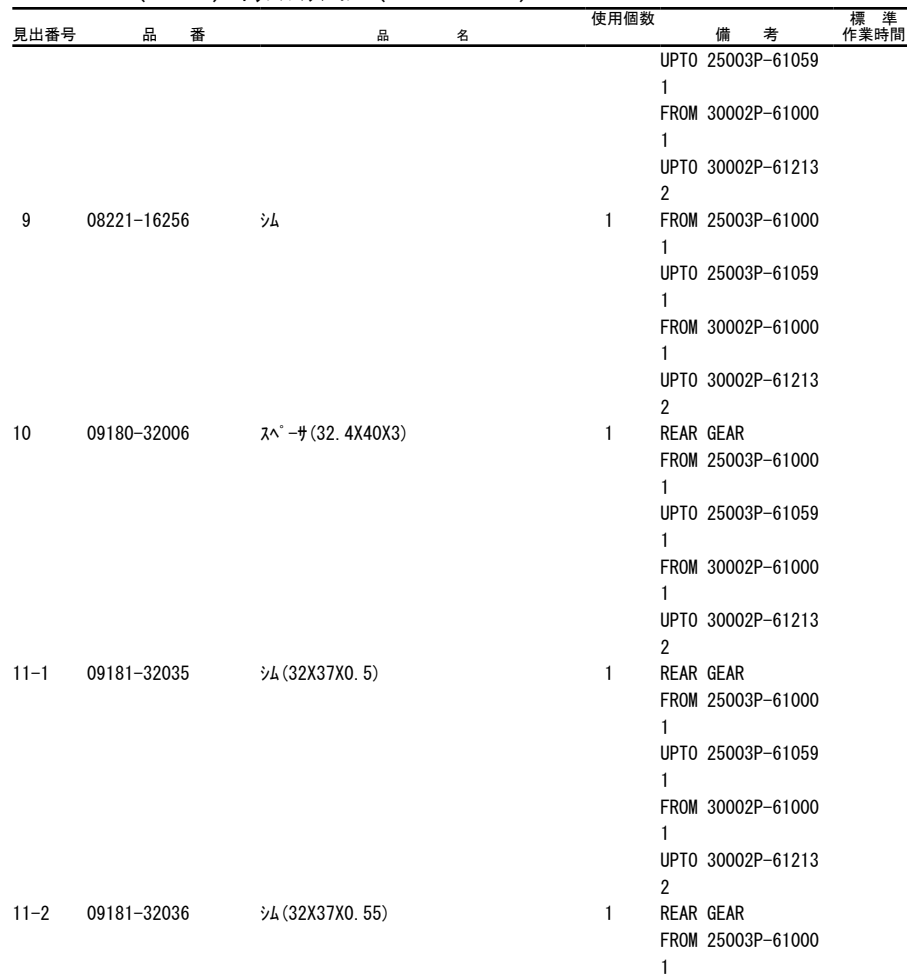

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

Exploded view diagram of a mechanical assembly. The diagram shows a central shaft (1) with various components. A 'FWD' arrow is at the bottom left. The components are numbered as follows:

- 1: Main shaft
- 2: Housing component
- 3, 4, 5, 7: Gears/bushings
- 6: Gear assembly
- 8, 9: Small components
- 10, 11, 13, 14, 41, 46: Gears/bushings
- 12, 16, 38: Gears/bushings
- 15, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 39, 40, 42, 43, 44, 45, 47: Various gears, bearings, and seals

見出番号	品番	品名	使用個数	備考	標準作業時間
11-3	09181-32037	油 (32X37X0. 6)	1	UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2 REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
11-4	09181-32038	油 (32X37X0. 65)	1	REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
11-5	09181-32039	油 (32X37X0. 7)	1	REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
11-6	09181-32040	油 (32X37X0. 75)	1	REAR GEAR FROM 25003P-61000	

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The central shaft (1) is the core component, with various parts numbered 1 through 47. The assembly includes a front housing (2) with a gear (9) and a seal (8). A series of gears (10, 11, 13, 14, 15, 18, 19, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in various positions, some meshing with others. Bearings (3, 4, 5, 6, 7, 12, 16, 17, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in various positions. Seals (10, 11, 13, 14, 15, 18, 19, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in various positions. The diagram is divided into three main sections by diagonal lines, showing different views of the assembly. A 'FWD' arrow is located at the bottom left, indicating the front direction.

DF300A_000_016_220A
TRANSMISSION

見出番号	品番	品名	使用個数	備考	標準作業時間
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
11-7	09181-32041	ｼﾒ(32X37X0. 8)	1	REAR GEAR	
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
11-8	09181-32042	ｼﾒ(32X37X0. 85)	1	REAR GEAR	
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
11-9	09181-32043	ｼﾒ(32X37X0. 9)	1	REAR GEAR	
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
11-10	09181-32044	ｼﾒ(32X37X0. 95)	1	REAR GEAR	

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

DF300A_000_016

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The central shaft (1) is the primary component, with various parts numbered 1 through 47. The assembly includes a front housing (2) with a gear (9) and a seal (8). A series of gears (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence, with some gears having internal teeth. A series of seals or O-rings (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of bearings or bushings (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of screws or bolts (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of washers or spacers (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of nuts or locknuts (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of pins or clips (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of springs (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of gaskets or seals (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of O-rings (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of bushings (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of sleeves (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of collars (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of flanges (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of covers (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of end caps (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of mounting brackets (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of fasteners (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of spacers (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of washers (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of nuts (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of pins (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of clips (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of springs (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in a sequence. A series of gaskets (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21,

見出番号	品番	品名	使用個数	備考	標準作業時間
				FROM 25003P-61000 1	
				UPTO 25003P-61059 1	
				FROM 30002P-61000 1	
				UPTO 30002P-61213 2	
12	09160-60012	ワッシャ (60X72X3)	1	FRONT GEAR FROM 25003P-61000 1	
				UPTO 25003P-61059 1	
				FROM 30002P-61000 1	
				UPTO 30002P-61213 2	
13	09160-50006	ワッシャ (50X58X3)	1	REAR GEAR FROM 25003P-61000 1	
				UPTO 25003P-61059 1	
				FROM 30002P-61000 1	
				UPTO 30002P-61213 2	
14-1	09181-78001	シム (78. 5X105X0. 5)	1	REAR GEAR FROM 25003P-61000 1	
				UPTO 25003P-61059 1	
				FROM 30002P-61000 1	
				UPTO 30002P-61213 2	

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The central shaft (1) is the primary component, with various parts numbered 1 through 47. The assembly includes a gear (2), a seal (3), a bearing (4), a shaft (5), a nut (6), a gear (7), a seal (8), a bearing (9), a shaft (10), a gear (11), a seal (12), a bearing (13), a shaft (14), a gear (15), a seal (16), a bearing (17), a shaft (18), a gear (19), a seal (20), a bearing (21), a shaft (22), a gear (23), a seal (24), a bearing (25), a shaft (26), a gear (27), a seal (28), a bearing (29), a shaft (30), a gear (31), a seal (32), a bearing (33), a shaft (34), a gear (35), a seal (36), a bearing (37), a shaft (38), a gear (39), a seal (40), a bearing (41), a shaft (42), a gear (43), a seal (44), and a bearing (45). The diagram shows the assembly sequence from the shaft (1) to the final gear (47). A 'FWD' arrow is located at the bottom left, indicating the forward direction of the assembly.

見出番号	品番	品名	使用個数	備考	標準作業時間
14-2	09181-78002	ｼﾒ (78. 5X105X0. 55)	1	REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
14-3	09181-78003	ｼﾒ (78. 5X105X0. 6)	1	REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
14-4	09181-78004	ｼﾒ (78. 5X105X0. 65)	1	REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
14-5	09181-78005	ｼﾒ (78. 5X105X0. 7)	1	REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213	

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.220A

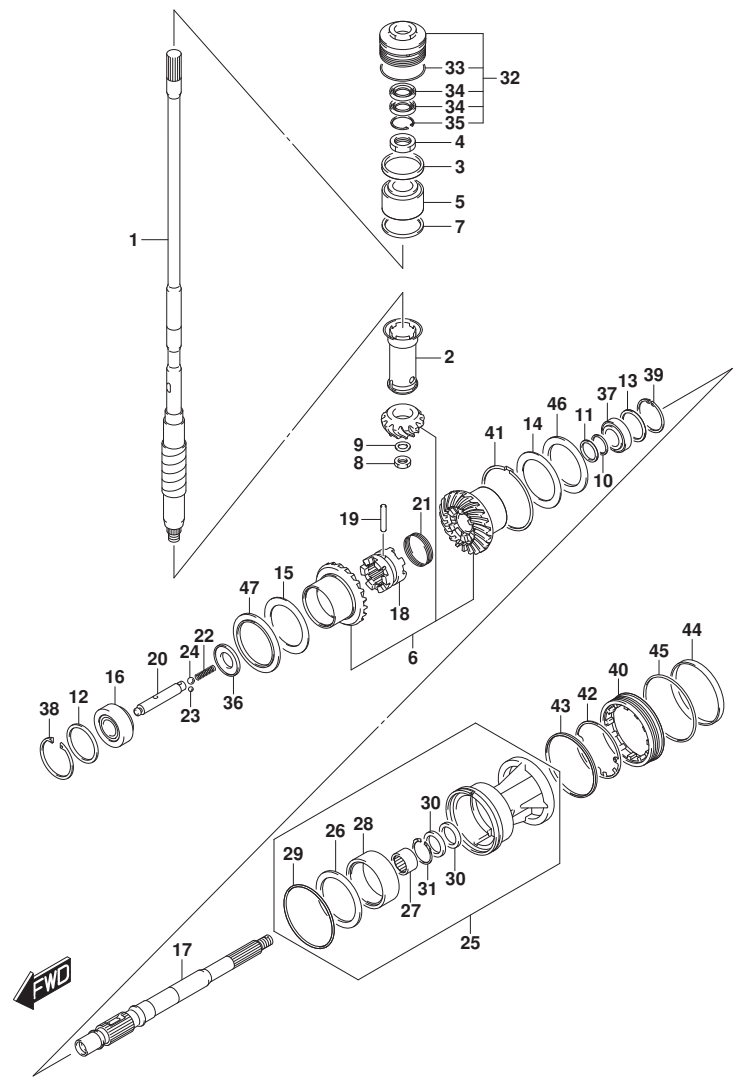


FIG. 220A (1-D-12) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
14-6	09181-78006	シム(78.5X105X0.75)	1	REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
14-7	09181-78007	シム(78.5X105X0.8)	1	REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
14-8	09181-78008	シム(78.5X105X0.85)	1	REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
14-9	09181-78009	シム(78.5X105X0.9)	1	REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or actuator. The components are numbered 1 through 47. The assembly process is shown in a sequence from the handle (1) and trigger (17) through various internal mechanisms, including gears (15, 18, 19, 21, 25, 26, 28, 30, 31, 33, 34, 35, 36, 37, 39, 40, 42, 43, 44, 45), springs (10, 11, 12, 13, 14, 38, 41, 46), and seals (2, 3, 4, 5, 6, 7, 8, 9, 20, 22, 23, 24, 27, 29, 32, 47). The 'FWD' arrow indicates the forward direction of assembly.

見出番号	品番	品名	使用個数	備考	標準作業時間
14-10	09181-78010	ｼﾒ(78. 5X105X0. 95)	1	UPTO 30002P-61213 2 REAR GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
15-1	09181-84001	ｼﾒ(78. 5X105X0. 95)	1	FRONT GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
15-2	09181-84002	ｼﾒ(83. 5X110X0. 55)	1	FRONT GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
15-3	09181-84003	ｼﾒ(83. 5X110X0. 6)	1	FRONT GEAR FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000	

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The central shaft (1) is the core component, with various parts numbered 1 through 47. The assembly includes a front housing (2) with a gear (9) and a seal (8). A series of gears (10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in an exploded view, along with various seals and bearings (4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47). A 'FWD' arrow is located at the bottom left, indicating the forward direction of assembly.

見出番号	品番	品名	使用個数	備考	標準作業時間
				1	
				UPTO 30002P-61213	
				2	
15-4	09181-84004	ｼﾏ(83. 5X110X0. 65)	1	FRONT GEAR	
				FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
15-5	09181-84005	ｼﾏ(83. 5X110X0. 7)	1	FRONT GEAR	
				FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
15-6	09181-84006	ｼﾏ(83. 5X110X0. 75)	1	FRONT GEAR	
				FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
15-7	09181-84007	ｼﾏ(83. 5X110X0. 8)	1	FRONT GEAR	
				FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The central shaft (1) is the core component, with various parts numbered 1 through 47. The assembly includes a front housing (2) with a gear (9) and a seal (8). A series of gears (10, 11, 13, 14, 15, 18, 19, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in various positions, some meshing with others. Bearings (3, 4, 5, 6, 7, 12, 16, 17, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in various positions. Seals (10, 11, 13, 14, 15, 18, 19, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) are shown in various positions. The diagram is divided into three main sections by diagonal lines, showing different views of the assembly. A 'FWD' arrow is located at the bottom left, indicating the front direction.

見出番号	品番	品名	使用個数	備考	標準作業時間
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
15-8	09181-84008	シム(83. 5X110X0. 85)	1	FRONT GEAR	
				FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
15-9	09181-84009	シム(83. 5X110X0. 9)	1	FRONT GEAR	
				FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
15-10	09181-84010	シム(83. 5X110X0. 95)	1	FRONT GEAR	
				FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
16	09265-30033	ベアリング (30X72X28. 75)	1	FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.220A

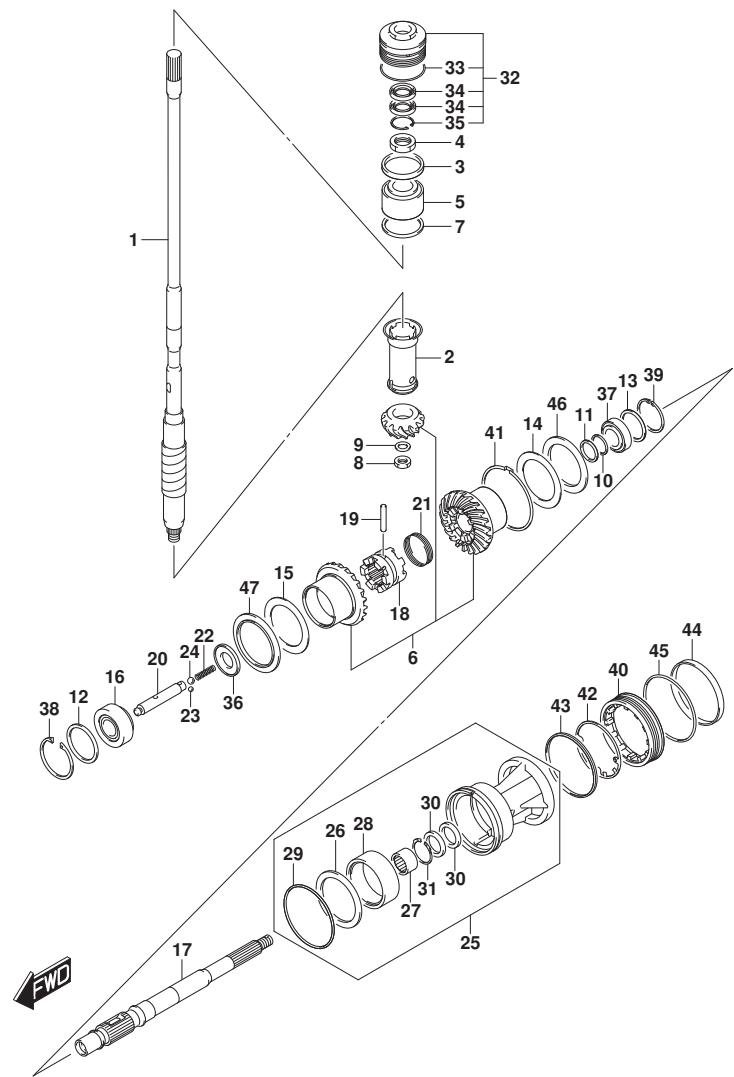


FIG. 220A (1-D-16) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
17	57610-93L00	シャフト, フォワード	1	FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
18	57621-93L00	シフト, クラッチドック	1	FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
19	09202-08013	ピン (8X55)	1	FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
20	57631-93L01	ピン, コネク	1	FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.220A

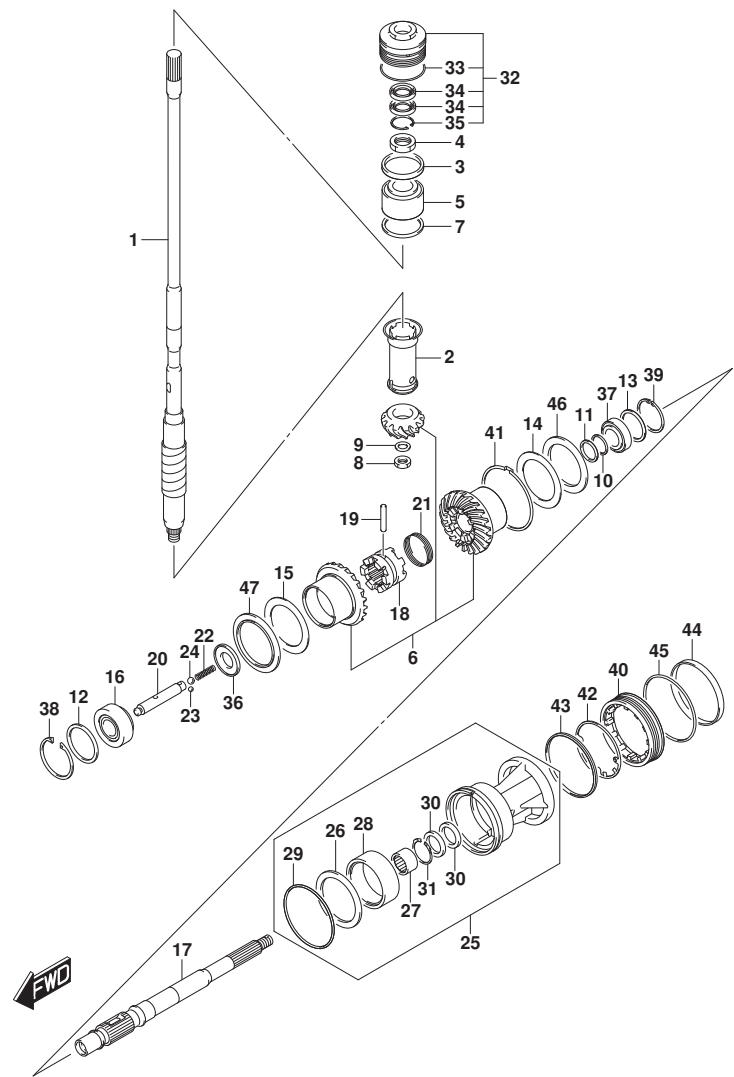


FIG. 220A (1-E-2) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
21	09440-58001	スプ リング	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
22	57617-93L00	スプ リング, デ Tent	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
23	06111-07004	ホ ール	2	DETENT NO. 1 FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
24	06111-11004	ホ ール	2	DETENT NO. 2 FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.220A


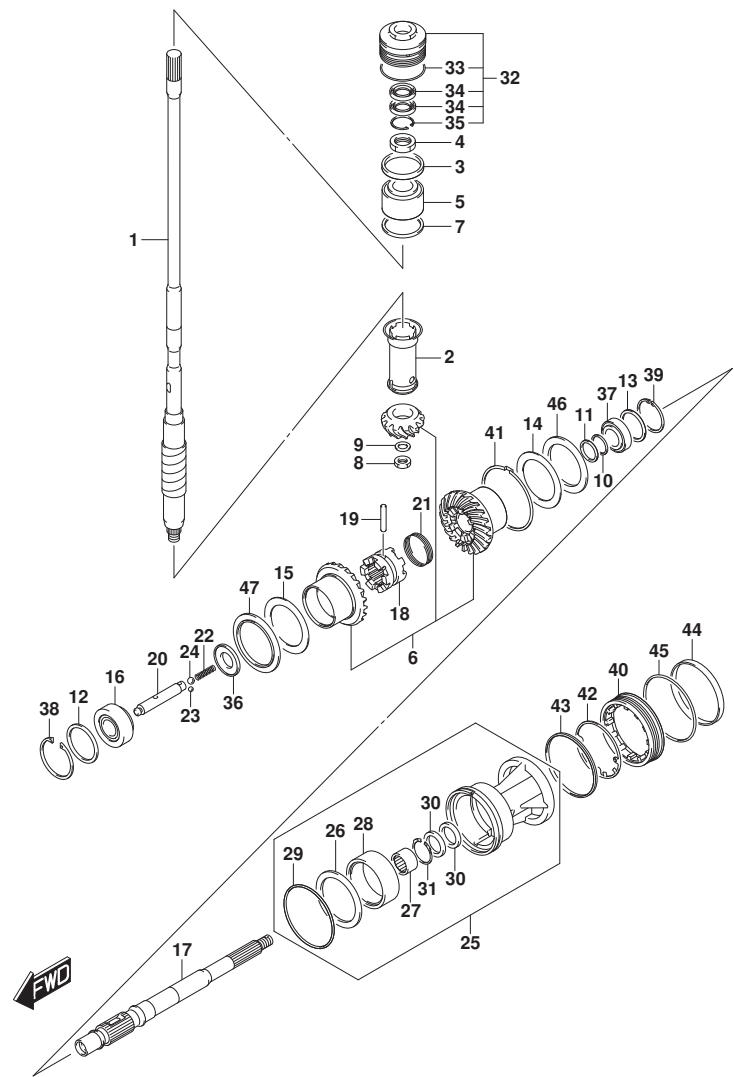


FIG. 220A (1-E-3) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
25	56120-93L11	ハウジング*, プ* ロベ* ランヤフトベ* アリシク*	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
26	56124-93L00	・ワツシヤ, リハ* スキ* ヤスラスト	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
27	09263-30063	・ベ* アリシク* (30X40X25)	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
28	09263-72001	・ベ* アリシク* (72X90X34)	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
29	09280-00047	・オリシク* (D:3	1	FROM 25003P-61000 1 UPTO 25003P-61059	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.220A

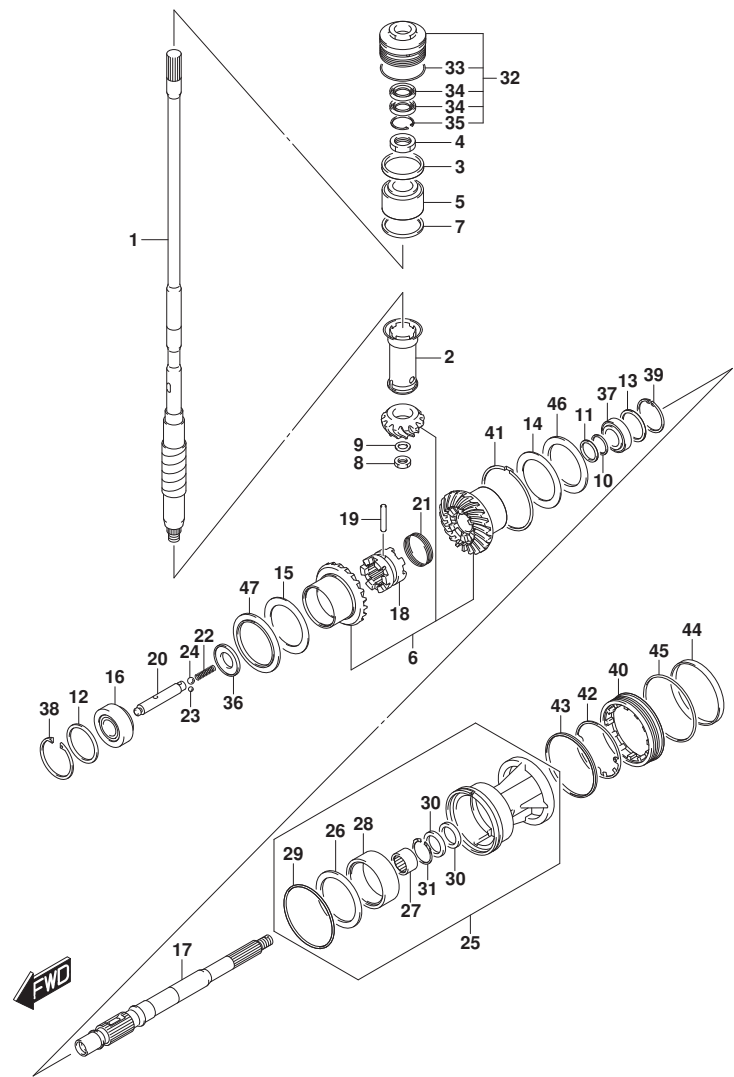

DF300A_000_016_220A
TRANSMISSION

FIG. 220A (1-E-4) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
30	09282-30006	・オイルシール	1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
31	09381-40003	・サークリップ*	1		
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
			FROM 25003P-61000		
32	56130-93J02	ハウジング*, ドライブシャフトへアリング*	1		
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		
			UPTO 30002P-61213		
			2		
			FROM 25003P-61000		
33	09280-66004	・Oリング* (D:3. 1, ID:65. 4)	1		
			FROM 25003P-61000		
			1		
			UPTO 25003P-61059		
			1		
			FROM 30002P-61000		
			1		
			FROM 30002P-61000		
			1		
			1		

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.220A

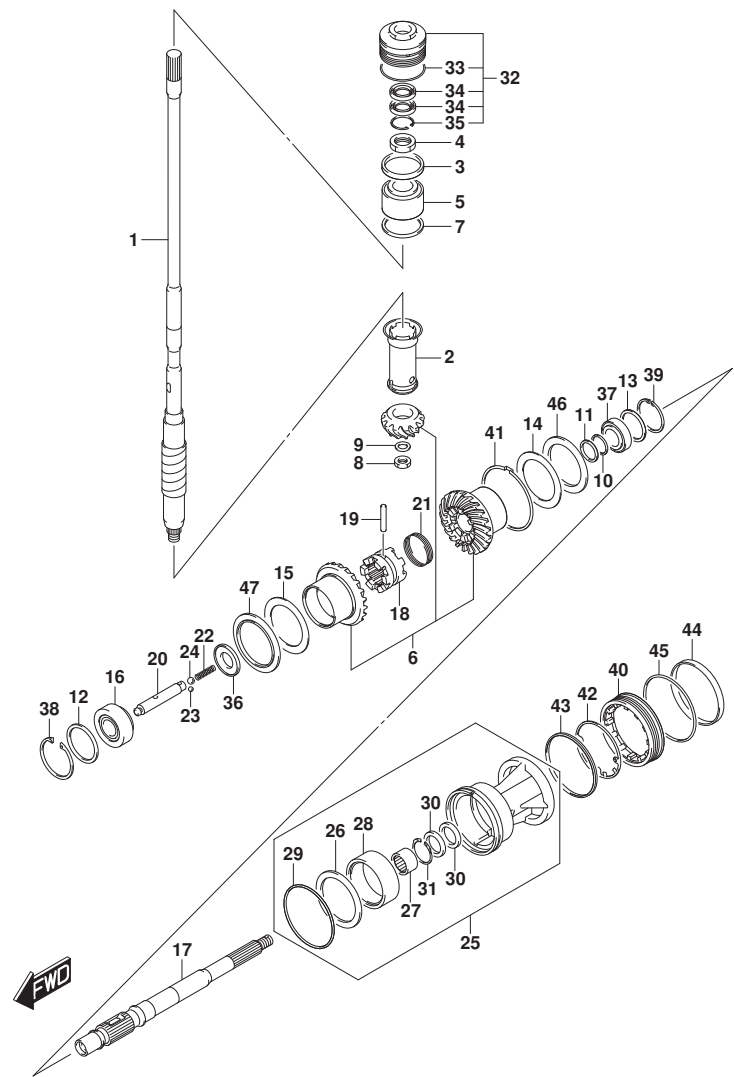


FIG. 220A (1-E-5) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
				UPTO 30002P-61213 2	
34	09282-24004	・オイルシール	2	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
35	09381-40003	・サーキットツブ	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
36	57622-93L00	スベ [°] -サ, スラスト	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
37	09265-32003	ベ [°] アリク [°] (32X58X17)	1	FROM 25003P-61000 1 UPTO 25003P-61059 1 FROM 30002P-61000 1 UPTO 30002P-61213 2	
38	09381-72001	スナツツ [°] リンク [°]	1	フロント	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132


Exploded view diagram of a mechanical assembly. The diagram shows a central shaft (1) with various components. A 'FWD' arrow points to the left, indicating the direction of assembly or rotation. The components are numbered as follows:

- 1: Main shaft
- 2: Housing component
- 3, 4, 5, 7: Gears/bearings
- 6: Housing component
- 8, 9: Small components
- 10, 11, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47: Various gears, bearings, and seals

見出番号	品番	品名	使用個数	備考	標準作業時間
				FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
39	08331-4158A	サーキットブ	1	リヤ	
				FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
40	56122-93L00	ストツハ [°] , プ [°] ロヘ [°] ラシヤフトヘ [°] アリンク [°] ハウシ [°] ンク [°]	1	FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
41	56126-93L00	ワツシヤ, プ [°] ロヘ [°] ラシヤフトヘ [°] アリンク [°] ハウシ [°] ンク [°] 1	1	FROM 25003P-61000	
				1	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPTO 30002P-61213	
				2	
42	56127-93L00	ワツシヤ, プ [°] ロヘ [°] ラシヤフトヘ [°] アリンク [°] ハウシ [°] ンク [°] 2	1	FROM 25003P-61000	
				1	

FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.220A

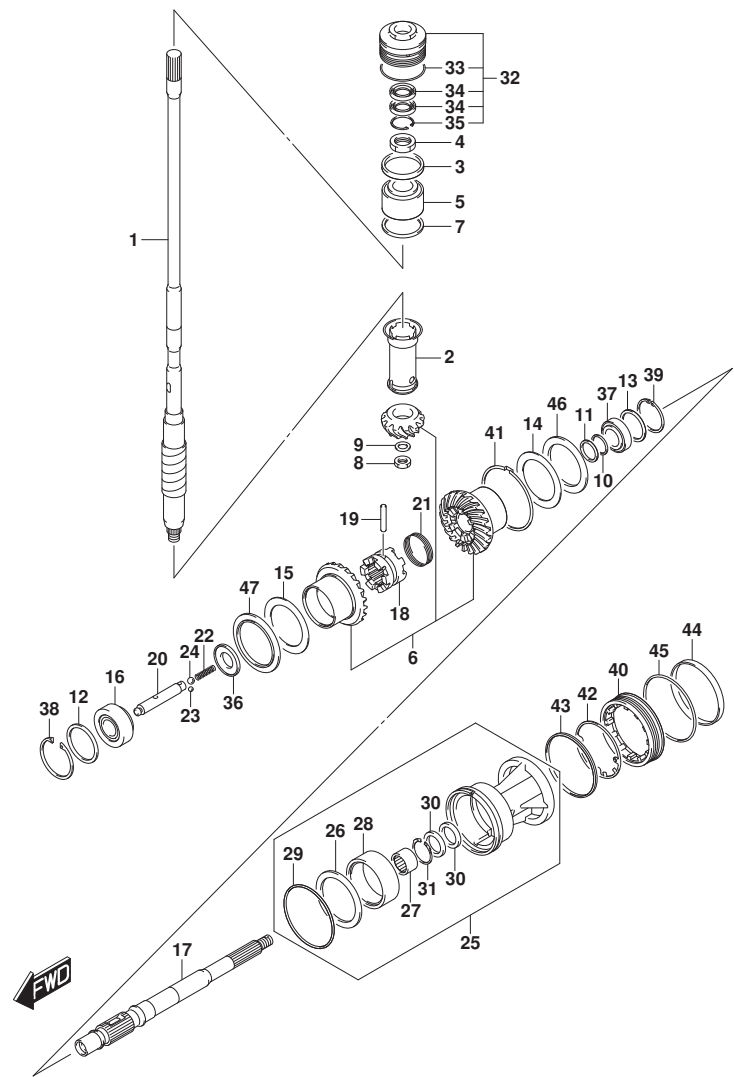

DF300A_000_016_220A
TRANSMISSION

FIG. 220A (1-E-7) トランスミッション (SEE NOTE 1)

見出番号	品番	品名	使用個数	備考	標準作業時間
				UPTO 25003P-61059	
			1		
				FROM 30002P-61000	
			1		
				UPTO 30002P-61213	
			2		
43	56128-93L00	シール, フロツフ シヤフトヘ アリシグ ハウシシグ	1		
			1		
				UPTO 25003P-61059	
			1		
				FROM 30002P-61000	
			1		
				UPTO 25003P-61059	
			1		
				FROM 30002P-61000	
			1		
				UPTO 30002P-61213	
			2		
44	56129-93L00	フツシユ, ストツハ	1		
			1		
				UPTO 25003P-61059	
			1		
				FROM 30002P-61000	
			1		
				UPTO 30002P-61213	
			2		
45	09280-00030	オリシグ (D:1.8	1		
			1		
				UPTO 25003P-61059	
			1		
				FROM 30002P-61000	
			1		
				UPTO 30002P-61213	
			2		
46	09263-78001	ヘ アリシグ (78.26X105X5.45)	1		
			1		
				FROM 25003P-61000	
			1		
				UPTO 25003P-61059	
			1		

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

This diagram is an exploded view of a mechanical assembly, likely a pump or motor component. The parts are numbered 1 through 47. The assembly is shown in a disassembled state, with components arranged along a central axis. Key components include a shaft (1), a gear (19), a bearing (18), a seal (21), and various other parts like 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 20, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47. A 'FWD' arrow is located at the bottom left, indicating the forward direction of assembly.

見出番号	品番	品名	使用個数	備考	標準作業時間
				FROM 30002P-61000	
				1	
				UPT0 30002P-61213	
				2	
47	09263-83001	へ`アリンク` (83.26X110X5.45)	1	フロント	
				FROM 25003P-61000	
				1	
				UPT0 25003P-61059	
				1	
				FROM 30002P-61000	
				1	
				UPT0 30002P-61213	
				2	

FROM 30002P-612133

FIG.220B


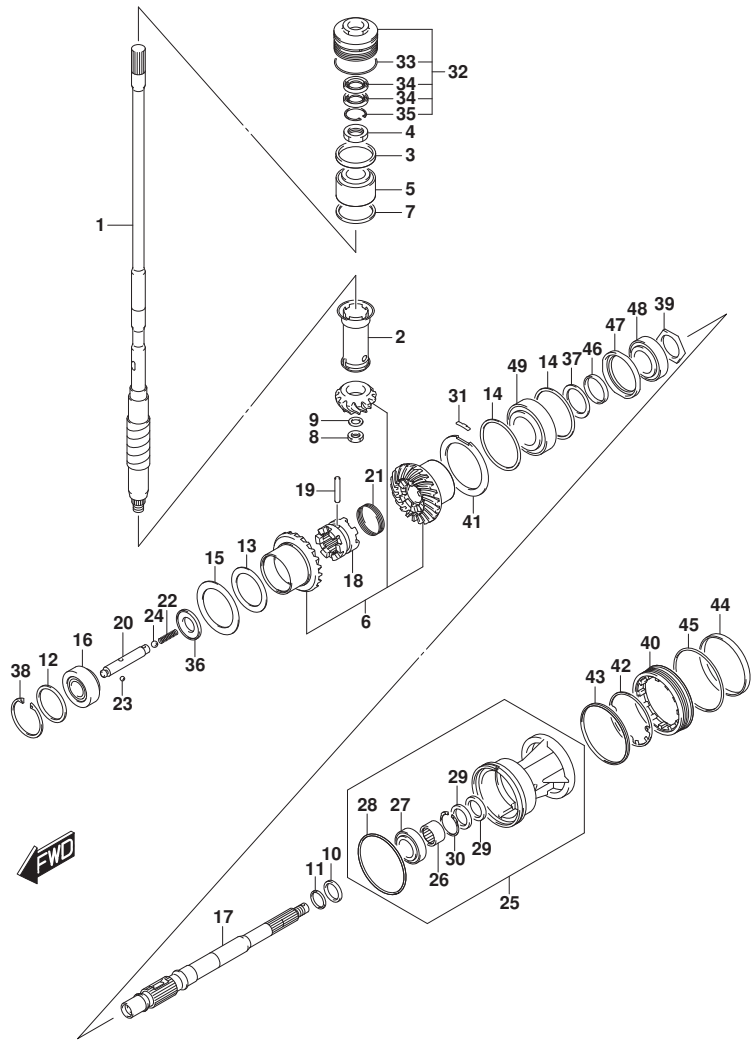


FIG. 220B (1-E-9) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1-1	57110-93L02	シャフト, ドライブ (L)	1	DF300A:L-TRANSOM FROM 25003P-61059 2 FROM 30002P-61213 3	
1-2	57110-93L12	シャフト, ドライブ (X)	1	X-TRANSOM FROM 25003P-61059 2 FROM 30002P-61213 3	
1-3	57110-93L22	シャフト, ドライブ (XX)	1	XX-TRANSOM FROM 25003P-61059 2 FROM 30002P-61213 3	
2	57133-93L00	カラー, ドライブ シャフト	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
3	57134-93J00	スベ-サ, ドライブ シャフトベ-リング	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
4	09159-28003	ナット	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
5	09269-32002	ベ-リング (32X66X49)	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
6	57300-93L20	セット, キ-ヤ	1	FROM 25003P-61059 2 FROM 30002P-61213 3	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133



NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

DF300A_000_016

FIG.220B


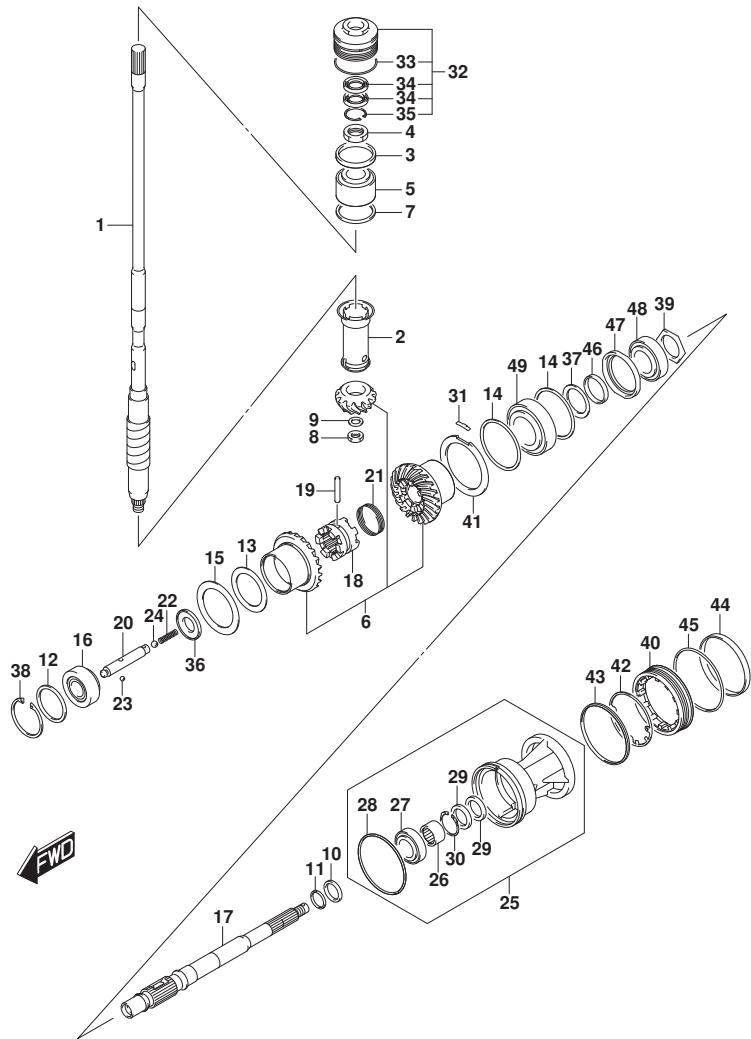


FIG. 220B (1-E-11) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
7-10	09181-60013	シム (60X66X0.9)	1	3 FROM 25003P-61059	
				2 FROM 30002P-61213	
				3 FROM 25003P-61059	
8	09140-16026	ナット	1	2 FROM 30002P-61213	
				3 FROM 25003P-61059	
9	08221-16256	シム	1	2 FROM 30002P-61213	
				3 FROM 25003P-61059	
10	09180-32006	スベ-サ (32.4X40X3)	1	REAR GEAR FROM 25003P-61059	
				2 FROM 30002P-61213	
				3 FROM 25003P-61059	
11-1	09181-32035	シム (32X37X0.5)	1	REAR GEAR FROM 25003P-61059	
				2 FROM 30002P-61213	
				3 FROM 25003P-61059	
11-2	09181-32036	シム (32X37X0.55)	1	REAR GEAR FROM 25003P-61059	
				2 FROM 30002P-61213	
				3 FROM 25003P-61059	
11-3	09181-32037	シム (32X37X0.6)	1	REAR GEAR FROM 25003P-61059	
				2 FROM 30002P-61213	
				3 FROM 25003P-61059	
11-4	09181-32038	シム (32X37X0.65)	1	REAR GEAR FROM 25003P-61059	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.220B

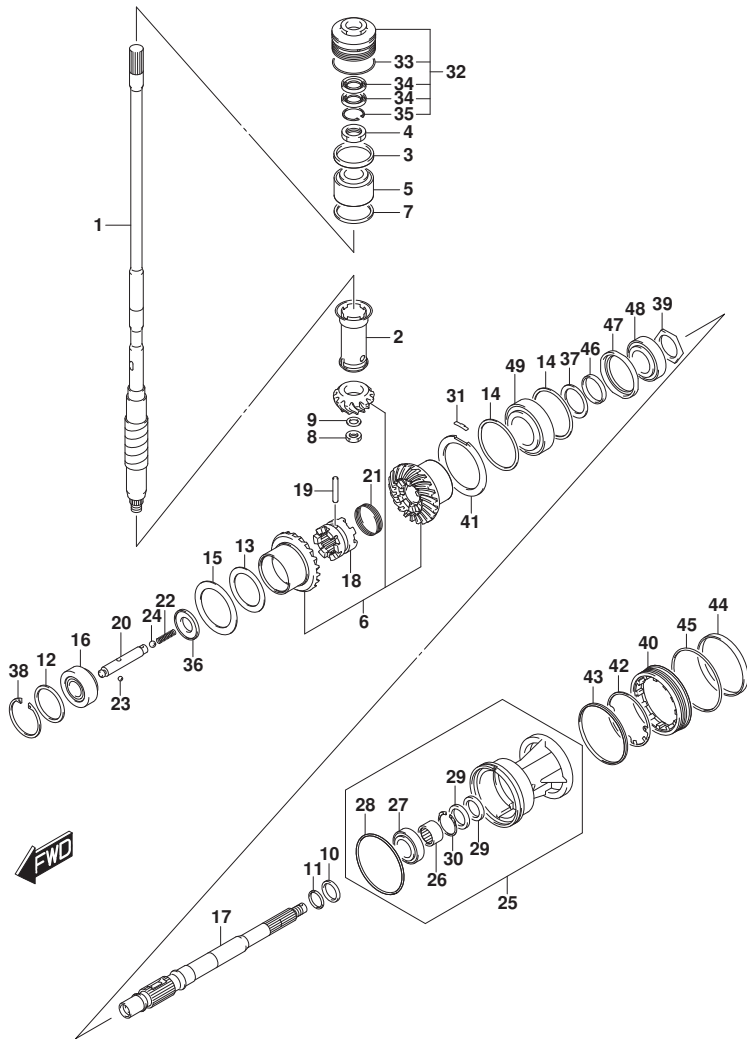

DF300A_000_016_220B
TRANSMISSION

FIG. 220B (1-E-12) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
			2	FROM 30002P-61213	
			3		
11-5	09181-32039	シム (32X37X0. 7)	1	REAR GEAR FROM 25003P-61059	
			2		
			FROM 30002P-61213		
			3		
11-6	09181-32040	シム (32X37X0. 75)	1	REAR GEAR FROM 25003P-61059	
			2		
			FROM 30002P-61213		
			3		
11-7	09181-32041	シム (32X37X0. 8)	1	REAR GEAR FROM 25003P-61059	
			2		
			FROM 30002P-61213		
			3		
11-8	09181-32042	シム (32X37X0. 85)	1	REAR GEAR FROM 25003P-61059	
			2		
			FROM 30002P-61213		
			3		
11-9	09181-32043	シム (32X37X0. 9)	1	REAR GEAR FROM 25003P-61059	
			2		
			FROM 30002P-61213		
			3		
11-10	09181-32044	シム (32X37X0. 95)	1	REAR GEAR FROM 25003P-61059	
			2		
			FROM 30002P-61213		
			3		
12	09160-60012	ワッシャ (60X72X3)	1	FRONT GEAR FROM 25003P-61059	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.220B

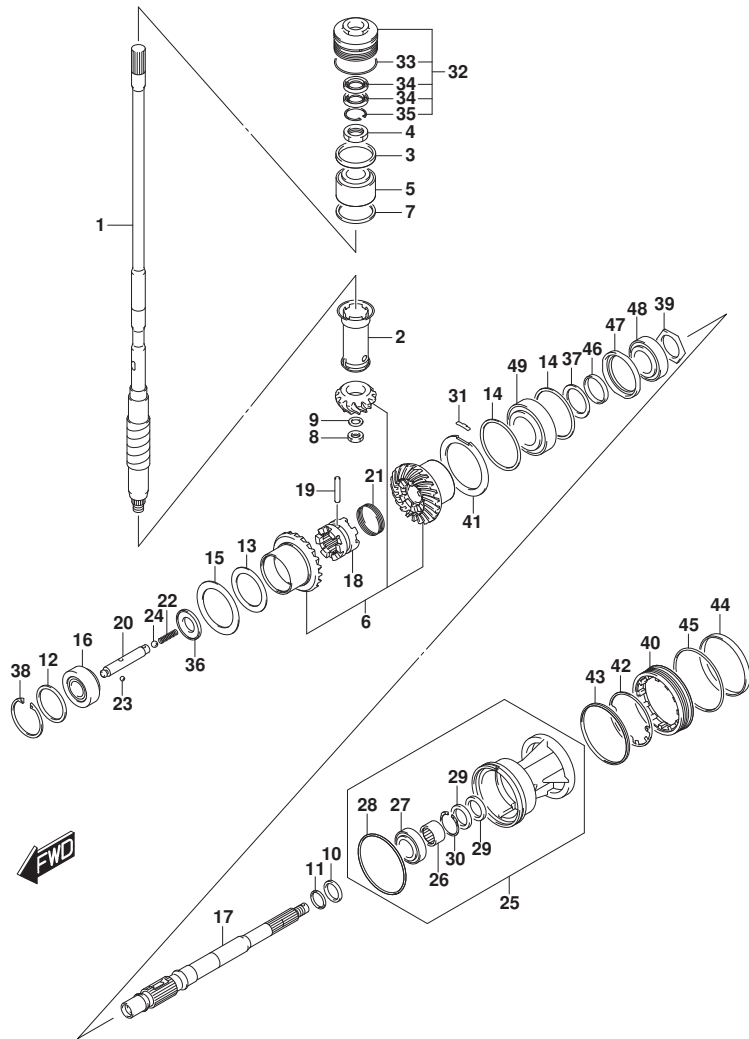


FIG. 220B (1-E-13) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
			2	FROM 30002P-61213	
			3	FRONT GEAR	
13	09263-80002	ベアリング (80X105X4)	1	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3	REAR GEAR	
14-1	09181-93101	シム (93. 5X100X0. 50)	2	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3	REAR GEAR	
14-2	09181-93102	シム (93. 5X100X0. 55)	2	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3	REAR GEAR	
14-3	09181-93103	シム (93. 5X100X0. 60)	2	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3	REAR GEAR	
14-4	09181-93104	シム (93. 5X100X0. 65)	2	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3	REAR GEAR	
14-5	09181-93105	シム (93. 5X100X0. 70)	2	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3	REAR GEAR	
14-6	09181-93106	シム (93. 5X100X0. 75)	2	FROM 25003P-61059	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.220B

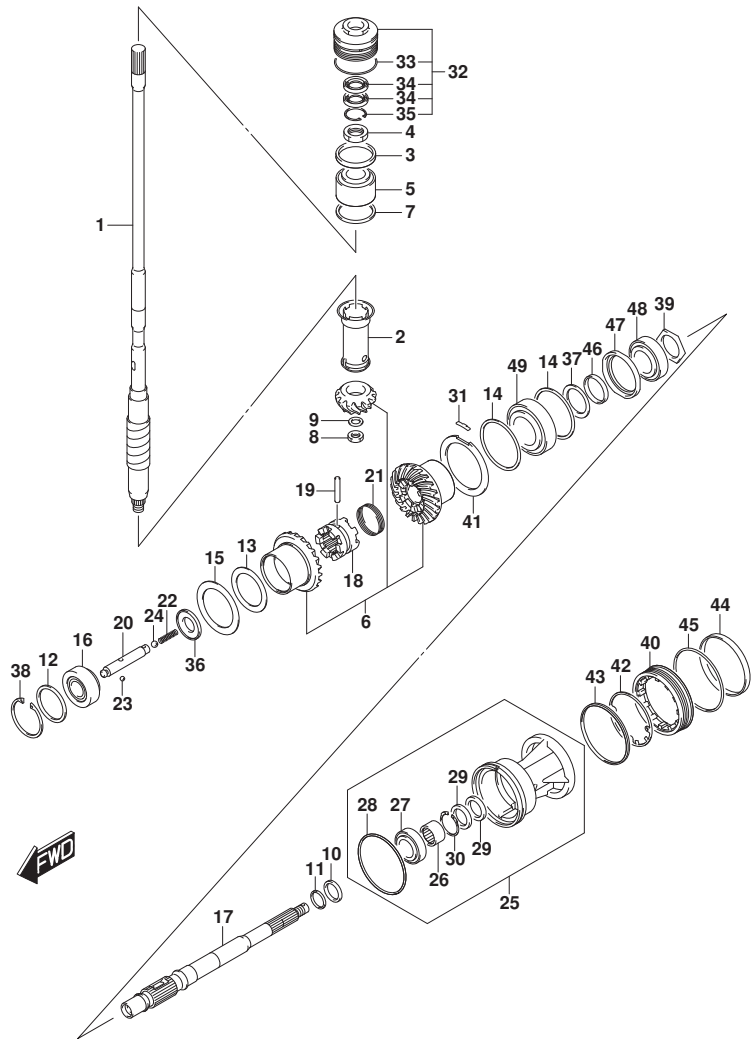


FIG. 220B (1-E-14) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
			2	FROM 30002P-61213	
			3	REAR GEAR	
14-7	09181-93107	シム(93.5X100X0.80)	2	FROM 25003P-61059	
			2	FROM 30002P-61213	
14-8	09181-93108	シム(93.5X100X0.85)	2	REAR GEAR	
			2	FROM 25003P-61059	
			2	FROM 30002P-61213	
14-9	09181-93109	シム(93.5X100X0.90)	2	REAR GEAR	
			2	FROM 25003P-61059	
			2	FROM 30002P-61213	
14-10	09181-93110	シム(93.5X100X0.95)	2	REAR GEAR	
			2	FROM 25003P-61059	
			2	FROM 30002P-61213	
14-11	09181-93111	シム(93.5X100X1.00)	2	REAR GEAR	
			2	FROM 25003P-61059	
			2	FROM 30002P-61213	
14-12	09181-93112	シム(93.5X100X1.05)	2	REAR GEAR	
			2	FROM 25003P-61059	
			2	FROM 30002P-61213	
14-13	09181-93113	シム(93.5X100X1.10)	2	REAR GEAR	
			2	FROM 25003P-61059	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.220B

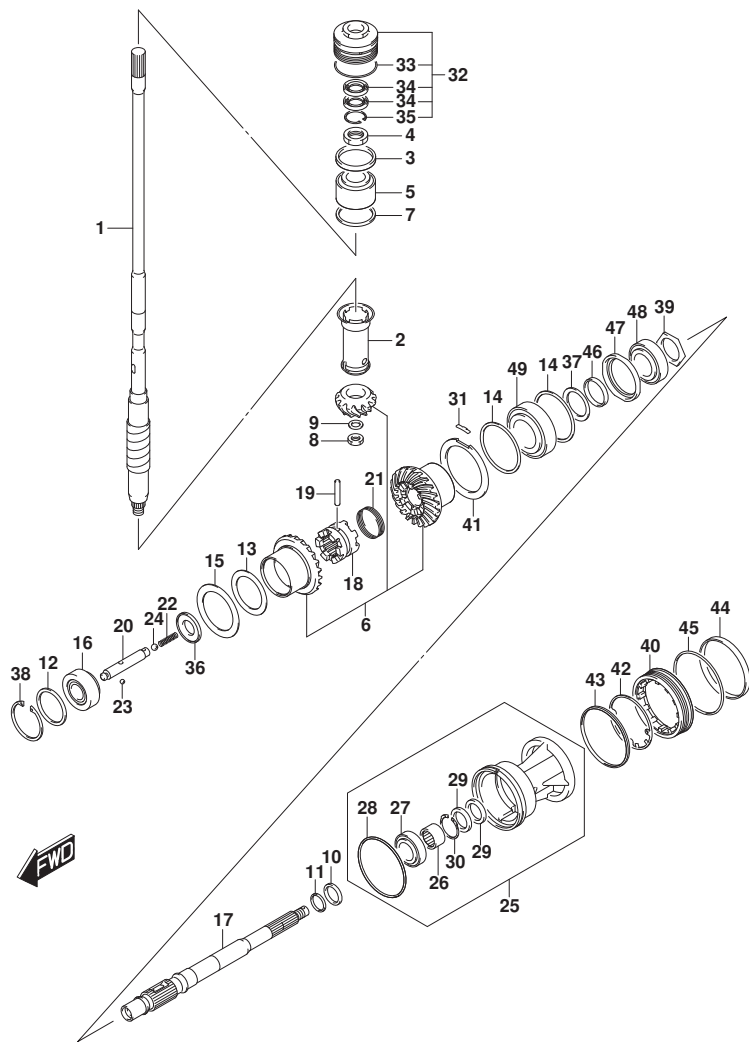


FIG. 220B (1-E-15) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
			2	FROM 30002P-61213	
			3	FRONT GEAR	
15-1	59171-93L00	シム, フロントギヤ (81X103X3. 50)	1	FROM 25003P-61059	
			2	FROM 30002P-61213	
15-2	59171-93L10	シム, フロントギヤ (81X103X3. 55)	1	FRONT GEAR	
			2	FROM 25003P-61059	
			3	FROM 30002P-61213	
15-3	59171-93L20	シム, フロントギヤ (81X103X3. 60)	1	FRONT GEAR	
			2	FROM 25003P-61059	
			3	FROM 30002P-61213	
15-4	59171-93L30	シム, フロントギヤ (81X103X3. 65)	1	FRONT GEAR	
			2	FROM 25003P-61059	
			3	FROM 30002P-61213	
15-5	59171-93L40	シム, フロントギヤ (81X103X3. 70)	1	FRONT GEAR	
			2	FROM 25003P-61059	
			3	FROM 30002P-61213	
15-6	59171-93L50	シム, フロントギヤ (81X103X3. 75)	1	FRONT GEAR	
			2	FROM 25003P-61059	
			3	FROM 30002P-61213	
15-7	59171-93L60	シム, フロントギヤ (81X103X3. 80)	1	FRONT GEAR	
			2	FROM 25003P-61059	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

DF300A_000_016_220B
TRANSMISSION



DF300A_000_016

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.220B

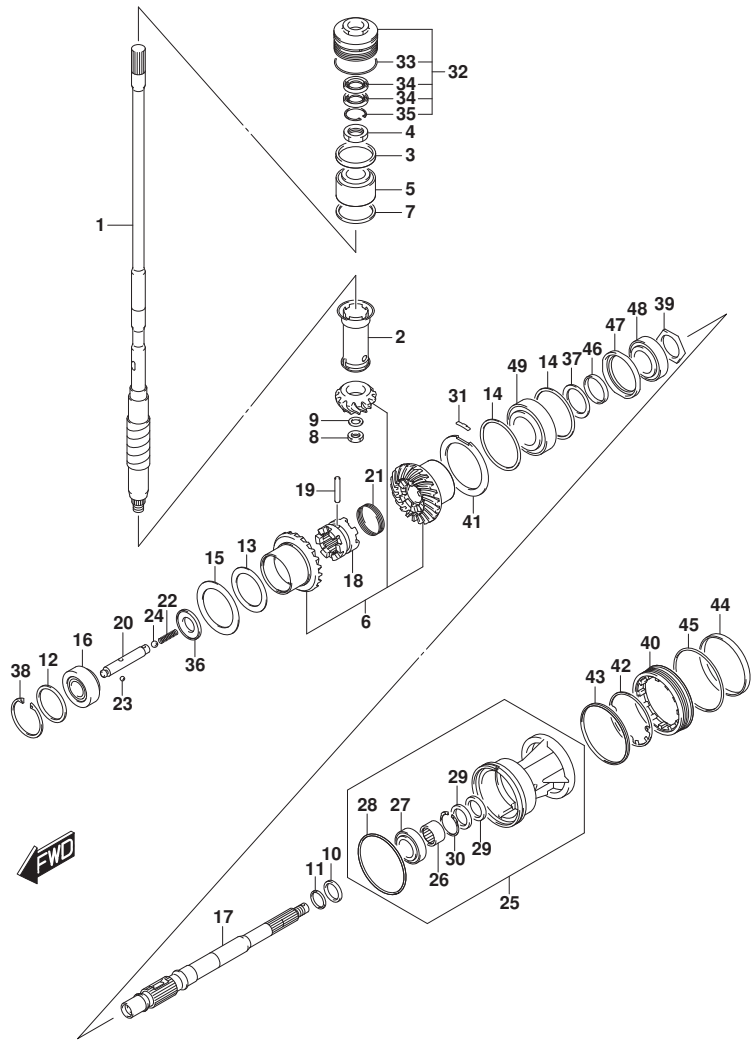


FIG. 220B (1-F-2) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
				FROM 30002P-61213 3	
17	57610-93L10	シャフト, フロント	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
18	57621-93L00	シフト, クラッチ	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
19	09202-08013	ピン (8X55)	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
20	57631-93L01	ピン, コネク	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
21	09440-58001	スプリング	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
22	57617-93L00	スプリング, デン	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
23	06111-07004	ホール	2	DETENT NO. 1 FROM 25003P-61059 2	
				FROM 30002P-61213 3	
24	06111-11004	ホール	2	DETENT NO. 2 FROM 25003P-61059 2	
				FROM 30002P-61213	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.220B


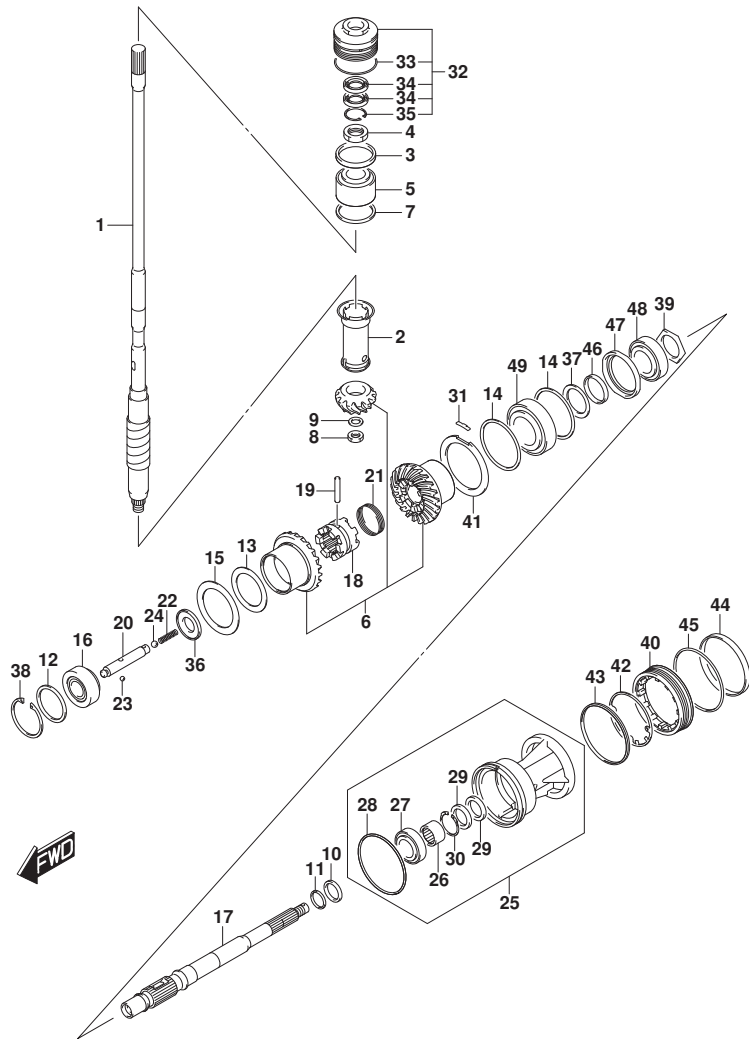


FIG. 220B (1-F-3) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
25	56120-93L20	ハウジング*, フロントシャフトベアリング*	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
26	09263-30063	ベアリング* (30X40X25)	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
27	09265-32003	ベアリング* (32X58X17)	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
28	09280-00047	Oリング* (D:3)	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
29	09282-30006	オイルシール	2	FROM 25003P-61059 2 FROM 30002P-61213 3	
30	09381-40003	サーキットツブ*	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
31	56147-93L00	スベア*, フロントシャフトベアリング* ハウジング*	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
32	56130-93J02	ハウジング*, ドライブシャフトベアリング*	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
33	09280-66004	Oリング* (D:3.1, ID:65.4)	1	FROM 25003P-61059 2	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG. 220B (1-F-4) トランスミツション (SEE NOTE 1)

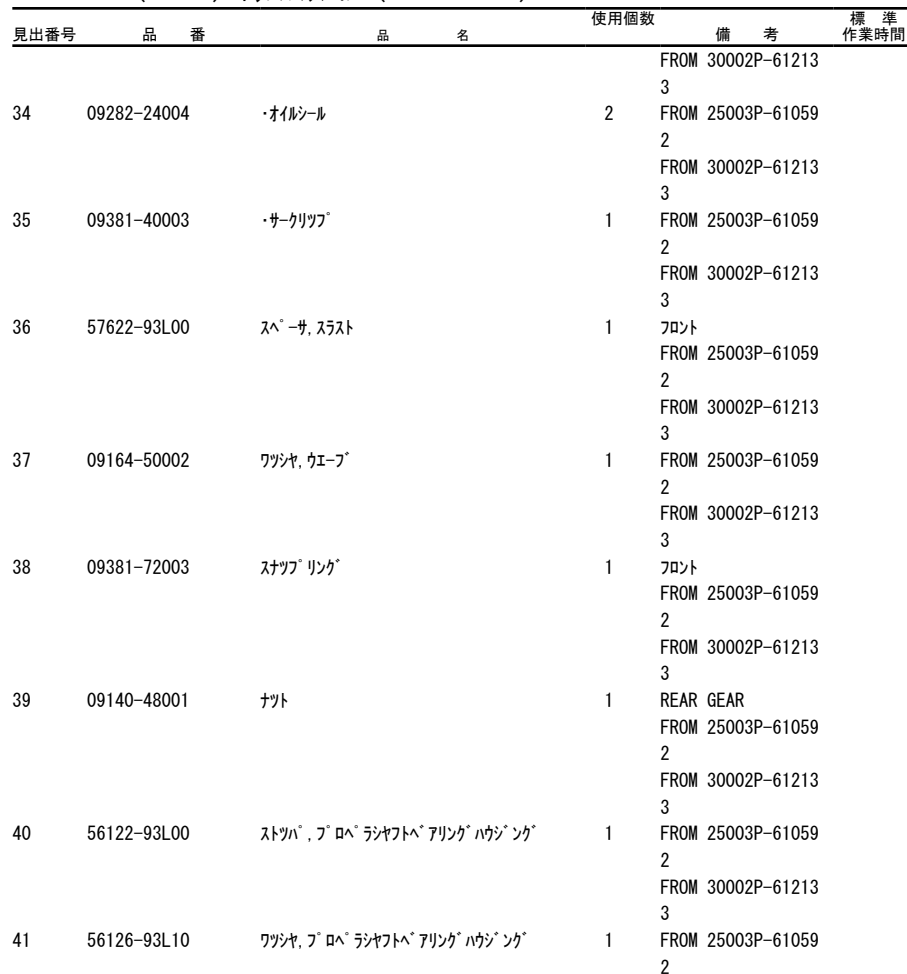

DF300A_000_016

FIG.220B

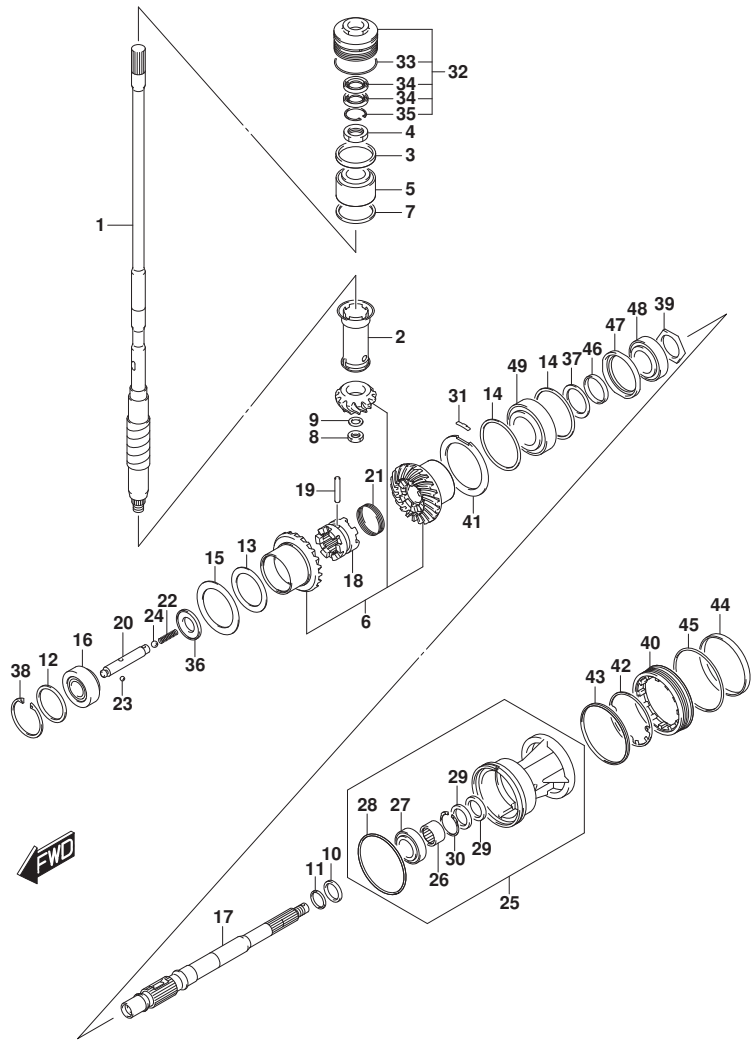


FIG. 220B (1-F-5) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
				FROM 30002P-61213 3	
42	56127-93L00	ワッシャ, フロントシャフトへアリングハウジング 2	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
43	56128-93L00	シール, フロントシャフトへアリングハウジング	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
44	56129-93L00	ブッシュ, ストッパ	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
45	09280-00030	リング (D:1.8	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
46	57527-93L00	スベ-サ, へアリング インナ	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
47	57541-93L00	スベ-サ, へアリング アウタ	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
48	09265-50004	へアリング (50X80X20)	1	REAR GEAR R FROM 25003P-61059 2	
				FROM 30002P-61213 3	
49	09265-55001	へアリング (55X100X22.75)	1	REAR GEAR F FROM 25003P-61059 2	
				FROM 30002P-61213	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.220B

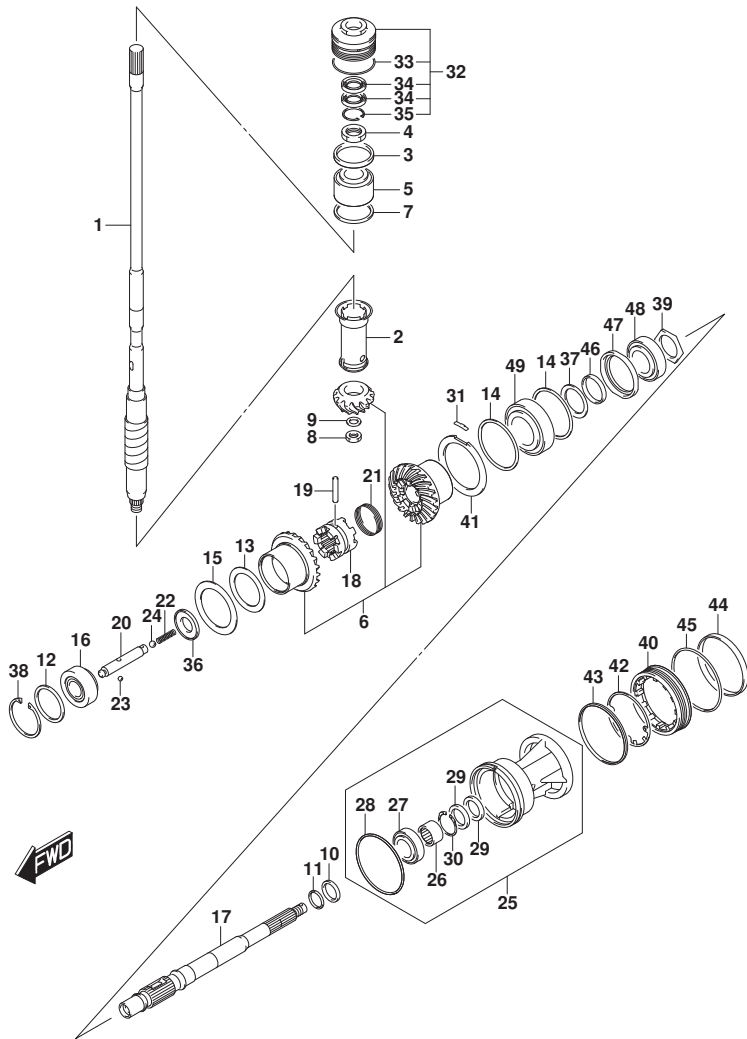


FIG. 220B (1-F-6) トランスミッション (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
			3		

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.301A

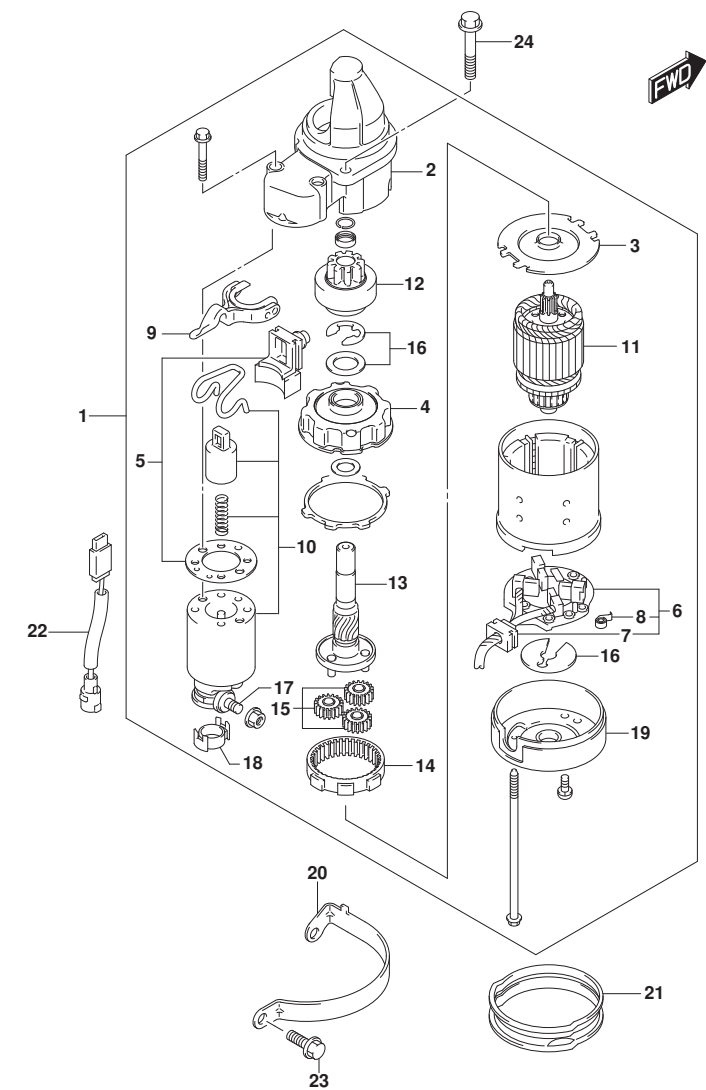


FIG. 301A (1-F-7) スターティングモータ

見出番号	品番	品名	使用個数	備考	標準作業時間
1	31100-96J02	モータアツシ, スターティング	1		
2	31151-94J01	・ケース, スターティングモータギヤ	1		
3	31152-90J00	・フレート, センタ	1		
4	31153-90J00	・ブラケット, ギヤ	1		
5	31171-96J00	・カバー, キット, タスト	1		
6	31173-90J02	・ホルダ, アツシ, フラシ	1		
7	31131-90J01	・・フラスセット(+)	1		
8	31135-90J00	・・スプリンク	4		
9	31191-96J00	・レバー, シフト	1		
10	31220-94J00	・スイッチ, マグネ	1		
11	31310-90J00	・アマチュア	1		
12	31320-93J00	・ビニオン	1		
13	31341-93J00	・シャフト, ビニオン	1		
14	31343-90J00	・インターナルギヤ	1		
15	31344-90J00	・ギヤ, プラネタリ	3		
16	31360-93J01	・ワッシャセット, ストッパ	1		
17	31913-93J00	・ターミナル	1		
18	31914-93J00	・キヤツフ, ターミナル	1		
19	31170-90J00	・カバー, アツシ, スタータモータリヤ	1		
20	31912-98J00	・ハンド, スタータモータ	1		
21	31918-90J10	・タンバ, ロア	1		
22	36645-93J00	・リットワイヤ, スターティングモータ	1		
23	01550-08207	・ホル	2	07	
24	01550-08307	・ホル	2	アッハ	

FIG. 303A (1-F-8) マグネト

DF300A_000_016

FIG.310A

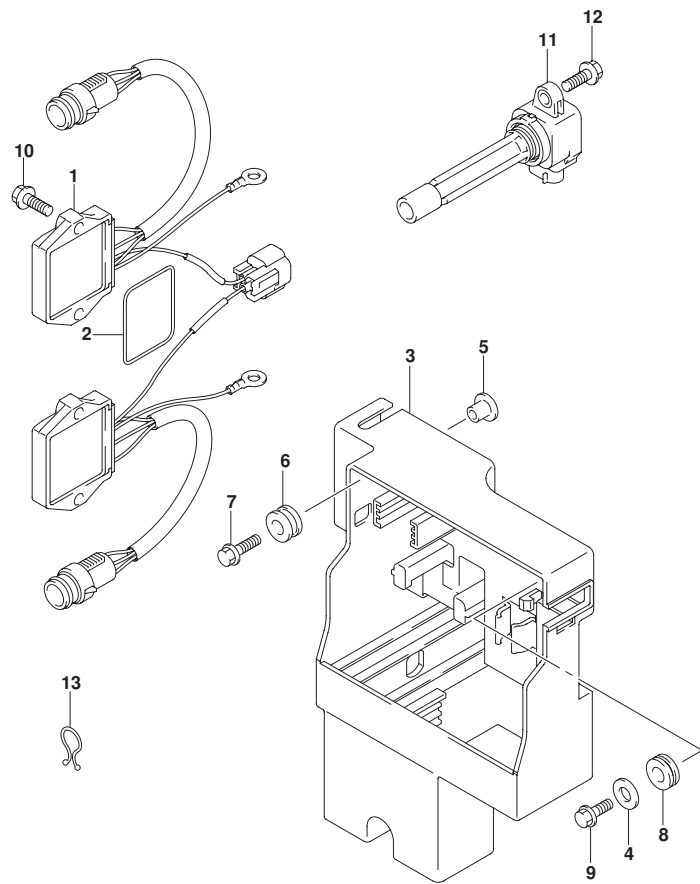


FIG. 310A (1-F-9) レクチファイア/イグニッション コイル

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	32800-98J01	レクチファイア/レギュレータアツシ	1		
2	32805-93J00	Oリング, レクチファイア/レギュレータ	2		
3	32890-98J01	ホルダ, エレクトリツクハーツ	1		
4	09160-06134	ワツシヤ (6. 5X24X1. 6)	1		
5	09169-06062	ワツシヤ	3		
6	09320-09016	クツシヨソ (9X18X9. 5)	3		
7	09116-06202	ボルト (6X25)	3		
8	09320-12076	クツシヨソ	1		
9	01550-06127	ボルト	1		
10	01550-06257	ボルト	4		
11	33410-93J00	コイルアツシ, イグニツシヨソ	6		
12	01547-06207	ボルト	6		
13	09408-00021	クリツツ (ID:16)	1		

FIG.315A

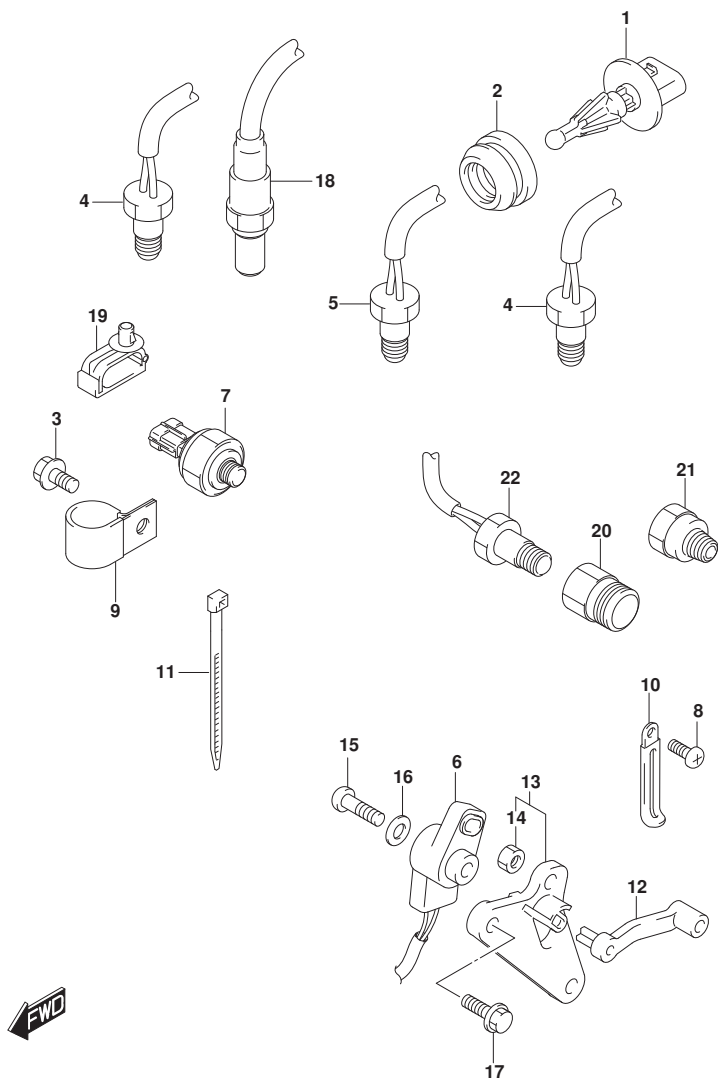


FIG. 315A (1-F-10) センサ (DF300A: (X-TRANSOM, XX-TRANSOM))

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	13650-52G00	センサ, インレットエアテンパ レチャ	1		
2	13655-87J00	グ ロメット, エアテンパ レチャセンサ	1		
3	29103-93J00	ホ ルト (6X12)	1		
4	34830-87J20	センサ, テンパ レチャ	2	EXHAUST TEMP	
5	34830-87J20	センサ, テンパ レチャ	1	CYLINDER TEMP	
6	34840-98J03	センサアツシ, トリム/チルト	1		
7	37820-98J00	センサアツシ, オイルフ レツシヤ	1		
8	09125-06063	スクリュ (6X10)	1		
9	09403-19409	クランプ	1		
10	29404-93J10	クランプ	1		
11	09407-14407	クランプ (L: 145)	2		
12	34841-88L00	レバ ー, トリムセンサ	1		
13	34845-88L01	ブ ラケツト, トリムセンサ	1		
14	09140-05005	・ナツト	1		
15	09125-05048	スクリュ (5X16)	1		
16	09160-05029	ワツシヤ (5, 5X12X0, 8)	1		
17	09103-06093	ホ ルト (6X20)	2		
18	18213-98J20	センサ, オキシジ ン	1		
19	09403-07340	クランプ	1		
20	11218-98J02	ホルダ ー, テンパ レチャセンサ	1		
21	11219-98J00	ホルダ ー, オイルセンサ	1		
22	34830-98J00	センサアツシ, オイルテンパ レチャ	1		

FIG.315B

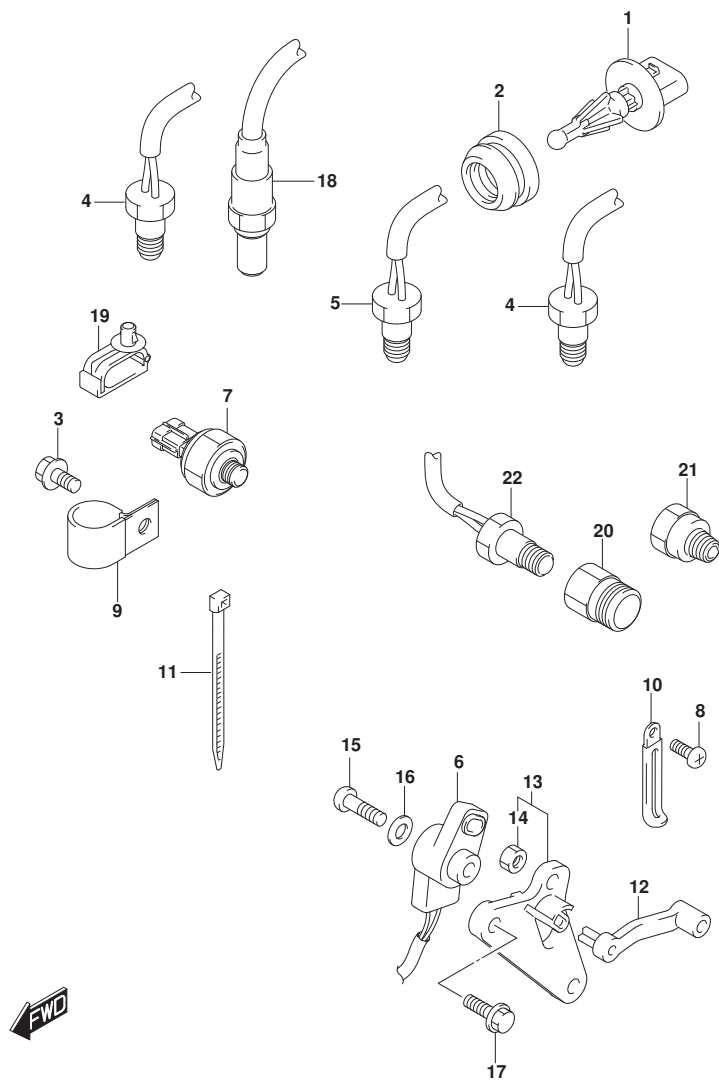


FIG. 315B (1-F-11) センサ (DF250A)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	13650-52G00	センサ、インレットエアテンパ レチャ	1		
2	13655-87J00	グ ロメット、エアテンパ レチャセンサ	1		
3	29103-93J00	ホ ルト (6X12)	1		
4	34830-87J20	センサ、テンパ レチャ	2	EXHAUST TEMP	
5	34830-87J20	センサ、テンパ レチャ	1	CYLINDER TEMP	
6	34840-98J03	センサアツシ、トリム/チルト	1		
7	37820-98J00	センサアツシ、オイルフ レツシヤ	1		
8	09125-06063	スクリュ (6X10)	1		
9	09403-19409	クランフ	1		
10	29404-93J10	クランフ	1		
11	09407-14407	クランフ (L: 145)	2		
12	34841-88L00	レバ ー、トリムセンサ	1		
13	34845-88L01	ブ ラケツト、トリムセンサ	1		
14	09140-05005	・ナツト	1		
15	09125-05048	スクリュ (5X16)	1		
16	09160-05029	ワツシヤ (5. 5X12X0. 8)	1		
17	09103-06093	ホ ルト (6X20)	2		
18	18213-98J20	センサ、オキシジ ン	1		
19	09403-07340	クランフ	1		
20	11218-98J02	ホルタ ー、テンパ レチャセンサ	1		
21	11219-98J00	ホルタ ー、オイルセンサ	1		
22	34830-98J00	センサアツシ、オイルテンパ レチャ	1		

FIG.315C

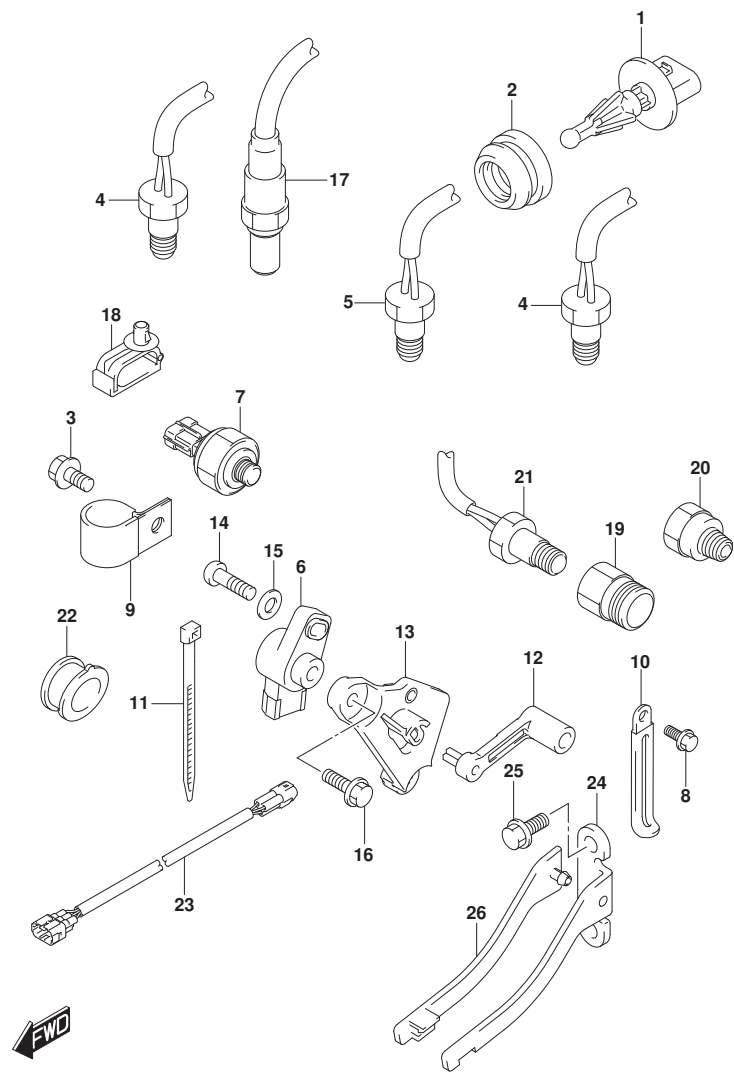


FIG. 315C (1-F-12) センサ (DF300A:L-TRANSOM)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	13650-52G00	センサ, インレットエアテンパ° レチャ	1		
2	13655-87J00	グ° ロメット, エアテンパ° レチャセンサ	1		
3	29103-93J00	ホ° ルト (6X12)	1		
4	34830-87J20	センサ, テンパ° レチャ	2	EXHAUST TEMP	
5	34830-87J20	センサ, テンパ° レチャ	1	CYLINDER TEMP	
6	34840-98J11	センサアツシ, トリム	1		
7	37820-98J00	センサアツシ, オイルブ° レツシヤ	1		
8	09103-06307	ホ° ルト (6X10)	1		
9	09403-19409	クランプ°	1		
10	29404-93J20	クランプ°	1		
11	09407-14407	クランプ° (L: 145)	2		
12	34841-96J00	レバ° -, トリムセンサ	1		
13	34845-96J00	ブ° ラケット, トリムセンサ	1		
14	09125-05048	スクリュ (5X16)	1		
15	09160-05029	ワツシヤ (5. 5X12X0. 8)	1		
16	09103-06093	ホ° ルト (6X20)	2		
17	18213-98J20	センサ, オキシシ° エン	1		
18	09403-07340	クランプ°	1		
19	11218-98J02	ホルダ°, テンパ° レチャセンサ	1		
20	11219-98J00	ホルダ°, オイルセンサ	1		
21	34830-98J00	センサアツシ, オイルテンパ° レチャ	1		
22	34813-93J00	ブ° ロテクタ, リード° ワイヤ	1		
23	36611-96J00	ワイヤ, トリムセンサ	1		
24	43117-96J00	カム, トリムセンタ°	1		
25	09116-05010	ホ° ルト (5X12)	2		
26	43118-96J00	ブ° レート, トリムセンタ° カム	1		

FIG.322A

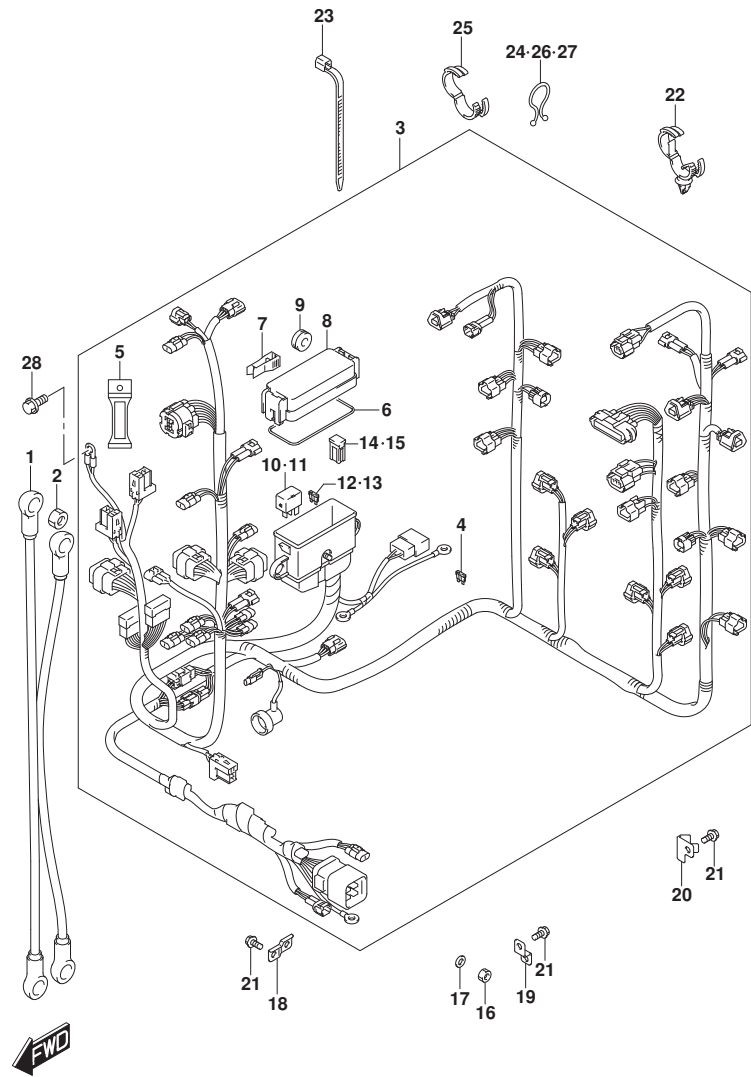


FIG. 322A (1-F-13) ハーネス

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	33810-98J00	ケーブルアッソシ. スタターモータ	1		
2	08316-10087	ナット	1		
3	36610-98J60	ハーネスアッソシ. ワイヤリング	1		
4	09481-10501	・フューズ (10A)	2		
5	36612-98J10	・コネクタ, セレクトターミナル	1		
6	36721-96J00	・Oリング, アッソカハ	1		
7	36737-96J00	・ブロー, フューズ	1		
8	36738-98J00	・カバー, フューズケースアッソ	1		
9	09320-08021	・ケツジョン (8. 5X20X8)	2		
10	38860-76F01	・リレーアッソ	1	FOR ENG CONTROL U NIT	
11	38860-76F01	・リレーアッソ	1	FOR STARTER MOTOR	
12	09481-15501	・フューズ (15A)	5		
13	09481-30501	・フューズ (30A)	3		
14	09481-40401	・フューズ (40A)	1		
15	09481-60401	・フューズ (60A)	2		
16	08310-00067	ナット	1		
17	08321-01067	ロックワッシャ	1		
18	36617-93J00	ブラケット, ハーネス	3		
19	36617-93J10	ブラケット, ハーネス	8		
20	36617-98J00	ブラケット, ハーネス	1		
21	01550-06127	ホルト	12		
22	09403-20308	クランプ	1		
23	09407-14407	クランプ (L: 145)	4		
24	09408-00008	クリップ (ID: 20)	2		
25	09408-00184	クランプ	3		
26	09408-00012	クリップ (ID: 11. 5)	1		
27	09408-00008	クリップ (ID: 20)	1		
28	01550-06127	ホルト	1		

FIG.326A

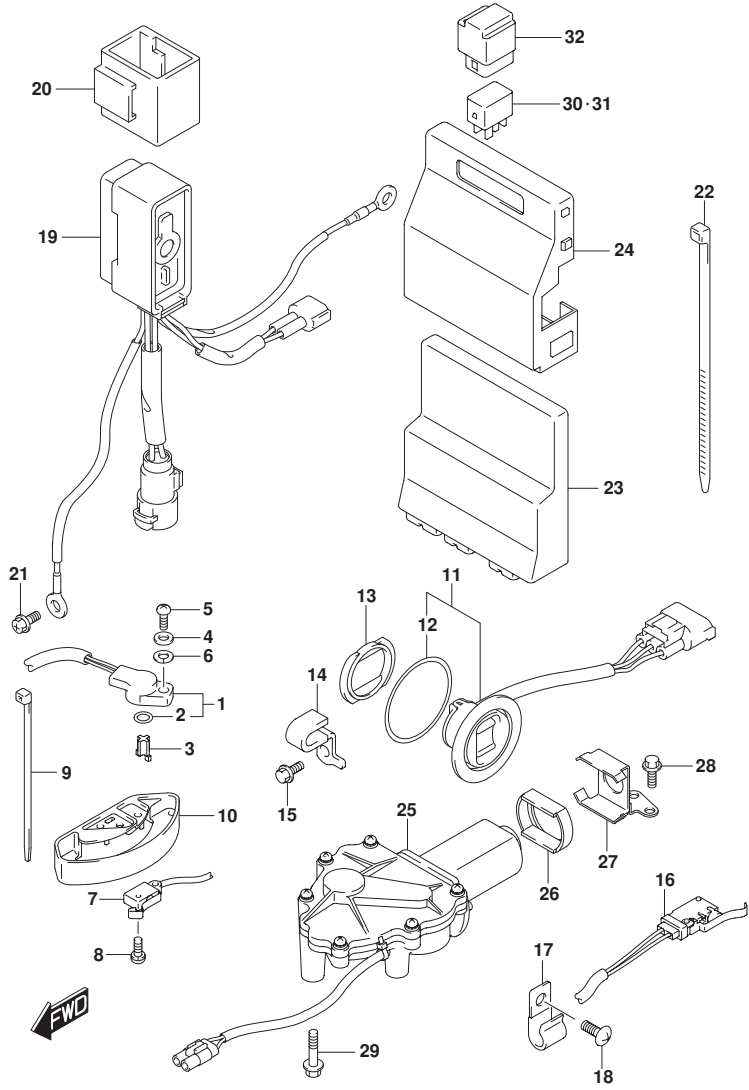


FIG. 326A (1-F-14) PTT スイッチ/エンジン コントロール ユニツ (DF300A)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	13580-98J02	センサアツシ, シフトホﾞ ジ' ション	1		
2	13575-40F00	・Oリング	1		
3	37729-98J00	レバ' ー, シフトセンサ	1		
4	09160-05029	ワツシヤ (5. 5X12X0. 8)	1		
5	07130-05167	ホ' ルト	1		
6	08321-0105A	ロツクワツシヤ	1		
7	37721-93J00	スイツチアツシ, ニュートラル	1		
8	09137-04004	スクリュ (4X16)	2		
9	09407-10404	クランプ' (L: 100)	2		
10	37725-93J11	カバ' ー, スイツチアツシ	1		
11	37850-92J00	スイツチアツシ, PTT	1		
12	37856-92J00	・テ' ーブ', PTTスイツチ	1		
13	37857-92J00	ブ' ツシユ, PTTスイツチ	1		
14	09403-11315	クランプ'	1		
15	01550-06127	ホ' ルト	1		
16	37722-93J11	スイツチアツシ, チルトリミツト	1		
17-1	09403-09316	クランプ'	1	X-TRANSOM, XX-TRAN SOM	
17-2	09407-14407	クランプ' (L: 145)	1	DF300A: L-TRANSOM	
18	29125-93J00	スクリュ	1	X-TRANSOM, XX-TRAN SOM	
19	38410-93J12	リレーアツシ, PTT	1		
20	38415-93J00	ホルダ', PTTリレー	1		
21	01550-06127	ホ' ルト	1		
22	09407-30401	クランプ' (L: 300)	1		
23-1	33920-98J60	ユニツト, エンジ' ンコントロール	1	X-TRANSOM, XX-TRAN SOM	
23-2	33920-98JJ0	ユニツト, エンジ' ンコントロール	1	DF300A: L-TRANSOM	
24	33925-98J00	クツシジョン, エンジ' ンコントロールユニツト	1		
25	38890-98J10	アクチュエ' タアツシ, シフト	1		
26	38892-98J00	ダ' ンバ', シフトアクチュエ' タ	1		
27	38895-98J00	ブ' ラケツト, シフトアクチュエ' タ	1		
28	01550-06167	ホ' ルト	2		
29	01550-06357	ホ' ルト	3		
30	38860-76F01	リレーアツシ	2	ACTUATOR	

FIG.326A

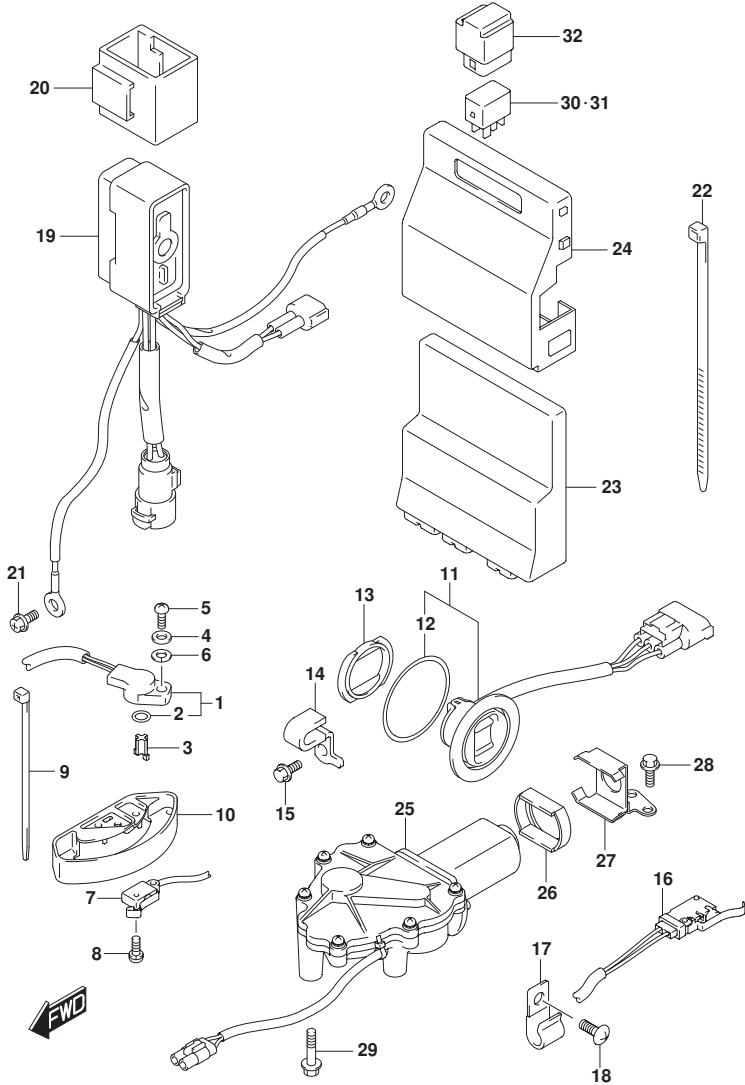


FIG. 326A (1-F-15) PTT スイッチ/エンジン コントロール ユニット (DF300A)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
31	38860-76F01	リレーアツシ	1	OXYGEN SENSOR HEA TER	
32	38915-90J00	ホルダ, リレー	3		

FIG.326B

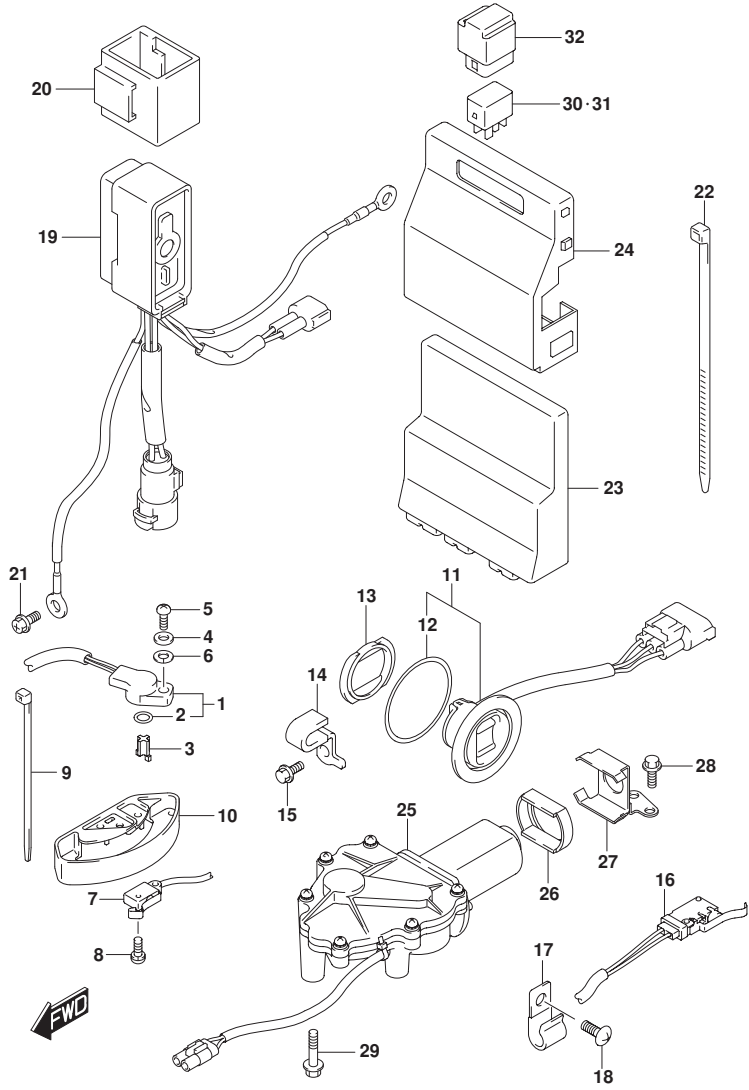


FIG. 326B (1-F-16) PTT スイッチ/エンジン コントロール ユニツ (DF250A)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	13580-98J02	センサアツシ, シフトホﾞ シ' ション	1		
2	13575-40F00	・Oリング	1		
3	37729-98J00	レバ' ー, シフトセンサ	1		
4	09160-05029	ワツシヤ (5. 5X12X0. 8)	1		
5	07130-05167	ホ' ルト	1		
6	08321-0105A	ロツクワツシヤ	1		
7	37721-93J00	スイツチアツシ, ニュートラル	1		
8	09137-04004	スクリュ (4X16)	2		
9	09407-10404	クランプ' (L: 100)	2		
10	37725-93J11	カハ' ー, スイツチアツシ	1		
11	37850-92J00	スイツチアツシ, PTT	1		
12	37856-92J00	・テ' ーブ', PTTスイツチ	1		
13	37857-92J00	ブ' ツシユ, PTTスイツチ	1		
14	09403-11315	クランプ'	1		
15	01550-06127	ホ' ルト	1		
16	37722-93J11	スイツチアツシ, チルトリミツト	1		
17	09403-09316	クランプ'	1		
18	29125-93J00	スクリュ	1		
19	38410-93J12	リレーアツシ, PTT	1		
20	38415-93J00	ホルダ', PTTリレー	1		
21	01550-06127	ホ' ルト	1		
22	09407-30401	クランプ' (L: 300)	1		
23	33920-98JH0	ユニツト, エンシ' ンコントロール	1		
24	33925-98J00	クヅシ' ン, エンシ' ンコントロールユニツト	1		
25	38890-98J10	アクチユ' ー' タアツシ, シフト	1		
26	38892-98J00	ダ' ンバ', シフトアクチユ' ー' タ	1		
27	38895-98J00	ブ' ラケツト, シフトアクチユ' ー' タ	1		
28	01550-06167	ホ' ルト	2		
29	01550-06357	ホ' ルト	3		
30	38860-76F01	リレーアツシ	2	ACTUATOR	
31	38860-76F01	リレーアツシ	1	OXYGEN SENSOR HEA TER	
32	38915-90J00	ホルダ', リレー	3		

FIG.331A

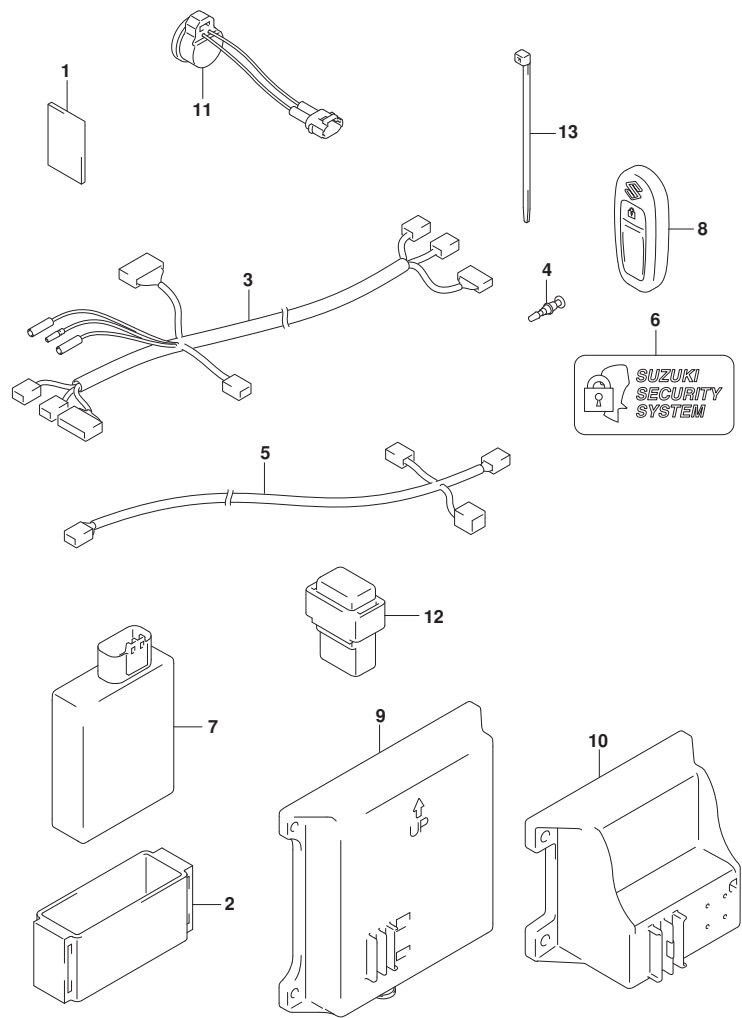


FIG. 331A (1-G-2) キーレススタート

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	32851-93J00	クッション、リードワイヤ	2	FROM 25003P-61000 1 UPTO 25003P-61051 9 FROM 30002P-61000 1 UPTO 30002P-61016 4	
1-2	32851-93J00	クッション、リードワイヤ	1	FROM 25003P-61052 0 FROM 30002P-61016 5	
2	32980-38F00	クッション、CDユニット	1		
3	36623-96L00	ハーネスアツシ、キーレススタートコントローラ	1		
4	36615-96300	ターミナル	1		
5	36662-96L00	ハーネスアツシ、キーレススタートCAN	1	L:6500+110	
6	37117-96L00	デモカル、キーレススタート	2		
7-1	37171-96L10	コントローラアツシ、キーレススタート315MHZ	1	FROM 25003P-61000 1 UPTO 25003P-61051 9 FROM 30002P-61000 1 UPTO 30002P-61016 4	
7-2	37171-96L11	コントローラアツシ、キーレススタート315	1	FROM 25003P-61052 0 FROM 30002P-61016 5	
8	37172-96L10	リモコンアツシ、キーレススタート315MHZ	2		
9	37173-96L00	ホルダ、キーレススタートパーツ	1	UPTO 201508 LARGE TYPE FROM 25003P-61000 1 UPTO 25003P-61051	

FIG.331A

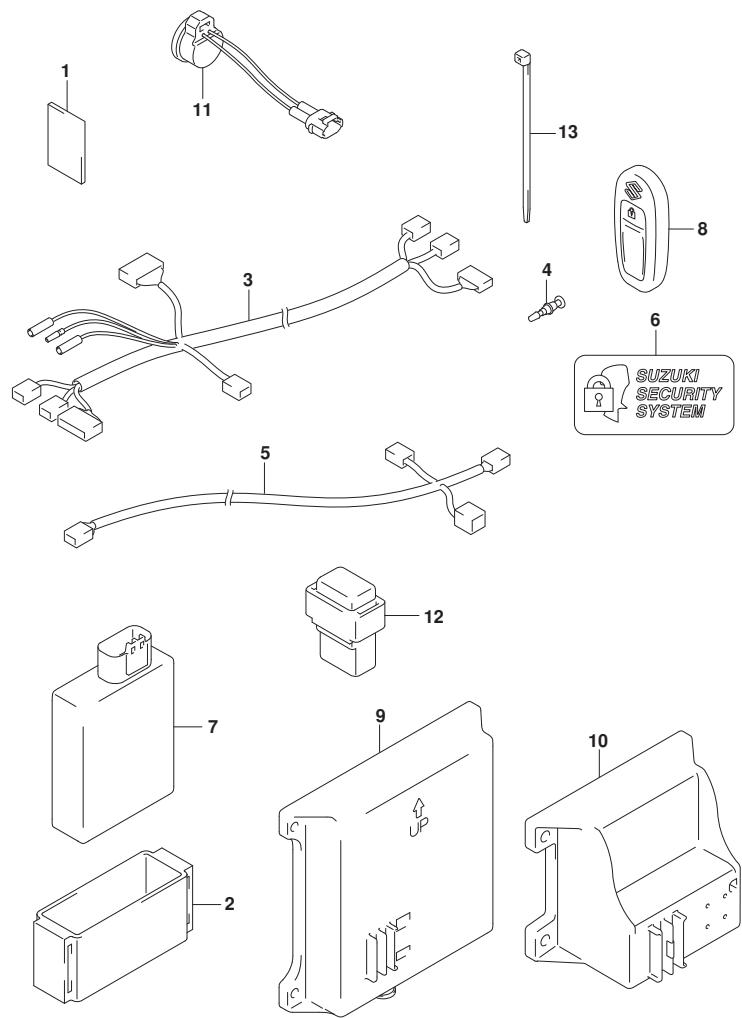


FIG. 331A (1-G-3) キーレススタート

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
			9	FROM 30002P-61000	
			1	UPTO 30002P-61016	
			4	FROM 201508	
10	37173-96L10	ホルダ*, キーレススタートパーツ	1	SMALL TYPE	
				FROM 25003P-61052	
			0	FROM 30002P-61016	
			5		
11	38500-93J90	ブザー*, ウォーニング*	1		
12	38860-96L00	リレーアッシ, キーレススタート	1		
13	09407-14407	クランプ* (L:145)	1		

FIG.335A

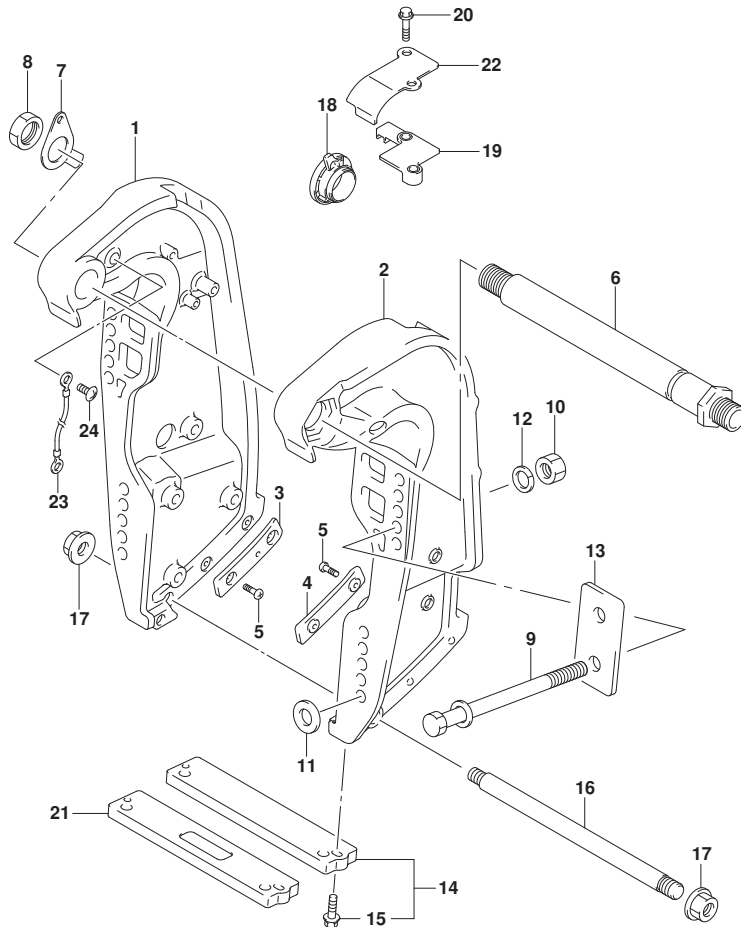


FIG. 335A (1-G-4) クランﾌﾞﾌﾞﾗｯकेｯﾄ (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1-1	41111-93J14-0EP	ﾌﾞﾗｯকেｯﾄ, クランﾌﾞ ﾎｰﾄﾞ (ﾌﾞﾗｯｸ)	1	BODY COLOR: 0EP, YK V	
1-2	41111-93J14-Y5S	ﾌﾞﾗｯকেｯﾄ, クランﾌﾞ ﾎｰﾄﾞ (ﾎﾜｲﾄ)	1	BODY COLOR: Y5S	
2-1	41121-93J06-0EP	ﾌﾞﾗｯকেｯﾄ, クランﾌﾞ ﾎｰﾄﾞ (ﾌﾞﾗｯｸ)	1	BODY COLOR: 0EP, YK V	
2-2	41121-93J06-Y5S	ﾌﾞﾗｯকেｯﾄ, クランﾌﾞ ﾎｰﾄﾞ (ﾎﾜｲﾄ)	1	BODY COLOR: Y5S	
3	41117-93J01	ﾌﾞﾚｰﾄ, クランﾌﾞ ﾌﾞﾗｯকেｯﾄﾛｳｽﾀｰﾎｰﾄﾞ	1		
4	41122-93J01	ﾌﾞﾚｰﾄ, クランﾌﾞ ﾌﾞﾗｯকেｯﾄﾛｳｽﾀｰﾎｰﾄﾞ	1		
5	09125-06063	ｽｸﾘﾕ (6X10)	4		
6	41130-93J12	ｼｬﾌﾄ, クランﾌﾞ ﾌﾞﾗｯকেｯﾄ	1		
7	41135-93J11	ﾜｯｼﾔ, クランﾌﾞ ﾌﾞﾗｯকেｯﾄｼｬﾌﾄ	1		
8	09159-22006	ﾅｯﾄ	1		
9-1	09100-12085	ﾎｰﾙﾄ (12. 7X115)	6		
9-2	09100-12086	ﾎｰﾙﾄ (12. 7X150)	1	ｵﾌﾞｼｮﾝ	
9-3	09100-12092	ﾎｰﾙﾄ (12. 7X75)	1	ｵﾌﾞｼｮﾝ	
10	09159-12062	ﾅｯﾄ	6		
11	09160-13022	ﾜｯｼﾔ (13. 2X45X3)	4		
12	09160-13021	ﾜｯｼﾔ (13. 2X26X3)	6		
13	41155-93J02	ﾌﾞﾚｰﾄ, ﾄﾗﾝｻﾑ	2		
14	55320-94900	ｱﾉｰﾄﾞ ｾｯﾄ, クランﾌﾞ ﾌﾞﾗｯকেｯﾄ	1		
15	09116-06121	ﾎｰﾙﾄ (6X25)	2		
16	45421-87D02	ﾋﾞｰﾝ, ｾﾙﾄﾛｯｸ	1		
17	09159-14020	ﾅｯﾄ	2		
18	48140-93J01	ｶﾑｱｯｼﾝ, ｾﾙﾄﾘﾐｯﾄｽｲｯﾁ	1		
19	48144-93J00	ﾎﾙﾀﾞ, ｾﾙﾄﾘﾐｯﾄｽｲｯﾁ	1		
20	09103-06278	ﾎｰﾙﾄ (6X25)	2		
21	55321-94910	ｱﾉｰﾄﾞ (ﾏｸﾞﾈｼｳﾑ)	1	ｵﾌﾞｼｮﾝ	
22	48145-93J00	ｶﾊﾞｰ, ｾﾙﾄﾘﾐｯﾄｽｲｯﾁ	1		
23	36894-87D00	ﾘｰﾄﾞ (L: 165)	1	CLAMP TO SWIVEL	
24	09125-06063	ｽｸﾘﾕ (6X10)	2		

NOTE 1:

DF300A: (X-TRANSOM, XX-TRANSOM)

FIG.335B


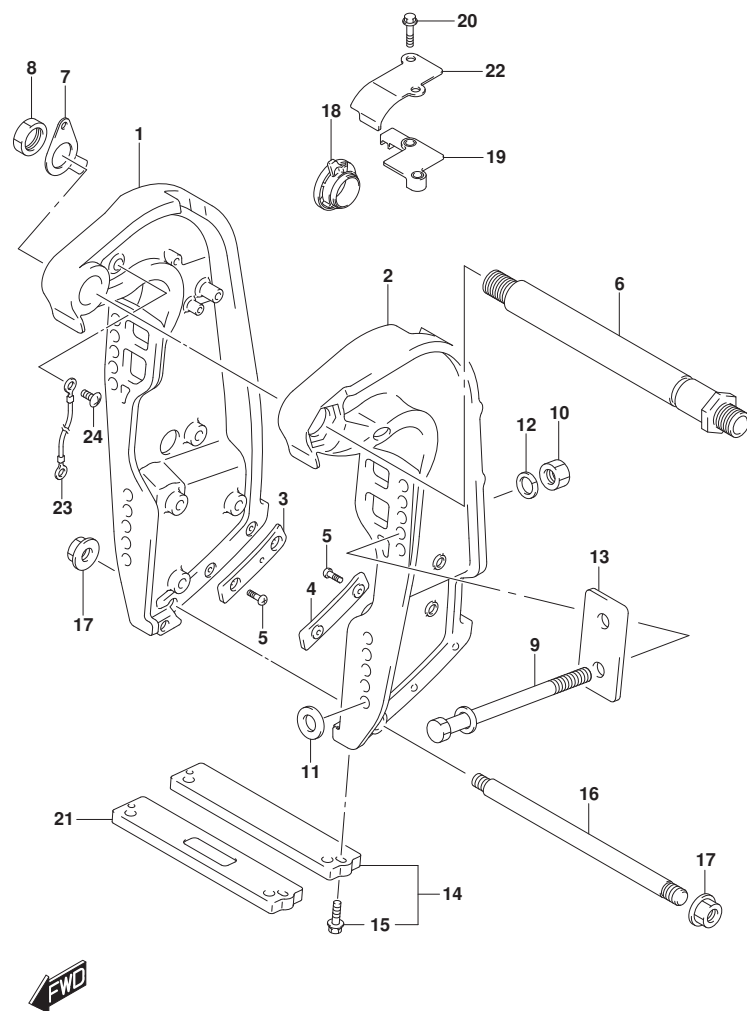


FIG. 335B (1-G-5) クランプ ブラケット (DF250A)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1-1	41111-93J14-OEP	ブラケット, クランプ スターボート (ブラック)	1	BODY COLOR: OEP	
1-2	41111-93J14-Y5S	ブラケット, クランプ スターボート (ホワイト)	1	BODY COLOR: Y5S	
2-1	41121-93J06-OEP	ブラケット, クランプ ボート (ブラック)	1	BODY COLOR: OEP	
2-2	41121-93J06-Y5S	ブラケット, クランプ ボート (ホワイト)	1	BODY COLOR: Y5S	
3	41117-93J01	プレート, クランプ ブラケットアスターボート	1		
4	41122-93J01	プレート, クランプ ブラケットアスターボート	1		
5	09125-06063	スクリュー (6X10)	4		
6	41130-93J12	シャフト, クランプ ブラケット	1		
7	41135-93J11	ワッシャ, クランプ ブラケットシャフト	1		
8	09159-22006	ナット	1		
9-1	09100-12085	ボルト (12. 7X115)	6		
9-2	09100-12086	ボルト (12. 7X150)	1	オプション	
9-3	09100-12092	ボルト (12. 7X75)	1	オプション	
10	09159-12062	ナット	6		
11	09160-13022	ワッシャ (13. 2X45X3)	4		
12	09160-13021	ワッシャ (13. 2X26X3)	6		
13	41155-93J02	プレート, トランサム	2		
14	55320-94900	アノード セット, クランプ ブラケット	1		
15	09116-06121	ボルト (6X25)	2		
16	45421-87D02	ピン, チルトロツク	1		
17	09159-14020	ナット	2		
18	48140-93J01	カムアツシ, チルトリミットスイッチ	1		
19	48144-93J00	ホルダー, チルトリミットスイッチ	1		
20	09103-06278	ボルト (6X25)	2		
21	55321-94910	アノード (マグネシウム)	1	オプション	
22	48145-93J00	カバー, チルトリミットスイッチ	1		
23	36894-87D00	リード (L: 165)	1	CLAMP TO SWIVEL	
24	09125-06063	スクリュー (6X10)	2		

FIG.335C

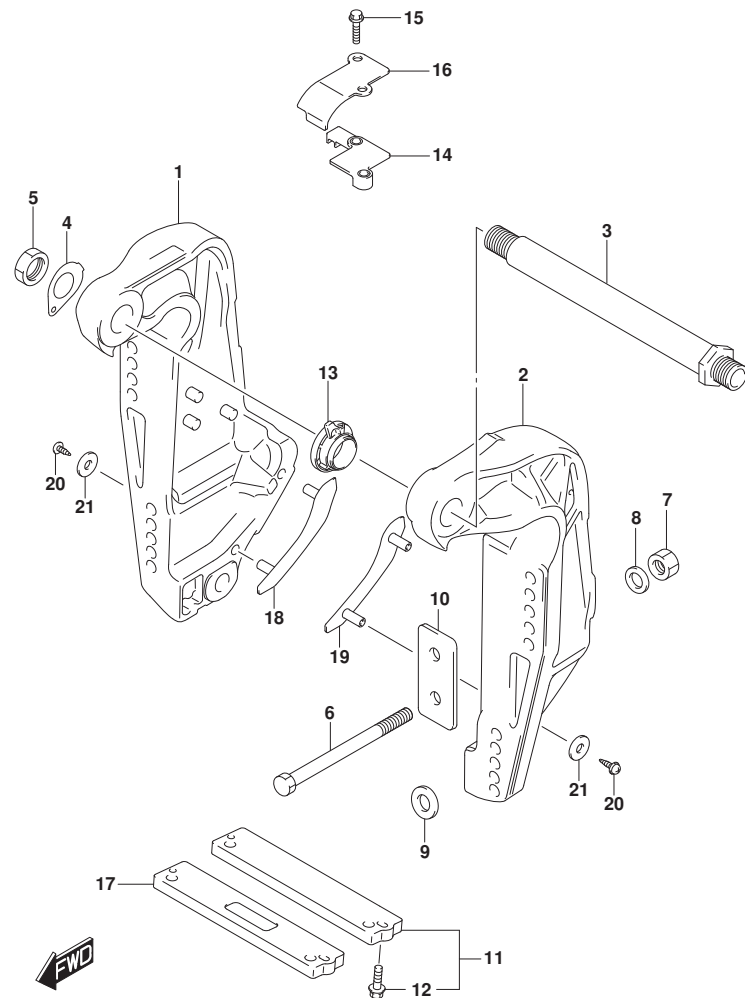


DF300A_000_016_335C
CLAMPBRACKET

FIG. 335C (1-G-6) クランプ° プ° ラケット (DF300A:L-TRANSOM)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1-1	41111-96J40-OEP	ブ° ラケット, クランプ° スターホ° ード° (ブ° ラツク)	1	BODY COLOR: OEP, YK V	
1-2	41111-96J40-Y5S	ブ° ラケット, クランプ° スターホ° ード° (ホ° ワイト)	1	BODY COLOR: Y5S	
2-1	41121-96J30-OEP	ブ° ラケット, クランプ° ホ° ード° (ブ° ラツク)	1	BODY COLOR: OEP, YK V	
2-2	41121-96J30-Y5S	ブ° ラケット, クランプ° ホ° ード° (ホ° ワイト)	1	BODY COLOR: Y5S	
3	41130-92J03	シャフト, クランプ° プ° ラケット	1		
4	41135-92J00	ワツシヤ, クランプ° プ° ラケットシャフト	1		
5	09159-22006	ナツト	1		
6-1	09100-12085	ホ° ルト (12. 7X115)	6		
6-2	09100-12086	ホ° ルト (12. 7X150)	1	オプ° ション	
7	09159-12062	ナツト	6		
8	09160-13021	ワツシヤ (13. 2X26X3)	6		
9	09160-13022	ワツシヤ (13. 2X45X3)	4		
10	41155-93J02	ブ° レート, トランサム	2		
11	55320-94900	アノード° セツト, クランプ° プ° ラケット	1		
12	09116-06121	ホ° ルト (6X25)	2		
13	48140-93J01	カムアツシ, チルトリミツトスイッチ	1		
14	48144-93J00	ホルタ°, チルトリミツトスイッチ	1		
15	09103-06278	ホ° ルト (6X25)	2		
16	48145-93J00	カバ° ー, チルトリミツトスイッチ	1		
17	55321-94910	アノード° (マク° ネシウム)	1	オプ° ション	
18	41117-93L00	ブ° レート, クランプ° プ° ラケットロアスターホ° ード°	1		
19	41122-93L00	ブ° レート, クランプ° プ° ラケットロアホ° ード°	1		
20	03542-0516C	スクリュ	4		
21	09160-05053	ワツシヤ	4		

DF300A_000_016

FIG.336A

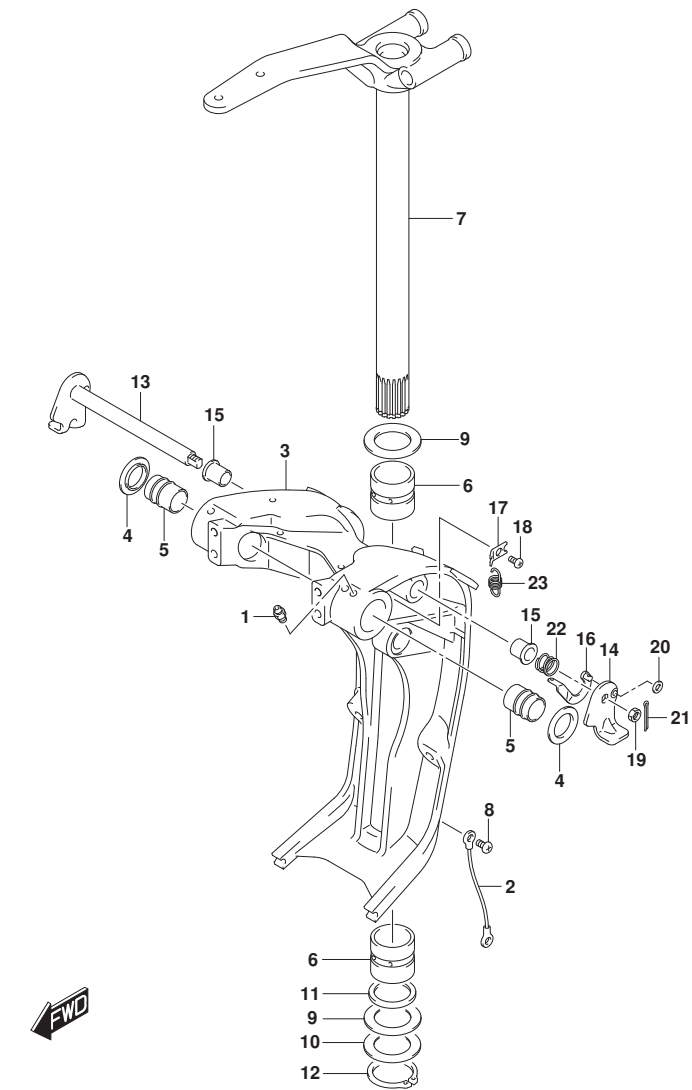


DF300A_000_016_336A
SWIVEL BRACKET

FIG. 336A (1-G-7) スイベルブラケット (SEE NOTE 1)

見出番号	品番	品名	使用個数	備考	標準作業時間
1	22511-99011	ニツフル, ケーリス	4		
2	36894-87D00	リート (L:165)	1	SWIVEL TO MOUNT B RKT	
3-1	43111-93J23-0EP	ブラケット, スイベル (ブラック)	1	BODY COLOR:0EP, YK V	
3-2	43111-93J23-Y5S	ブラケット, スイベル (ホワイト)	1	BODY COLOR:Y5S	
4	43114-93J00	ワッシャ, スイベルツークランブ プラケット	2		
5	43211-93J00	ブッシュ, クランブシャフトスイベル	2		
6	43711-97E01	ブッシュ, ステアリング	2		
7-1	43750-93J02-0EP	ブラケット, ステアリング (X) (ブラック)	1	BODY COLOR:0EP, YK V	
7-2	43750-93J02-Y5S	ブラケット, ステアリング (X) (ホワイト)	1	BODY COLOR:Y5S	
8	09125-06063	スクリュ (6X10)	1		
9	09160-39001	ワッシャ (39. 5X64X1)	2		
10	09181-39001	シム (39. 5X64X0. 3)	AR		
11	09282-39001	オイルシール	1		
12	09380-38003	スナック リング	1		
13	41220-93J11	レバー, チルトロツク	1		
14	41234-93J11	レバー, チルトロツクホート	1		
15	41224-95E01	ブッシュ, チルトストツハ ロツト	2		
16	41230-96J00	リンク, チルトロツクレバー	1		
17	41233-95E10	ブラケット, チルトロツクスフ リング	1		
18	09125-06063	スクリュ (6X10)	1		
19	09140-10032	ナツト	1		
20	09160-06082	ワッシャ (6. 5X13X1. 0)	1		
21	09204-01006	コツタヒン	1		
22	09440-19028	スフ リング	1		
23	09443-10043	スフ リング	1		

NOTE 1:
DF300A: (X-TRANSOM, XX-TRANSOM)

FIG.336B

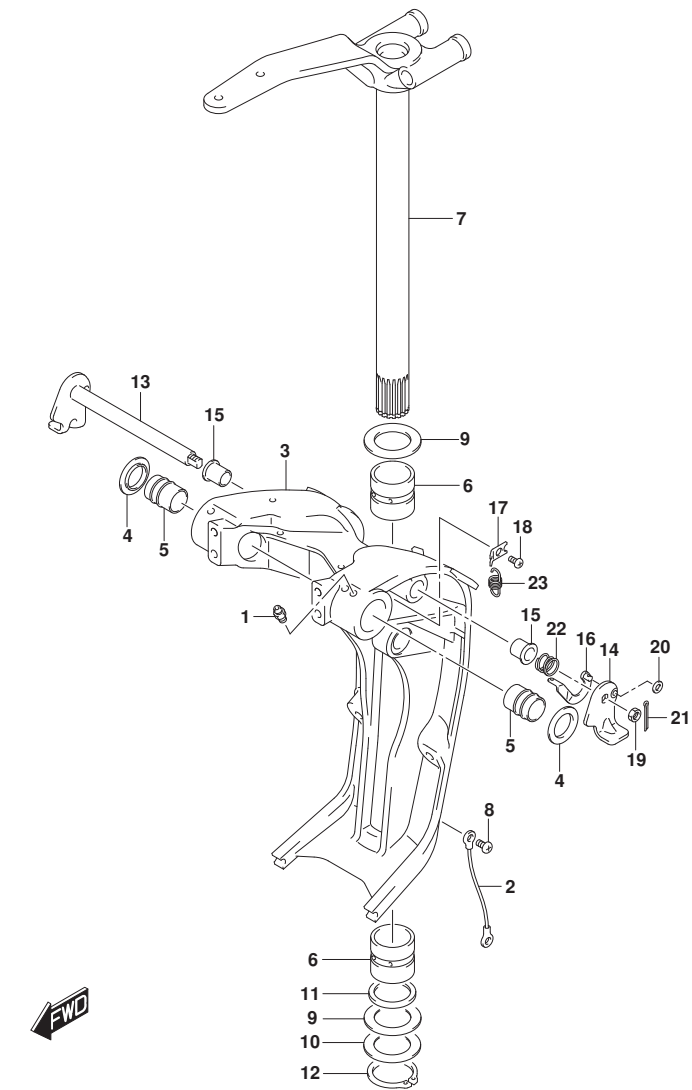


DF300A_000_016_336B
SWIVEL BRACKET

FIG. 336B (1-G-8) スイベルブラケット (DF250A)

見出番号	品番	品名	使用個数	備考	標準作業時間
1	22511-99011	ニツフル、リリース	4		
2	36894-87D00	リート (L:165)	1	SWIVEL TO MOUNT B RKT	
3-1	43111-93J23-OEP	ブラケット、スイベル (フック)	1	BODY COLOR:OEP	
3-2	43111-93J23-Y5S	ブラケット、スイベル (ホワイト)	1	BODY COLOR:Y5S	
4	43114-93J00	ワッシャ、スイベルワークラング ブラケット	2		
5	43211-93J00	ブッシュ、クランプ シャフトスイベル	2		
6	43711-97E01	ブッシュ、ステアリング	2		
7-1	43750-93J02-OEP	ブラケット、ステアリング (X) (フック)	1	BODY COLOR:OEP	
7-2	43750-93J02-Y5S	ブラケット、ステアリング (X) (ホワイト)	1	BODY COLOR:Y5S	
8	09125-06063	スクリュー (6X10)	1		
9	09160-39001	ワッシャ (39. 5X64X1)	2		
10	09181-39001	シム (39. 5X64X0. 3)	AR		
11	09282-39001	オイルシール	1		
12	09380-38003	スナック リング	1		
13	41220-93J11	レバー、チルトロック	1		
14	41234-93J11	レバー、チルトロックホート	1		
15	41224-95E01	ブッシュ、チルトストッパ ロット	2		
16	41230-96J00	リンク、チルトロックレバー	1		
17	41233-95E10	ブラケット、チルトロックスフ リング	1		
18	09125-06063	スクリュー (6X10)	1		
19	09140-10032	ナット	1		
20	09160-06082	ワッシャ (6. 5X13X1. 0)	1		
21	09204-01006	コックピット	1		
22	09440-19028	スフ リング	1		
23	09443-10043	スフ リング	1		

FIG.336C

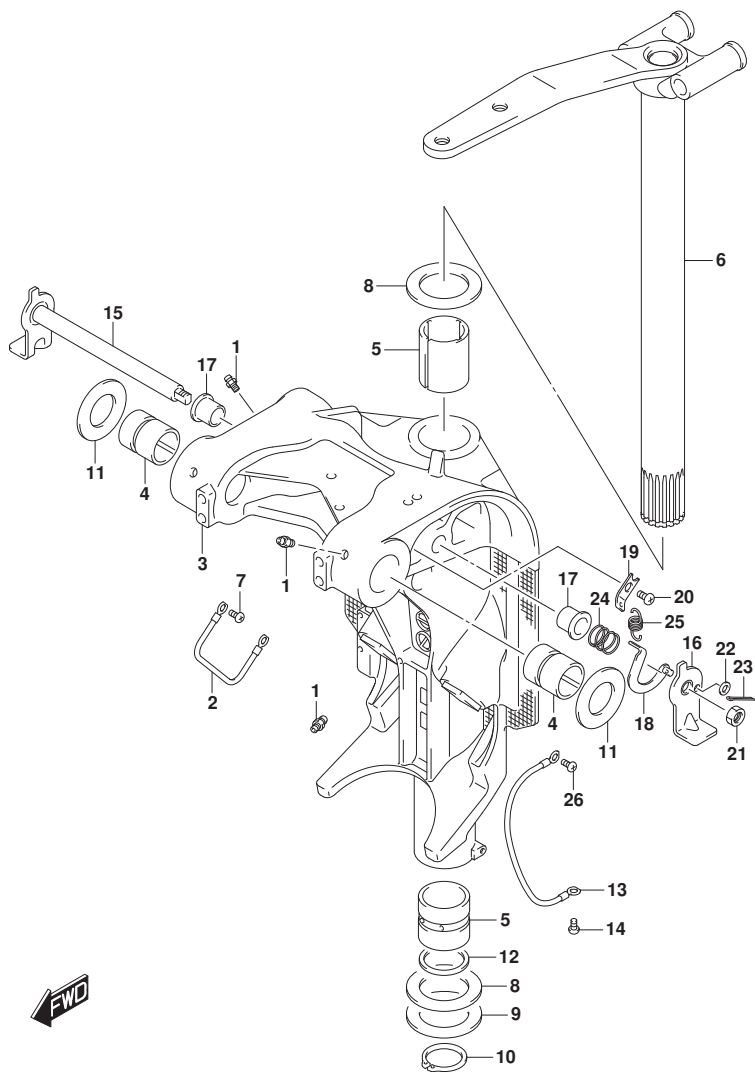

DF300A_000_016_336C
SWIVEL BRACKET

FIG. 336C (1-G-9) スイベルブラケット (DF300A:L-TRANSOM)

見出番号	品番	品名	使用個数	備考	標準作業時間
1	22511-99011	ニツブル, ケーリス	4		
2	36894-87D00	リート (L:165)	1	SWIVEL TO MOUNT B RKT	
3-1	43111-96J20-0EP	ブラケット, スイベル (L) (フック)	1	BODY COLOR:0EP, YK V	
3-2	43111-96J20-Y5S	ブラケット, スイベル (L) (ホワイト)	1	BODY COLOR:Y5S	
4	43211-93J00	ブッシュ, クラフシャフトスイベル	2		
5	43711-97E01	ブッシュ, ステアリング	2		
6-1	43750-96J50-0EP	ブラケット, ステアリング (L) (フック)	1	BODY COLOR:0EP, YK V	
6-2	43750-96J50-Y5S	ブラケット, ステアリング (L) (ホワイト)	1	BODY COLOR:Y5S	
7	09125-06063	スクリュ (6X10)	2		
8	09160-39001	ワシヤ (39. 5X64X1)	2		
9	09181-39001	シム (39. 5X64X0. 3)	AR		
10	09380-38003	スナツブ リング	1		
11	09169-28003	ワシヤ	2		
12	09282-39001	オイルシール	1		
13	36895-87D10	リート (L:310)	1		
14	09125-06063	スクリュ (6X10)	1		
15	41220-96J10	レバー, チルトロック	1		
16	41234-96J10	レバー, チルトロックホート	1		
17	41224-95E01	ブッシュ, チルトストツバ ロット	2		
18	41230-96J00	リング, チルトロックレバー	1		
19	41233-95E10	ブラケット, チルトロックスフ リング	1		
20	09125-06063	スクリュ (6X10)	1		
21	09140-10032	ナツト	1		
22	09160-06082	ワシヤ (6. 5X13X1. 0)	1		
23	09204-01006	コツビ ン	1		
24	09440-19028	スフ リング	1		
25	09443-10043	スフ リング	1		
26	09125-06063	スクリュ (6X10)	1		

FIG.337A

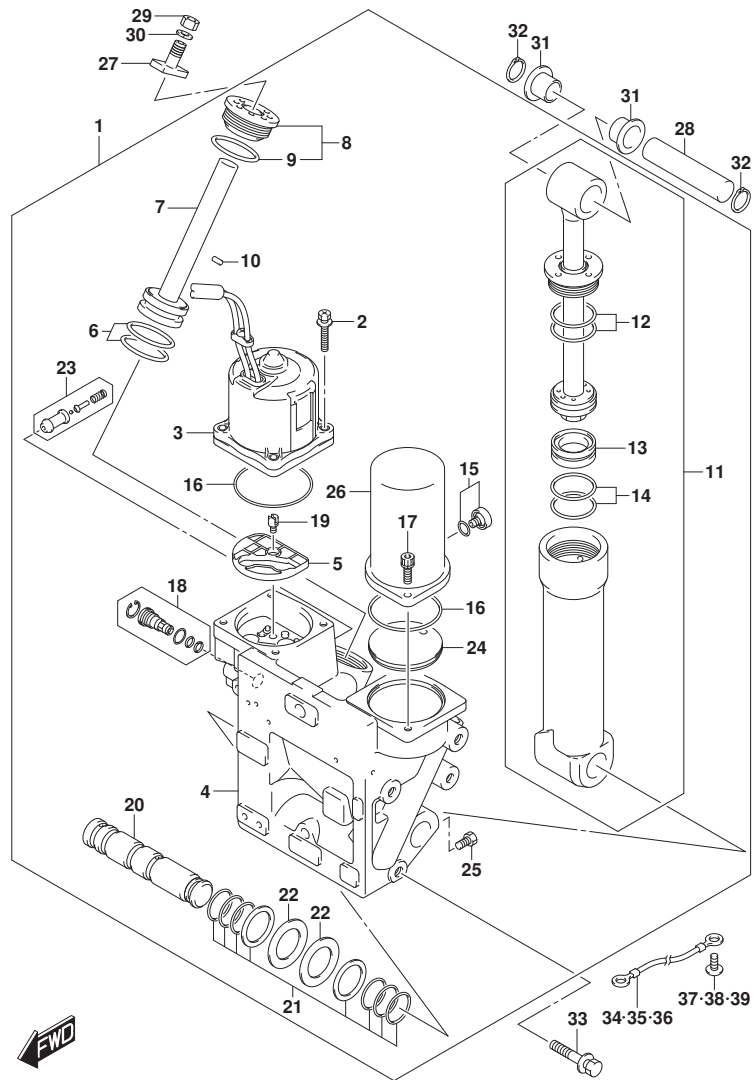


FIG. 337A (1-G-10) トリムシリンダ* (DF300A: (X-TRANSOM, XX-TRANSOM))

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	48000-98J06	トリムアッシ, ハ* ワウイズ* チルト	1		
2	31281-92J10	・ボ* ルト, スルー	4		
3	38100-93J03	・モータアッシ, PTT	1		
4	48500-98J03	・マニホ-ルト* アッシ	1		
5	48582-95E01	・・ファイルタ	1		
6	48605-93J00	・・Oリング* セット	2		
7	48610-93J01	・・ヒ* ストン/ラム	2		
8	48630-98J01	・・ロツト* ガ* イト*	2		
9	48633-93J00	・・・Oリング*	4		
10	48691-93J00	・・チエツクハ* ルフ*	1		
11	48400-98J02	・シリンダ* アッシ	1		
12	48405-93J00	・・Oリング* セット	1		
13	48650-93J00	・・ヒ* ストン, フリー	1		
14	48627-93J00	・・Oリング* セット	1		
15	48572-87J10	・フ* ラグ*	1		
16	48585-95E00	・Oリング*	2		
17	48862-87J20	・ボ* ルト, リザ* -ハ*	2		
18	48864-93J01	・マニユアルハ* ルフ*	1		
19	48583-95E00	・シ* ヨイント, ト* ライフ*	1		
20	48121-93J13	・シヤフト	1		
21	48125-93J00	・Oリング* セット	1		
22	48126-93J00	・ワツシヤ, チルトシリンダ* ツ-マニホ-ルト*	2		
23	48320-93J00	・ハ* ルフ* セツト, アツブ* フ* ロー	1		
24	48573-93J00	・カハ* -	1		
25	48128-93J11	・ボ* ルト	1		
26	48571-93J00	・リザ* -ハ* タンク	1		
27	48311-96J10	ハ* ツト*, トリムシリンダ* ラム	2		
28	48321-93J00	シヤフト, チルトシリンダ* アツハ*	1		
29	29141-93J20	ナツト	2		
30	09162-10005	ロツクワツシヤ	2		
31	09306-24001	ブ* ツシュ	2		
32	09380-21002	スナツブ* リンク*	2		
33	09116-10175	ボ* ルト (10X50)	8		
34	36894-87D00	リ-ト* (L:165)	1		
35	36895-87D01	リ-ト* (L:230)	1		

FIG.337A

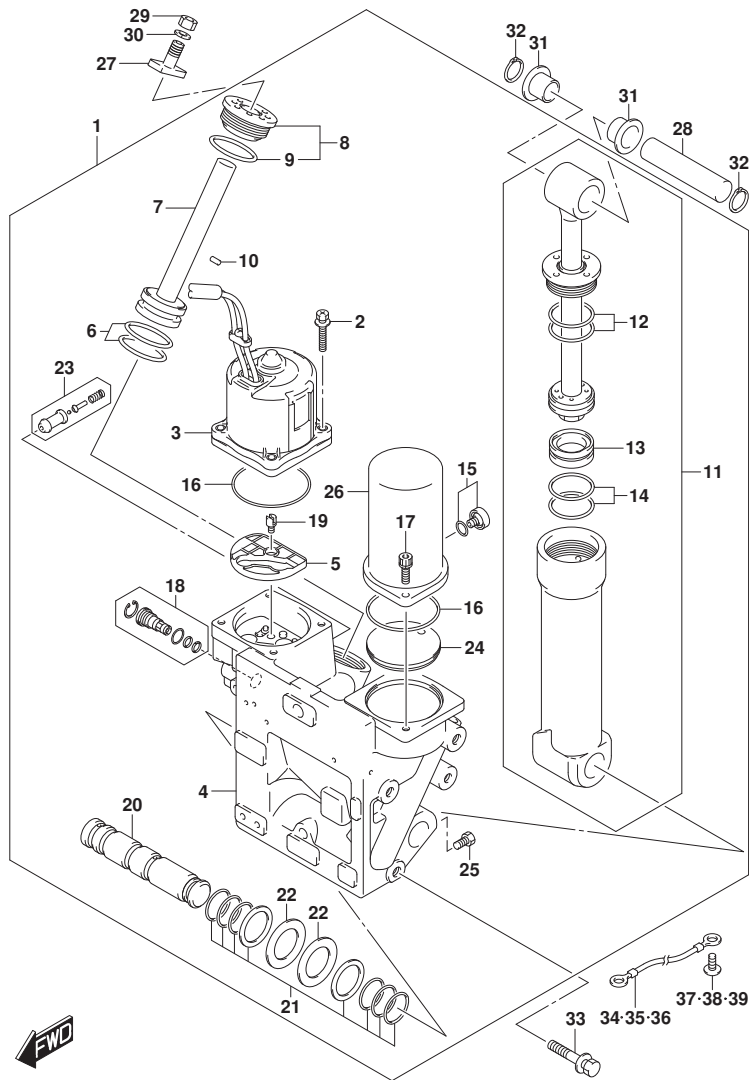


FIG. 337A (1-G-11) トリムシリンダ* (DF300A: (X-TRANSOM, XX-TRANSOM))

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
36	36895-87D01	リット* (L:230)	1		
37	09125-06063	スクリュ (6X10)	1		
38	09125-06063	スクリュ (6X10)	1		
39	09125-06063	スクリュ (6X10)	1		

FIG.337B

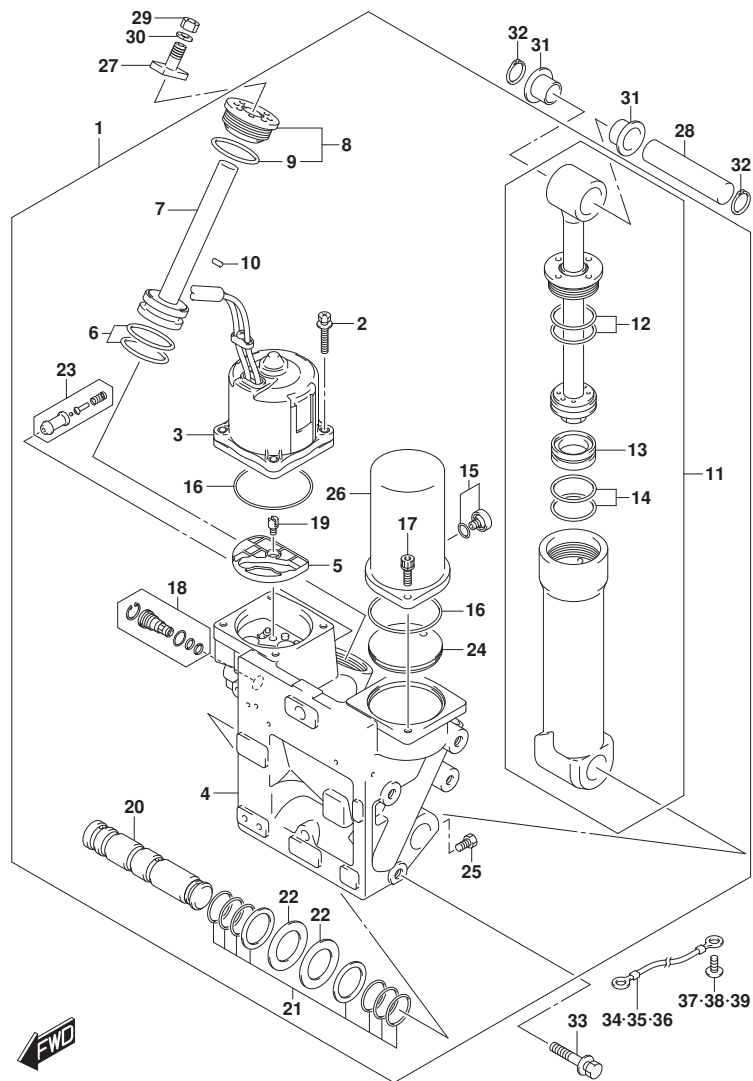


FIG. 337B (1-G-12) トリムシリンダ* (DF250A)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	48000-98J06	トリムアツシ, ハ* ワウイズ* チルト	1		
2	31281-92J10	・ホ* ルト, スルー	4		
3	38100-93J03	・モータアツシ, PTT	1		
4	48500-98J03	・マニホ-ルト* アツシ	1		
5	48582-95E01	・・ファイルタ	1		
6	48605-93J00	・・Oリング* セツト	2		
7	48610-93J01	・・ヒ* ストン/ラム	2		
8	48630-98J01	・・ロツト* ガ* イト*	2		
9	48633-93J00	・・・Oリング*	4		
10	48691-93J00	・・チエツクハ* ルフ*	1		
11	48400-98J02	・シリンダ* アツシ	1		
12	48405-93J00	・・Oリング* セツト	1		
13	48650-93J00	・・ヒ* ストン, フリー	1		
14	48627-93J00	・・Oリング* セツト	1		
15	48572-87J10	・フ* ラグ*	1		
16	48585-95E00	・Oリング*	2		
17	48862-87J20	・ホ* ルト, リザ* -ハ*	2		
18	48864-93J01	・マニアルハ* ルフ*	1		
19	48583-95E00	・シ* ヨイント, ト* ライフ*	1		
20	48121-93J13	・シヤフト	1		
21	48125-93J00	・Oリング* セツト	1		
22	48126-93J00	・ワツシヤ, チルトシリンダ* ツ-マニホ-ルト*	2		
23	48320-93J00	・ハ* ルフ* セツト, アツプ* フ* ロー	1		
24	48573-93J00	・カハ* -	1		
25	48128-93J11	・ホ* ルト	1		
26	48571-93J00	・リザ* -ハ* タンク	1		
27	48311-96J10	ハ* ツト*, トリムシリンダ* ラム	2		
28	48321-93J00	シヤフト, チルトシリンダ* アツハ*	1		
29	29141-93J20	ナツト	2		
30	09162-10005	ロツクワツシヤ	2		
31	09306-24001	ブ* ツシュ	2		
32	09380-21002	スナツプ* リンク*	2		
33	09116-10175	ホ* ルト (10X50)	8		
34	36894-87D00	リ-ト* (L:165)	1		
35	36895-87D01	リ-ト* (L:230)	1		

FIG.337B

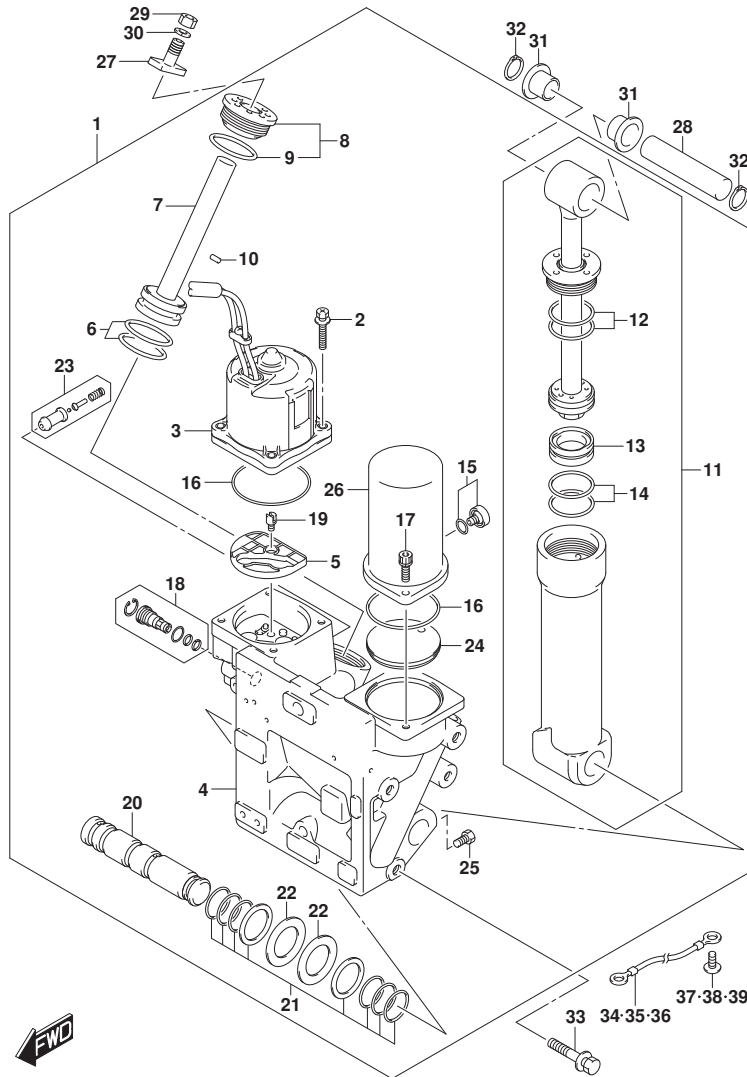


FIG. 337B (1-G-13) トリムシリンダ* (DF250A)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
36	36895-87D01	リット* (L:230)	1		
37	09125-06063	スクリュ (6X10)	1		
38	09125-06063	スクリュ (6X10)	1		
39	09125-06063	スクリュ (6X10)	1		

FIG.337C


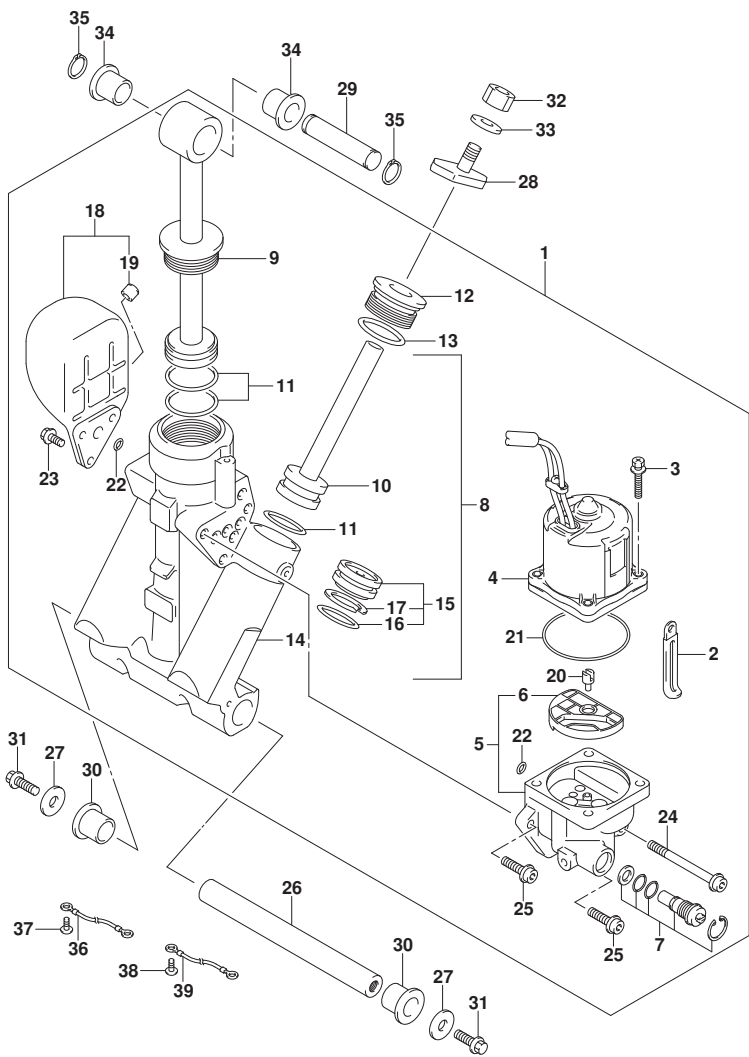


FIG. 337C (1-G-14) トリムシリンダ* (DF300A:L-TRANSOM)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	48000-93L00	トリムアツシ, ハ ^ニ ワ ^ニ ウ ^ニ イ ^ニ チルト	1		
2	29404-93J10	・クランプ	1		
3	31281-92J10	・ボ ^ニ ルト, スルー	4		
4	38100-93L00	・モータアツシ, PTT	1		
5	48502-96J05	・ボ ^ニ ンフ ^ニ アツシ, PTT	1		
6	48582-95E01	・・フイルタ	1		
7	48864-96J10	・・ハ ^ニ ルフ ^ニ セツト, マニュアル	1		
8	48503-93L00	・マニホールド ^ニ サブ ^ニ アツシ	1		
9	48401-93L00	・・ヒ ^ニ ストンアツシ	1		
10	48601-93L00	・・ヒ ^ニ ストン/ラムアツシ	2		
11	48627-95E00	・・Oリング ^ニ セツト	3		
12	48630-96J03	・・ヘツト ^ニ , トリムシリンダ ^ニ	2		
13	48633-94900	・・Oリング ^ニ セツト, ヘツト ^ニ	2		
14	48641-93L00	・・マニホールド ^ニ , PTT	1		
15	48650-94900	・・ヒ ^ニ ストン, フリー	1		
16	48405-93J00	・・Oリング ^ニ セツト	1		
17	48615-97E00	・・Oリング ^ニ セツト, ヒ ^ニ ストン	1		
18	48570-95E01	・リザ ^ニ ーハ ^ニ アツシ	1		
19	48572-95E00	・・キヤツフ	1		
20	48583-95E00	・ジ ^ニ ョイント, ド ^ニ ライブ	1		
21	48585-95E00	・Oリング ^ニ	1		
22	48588-94900	・Oリング ^ニ セツト	1		
23	48861-92J01	・ボ ^ニ ルト, リザ ^ニ ーハ ^ニ	3		
24	48862-92J20	・ボ ^ニ ルト, ボ ^ニ ンフ ^ニ NO. 1	1		
25	48862-92J30	・ボ ^ニ ルト, ボ ^ニ ンフ ^ニ NO. 2	2		
26	48121-93L00	シヤフト, チルトシリンダ ^ニ ロア	1		
27	09160-10161	ワツジヤ	2		
28	48311-96J20	ハ ^ニ ツド ^ニ , トリムシリンダ ^ニ ラム	2		
29	48321-87D03	シヤフト, チルトシリンダ ^ニ アツハ ^ニ	1		
30	48326-95E00	ブ ^ニ ツシュ, チルトシリンダ ^ニ ロア	2		
31	09116-10183	ボ ^ニ ルト (10X35)	2		
32	29141-93J20	ナツト	2		
33	09162-10005	ロツクワツジヤ	2		
34	09306-17001	ブ ^ニ ツシュ	2		
35	09380-17009	スナツフ ^ニ リンク ^ニ	2		

FIG.337C

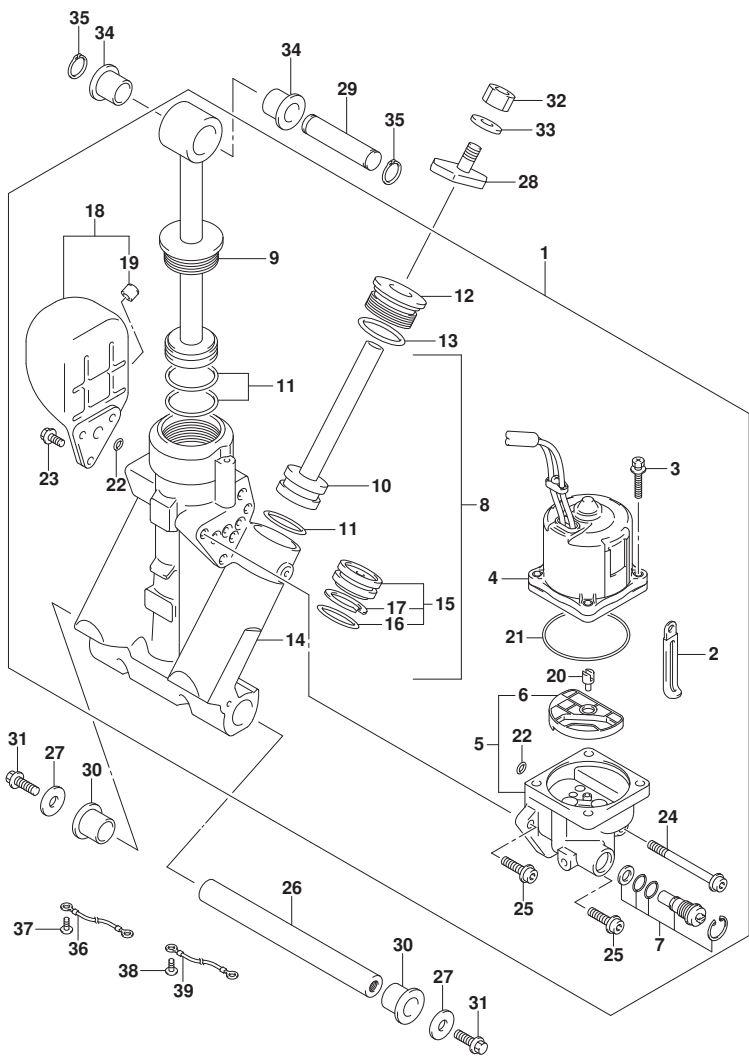

DF300A_000_016_337C
TRIM CYLINDER

FIG. 337C (1-G-15) トリムシリンダ* (DF300A:L-TRANSOM)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
36	36894-87D00	リット* (L:165)	1		
37	09125-06063	スクリュ (6X10)	1		
38	09125-05050	スクリュ (5X8)	1		
39	36895-87D10	リット* (L:310)	1		

DF300A_000_016

FIG.340A

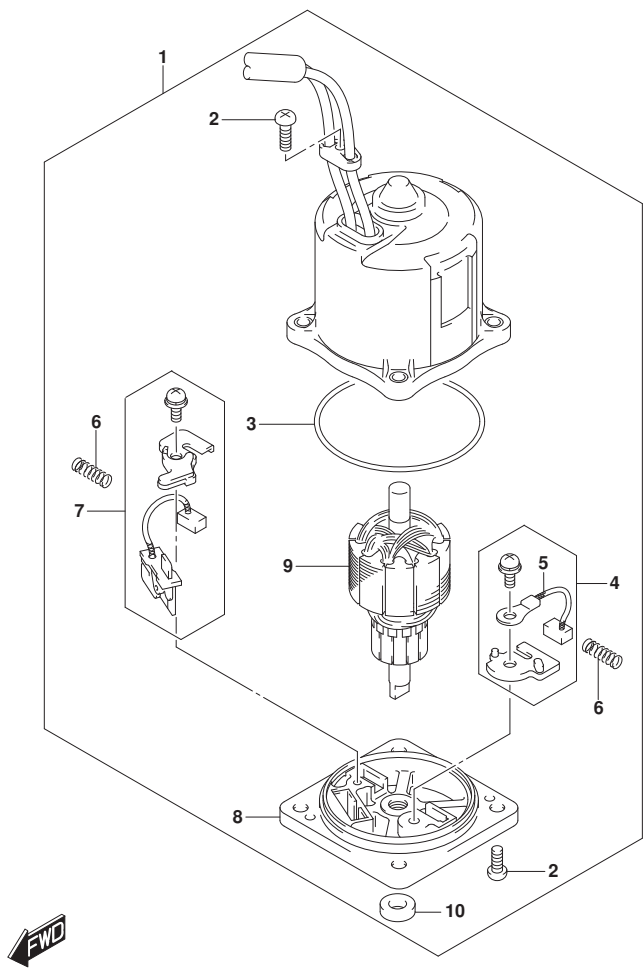


FIG. 340A (1-G-16) PTTモータ (DF300A: (X-TRANSOM, XX-TRANSOM))

見出番号	品番	品名	使用個数	備考	標準作業時間
1	38100-93J03	モータアツシ, PTT	1		
2	31111-94900	・スクリュ	3		
3	31123-94910	・Oリング	1		
4	31133-90J00	・ﾌﾞﾗｼｱツシ	1		
5	31133-94900	・ﾌﾞﾗｼ (+)	1		
6	31135-94900	・ｽﾌﾟﾘﾝｸﾞ	2		
7	31136-90J10	・ﾌﾞﾚｰｶﾞアツシ	1		
8	31173-94910	・ﾎﾙﾀﾞｰ アツシ, ﾌﾞﾗｼ	1		
9	31311-93J00	・ｱﾏﾁｭｱ	1		
10	33799-97E00	・ｼｰﾙ, ｵｲﾙ	1		

FIG.340B


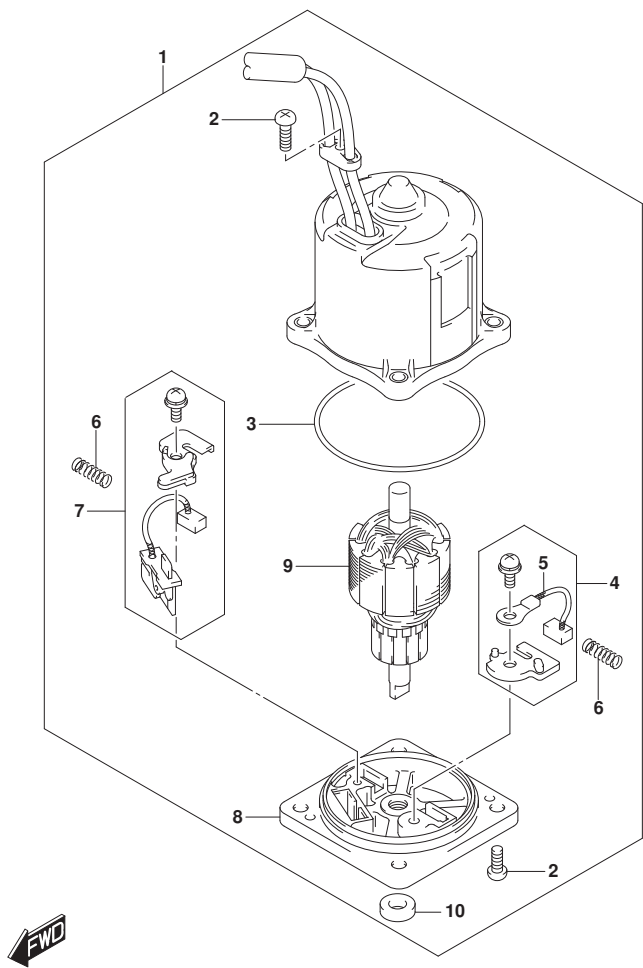


FIG. 340B (1-H-2) PTTモータ (DF250A)

見出番号	品番	品名	使用個数	備考	標準作業時間
1	38100-93J03	モータアツシ, PTT	1		
2	31111-94900	・スクリュ	3		
3	31123-94910	・Oリング	1		
4	31133-90J00	・ﾌﾞﾗｼｱツシ	1		
5	31133-94900	・ﾌﾞﾗｼ(+)	1		
6	31135-94900	・ｽﾌﾟﾘﾝｸﾞ	2		
7	31136-90J10	・ﾌﾞﾚｰｶﾞアツシ	1		
8	31173-94910	・ﾎﾙﾀﾞｰｱツシ, ﾌﾞﾗｼ	1		
9	31311-93J00	・ｱﾏﾁｭｱ	1		
10	33799-97E00	・ｼｰﾙ, ｵｲﾙ	1		

FIG.340C

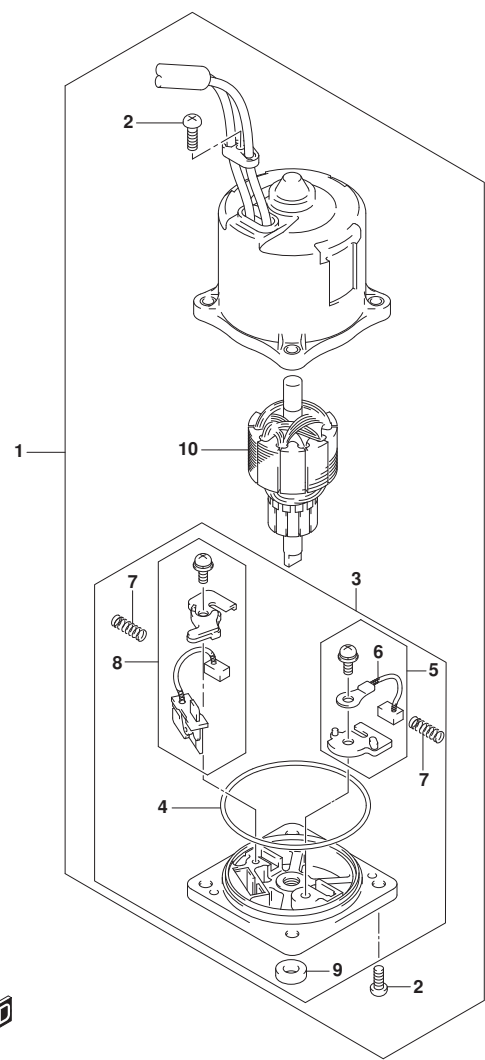


DF300A_000_016_340C
PTT MOTOR

FIG. 340C (1-H-3) PTTモータ (DF300A:L-TRANSOM)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	38100-93L00	モータアツシ, PTT	1		
2	31111-94900	・スクリュ	3		
3	31173-94910	・ホルダ アツシ, フ ラシ	1		
4	31123-94910	・・Oリング	1		
5	31133-90J00	・・フ ラシアツシ	1		
6	31133-94900	・・フ ラシ (+)	1		
7	31135-94900	・・スフ リンク	2		
8	31136-90J10	・・フ レーカアツシ	1		
9	33799-97E00	・・シール, オイル	1		
10	31311-94900	・アマチュ	1		

DF300A_000_016

FIG.401A

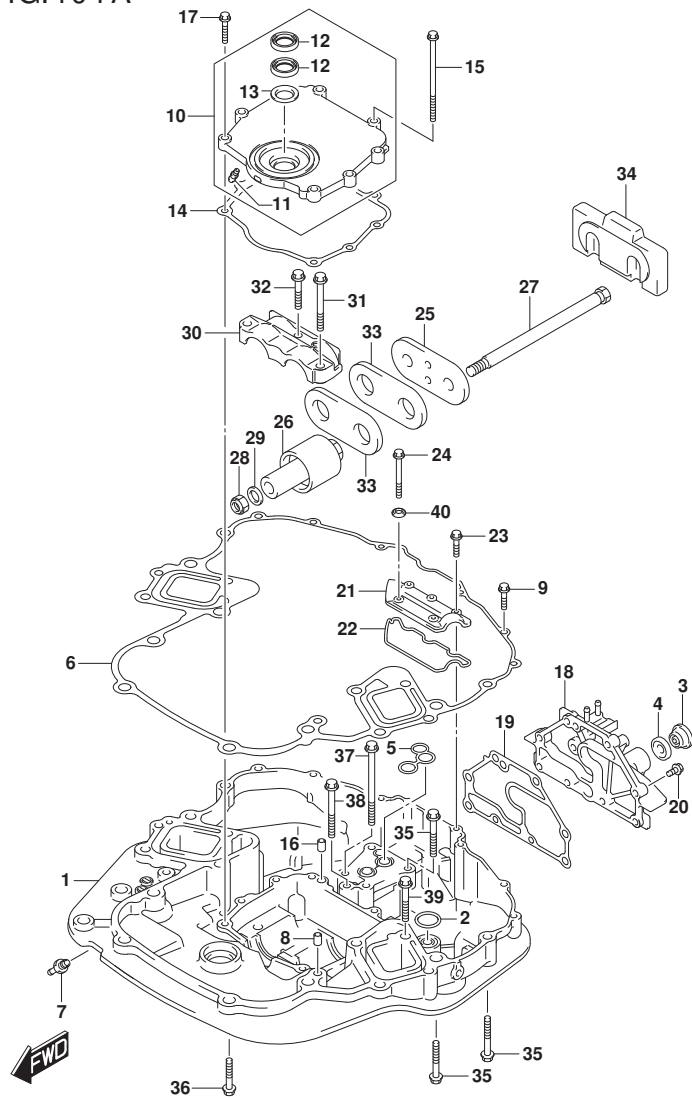

DF300A_000_016_401A
ENGINE HOLDER

FIG. 401A (1-H-4) エンジンホルダー

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	51111-93J20-OEP	ホルダー, エンジン(フック)	1	BODY COLOR: OEP, YK V	
1-2	51111-93J20-Y5S	ホルダー, エンジン(ホワイト)	1	BODY COLOR: Y5S	
2	16519-93J00	シール, エンジンホルダー オイル	1		
3	17913-93J00	ブラケット, ウォーター	1		
4	17914-93J00	ガスケット, ウォーター ブラケット	1		
5	51116-93J00	シール, ウォーターリターン	1		
6	51211-93J00	ガスケット, エンジンホルダー	1		
7	61155-93J20	パイプ, ウォーターインジェクター	1		
8	09206-08001	ピン (8X11)	2		
9	01550-08307	ホルダー	6		
10	51120-93J02	カバー, マウントオイルシール	1		
11	22511-99011	ニップル, グリース	1		
12	51124-93J01	シール, オイル	2		
13	51125-93J00	スクレーパー	1		
14	51123-93J00	ガスケット, マウントオイルシールカバー	1		
15	09103-08109	ホルダー (8X120)	2		
16	09206-08001	ピン (8X11)	2		
17	01550-0830A	ホルダー	6		
18-1	51140-98J00-OEP	カバー, エンジンホルダー (フック)	1	X-TRANSOM, XX-TRANSOM BODY COLOR: OEP, YK V	
18-2	51140-98J00-Y5S	カバー, エンジンホルダー (ホワイト)	1	X-TRANSOM, XX-TRANSOM BODY COLOR: Y5S	
18-3	51140-93J11-OEP	カバー, エンジンホルダー (L) (フック)	1	DF300A: L-TRANSOM BODY COLOR: OEP, YK V	
18-4	51140-93J11-Y5S	カバー, エンジンホルダー (L) (ホワイト)	1	DF300A: L-TRANSOM BODY COLOR: Y5S	
19	51142-93J00	ガスケット, エンジンホルダー カバー	1		
20	09116-08122	ホルダー (8X30)	8		
21	51151-93J00	カバー, エンジンホルダー アツパ	1		
22	51152-93J00	シール, エンジンホルダー アツパ カバー	1		

DF300A_000_016

FIG.401A

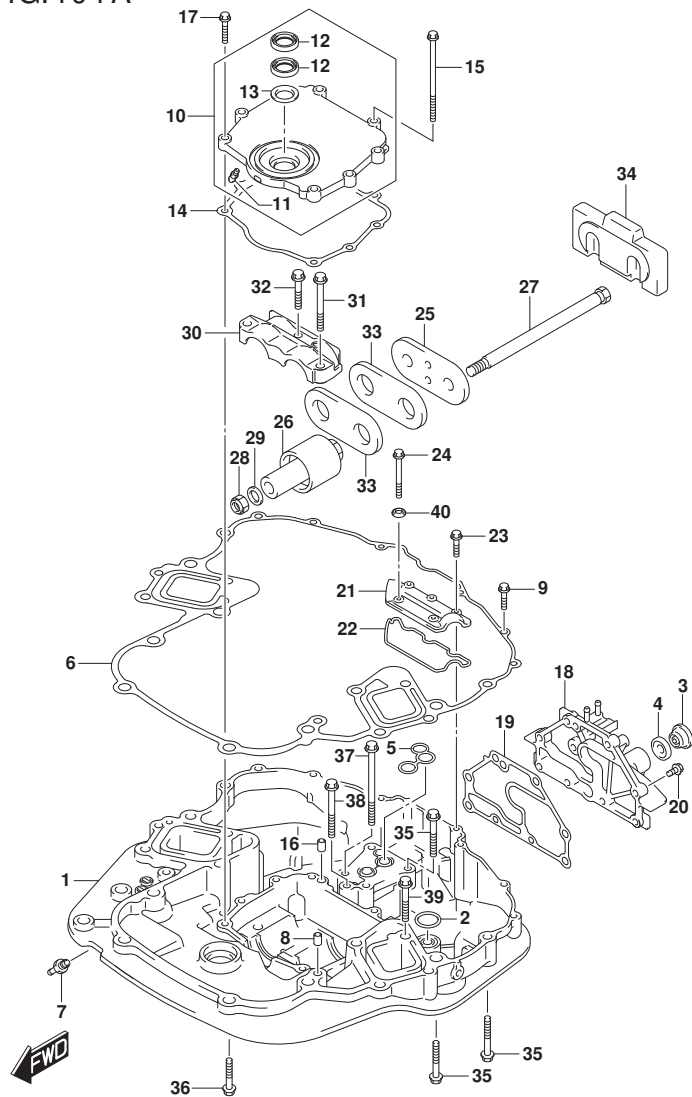


FIG. 401A (1-H-5) エンジンホルダー

見出番号	品番	品名	使用個数	備考	標準作業時間
23	01550-08307	ボルト	3		
24	01550-08607	ボルト	2		
25	54123-93J02	プレート, アツハ [®] マウント	1		
26	54130-93J01	マウント, アツハ [®]	2		
27	09100-14004	ボルト (14X220)	2		
28	09159-14026	ナット	2		
29	09160-15051	ワッシャ (15X24X3)	2		
30	54137-93J02	カバー, アツハ [®] マウント	1		
31	09116-10135	ボルト (10X95)	2		
32	09116-10175	ボルト (10X50)	1		
33-1	54121-98J00	ストツパ [®] , アツハ [®] スラスト	2	X-TRANSOM, XX-TRANSOM	
33-2	54121-93J20	ストツパ [®] , アツハ [®] スラスト	2	DF300A:L-TRANSOM	
34	54140-98J00	マウント, アツハ [®] スラストリハ [®] ース	1		
35	09116-10137	ボルト (10X70)	6		
36	09116-10175	ボルト (10X50)	4		
37	09116-10146	ボルト (10X195)	2		
38	09116-10134	ボルト (10X115)	1		
39	09116-08126	ボルト (8X65)	4		
40	09169-08038	ワッシャ	2		

FIG.405A

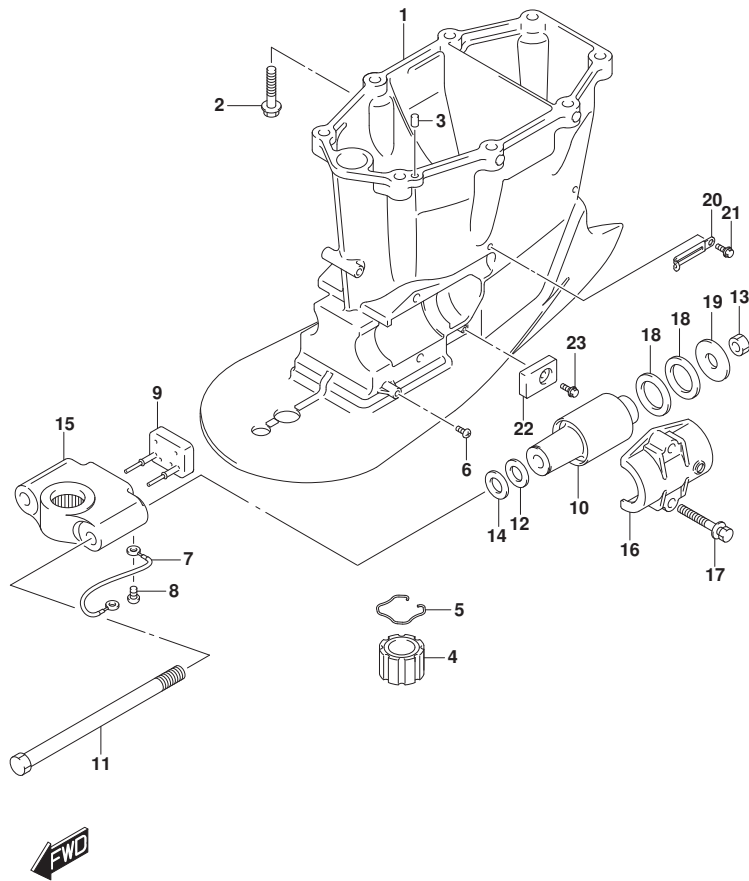


FIG. 405A (1-H-6) ドライブシャフトハウジング* (DF300A:X-TRANSOM)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1-1	52111-98J00-0EP	ハウジング*, ドライブシャフト(X) (ブラック)	1	BODY COLOR:0EP, YK V	
1-2	52111-98J00-Y5S	ハウジング*, ドライブシャフト(X) (ホワイト)	1	BODY COLOR:Y5S	
2	09116-10176	ボルト(10X44)	8		
3	09202-08006	ピン(8X12)	2		
4	57130-87D10	ブッシュ, ドライブシャフト	1		
5	09387-38002	リング	1		
6	09125-06063	スクリュー(6X10)	1		
7	36894-87D00	リート(L:165)	1		
8	09125-06063	スクリュー(6X10)	1		
9	54150-98J00	マウント, ロアスラスト	1		
10	54160-98J00	マウント, ロア	2		
11	09100-14004	ボルト(14X220)	2		
12	09160-16050	ワッシャ(16X32X3)	2		
13	09159-14026	ナット	2		
14	09160-16050	ワッシャ(16X32X3)	2		
15-1	54211-93J00-0EP	ブラケット, ロアマウント(ブラック)	1	BODY COLOR:0EP, YK V	
15-2	54211-93J00-Y5S	ブラケット, ロアマウント(ホワイト)	1	BODY COLOR:Y5S	
16-1	54221-93J00-0EP	カバー-, ロアマウント(ブラック)	2	BODY COLOR:0EP, YK V	
16-2	54221-93J00-Y5S	カバー-, ロアマウント(ホワイト)	2	BODY COLOR:Y5S	
17	09116-10175	ボルト(10X50)	4		
18	54165-98J00	ストッパ*, ロアスラストリバー	4		
19	09160-14066	ワッシャ(14X50X4)	2		
20	29404-93J10	クランプ	1		
21	29103-93J00	ボルト(6X12)	1		
22	55321-93J01	アノード*, プロテクション	1		
23	09116-06236	ボルト(6X16)	1		

FIG.405B

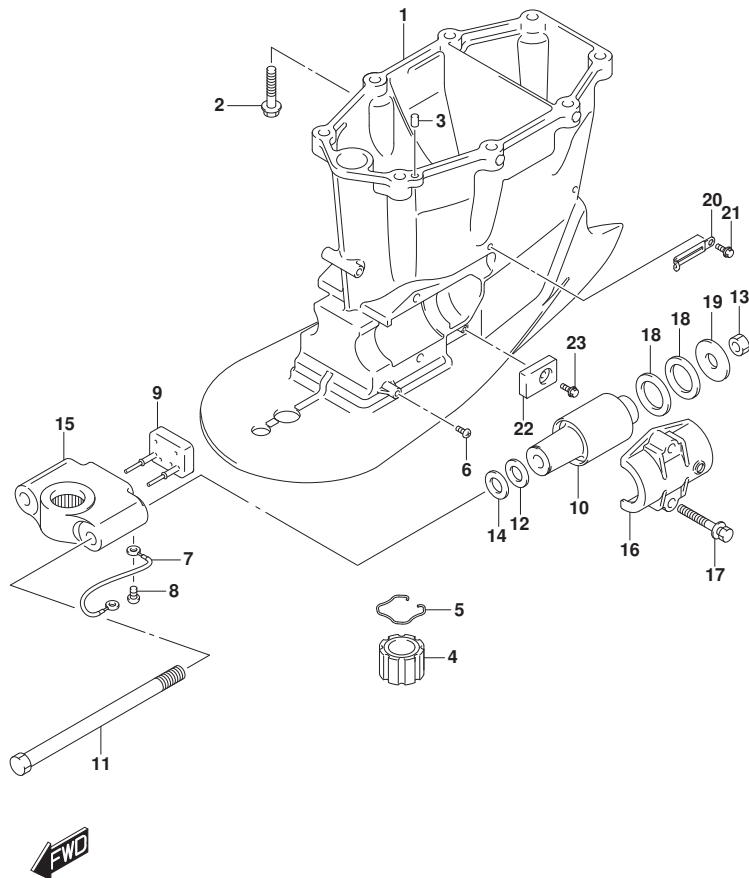


FIG. 405B (1-H-7) ドライブシャフトハウジング* (DF250A:X-TRANSOM)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1-1	52111-98J00-OEP	ハウジング*, ドライブシャフト(X) (ブラック)	1	BODY COLOR:OEP	
1-2	52111-98J00-Y5S	ハウジング*, ドライブシャフト(X) (ホワイト)	1	BODY COLOR:Y5S	
2	09116-10176	ボルト(10X44)	8		
3	09202-08006	ピン(8X12)	2		
4	57130-87D10	ブッシュ, ドライブシャフト	1		
5	09387-38002	リング*	1		
6	09125-06063	スクリュー(6X10)	1		
7	36894-87D00	リート*(L:165)	1		
8	09125-06063	スクリュー(6X10)	1		
9	54150-98J00	マウント, ロアスラスト	1		
10	54160-98J00	マウント, ロア	2		
11	09100-14004	ボルト(14X220)	2		
12	09160-16050	ワッシャ(16X32X3)	2		
13	09159-14026	ナット	2		
14	09160-16050	ワッシャ(16X32X3)	2		
15-1	54211-93J00-OEP	ブラケット, ロアマウント(ブラック)	1	BODY COLOR:OEP	
15-2	54211-93J00-Y5S	ブラケット, ロアマウント(ホワイト)	1	BODY COLOR:Y5S	
16-1	54221-93J00-OEP	カバー, ロアマウント(ブラック)	2	BODY COLOR:OEP	
16-2	54221-93J00-Y5S	カバー, ロアマウント(ホワイト)	2	BODY COLOR:Y5S	
17	09116-10175	ボルト(10X50)	4		
18	54165-98J00	ストッパ*, ロアスラストリハース	4		
19	09160-14066	ワッシャ(14X50X4)	2		
20	29404-93J10	クランプ*	1		
21	29103-93J00	ボルト(6X12)	1		
22	55321-93J01	アノード*, プロテクション	1		
23	09116-06236	ボルト(6X16)	1		

FIG.405C

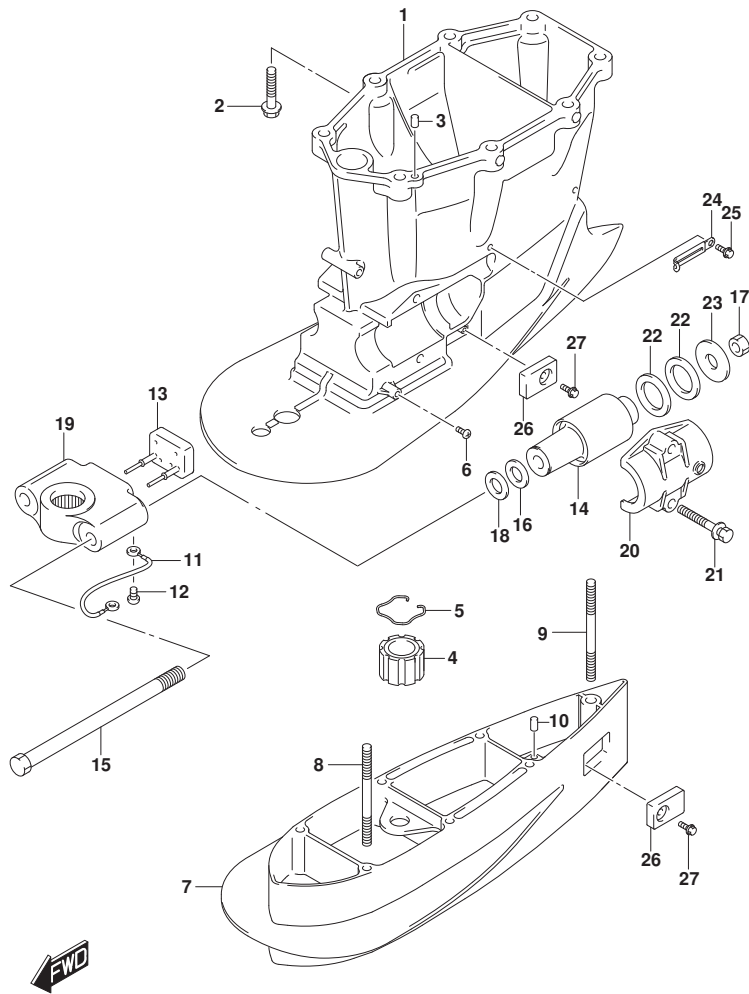


FIG. 405C (1-H-8) ドライブシャフトハウジング* (XX-TRANSOM)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1-1	52111-98J00-0EP	ハウジング*, ドライブシャフト(X) (ﾌﾞﾗｯｸ)	1	BODY COLOR:0EP, YK V	
1-2	52111-98J00-Y5S	ハウジング*, ドライブシャフト(X) (ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
2	09116-10176	ﾎﾞﾙﾄ(10X44)	8		
3	09202-08006	ﾋﾞｰﾝ(8X12)	2		
4	57130-87D10	ﾌﾞﾗｯｼｭ, ﾉﾞﾗｲﾌﾞｼｬﾌﾄ	1		
5	09387-38002	ﾘﾝｸ	1		
6	09125-06063	ｽｸﾘｭ(6X10)	1		
7-1	52131-93J00-0EP	ｹｰｽ, ﾍｸｽﾃﾝｼｮﾝ(XX) (ﾌﾞﾗｯｸ)	1	BODY COLOR:0EP, YK V	
7-2	52131-93J00-Y5S	ｹｰｽ, ﾍｸｽﾃﾝｼｮﾝ(XX) (ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
8	09108-10115	ｽﾀｯﾄﾞ ｵﾞﾙﾄ, 10X167	6		
9	09108-12013	ｽﾀｯﾄﾞ ｵﾞﾙﾄ	1		
10	09202-08006	ﾋﾞｰﾝ(8X12)	2		
11	36894-87D00	ﾘｰﾄﾞ(L:165)	1		
12	09125-06063	ｽｸﾘｭ(6X10)	1		
13	54150-98J00	ﾏｳﾝﾄ, ﾘｵｽﾄﾗｽﾄ	1		
14	54160-98J00	ﾏｳﾝﾄ, ﾘｵ	2		
15	09100-14004	ｵﾞﾙﾄ(14X220)	2		
16	09160-16050	ﾜｯｼﾔ(16X32X3)	2		
17	09159-14026	ﾅｯﾄ	2		
18	09160-16050	ﾜｯｼﾔ(16X32X3)	2		
19-1	54211-93J00-0EP	ﾌﾞﾗｹｯﾄ, ﾘｵﾏｳﾝﾄ(ﾌﾞﾗｯｸ)	1	BODY COLOR:0EP, YK V	
19-2	54211-93J00-Y5S	ﾌﾞﾗｹｯﾄ, ﾘｵﾏｳﾝﾄ(ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
20-1	54221-93J00-0EP	ｶﾊﾞｰ-, ﾘｵﾏｳﾝﾄ(ﾌﾞﾗｯｸ)	2	BODY COLOR:0EP, YK V	
20-2	54221-93J00-Y5S	ｶﾊﾞｰ-, ﾘｵﾏｳﾝﾄ(ﾎﾜｲﾄ)	2	BODY COLOR:Y5S	
21	09116-10175	ｵﾞﾙﾄ(10X50)	4		
22	54165-98J00	ｽﾄｯﾊﾟ-, ﾘｵｽﾄﾗｽﾄﾘﾊﾞｰｽ	4		
23	09160-14066	ﾜｯｼﾔ(14X50X4)	2		
24	29404-93J10	ｸﾗﾝﾌﾟ	1		
25	29103-93J00	ｵﾞﾙﾄ(6X12)	1		
26	55321-93J01	ｱﾉｰﾄﾞ-, ﾌﾞﾗｯｼｭ	2		
27	09116-06236	ｵﾞﾙﾄ(6X16)	2		

FIG.405D

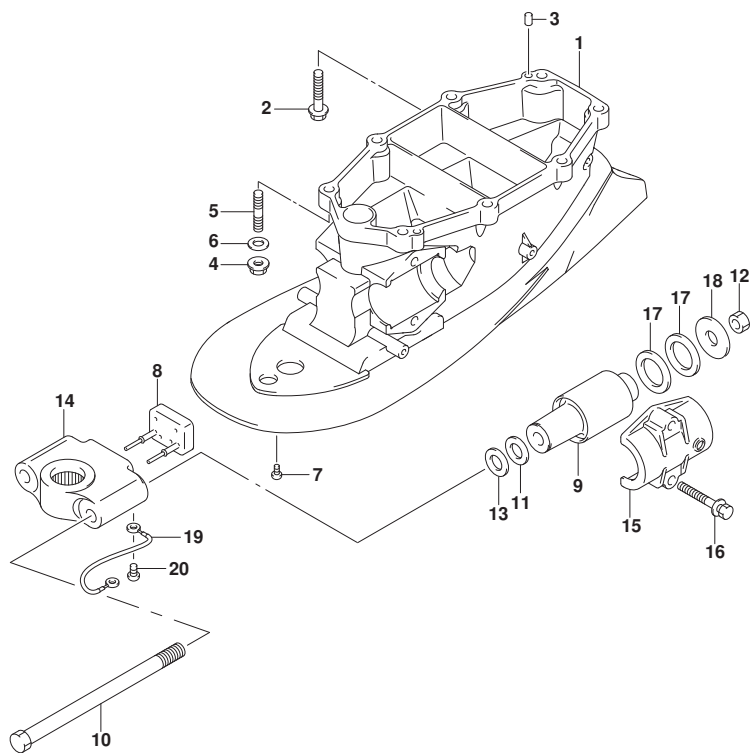


FIG. 405D (1-H-9) ドライブシャフトハウジング (L-TRANSOM)

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	52111-98J20-OEP	ハウジング, ドライブシャフト(L) (ブラック)	1	BODY COLOR: OEP, YK V	
1-2	52111-98J20-Y5S	ハウジング, ドライブシャフト(L) (ホワイト)	1	BODY COLOR: Y5S	
2	09116-10176	ボルト(10X44)	6		
3	09202-08006	ピン(8X12)	2		
4	29141-93J20	ナット	2		
5	09108-10150	スタッドボルト	2		
6	09160-10141	ワッシャ(10.5X19X2)	2		
7	09125-06063	スクリュ(6X10)	1		
8	54150-98J00	マウント, ロアスラスト	1		
9	54160-98J00	マウント, ロア	2		
10	09100-14004	ボルト(14X220)	2		
11	09160-16050	ワッシャ(16X32X3)	2		
12	09159-14026	ナット	2		
13	09160-16050	ワッシャ(16X32X3)	2		
14-1	54211-93J00-OEP	ブラケット, ロアマウント(ブラック)	1	BODY COLOR: OEP, YK V	
14-2	54211-93J00-Y5S	ブラケット, ロアマウント(ホワイト)	1	BODY COLOR: Y5S	
15-1	54221-93J00-OEP	カバー, ロアマウント(ブラック)	2	BODY COLOR: OEP, YK V	
15-2	54221-93J00-Y5S	カバー, ロアマウント(ホワイト)	2	BODY COLOR: Y5S	
16	09116-10175	ボルト(10X50)	4		
17	54165-98J00	ストッパ, ロアスラストリハース	4		
18	09160-14066	ワッシャ(14X50X4)	2		
19	36894-87D00	リート(L:165)	1		
20	09125-06063	スクリュ(6X10)	1		

FIG.407A

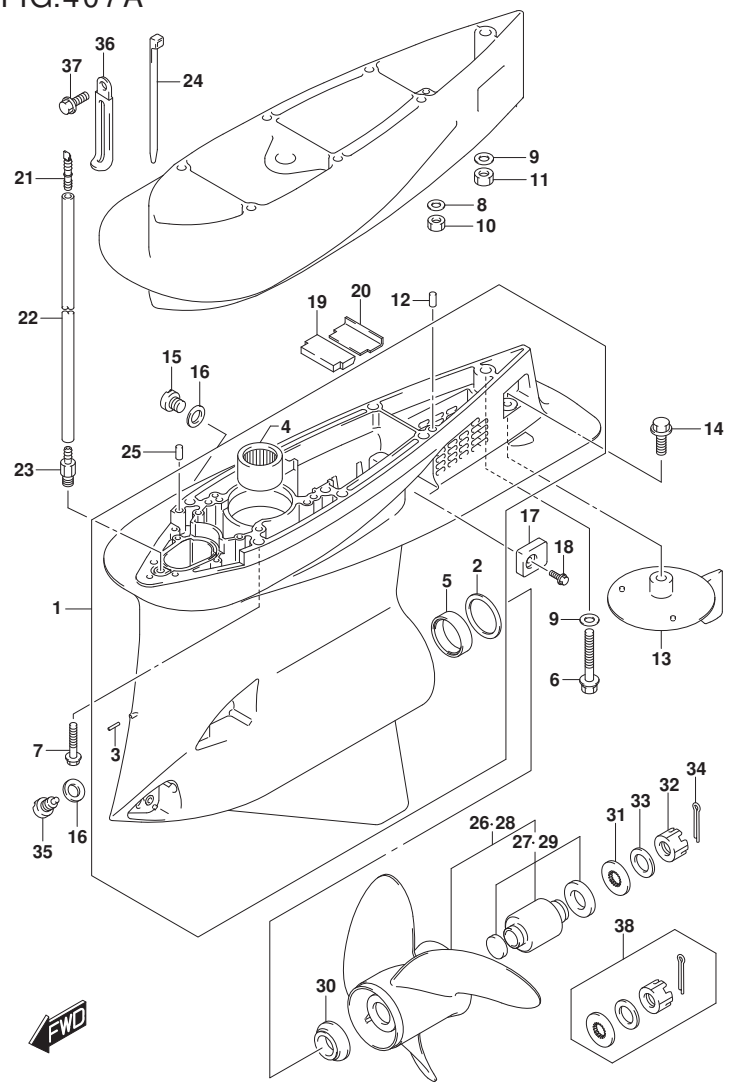


FIG. 407A (1-H-10) ギヤケース (SEE NOTE 1)

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	55110-93L00-0EP	ケース, ギヤ(ブラック)	1	BODY COLOR:0EP, YK V	
1-2	55110-93L00-Y5S	ケース, ギヤ(ホワイト)	1	BODY COLOR:Y5S	
2	55118-93L00	・ワッシャ, フォワード・ギヤスラスト	1		
3	09206-03001	・ブッシュ(2X3X11)	1		
4	09263-35048	・ベアリング (35X56X37)	1		
5	09263-80001	・ベアリング (80X100X30)	1		
6	09100-12052	ホルト(12X70)	1	X-TRANSOM	
7	09116-10150	ホルト(10X55)	6	X-TRANSOM	
8	09160-10141	ワッシャ(10. 5X19X2)	6	XX-TRANSOM	
9	09160-12066	ワッシャ(12. 5X22X2. 5)	1		
10	29141-93J20	ナット	6	XX-TRANSOM	
11	09159-12014	ナット	1	XX-TRANSOM	
12	09202-08006	ピン(8X12)	2		
13-1	55125-93L00-0EP	タブ, トリム(ブラック)	1	BODY COLOR:0EP, YK V	
13-2	55125-93L00-Y5S	タブ, トリム(ホワイト)	1	BODY COLOR:Y5S	
14	09116-08137	ホルト(8X22)	1		
15	55128-93J10	ブラグ, トレーン	1		
16	09168-10034	ガスケット(9. 5X16. 5X2)	2		
17	55321-93J01	アノード, プロテクション	2		
18	09116-06236	ホルト(6X16)	2		
19	55332-98J00	ラバー, エキゾーストシール	1		
20	55333-98J00	プレート, エキゾーストシール	1		
21	55127-87D00	ブラグ, エンジン	1		
22-1	09355-40805-00B	ホース(4X8X2000)	1	L:2000>1300 FROM 25003P-61000 1 UPTO 25003P-61069 1 FROM 30002P-61000 1 UPTO 30002P-61027 7	
22-2	09355-40805-600	ホース(4X8X600)	1	X-TRANSOM	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.407A

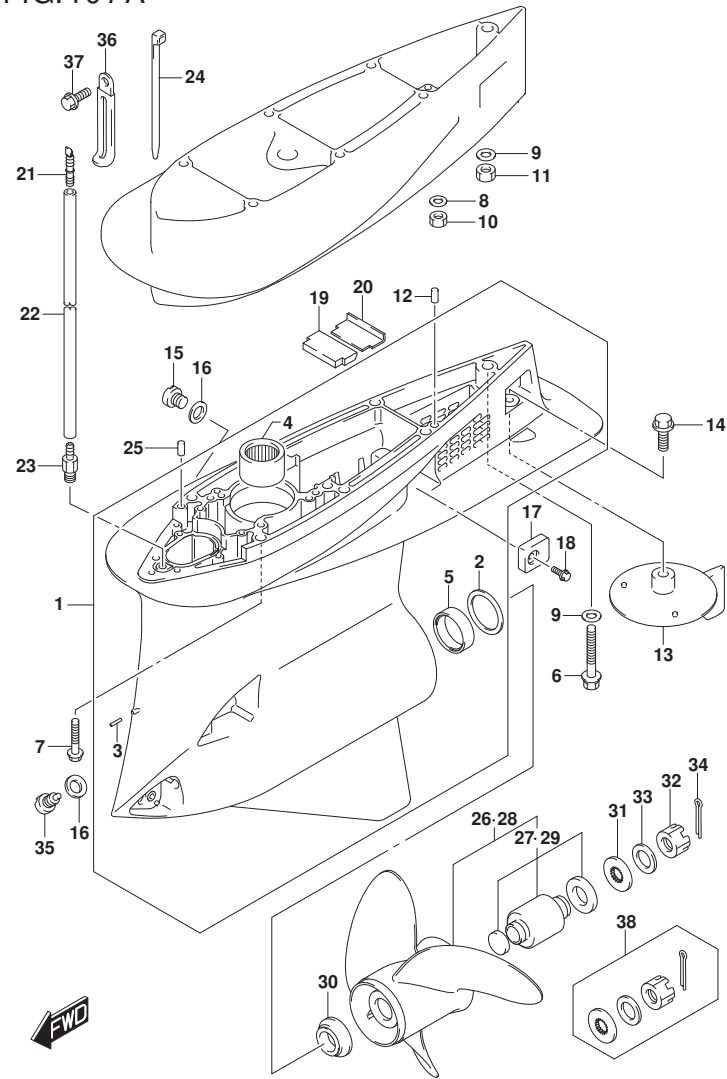


FIG. 407A (1-H-11) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
				L: 600>50	
				FROM 25003P-61069	
				2	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61027	
				8	
				UPTO 30002P-61213	
				2	
22-3	09355-40805-600	ホース (4X8X600)	1	XX-TRANSOM	
				L: 600>180	
				FROM 25003P-61069	
				2	
				UPTO 25003P-61059	
				1	
				FROM 30002P-61027	
				8	
				UPTO 30002P-61213	
				2	
23	09362-09008	ユニオン	1		
24	09407-10404	クランプ (L: 100)	2		
25	09202-06031	ピン (6X12)	2		
26-1	58200-93L00	ブレード (3X16X17)	1	W/REGULAR ROTATIO N	
26-2	58200-93L10	ブレード (3X16X18-1/2)	1	W/REGULAR ROTATIO N	
26-3	58200-93L20	ブレード (3X16X20)	1	W/REGULAR ROTATIO N	
26-4	58200-93L30	ブレード (3X16X21-1/2)	1	W/REGULAR ROTATIO N	
26-5	58200-93L40	ブレード (3X16X23)	1	W/REGULAR ROTATIO N	
26-6	58200-93L50	ブレード (3X16X24-1/2)	1	W/REGULAR ROTATIO N	
26-7	58200-93L80	ブレード (3X16X15)	1	W/REGULAR ROTATIO N	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.407A

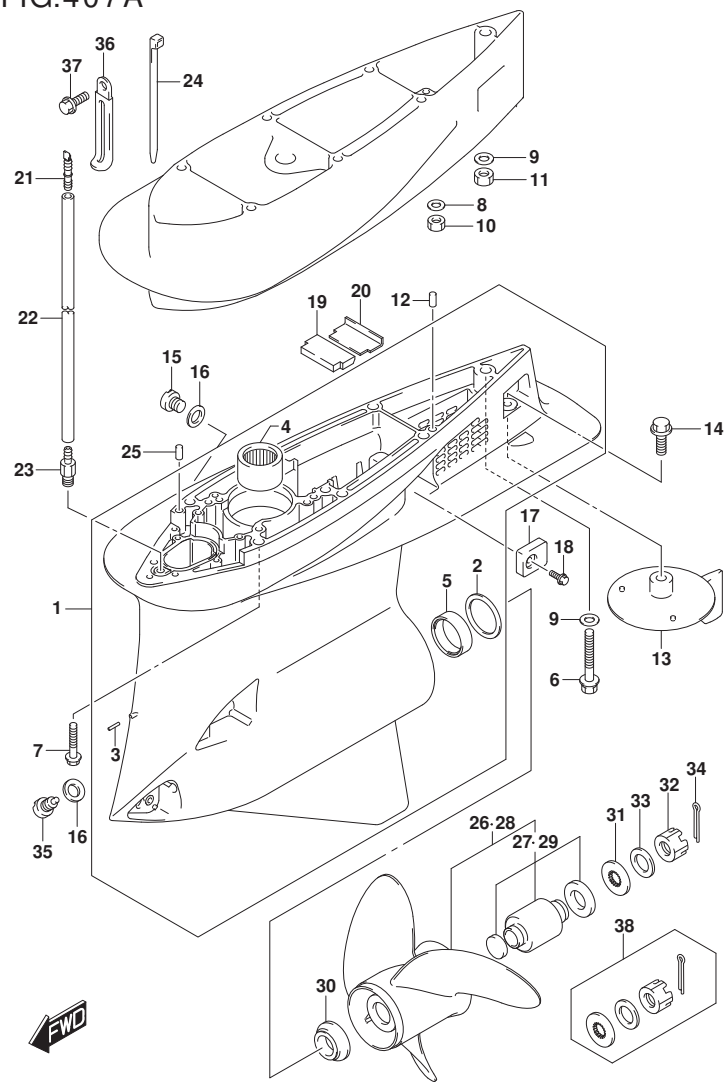


FIG. 407A (1-H-12) ギヤケース (SEE NOTE 1)

見出番号	品番	品名	使用個数	備考	標準作業時間
				N	
26-8	58200-93L80	ﾌﾞﾛｯｸ (3X16X15)	1	OPT, W/REGULAR ROTATION	
26-9	58300-93J00	ﾌﾞﾛｯｸ (4X15-1/4X18)	1	OPT, W/REGULAR ROTATION	
26-10	58300-93J10	ﾌﾞﾛｯｸ (4X15-1/4X20)	1	OPT, W/REGULAR ROTATION	
26-11	58300-93J20	ﾌﾞﾛｯｸ (4X15-1/4X22)	1	W/REGULAR ROTATION	
26-12	58300-93J30	ﾌﾞﾛｯｸ (4X15-1/4X24)	1	OPT, W/REGULAR ROTATION	
26-13	58300-93J40	ﾌﾞﾛｯｸ (4X15-1/4X26)	1	OPT, W/REGULAR ROTATION	
26-14	58200-93LA0	ﾌﾞﾛｯｸ (3X16X18-1/2), C/R	1	W/COUNTER ROTATION	
26-15	58200-93LB0	ﾌﾞﾛｯｸ (3X16X20), C/R	1	W/COUNTER ROTATION	
26-16	58200-93LC0	ﾌﾞﾛｯｸ (3X16X21-1/2), C/R	1	W/COUNTER ROTATION	
26-17	58200-93LD0	ﾌﾞﾛｯｸ (3X16X23), C/R	1	W/COUNTER ROTATION	
26-18	58200-93LE0	ﾌﾞﾛｯｸ (3X16X17), C/R	1	W/COUNTER ROTATION	
26-19	58200-93LF0	ﾌﾞﾛｯｸ (3X16X24-1/2), C/R	1	OPT, W/COUNTER ROTATION	
26-20	58300-93JA0	ﾌﾞﾛｯｸ (4X15-1/4X20), C/R	1	OPT, W/COUNTER ROTATION	
26-21	58300-93JB0	ﾌﾞﾛｯｸ (4X15-1/4X22), C/R	1	OPT, W/COUNTER ROTATION	
26-22	58300-93JC0	ﾌﾞﾛｯｸ (4X15-1/4X24), C/R	1	OPT, W/COUNTER ROTATION	
26-23	58300-93JD0	ﾌﾞﾛｯｸ (4X15-1/4X26), C/R	1	OPT, W/COUNTER ROTATION	
27	58105-93J10	ﾌﾞﾛｯｸｼｬﾌﾄ, ﾌﾞﾛｯｸ	1		
28-1	58200-96J00	ﾌﾞﾛｯｸ (3X15-1/2X17)	1	OPT, W/REGULAR ROTATION	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.407A

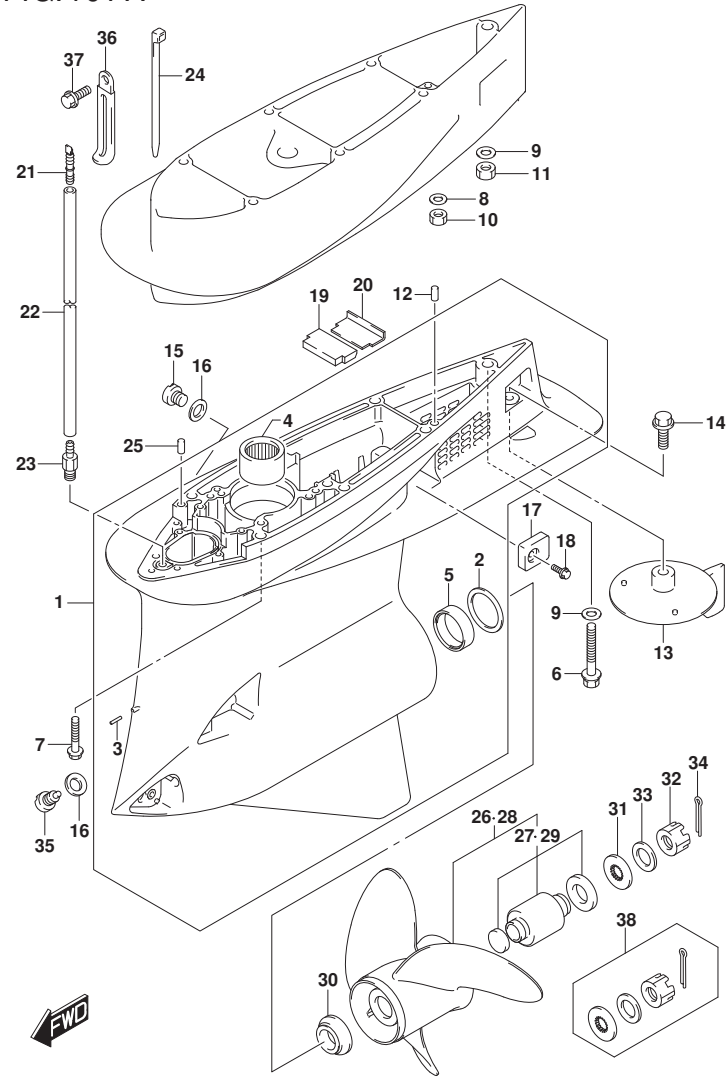


FIG. 407A (1-H-13) ギヤケース (SEE NOTE 1)

見出番号	品番	品名	使用個数	備考	標準作業時間
				AT10N	
28-2	58200-96J10	ﾌﾞﾛｯｸ (3X15-1/4X19)	1	OPT, W/REGULAR ROT	
				AT10N	
28-3	58200-96J20	ﾌﾞﾛｯｸ (3X15X21)	1	OPT, W/REGULAR ROT	
				AT10N	
28-4	58200-96J30	ﾌﾞﾛｯｸ (3X14-3/4X23)	1	OPT, W/REGULAR ROT	
				AT10N	
28-5	58200-96J40	ﾌﾞﾛｯｸ (3X14-1/2X25)	1	OPT, W/REGULAR ROT	
				AT10N	
28-6	58200-96J50	ﾌﾞﾛｯｸ (3X14-1/2X27)	1	OPT, W/REGULAR ROT	
				AT10N	
28-7	58200-96JA0	ﾌﾞﾛｯｸ (3X15-1/2X17), C/R	1	OPT, W/COUNTER ROT	
				AT10N	
28-8	58200-96JB0	ﾌﾞﾛｯｸ (3X15-1/4X19), C/R	1	OPT, W/COUNTER ROT	
				AT10N	
28-9	58200-96JC0	ﾌﾞﾛｯｸ (3X15X21), C/R	1	OPT, W/COUNTER ROT	
				AT10N	
28-10	58200-96JD0	ﾌﾞﾛｯｸ (3X14-3/4X23), C/R	1	OPT, W/COUNTER ROT	
				AT10N	
28-11	58200-96JE0	ﾌﾞﾛｯｸ (3X14-1/2X25), C/R	1	OPT, W/COUNTER ROT	
				AT10N	
28-12	58200-96JF0	ﾌﾞﾛｯｸ (3X14-1/2X27), C/R	1	OPT, W/COUNTER ROT	
				AT10N	
29	58105-93J10	ﾌﾞﾛｯｸｼｰﾄﾞ, ﾌﾞﾛｯｸ	1		
30	57632-93L01	ｽﾄｯﾊﾟ, ﾌﾞﾛｯｸｼｰﾄﾞ	1		
31	57633-87D30	ｽﾍﾟｰｻ, ﾅｯﾄ (T: 6. 0)	1		
32	09141-18005	ﾅｯﾄ	1		
33	09160-18028	ワｯｼﾞ (18. 5X31X1)	1		
34	09204-03003	ｺﾅﾂﾍﾞﾝ	1		
35	55128-93L00	ﾌﾞﾗｸﾞ, ﾉｰﾚﾝ	1		
36	29404-93J10	ｸﾗﾝﾌﾟ	1	UPTO 201509 FROM 25003P-61000 1 UPTO 25003P-61069 1	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132

FIG.407A

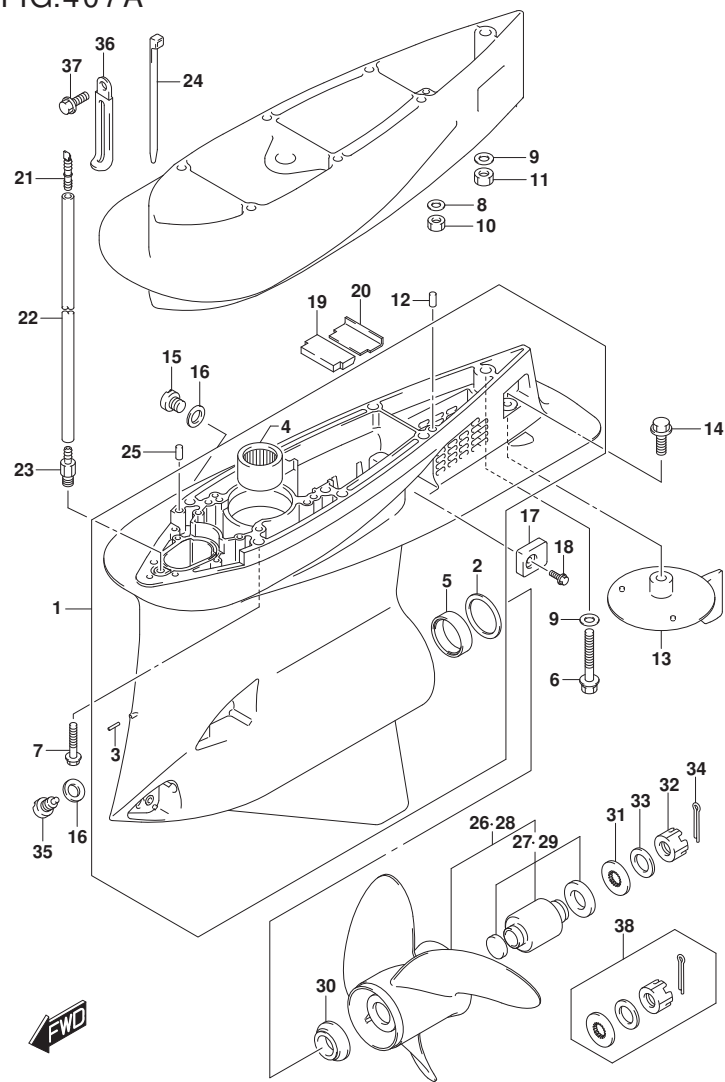


FIG. 407A (1-H-14) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
				FROM 30002P-61000	
			1		
				UPTO 30002P-61027	
			7		
37	01550-06127	ボルト	1		
38	57630-92E00	キット, フロムラナット	1	オプション	

NOTE 1:
FROM 25003P-610001 UPTO 25003P-610591
FROM 30002P-610001 UPTO 30002P-612132
NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B

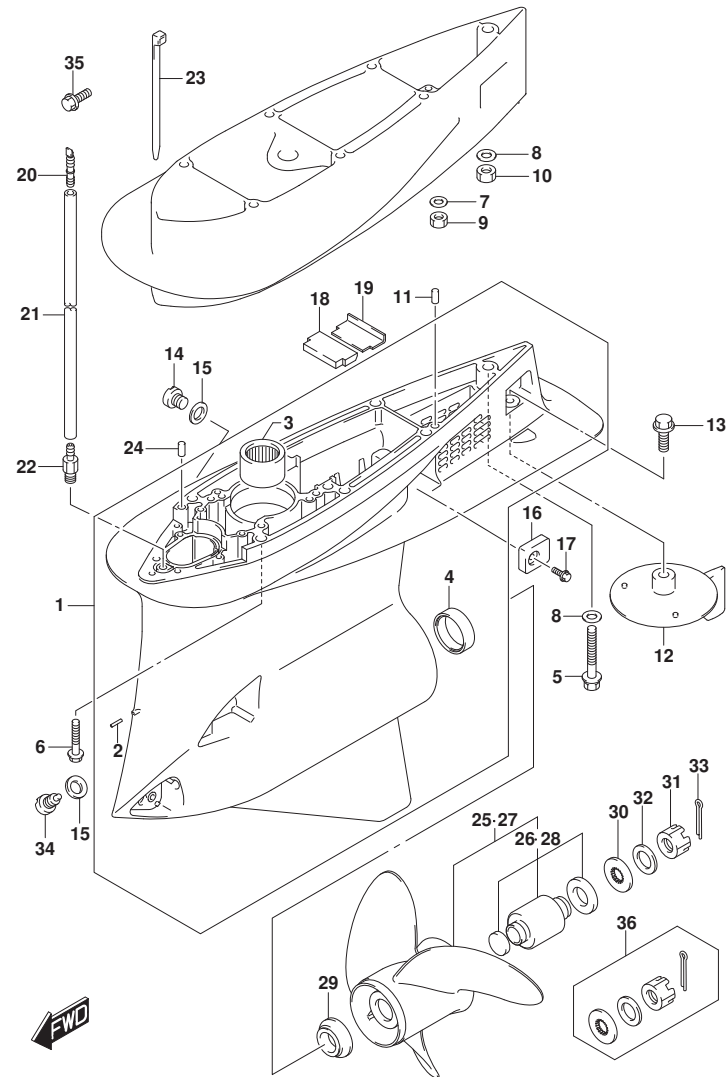


FIG. 407B (1-H-15) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1-1	55110-93L10-0EP	ケース, ギヤ(ブラック)	1	BODY COLOR: 0EP, YK V FROM 25003P-61059	2
				FROM 30002P-61213	3
1-2	55110-93L10-Y5S	ケース, ギヤ(ホワイト)	1	BODY COLOR: Y5S FROM 25003P-61059	2
				FROM 30002P-61213	3
2	09206-03001	・ブ* ツシュ (2X3X11)	1	FROM 25003P-61059	2
				FROM 30002P-61213	3
3	09263-35048	・ベ* アリソグ* (35X56X37)	1	FROM 25003P-61059	2
				FROM 30002P-61213	3
4	09263-80001	・ベ* アリソグ* (80X100X30)	1	FROM 25003P-61059	2
				FROM 30002P-61213	3
5	09100-12052	ホ* ルト (12X70)	1	X-TRANSOM, DF300A: L-TRANSOM FROM 25003P-61059	2
				FROM 30002P-61213	3
6	09116-10150	ホ* ルト (10X55)	6	X-TRANSOM, DF300A: L-TRANSOM FROM 25003P-61059	2
				FROM 30002P-61213	3

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B

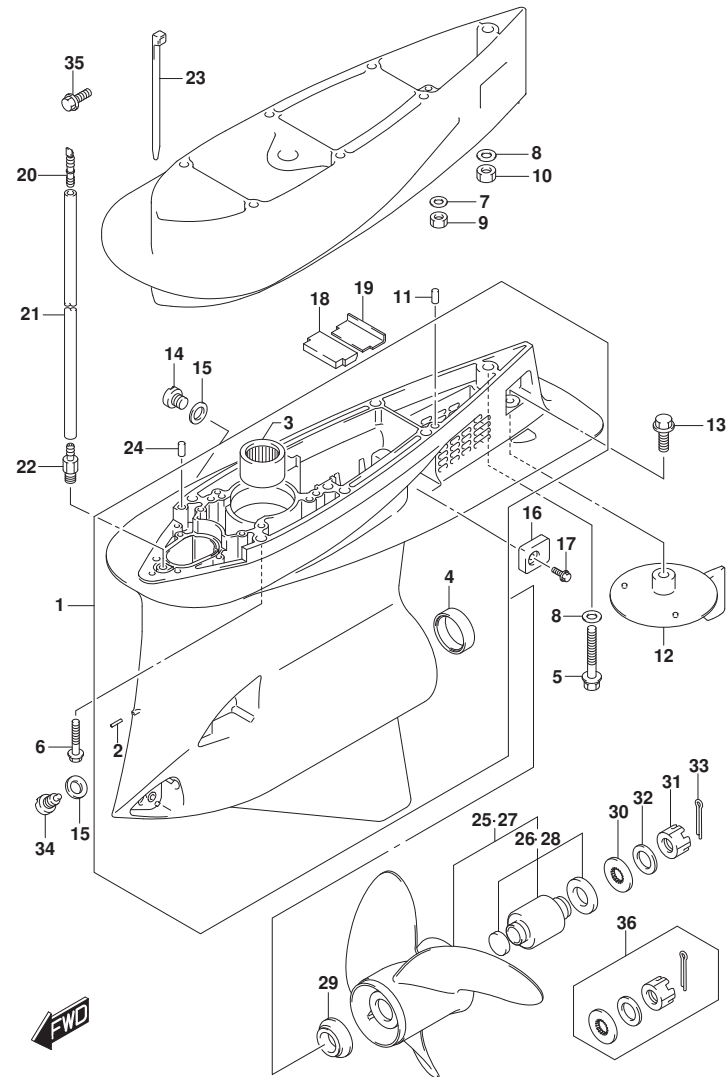


FIG. 407B (1-H-16) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
7	09160-10141	ワッシャ (10. 5X19X2)	6	XX-TRANSOM FROM 25003P-61059 2 FROM 30002P-61213 3	
8	09160-12066	ワッシャ (12. 5X22X2. 5)	1	FROM 25003P-61059 2 FROM 30002P-61213 3	
9	29141-93J20	ナット	6	XX-TRANSOM FROM 25003P-61059 2 FROM 30002P-61213 3	
10	09159-12014	ナット	1	XX-TRANSOM FROM 25003P-61059 2 FROM 30002P-61213 3	
11	09202-08006	ピン (8X12)	2	FROM 25003P-61059 2 FROM 30002P-61213 3	
12-1	55125-93L00-0EP	タブ, トリム (ブラック)	1	BODY COLOR: 0EP, YK V FROM 25003P-61059 2 FROM 30002P-61213 3	
12-2	55125-93L00-Y5S	タブ, トリム (ホワイト)	1	BODY COLOR: Y5S FROM 25003P-61059 2 FROM 30002P-61213 3	
13	09116-08137	ホルト (8X22)	1	FROM 25003P-61059	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B

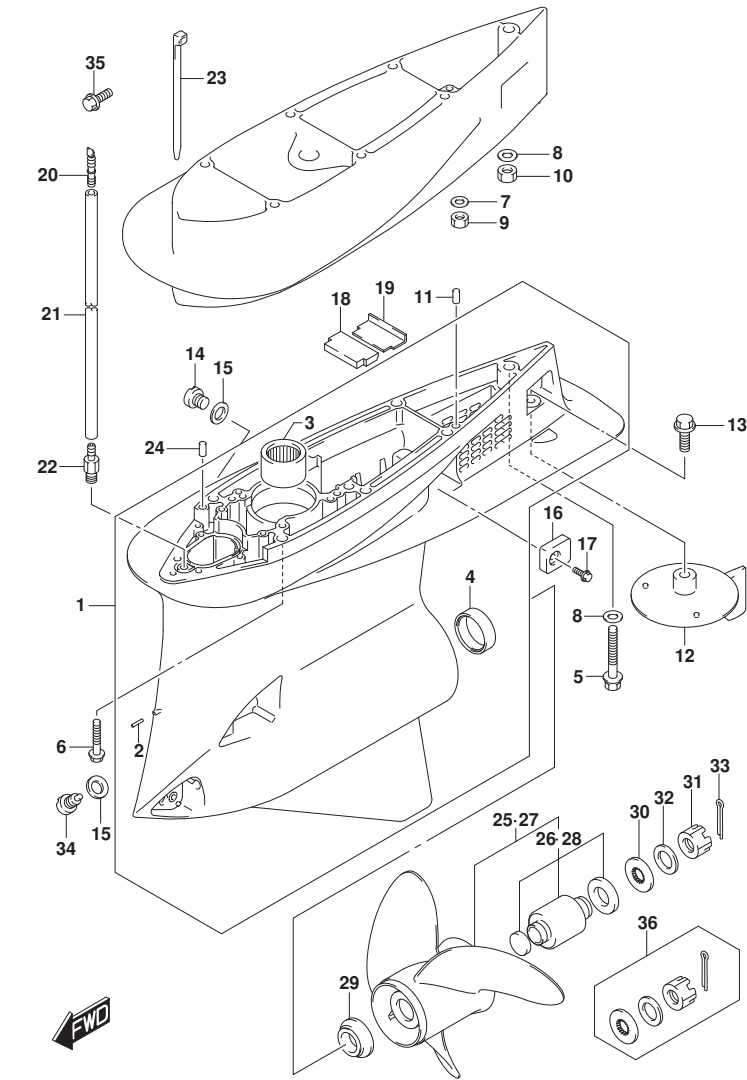


FIG. 407B (1-I-2) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
			2	FROM 30002P-61213	
			3	FROM 25003P-61059	
14	55128-93J10	プラグ, ドレーン	1	FROM 30002P-61213	
			2	FROM 25003P-61059	
15	09168-10034	ガスケット (9. 5X16. 5X2)	2	FROM 30002P-61213	
			3	FROM 25003P-61059	
16	55321-93J01	アノード, プロテクション	2	FROM 30002P-61213	
			2	FROM 25003P-61059	
17	09116-06236	ホルト (6X16)	2	FROM 30002P-61213	
			3	FROM 25003P-61059	
18	55332-98J00	ラバー, エキゾーストシール	1	FROM 30002P-61213	
			2	FROM 25003P-61059	
19	55333-98J00	プレート, エキゾーストシール	1	FROM 30002P-61213	
			2	FROM 25003P-61059	
20	55127-87D00	プラグ, ユニオン	1	FROM 30002P-61213	
			2	FROM 25003P-61059	
21-1	09355-40805-600	ホース (4X8X600)	1	FROM 30002P-61213	
			3	X-TRANSOM, DF300A: L-TRANSOM	
				L: 600>50	
				FROM 25003P-61059	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B

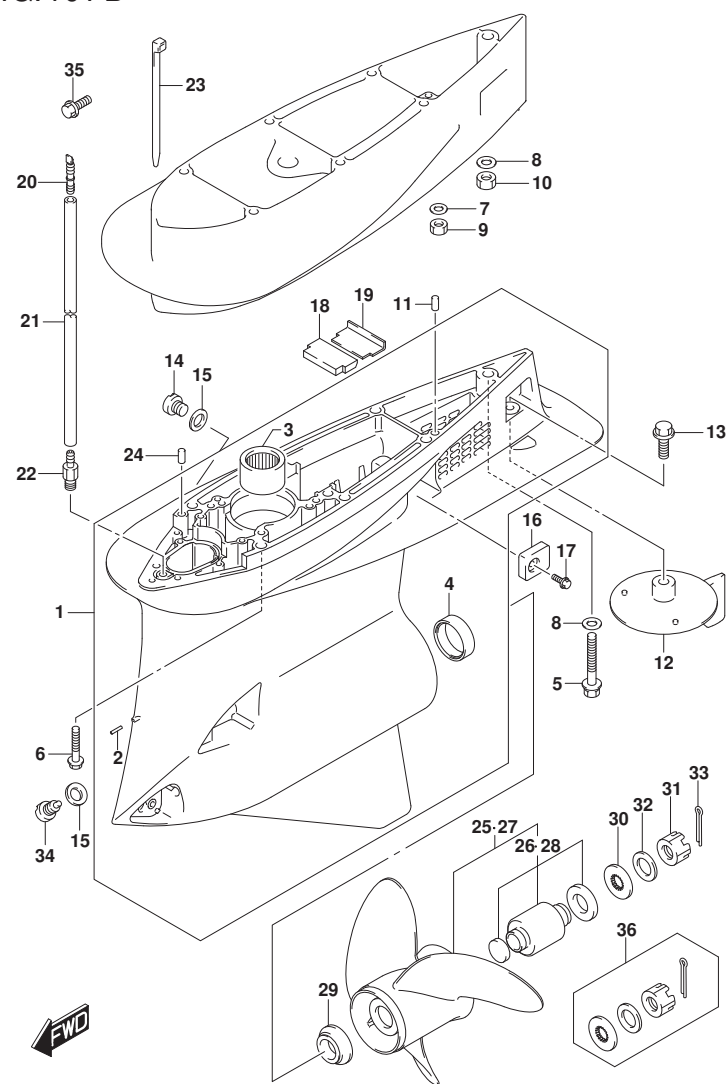


FIG. 407B (1-I-3) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
			2	FROM 30002P-61213	
			3		
21-2	09355-40805-600	ホース(4X8X600)	1	XX-TRANSOM L:600>180 FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
22	09362-09008	ユニオン	1	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
23	09407-10404	クランプ (L:100)	2	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
24	09202-06031	ピン(6X12)	2	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
25-1	58200-93L00	ブローラ(3X16X17)	1	W/REGULAR ROTATIO N FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
25-2	58200-93L10	ブローラ(3X16X18-1/2)	1	W/REGULAR ROTATIO N FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
25-3	58200-93L20	ブローラ(3X16X20)	1	W/REGULAR ROTATIO N	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B

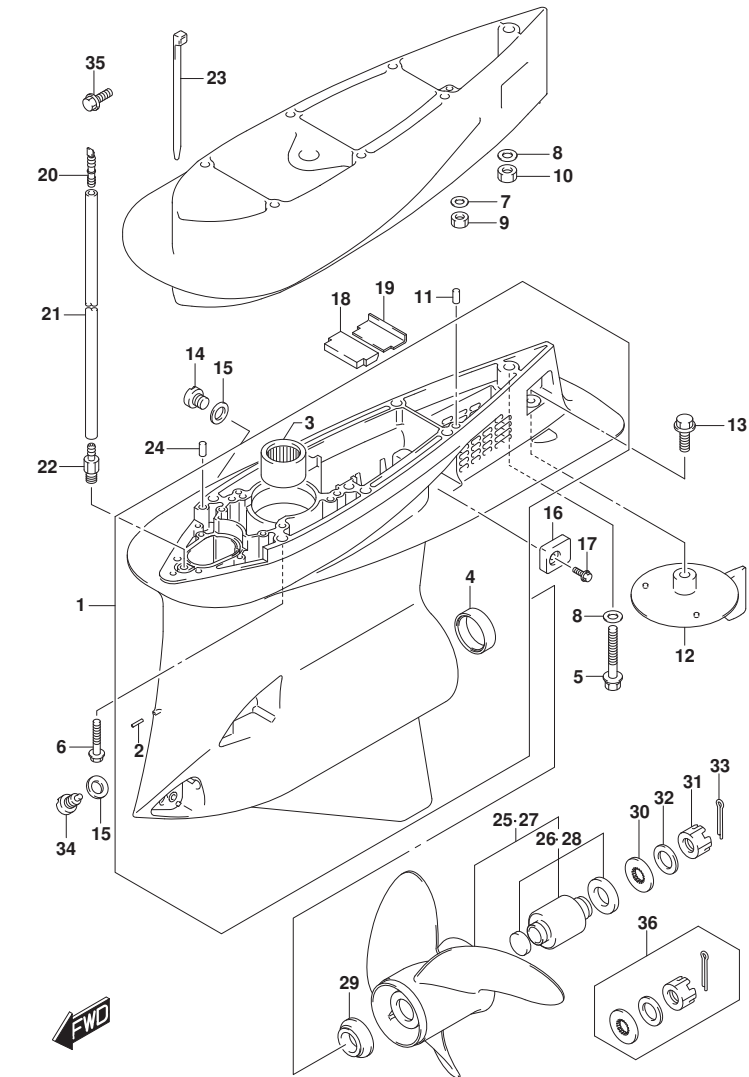


FIG. 407B (1-I-4) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-4	58200-93L30	ﾌﾞﾛｯｸ (3X16X21-1/2)	1	W/REGULAR ROTATIO N	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-5	58200-93L40	ﾌﾞﾛｯｸ (3X16X23)	1	W/REGULAR ROTATIO N	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-6	58200-93L50	ﾌﾞﾛｯｸ (3X16X24-1/2)	1	W/REGULAR ROTATIO N	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-7	58200-93L80	ﾌﾞﾛｯｸ (3X16X15)	1	W/REGULAR ROTATIO N	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-8	58200-93L80	ﾌﾞﾛｯｸ (3X16X15)	1	OPT, W/REGULAR ROT ATION	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-9	58300-93J00	ﾌﾞﾛｯｸ (4X15-1/4X18)	1	OPT, W/REGULAR ROT	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B

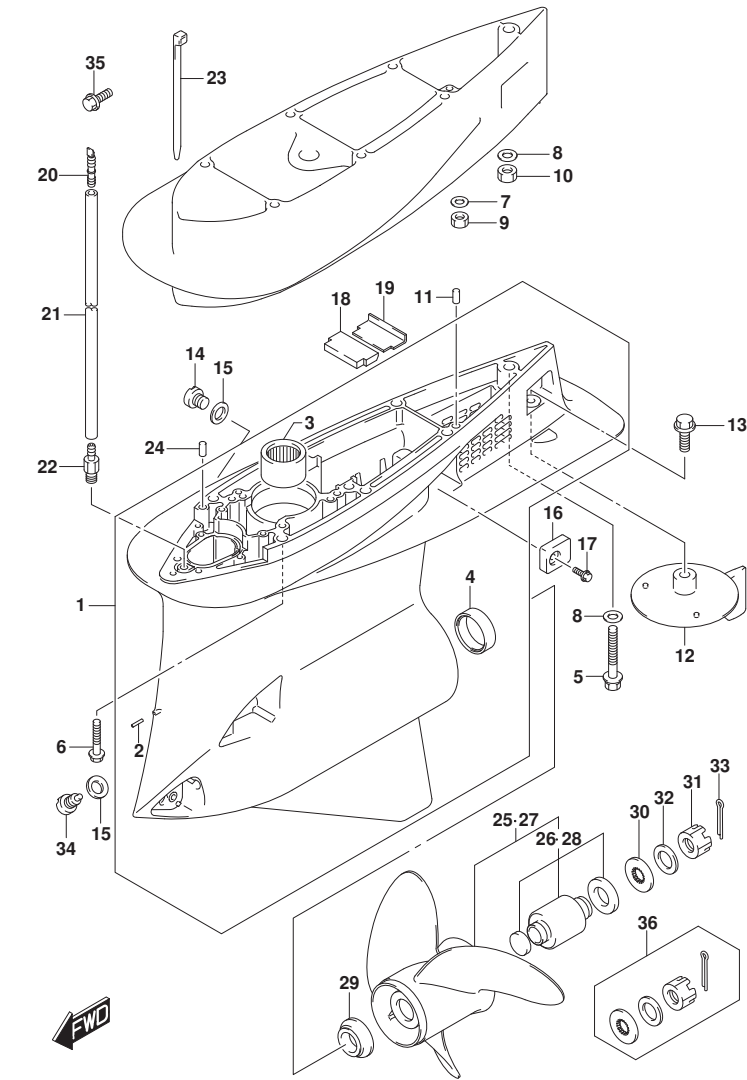


FIG. 407B (1-I-5) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
				AT10N	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-10	58300-93J10	ﾌﾞﾛｯｸ (4X15-1/4X20)	1	OPT, W/REGULAR ROTATION	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-11	58300-93J20	ﾌﾞﾛｯｸ (4X15-1/4X22)	1	OPT, W/REGULAR ROTATION	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-12	58300-93J30	ﾌﾞﾛｯｸ (4X15-1/4X24)	1	OPT, W/REGULAR ROTATION	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-13	58300-93J40	ﾌﾞﾛｯｸ (4X15-1/4X26)	1	OPT, W/REGULAR ROTATION	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	
25-14	58200-93LA0	ﾌﾞﾛｯｸ (3X16X18-1/2), C/R	1	W/COUNTER ROTATION	
				FROM 25003P-61059	
				2	
				FROM 30002P-61213	
				3	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B

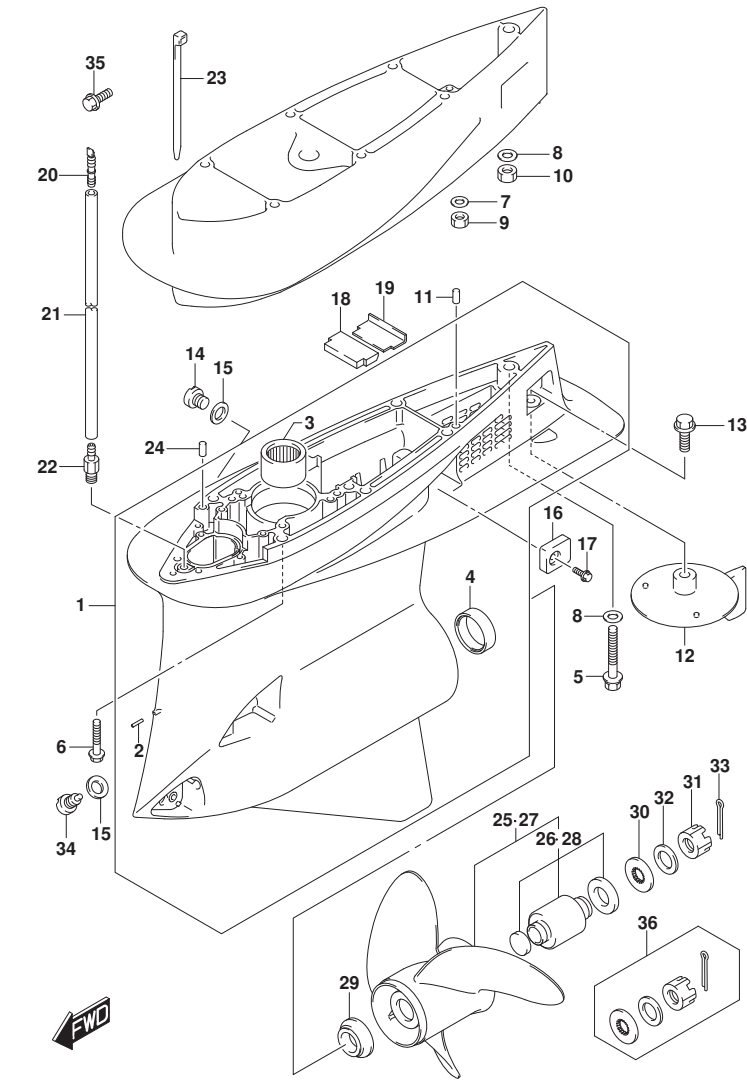


FIG. 407B (1-I-6) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
25-15	58200-93LB0	ﾌﾞﾛｯｸ (3X16X20) , C/R	1	W/COUNTER ROTATIO N FROM 25003P-61059 2 FROM 30002P-61213 3	
25-16	58200-93LC0	ﾌﾞﾛｯｸ (3X16X21-1/2) , C/R	1	W/COUNTER ROTATIO N FROM 25003P-61059 2 FROM 30002P-61213 3	
25-17	58200-93LD0	ﾌﾞﾛｯｸ (3X16X23) , C/R	1	W/COUNTER ROTATIO N FROM 25003P-61059 2 FROM 30002P-61213 3	
25-18	58200-93LE0	ﾌﾞﾛｯｸ (3X16X17) , C/R	1	W/COUNTER ROTATIO N FROM 25003P-61059 2 FROM 30002P-61213 3	
25-19	58200-93LF0	ﾌﾞﾛｯｸ (3X16X24-1/2) , C/R	1	OPT. W/COUNTER ROT ATION FROM 25003P-61059 2 FROM 30002P-61213 3	
25-20	58300-93JA0	ﾌﾞﾛｯｸ (4X15-1/4X20) , C/R	1	OPT. W/COUNTER ROT ATION FROM 25003P-61059 2 FROM 30002P-61213	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B

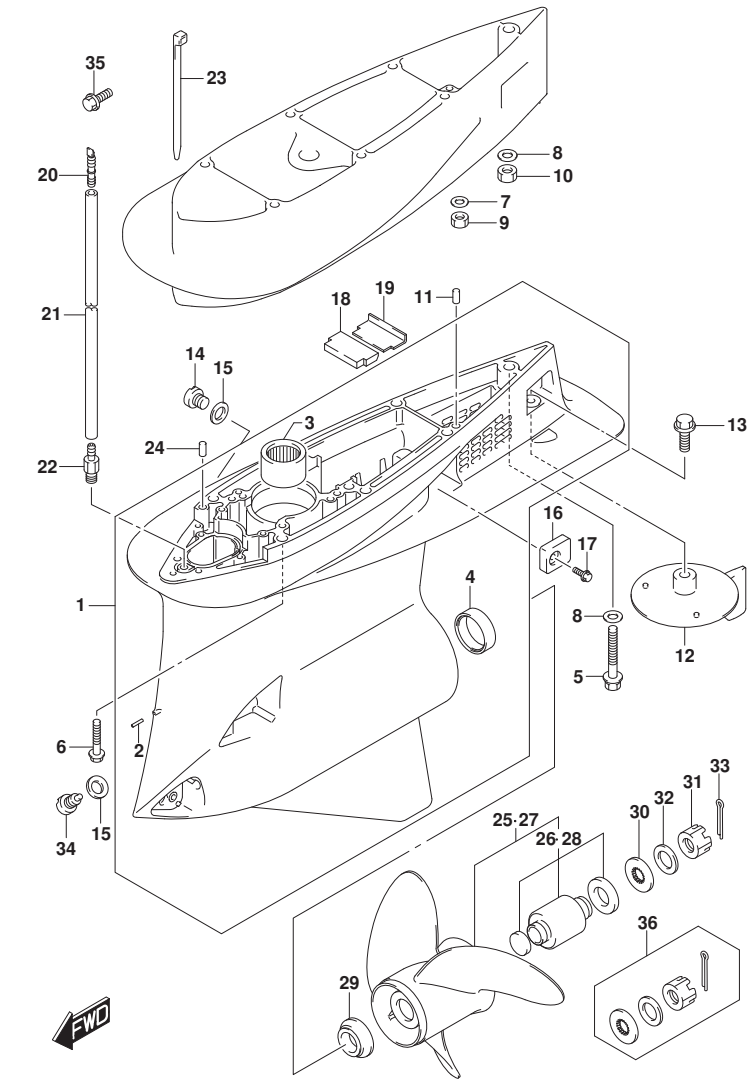


FIG. 407B (1-I-7) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
25-21	58300-93JB0	ﾌﾞﾛｯｸ (4X15-1/4X22) , C/R	1	OPT, W/COUNTER ROT ATION FROM 25003P-61059	3
25-22	58300-93JC0	ﾌﾞﾛｯｸ (4X15-1/4X24) , C/R	1	OPT, W/COUNTER ROT ATION FROM 25003P-61059	3
25-23	58300-93JD0	ﾌﾞﾛｯｸ (4X15-1/4X26) , C/R	1	OPT, W/COUNTER ROT ATION FROM 25003P-61059	3
26	58105-93J10	ﾌﾞﾛｯｸｼｰﾄ, ﾌﾞﾛｯｸ	1	FROM 25003P-61059	3
27-1	58200-96J00	ﾌﾞﾛｯｸ (3X15-1/2X17)	1	OPT, W/REGULAR ROT ATION FROM 25003P-61059	3
27-2	58200-96J10	ﾌﾞﾛｯｸ (3X15-1/4X19)	1	OPT, W/REGULAR ROT ATION FROM 25003P-61059	3

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B

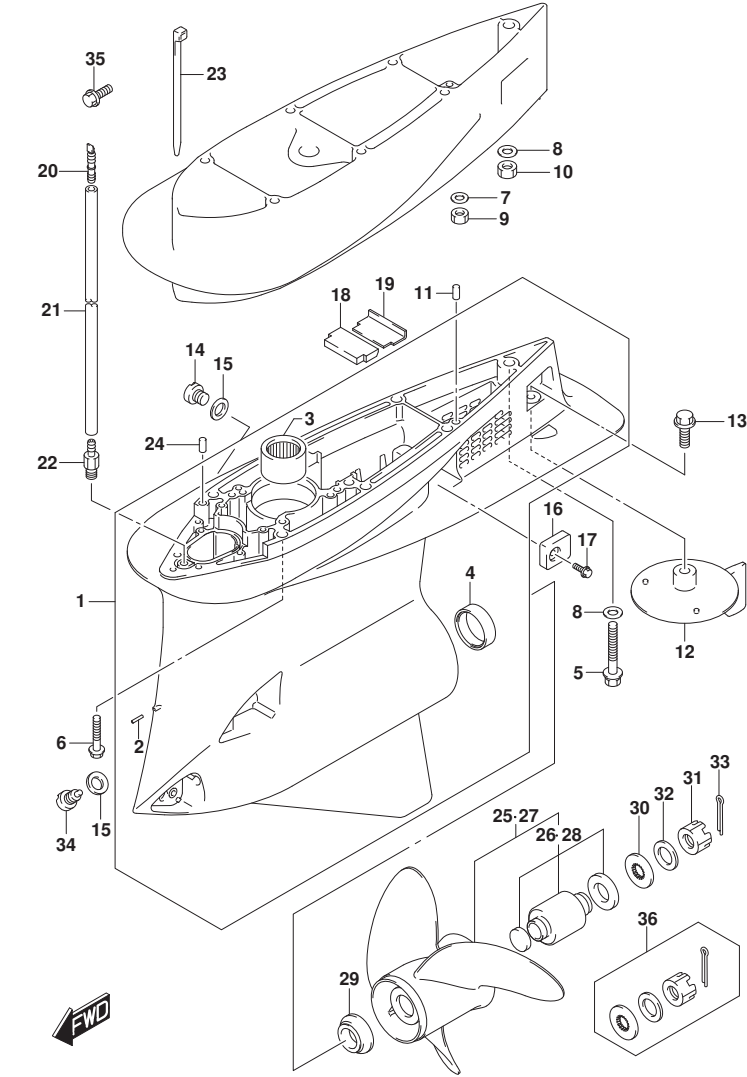


FIG. 407B (1-I-8) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
27-3	58200-96J20	ﾌﾞﾛｯｸ (3X15X21)	1	OPT, W/REGULAR ROT ATION FROM 25003P-61059 2 FROM 30002P-61213 3	
27-4	58200-96J30	ﾌﾞﾛｯｸ (3X14-3/4X23)	1	OPT, W/REGULAR ROT ATION FROM 25003P-61059 2 FROM 30002P-61213 3	
27-5	58200-96J40	ﾌﾞﾛｯｸ (3X14-1/2X25)	1	OPT, W/REGULAR ROT ATION FROM 25003P-61059 2 FROM 30002P-61213 3	
27-6	58200-96J50	ﾌﾞﾛｯｸ (3X14-1/2X27)	1	OPT, W/REGULAR ROT ATION FROM 25003P-61059 2 FROM 30002P-61213 3	
27-7	58200-96JA0	ﾌﾞﾛｯｸ (3X15-1/2X17) , C/R	1	OPT, W/COUNTER ROT ATION FROM 25003P-61059 2 FROM 30002P-61213 3	
27-8	58200-96JB0	ﾌﾞﾛｯｸ (3X15-1/4X19) , C/R	1	OPT, W/COUNTER ROT ATION FROM 25003P-61059 2 FROM 30002P-61213	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B

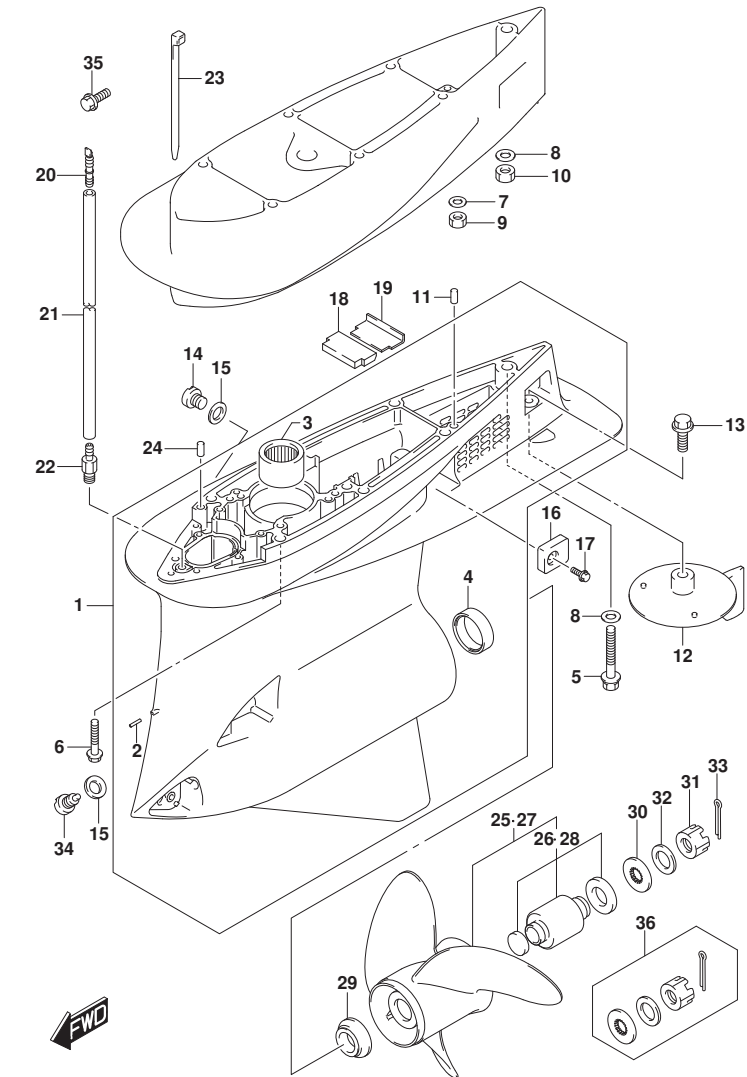


FIG. 407B (1-I-9) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
			3		
27-9	58200-96JC0	ﾌﾞﾛｯｸ (3X15X21) , C/R	1	OPT. W/COUNTER ROT ATION FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
27-10	58200-96JD0	ﾌﾞﾛｯｸ (3X14-3/4X23) , C/R	1	OPT. W/COUNTER ROT ATION FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
27-11	58200-96JE0	ﾌﾞﾛｯｸ (3X14-1/2X25) , C/R	1	OPT. W/COUNTER ROT ATION FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
27-12	58200-96JF0	ﾌﾞﾛｯｸ (3X14-1/2X27) , C/R	1	OPT. W/COUNTER ROT ATION FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
28	58105-93J10	・ﾌﾞﾛｯｸｼｬﾌﾄ, ﾌﾞﾛｯｸ	1	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
29	57632-93L01	ｽﾄｯﾊﾟ, ﾌﾞﾛｯｸﾗﾌﾞﾛｯｸ	1	FROM 25003P-61059	
			2	FROM 30002P-61213	
			3		
30	57633-87D30	ｽﾍﾟｰｻ, ﾅｯﾄ (T: 6. 0)	1	FROM 25003P-61059	
			2		

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.407B


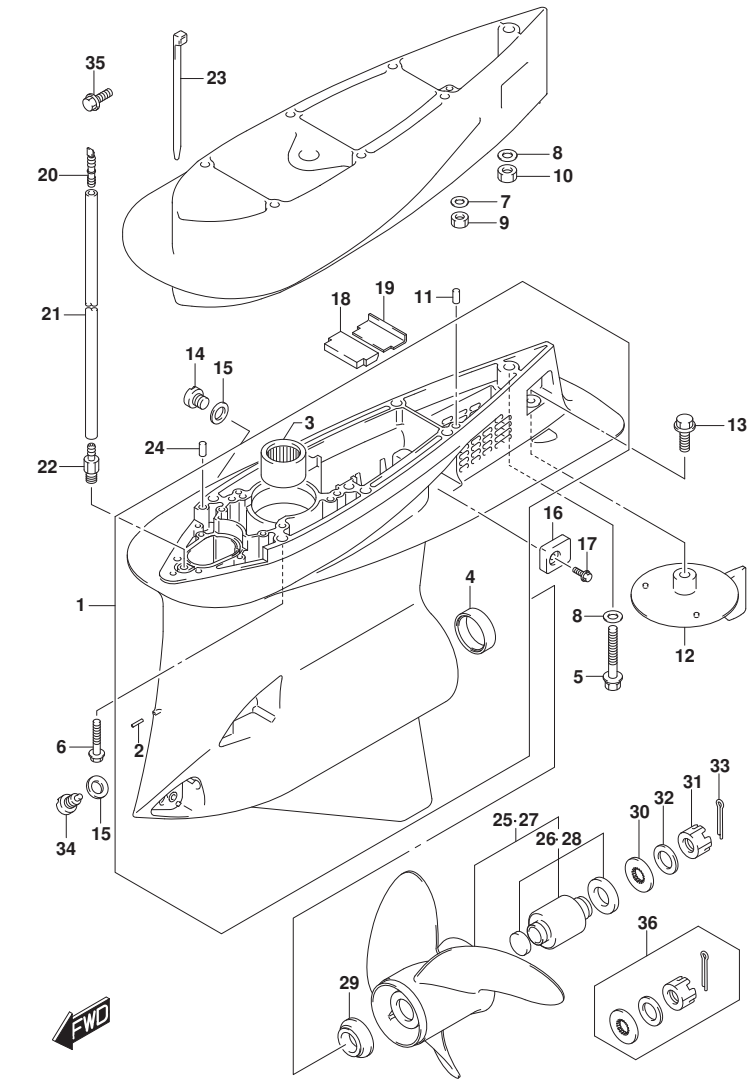


FIG. 407B (1-I-10) ギヤケース (SEE NOTE 1)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
				FROM 30002P-61213 3	
31	09141-18005	ナット	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
32	09160-18028	ワッシャ(18. 5X31X1)	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
33	09204-03003	コックピン	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
34	55128-93L00	プラグ, ドレーン	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
35	01550-06127	ボルト	1	FROM 25003P-61059 2	
				FROM 30002P-61213 3	
36	57630-92E00	キット, フロムラナツト	1	オプション FROM 25003P-61059 2	
				FROM 30002P-61213 3	

NOTE 1:
FROM 25003P-610592
FROM 30002P-612133

FIG.410A

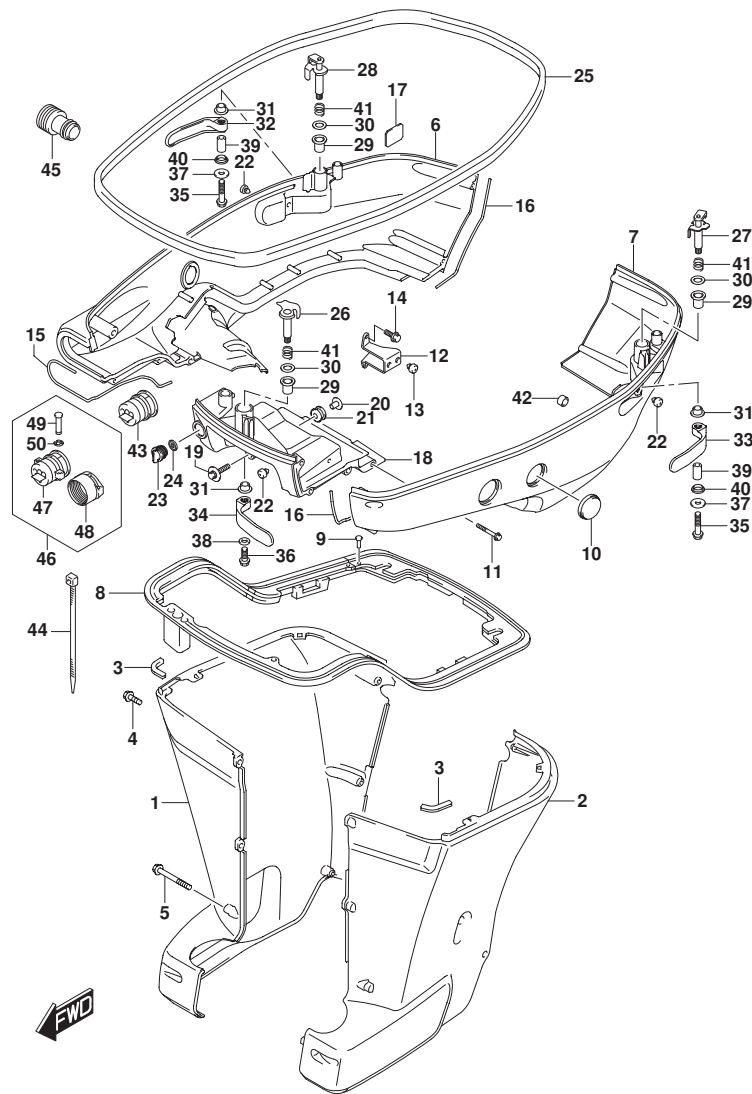

DF300A_000_016_410A
SIDE COVER

FIG. 410A (1-I-11) サイドカバー (DF300A: (X-TRANSOM, XX-TRANSOM))

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	61131-93J01-0EP	カバー, オイルパンスターボード (ﾌﾞﾗｯｸ)	1	BODY COLOR:0EP	
1-2	61131-93J01-Y5S	カバー, オイルパンスターボード (ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
1-3	61131-93J01-YKV	カバー, オイルパンスターボード (ﾌﾞﾗｯｸ)	1	BODY COLOR:YKV	
2-1	61141-93J01-0EP	カバー, オイルパンボード (ﾌﾞﾗｯｸ)	1	BODY COLOR:0EP	
2-2	61141-93J01-Y5S	カバー, オイルパンボード (ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
2-3	61141-93J01-YKV	カバー, オイルパンボード (ﾌﾞﾗｯｸ)	1	BODY COLOR:YKV	
3	61137-93J00	クッション, オイルパンカバーアツパ	2		
4	09139-06135	スクリュ (6X17)	5		
5	09139-06136	スクリュ (6X65)	3		
6-1	61811-98J20-0EP	カバー, サイドスターボード (ﾌﾞﾗｯｸ)	1	BODY COLOR:0EP	
6-2	61811-98J20-Y5S	カバー, サイドスターボード (ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
6-3	61811-98J20-YKV	カバー, サイドスターボード (ﾌﾞﾗｯｸ)	1	BODY COLOR:YKV	
7-1	61821-98J10-0EP	カバー, サイドボード (ﾌﾞﾗｯｸ)	1	BODY COLOR:0EP	
7-2	61821-98J10-Y5S	カバー, サイドボード (ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
7-3	61821-98J10-YKV	カバー, サイドボード (ﾌﾞﾗｯｸ)	1	BODY COLOR:YKV	
8	61134-93J20	シール, サイドカバー	1		
9	09409-05302-5PK	クリップ (ﾌﾞﾗｯｸ)	2		
10	61817-93J00	ﾌﾞﾗｸﾞ, サイドカバー	2		
11	09136-06148	スクリュ (6X35)	10		
12	61827-93J02	ホルダー, サイドカバー	1		
13	09321-10030	クッション	2		
14	01550-08167	ホルト	2		
15	61832-98J00	シール, フロントパネル (ｽﾀｰﾎｰﾄﾞ)	1		
16	61812-98J00	シール, サイドカバー	1		
17	61814-98J00	ﾌﾞﾛｯｸﾀ, サイドカバー	1		
18-1	61831-98J02-0EP	パネル, フロント (ﾌﾞﾗｯｸ)	1	BODY COLOR:0EP	
18-2	61831-98J02-Y5S	パネル, フロント (ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
18-3	61831-98J02-YKV	パネル, フロント (ﾌﾞﾗｯｸ)	1	BODY COLOR:YKV	
19	09116-08163	ホルト (8X38)	2		
20	09169-08039	ワシヤ	2		
21	09320-11013	クッション	2		
22	09321-10030	クッション	3		
23	17913-93J00	ﾌﾞﾗｸﾞ, ﾕｵｰﾀ	1		
24	17914-93J00	ｶﾞｽｹｯﾄ, ﾕｵｰﾀﾌﾞﾗｸﾞ	1		
25	61112-98J00	ﾗﾊﾞｰ, サイドカバー	1		

DF300A_000_016

FIG.410A


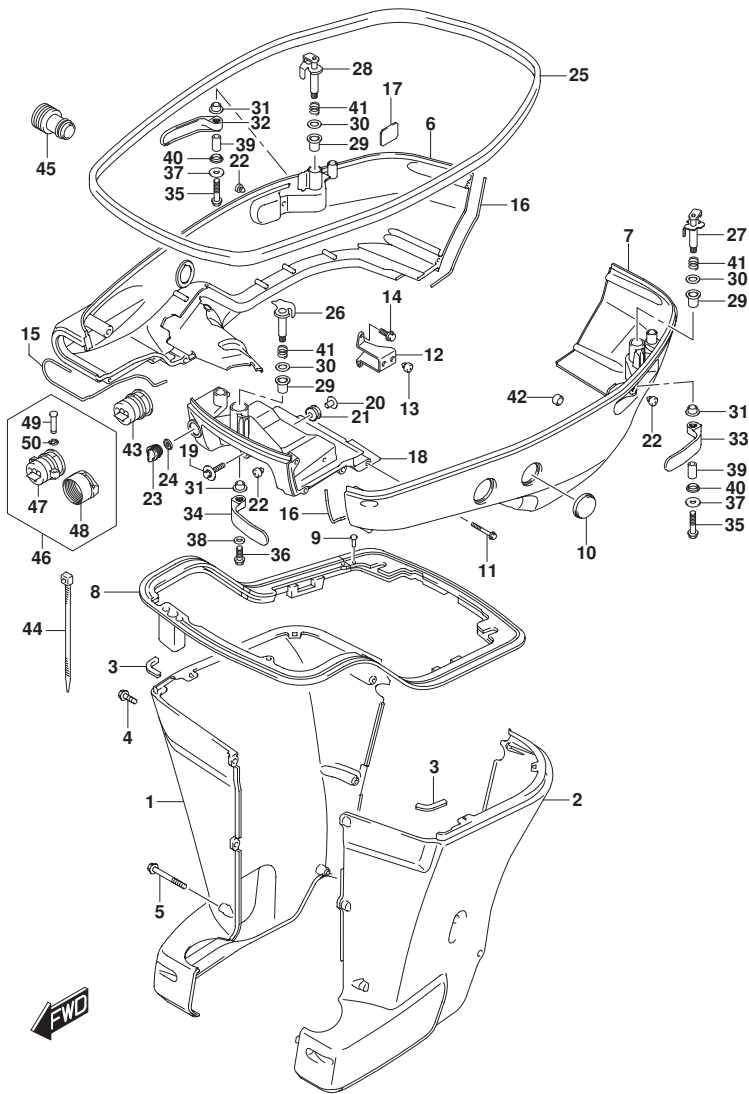


FIG. 410A (1-I-12) サイトカハ - (DF300A: (X-TRANSOM, XX-TRANSOM))

見出番号	品番	品名	使用個数	備考	標準作業時間
26	61630-98J00	シャフト, カバーフックフロント	1	フロント	
27	63632-98J20	シャフト, エンジンカバーフック(ボート)	1	PORT	
28	63632-98J30	シャフト, エンジンカバーフック(スターボート)	1	STBD	
29	09306-17002	ブッシュ	3		
30	09160-17052	ワッシャー(17X30X3)	3		
31	61636-98J00	ブッシュ	3		
32-1	61633-98J10-OEP	レバー, フックリヤスターボート(ブラック)	1	BODY COLOR: OEP	
32-2	61633-98J10-Y5S	レバー, フックリヤスターボート(ホワイト)	1	BODY COLOR: Y5S	
32-3	61633-98J10-YKV	レバー, フックリヤスターボート(ブラック)	1	BODY COLOR: YKV	
33-1	61634-98J10-OEP	レバー, フックリヤボート(ブラック)	1	BODY COLOR: OEP	
33-2	61634-98J10-Y5S	レバー, フックリヤボート(ホワイト)	1	BODY COLOR: Y5S	
33-3	61634-98J10-YKV	レバー, フックリヤボート(ブラック)	1	BODY COLOR: YKV	
34-1	61645-98J00-OEP	レバー, フックフロント(ブラック)	1	BODY COLOR: OEP	
34-2	61645-98J00-Y5S	レバー, フックフロント(ホワイト)	1	BODY COLOR: Y5S	
34-3	61645-98J00-YKV	レバー, フックフロント(ブラック)	1	BODY COLOR: YKV	
35	29103-93J20	ボルト	2		
36	29103-93J30	ボルト	1		
37	09160-08152	ワッシャー(8.5X28X1.5)	2		
38	09160-08082	ワッシャー(8.5X16X1.2)	1		
39	61635-98J00	スベーク	2		
40	61643-98J00	ブッシュ	2		
41	61658-98J00	スプリング, フックシャフト	3		
42	09329-14002	クッション(14X20X9)	1		
43	61124-98J10	グロメット, リモコンケーブル	1		
44	09407-25402	クランプ(L: 250)	1		
45	17917-87L00	コネクタ, フラッシュウオーター	1		
46	67300-98J00	キット, ホースアダプタ(リキング)	1	オプション	
47	61124-98J20	グロメット, リモコンケーブル	1	オプション	
48	67361-90J10	アダプタ, ホース(リキング)	1	オプション	
49	09208-06009	ピン	1	オプション	
50	09383-04002	エリク	1	オプション	

FIG.410B

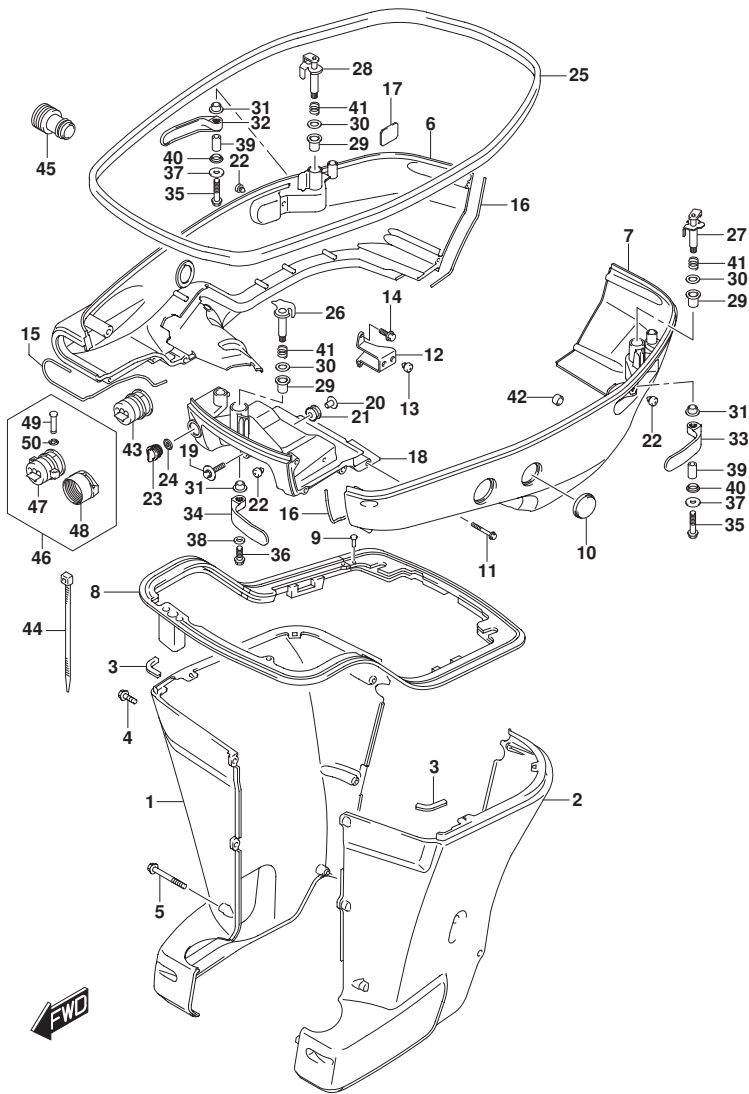

DF300A_000_016_410B
SIDE COVER

FIG. 410B (1-I-13) サイドカバー (DF250A)


見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	61131-93J01-0EP	カバー、オイルパスターホート (ブラック)	1	BODY COLOR:0EP	
1-2	61131-93J01-Y5S	カバー、オイルパスターホート (ホワイト)	1	BODY COLOR:Y5S	
2-1	61141-93J01-0EP	カバー、オイルパスターホート (ブラック)	1	BODY COLOR:0EP	
2-2	61141-93J01-Y5S	カバー、オイルパスターホート (ホワイト)	1	BODY COLOR:Y5S	
3	61137-93J00	クッション、オイルパスターホート	2		
4	09139-06135	スクリュー (6X17)	5		
5	09139-06136	スクリュー (6X65)	3		
6-1	61811-98J20-0EP	カバー、サイドスターホート (ブラック)	1	BODY COLOR:0EP	
6-2	61811-98J20-Y5S	カバー、サイドスターホート (ホワイト)	1	BODY COLOR:Y5S	
7-1	61821-98J10-0EP	カバー、サイドホート (ブラック)	1	BODY COLOR:0EP	
7-2	61821-98J10-Y5S	カバー、サイドホート (ホワイト)	1	BODY COLOR:Y5S	
8	61134-93J20	シール、サイドカバー	1		
9	09409-05302-5PK	クリップ (ブラック)	2		
10	61817-93J00	ブラケット、サイドカバー	2		
11	09136-06148	スクリュー (6X35)	10		
12	61827-93J02	ホルダー、サイドカバー	1		
13	09321-10030	クッション	2		
14	01550-08167	ホルト	2		
15	61832-98J00	シール、フロントパネル (スターホート)	1		
16	61812-98J00	シール、サイドカバー	1		
17	61814-98J00	ブラケット、サイドカバー	1		
18-1	61831-98J02-0EP	パネル、フロント (ブラック)	1	BODY COLOR:0EP	
18-2	61831-98J02-Y5S	パネル、フロント (ホワイト)	1	BODY COLOR:Y5S	
19	09116-08163	ホルト (8X38)	2		
20	09169-08039	ワッシャー	2		
21	09320-11013	クッション	2		
22	09321-10030	クッション	3		
23	17913-93J00	ブラケット、ウオーター	1		
24	17914-93J00	ガスケット、ウオーターラック	1		
25	61112-98J00	ラバー、サイドカバー	1		
26	61630-98J00	シヤフト、カバーフックフロント	1	フロント	
27	63632-98J20	シヤフト、エンジンカバーフック (ホート)	1	PORT	
28	63632-98J30	シヤフト、エンジンカバーフック (スターホート)	1	STBD	
29	09306-17002	ブッシュ	3		
30	09160-17052	ワッシャー (17X30X3)	3		

DF300A_000_016

This exploded view diagram illustrates the assembly of a boat hull. The main components are labeled with numbers 1 through 50. The hull is shown in three main sections: the bow (front), the main body, and the stern (rear). The bow section includes the bow plate (1) and bow rail (2). The main body section includes the hull plate (3) and hull rail (4). The stern section includes the stern plate (5) and stern rail (6). The diagram also shows the installation of various hardware, including screws (e.g., 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50), nuts (e.g., 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50), and washers (e.g., 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50). A 'FWD' arrow is located at the bottom left, indicating the front direction of the boat.

見出番号	品番	品名	使用個数	備考	標準作業時間
31	61636-98J00	ﾌﾞｯｼｭ	3		
32-1	61633-98J10-OEP	ﾚﾊﾞｰ, ｳｯｸﾘﾔｽﾀｰﾎｰﾄﾞ(ﾌﾞﾗｯｸ)	1	BODY COLOR:OEP	
32-2	61633-98J10-Y5S	ﾚﾊﾞｰ, ｳｯｸﾘﾔｽﾀｰﾎｰﾄﾞ(ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
33-1	61634-98J10-OEP	ﾚﾊﾞｰ, ｳｯｸﾘﾔﾎｰﾄﾞ(ﾌﾞﾗｯｸ)	1	BODY COLOR:OEP	
33-2	61634-98J10-Y5S	ﾚﾊﾞｰ, ｳｯｸﾘﾔﾎｰﾄﾞ(ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
34-1	61645-98J00-OEP	ﾚﾊﾞｰ, ｳｯｸﾌﾚﾝﾄ(ﾌﾞﾗｯｸ)	1	BODY COLOR:OEP	
34-2	61645-98J00-Y5S	ﾚﾊﾞｰ, ｳｯｸﾌﾚﾝﾄ(ﾎﾜｲﾄ)	1	BODY COLOR:Y5S	
35	29103-93J20	ﾎｰﾙﾄ	2		
36	29103-93J30	ﾎｰﾙﾄ	1		
37	09160-08152	ｳｯｼﾔ(8.5X28X1.5)	2		
38	09160-08082	ｳｯｼﾔ(8.5X16X1.2)	1		
39	61635-98J00	ｽﾍﾞｰサ	2		
40	61643-98J00	ﾌﾞｯｼｭ	2		
41	61658-98J00	ｽﾌﾟﾘﾝｸﾞ, ｳｯｸｼﾔﾌﾄ	3		
42	09329-14002	ｳｯｼｵﾝ(14X20X9)	1		
43	61124-98J10	ｸﾞﾛﾒｯﾄ, リﾓﾝｺﾝｹｰﾌﾞﾙ	1		
44	09407-25402	ｸﾗﾝﾌﾟ(L:250)	1		
45	17917-87L00	ｺﾈｸﾀ, ｳﾗｳｼｭｵｳﾀ	1		
46	67300-98J00	ｷｯﾄ, ｵｰｽﾀﾞﾌﾞﾙﾀ(ﾘｷﾞﾝｸﾞ)	1	ｵﾌﾞｼｵﾝ	
47	61124-98J20	ｸﾞﾛﾒｯﾄ, リﾓﾝｺﾝｹｰﾌﾞﾙ	1	ｵﾌﾞｼｵﾝ	
48	67361-90J10	ｱﾀﾞﾌﾞﾙ, ｵｰｽ(ﾘｷﾞﾝｸﾞ)	1	ｵﾌﾞｼｵﾝ	
49	09208-06009	ﾋﾞｰﾝ	1	ｵﾌﾞｼｵﾝ	
50	09383-04002	ｴﾘﾝｸﾞ	1	ｵﾌﾞｼｵﾝ	

FIG.410C

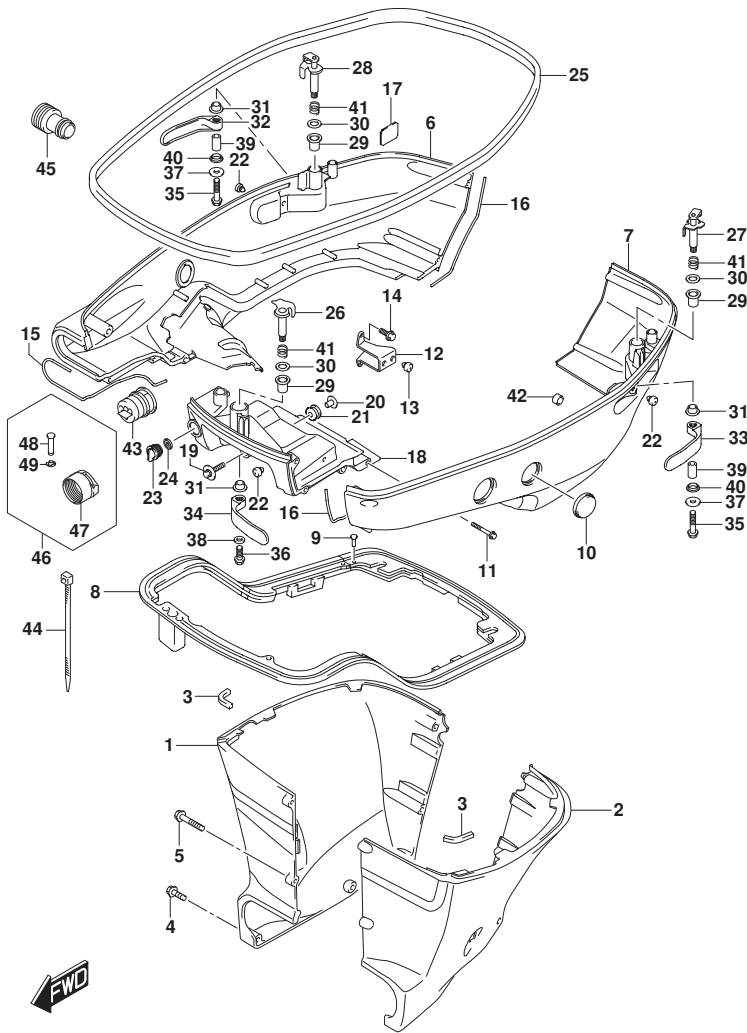

DF300A_000_016_410C
SIDE COVER

FIG.410C (1-I-15) サイドカバー (DF300A:L-TRANSOM)

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	61131-93J20-OEP	カバー、オイルパスターホート (L) (フ ラック)	1	BODY COLOR:OEP	
1-2	61131-93J20-Y5S	カバー、オイルパスターホート (L) (ホワイト)	1	BODY COLOR:Y5S	
1-3	61131-93J20-YKV	カバー、オイルパスターホート (L) (マットフ ラック)	1	BODY COLOR:YKV	
2-1	61141-93J20-OEP	カバー、オイルパスターホート (L) (フ ラック)	1	BODY COLOR:OEP	
2-2	61141-93J20-Y5S	カバー、オイルパスターホート (L) (ホワイト)	1	BODY COLOR:Y5S	
2-3	61141-93J20-YKV	カバー、オイルパスターホート (L) (マットフ ラック)	1	BODY COLOR:YKV	
3	61137-93J00	クッション、オイルパスターホート	2		
4	09136-06161	スクリュー (6X17)	8		
5	09136-06148	スクリュー (6X35)	3		
6-1	61811-98J20-OEP	カバー、サイドスターホート (フ ラック)	1	BODY COLOR:OEP	
6-2	61811-98J20-Y5S	カバー、サイドスターホート (ホワイト)	1	BODY COLOR:Y5S	
6-3	61811-98J20-YKV	カバー、サイドスターホート (フ ラック)	1	BODY COLOR:YKV	
7-1	61821-98J10-OEP	カバー、サイドスターホート (フ ラック)	1	BODY COLOR:OEP	
7-2	61821-98J10-Y5S	カバー、サイドスターホート (ホワイト)	1	BODY COLOR:Y5S	
7-3	61821-98J10-YKV	カバー、サイドスターホート (フ ラック)	1	BODY COLOR:YKV	
8	61134-93J20	シール、サイドカバー	1		
9	09409-05302-5PK	クリップ (フ ラック)	2		
10	61817-93J00	ブラケット、サイドカバー	2		
11	09136-06148	スクリュー (6X35)	10		
12	61827-93J02	ホルダー、サイドカバー	1		
13	09321-10030	クッション	2		
14	01550-08167	ホルダー	2		
15	61832-98J00	シール、フロントパネル (スターホート)	1		
16	61812-98J00	シール、サイドカバー	1		
17	61814-98J00	プロテクター、サイドカバー	1		
18-1	61831-98J02-OEP	パネル、フロント (フ ラック)	1	BODY COLOR:OEP	
18-2	61831-98J02-Y5S	パネル、フロント (ホワイト)	1	BODY COLOR:Y5S	
18-3	61831-98J02-YKV	パネル、フロント (フ ラック)	1	BODY COLOR:YKV	
19	09116-08163	ホルダー (8X38)	2		
20	09169-08039	ワシヤ	2		
21	09320-11013	クッション	2		
22	09321-10030	クッション	3		
23	17913-93J00	ブラケット、ウオーター	1		
24	17914-93J00	ガスクケット、ウオーターブラケット	1		
25	61112-98J00	ラバー、サイドカバー	1		

DF300A_000_016

This diagram illustrates the assembly of a boat hull, showing the relationship between various components. The parts are numbered as follows:

- 1**: Main hull section (bottom)
- 2**: Hull section (right side)
- 3**: Small clips or fasteners
- 4**: Small fastener
- 5**: Small fastener
- 6**: Small rectangular plate
- 7**: Hull section (top right)
- 8**: Hull section (bottom front)
- 9**: Small fastener
- 10**: Small circular grommet
- 11**: Small fastener
- 12**: Small rectangular plate
- 13**: Small fastener
- 14**: Small rectangular plate
- 15**: Hull section (left side)
- 16**: Hull section (middle)
- 17**: Small rectangular plate
- 18**: Hull section (middle)
- 19**: Small fastener
- 20**: Small fastener
- 21**: Small fastener
- 22**: Small fastener
- 23**: Small fastener
- 24**: Small fastener
- 25**: Hull section (top)
- 26**: Small fastener
- 27**: Small fastener
- 28**: Small fastener
- 29**: Small fastener
- 30**: Small fastener
- 31**: Small fastener
- 32**: Small fastener
- 33**: Small fastener
- 34**: Small fastener
- 35**: Small fastener
- 36**: Small fastener
- 37**: Small fastener
- 38**: Small fastener
- 39**: Small fastener
- 40**: Small fastener
- 41**: Small fastener
- 42**: Small fastener
- 43**: Small fastener
- 44**: Long screw
- 45**: Small fastener
- 46**: Small fastener
- 47**: Small fastener
- 48**: Small fastener
- 49**: Small fastener

The diagram also includes a 'FWD' arrow pointing towards the bottom left corner, indicating the front of the boat.

見出番号	品番	品名	使用個数	備考	標準作業時間
26	61630-98J00	シャフト, カバ-フックフロント	1	フロント	
27	63632-98J20	シャフト, エンジンカバ-フック(ホ-ト)	1	PORT	
28	63632-98J30	シャフト, エンジンカバ-フック(スターホ-ト)	1	STBD	
29	09306-17002	ブ-ツシュ	3		
30	09160-17052	ワツシヤ(17X30X3)	3		
31	61636-98J00	ブ-ツシュ	3		
32-1	61633-98J10-0EP	レバ- , フックリヤスターホ-ト (ブ-ラック)	1	BODY COLOR:0EP	
32-2	61633-98J10-Y5S	レバ- , フックリヤスターホ-ト (ホワイト)	1	BODY COLOR:Y5S	
32-3	61633-98J10-YKV	レバ- , フックリヤスターホ-ト (ブ-ラック)	1	BODY COLOR:YKV	
33-1	61634-98J10-0EP	レバ- , フックリヤホ-ト (ブ-ラック)	1	BODY COLOR:0EP	
33-2	61634-98J10-Y5S	レバ- , フックリヤホ-ト (ホワイト)	1	BODY COLOR:Y5S	
33-3	61634-98J10-YKV	レバ- , フックリヤホ-ト (ブ-ラック)	1	BODY COLOR:YKV	
34-1	61645-98J00-0EP	レバ- , フックフロント (ブ-ラック)	1	BODY COLOR:0EP	
34-2	61645-98J00-Y5S	レバ- , フックフロント (ホワイト)	1	BODY COLOR:Y5S	
34-3	61645-98J00-YKV	レバ- , フックフロント (ブ-ラック)	1	BODY COLOR:YKV	
35	29103-93J20	ホ-ルト	2		
36	29103-93J30	ホ-ルト	1		
37	09160-08152	ワツシヤ(8. 5X28X1. 5)	2		
38	09160-08082	ワツシヤ(8. 5X16X1. 2)	1		
39	61635-98J00	スヘ-サ	2		
40	61643-98J00	ブ-ツシュ	2		
41	61658-98J00	スプリング , フックシャフト	3		
42	09329-14002	クッション(14X20X9)	1		
43	61124-98J20	ク-ロメツト, リモコンケーブル	1		
44	09407-25402	クランプ (L:250)	1		
45	17917-87L00	コネクタ, フラツシユウオータ	1		
46	67300-98J10	キツト, ホ-スアダプタ(リキ-ング)	1	オフショ-ン	
47	67361-90J10	-アダプタ, ホ-ス(リキ-ング)	1	オフショ-ン	
48	09208-06009	-ヒ-ン	1	オフショ-ン	
49	09383-04002	-エリ-ング	1	オフショ-ン	

FIG.420A

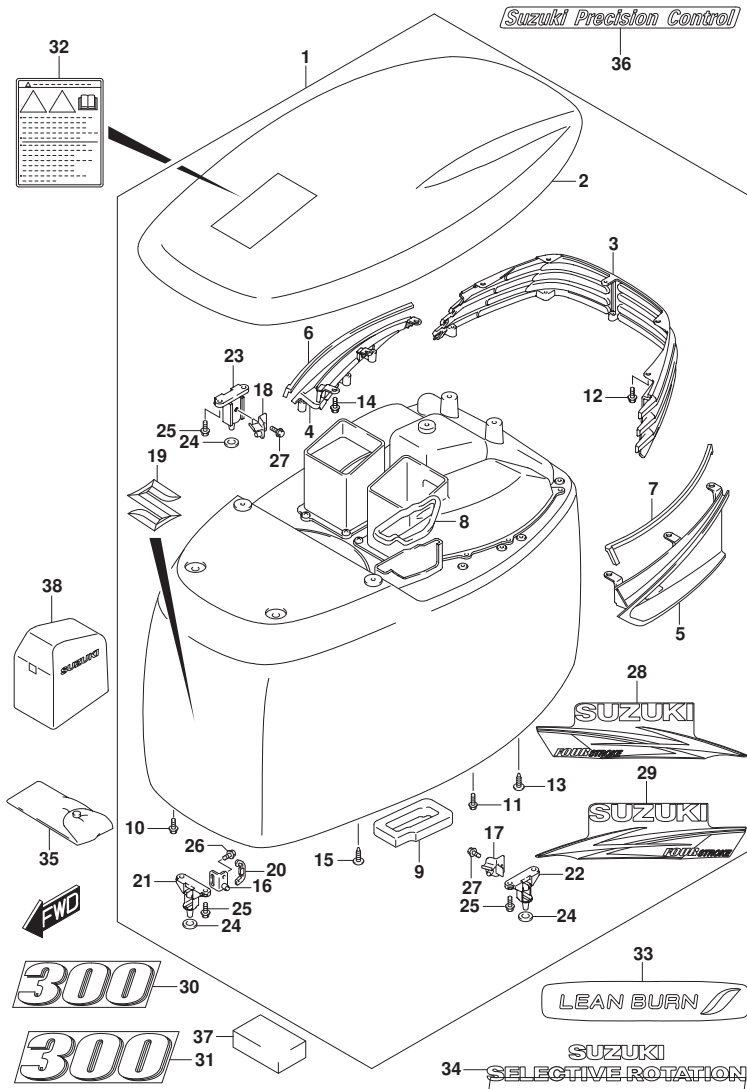


FIG. 420A (1-J-2) エンジンカバー (DF300A)

見出番号	品番	品名	使用個数	備考	標準作業時間
1-1	61400-98Y61-0EP	カバーセット, エンジン (DF250A/300A)	1	BODY COLOR: 0EP	
1-2	61400-98Y71-Y5S	カバーセット, エンジン (DF250A/300A)	1	BODY COLOR: Y5S	
2-1	61431-98J10-0EP	カバー, エンジントップ (ブラック)	1	BODY COLOR: 0EP	
2-2	61431-98J10-Y5S	カバー, エンジントップ (ホワイト)	1	BODY COLOR: Y5S	
3	61432-98J01	カバー, エアインテーク	1	BODY COLOR: 0EP, Y5S	
4	61433-98J01	カバーリップ, エンジンアッパーカバーホート	1	BODY COLOR: 0EP, Y5S	
5	61434-98J02	カバーリップ, エンジンアッパーカバーホート	1	BODY COLOR: 0EP, Y5S	
6	61439-98J00	シール, カバーリップスターホート	1	BODY COLOR: 0EP, Y5S	
7	61439-98J10	シール, カバーリップホート	1	BODY COLOR: 0EP, Y5S	
8	61439-98J21	シール, エアメントNO. 2	1	BODY COLOR: 0EP, Y5S	
9	61476-98J00	シール, エアメントNO. 1	1	BODY COLOR: 0EP, Y5S	
10	01550-06167	ボルト	2	BODY COLOR: 0EP, Y5S	
11	01550-06207	ボルト	3	BODY COLOR: 0EP, Y5S	
12	01550-06167	ボルト	3	BODY COLOR: 0EP, Y5S	
13	03542-06169	スクリュー	5	BODY COLOR: 0EP, Y5S	
14	01550-06167	ボルト	4	BODY COLOR: 0EP, Y5S	
15	03542-06169	スクリュー	4	BODY COLOR: 0EP, Y5S	
16	61610-98J00	ワッシャー, フロント	1	BODY COLOR: 0EP, Y5S	
17	61610-98J30	ワッシャー, ホート	1	BODY COLOR: 0EP, Y5S	
18	61610-98J40	ワッシャー, スターホート	1	BODY COLOR: 0EP, Y5S	

FIG.420A

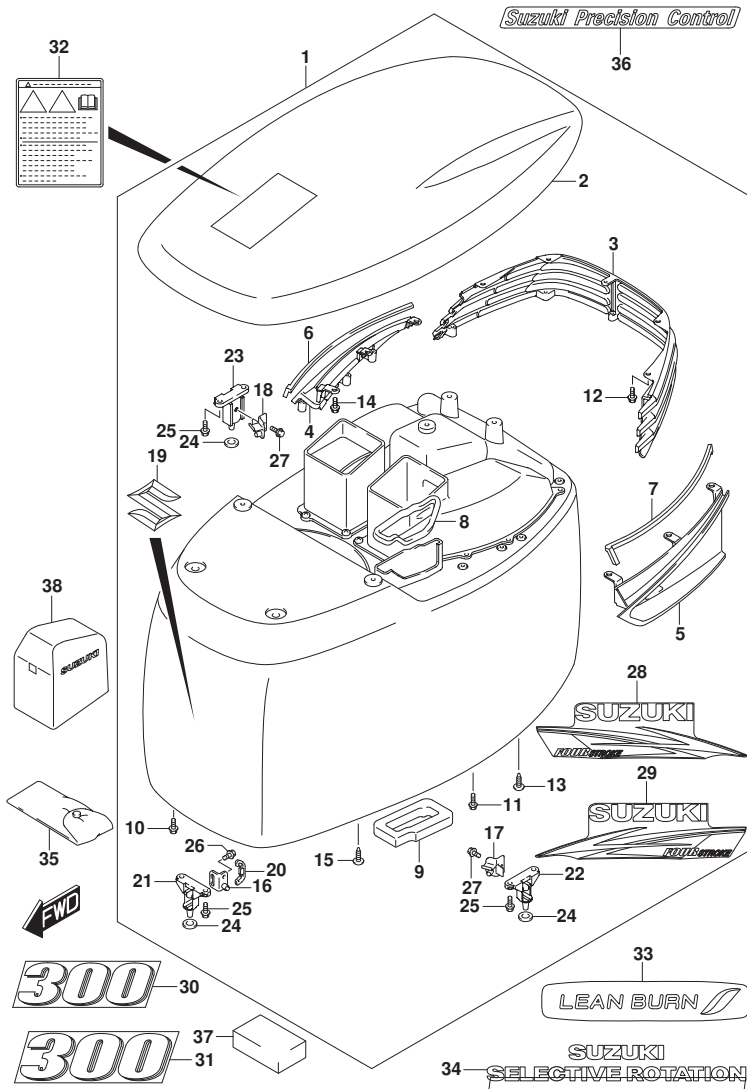


FIG. 420A (1-J-3) エンジンカバー (DF300A)

見出番号	品番	品名	使用個数	備考	標準作業時間
19	77811-54GC0-0PG	・エンブレム、マークS (クロム)	1	S BODY COLOR:0EP, Y5	
20	61614-98J00	・ブラケット、フラス	1	S BODY COLOR:0EP, Y5	
21	61621-98J01	・ブラケット、フラスフロント	1	S BODY COLOR:0EP, Y5	
22	61624-98J10	・ブラケット、フラスホート	1	S BODY COLOR:0EP, Y5	
23	61625-98J10	・ブラケット、フラススターホート	1	S BODY COLOR:0EP, Y5	
24	61619-98J00	・クッション、エンジンカバーフラス	3	S BODY COLOR:0EP, Y5	
25	01547-06167	・ボルト	6	S BODY COLOR:0EP, Y5	
26	01550-06127	・ボルト	1	S BODY COLOR:0EP, Y5	
27	01550-06127	・ボルト	2	S BODY COLOR:0EP, Y5	
28-1	61443-93J32	・ストライプ、エンジンカバースターホート	1	FOR 0EP BODY COLOR:0EP	
28-2	61443-93J40	・ストライプ、エンジンカバースターホート (ホワイト)	1	FOR Y5S BODY COLOR:Y5S	
29-1	61453-93J32	・ストライプ、エンジンカバーホート	1	FOR 0EP BODY COLOR:0EP	
29-2	61453-93J40	・ストライプ、エンジンカバーホート (ホワイト)	1	FOR Y5S BODY COLOR:Y5S	
30-1	61422-98J12	マーク、エンブレムフロント (300)	1	FOR 0EP BODY COLOR:0EP	
30-2	61422-98J20	マーク、エンブレムフロント (300) (ホワイト)	1	FOR Y5S BODY COLOR:Y5S	
31-1	61435-98J12	マーク、エンブレムリヤ (300)	1	FOR 0EP BODY COLOR:0EP	
31-2	61435-98J20	マーク、エンブレムリヤ (300) (ホワイト)	1	FOR Y5S BODY COLOR:Y5S	

FIG.420A

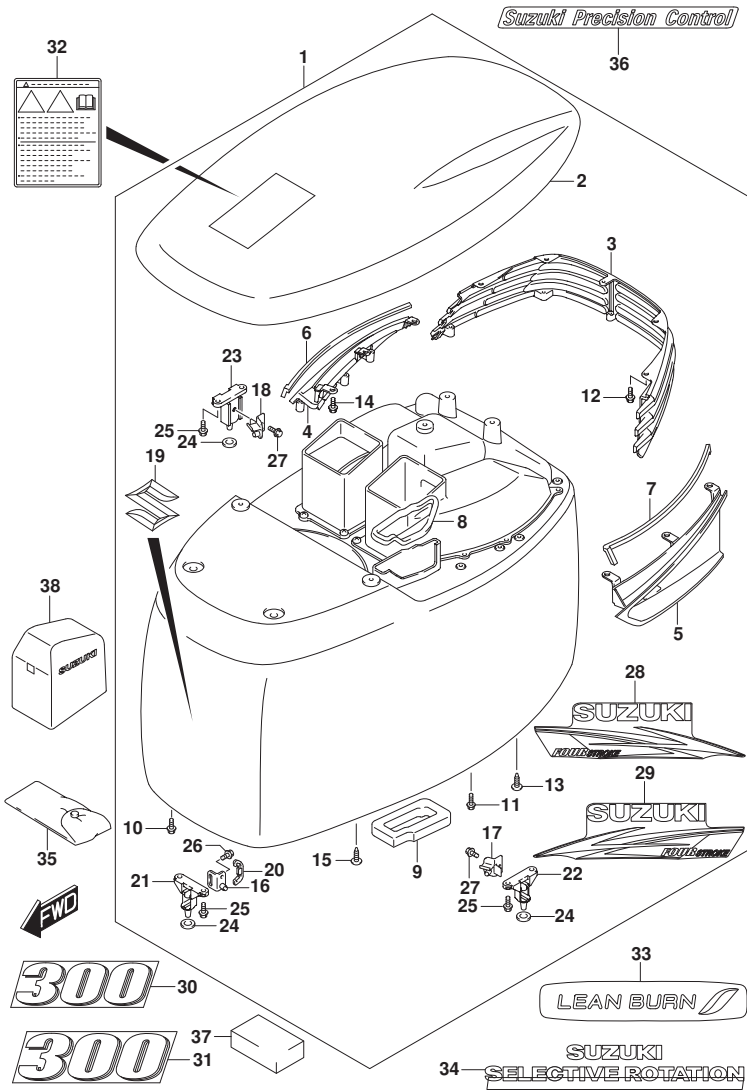


FIG. 420A (1-J-4) エンジンカバー (DF300A)

見出番号	品番	品名	使用個数	備考	標準作業時間
32	61458-99E50	ラベル, エンジンカバー	1	BODY COLOR:0EP, Y5S	
33	61471-98J00	デカール, LEANBURN	1	BODY COLOR:0EP, Y5S	
34-1	61473-98J00	デカール(S. S. R.)	1	FOR 0EP BODY COLOR:0EP	
34-2	61473-98J10	デカール(S. S. R.) (ホワイト)	1	FOR Y5S BODY COLOR:Y5S	
35	09800-81834	ツールセット	1	BODY COLOR:0EP, Y5S	
36-1	61446-96J20	デカール(S. P. C.)	1	FOR 0EP BODY COLOR:0EP	
36-2	61446-96J30	デカール(S. P. C.) (ホワイト)	1	FOR Y5S BODY COLOR:Y5S	
37	61425-98J00	クッション, エンジンカバー	1	BODY COLOR:0EP, Y5S	
38	68110-98J00	カバー, ウェザ	1	オプション BODY COLOR:0EP, Y5S	

FIG.420B


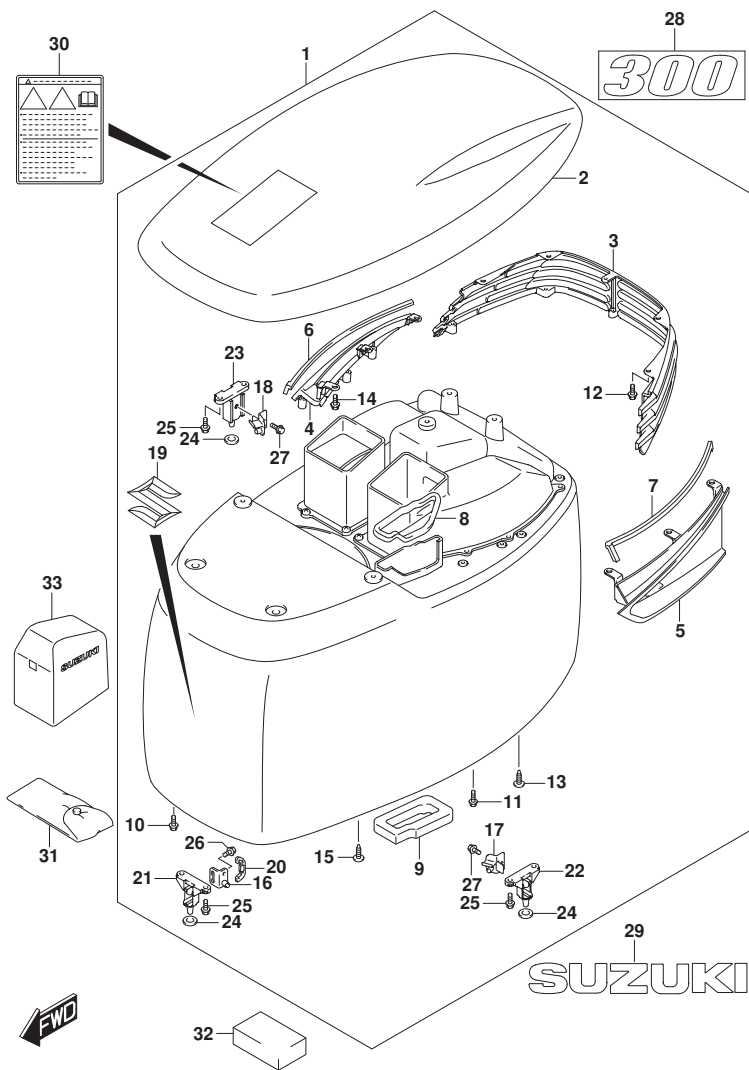


FIG. 420B (1-J-5) エンジンカバー (DF300A) (SEE NOTE 1)

見出番号	品番	品名	使用個数	備考	標準作業時間
1	61400-98Y90-YKV	カバーセット, エンジン (DF300A) (フ ラツク)	1	BODY COLOR: YKV	
2	61431-98J10-YKV	・カバー, エンジン トツフ (フ ラツク)	1	BODY COLOR: YKV	
3	61432-98J01	・ルーバ, エアインテーク	1	BODY COLOR: YKV	
4	61433-98J01	・グ リツフ, エンジン アツバ カバ ースターホ ード	1	BODY COLOR: YKV	
5	61434-98J02	・グ リツフ, エンジン アツバ カバ ースターホ ード	1	BODY COLOR: YKV	
6	61439-98J00	・シール, グ リツフ スターホ ード	1	BODY COLOR: YKV	
7	61439-98J10	・シール, グ リツフ ホ ード	1	BODY COLOR: YKV	
8	61439-98J21	・シール, エアベ ントNO. 2	1	BODY COLOR: YKV	
9	61476-98J00	・シール, エアベ ントNO. 1	1	BODY COLOR: YKV	
10	01550-06167	・ボ ルト	2	BODY COLOR: YKV	
11	01550-06207	・ボ ルト	3	BODY COLOR: YKV	
12	01550-06167	・ボ ルト	3	BODY COLOR: YKV	
13	03542-06169	・スクリュ	5	BODY COLOR: YKV	
14	01550-06167	・ボ ルト	4	BODY COLOR: YKV	
15	03542-06169	・スクリュ	4	BODY COLOR: YKV	
16	61610-98J00	・フアスタ, フロント	1	フロント	
				BODY COLOR: YKV	
17	61610-98J30	・フアスタ, ホ ード	1	PORT	
				BODY COLOR: YKV	
18	61610-98J40	・フアスタ, スターホ ード	1	STBD	
				BODY COLOR: YKV	
19	77811-54GC0-OPG	・エンブ レム, マークS (クロム)	1	BODY COLOR: YKV	
20	61614-98J00	・ブ ロテクタ, フアスタ	1	BODY COLOR: YKV	
21	61621-98J01	・ブ ラケツト, フアスタフロント	1	BODY COLOR: YKV	
22	61624-98J10	・ブ ラケツト, フアスタホ ード	1	BODY COLOR: YKV	
23	61625-98J10	・ブ ラケツト, フアスタスターホ ード	1	BODY COLOR: YKV	
24	61619-98J00	・クツシヨシ, エンジン カバ ースターホ ード	3	BODY COLOR: YKV	
25	01547-06167	・ボ ルト	6	BODY COLOR: YKV	
26	01550-06127	・ボ ルト	1	BODY COLOR: YKV	
27	01550-06127	・ボ ルト	2	BODY COLOR: YKV	
28	61435-98J40	マーク, エンブ レムリヤ	1	BODY COLOR: YKV	
29	61441-93J10	マーク, スズキ	2	BODY COLOR: YKV	
30	61458-99E50	ラベ ル, エンジン カバ ースターホ ード	1	BODY COLOR: YKV	
31	09800-81834	ツールセット	1	BODY COLOR: YKV	
32	61425-98J00	クツシヨシ, エンジン カバ ースターホ ード	1	BODY COLOR: YKV	


NOTE 1:
FOR YKV

FIG. 420B (1-J-6) エンジンカバー - (DF300A) (SEE NOTE 1)



NOTE 1:
FOR YKV

FIG.420C

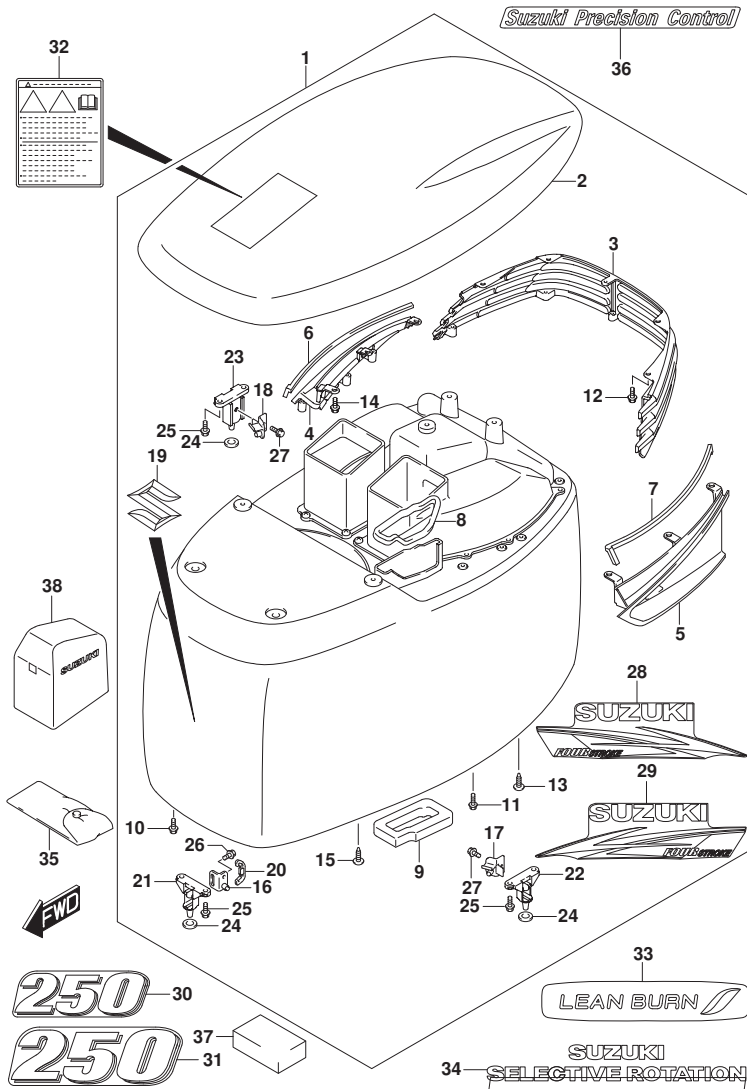

DF300A_000_016_420C
ENGINE COVER

FIG. 420C (1-J-7) エンジンカバー (DF250A)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1-1	61400-98Y61-OEP	カバーセット, エンジン (DF250A/300A)	1	BODY COLOR: OEP	
1-2	61400-98Y71-Y5S	カバーセット, エンジン (DF250A/300A)	1	BODY COLOR: Y5S	
2-1	61431-98J10-OEP	カバー, エンジントップ (ブラック)	1	BODY COLOR: OEP	
2-2	61431-98J10-Y5S	カバー, エンジントップ (ホワイト)	1	BODY COLOR: Y5S	
3	61432-98J01	カバー, エアインテーク	1		
4	61433-98J01	カバー, エンジンアツパカバースターボート	1		
5	61434-98J02	カバー, エンジンアツパカバーボート	1		
6	61439-98J00	カバー, エンジンアツパスターボート	1		
7	61439-98J10	カバー, エンジンアツパボート	1		
8	61439-98J21	カバー, エアメントNO. 2	1		
9	61476-98J00	カバー, エアメントNO. 1	1		
10	01550-06167	ボルト	2		
11	01550-06207	ボルト	3		
12	01550-06167	ボルト	3		
13	03542-06169	スクリュー	5		
14	01550-06167	ボルト	4		
15	03542-06169	スクリュー	4		
16	61610-98J00	ファスナー, フロント	1		
17	61610-98J30	ファスナー, ボート	1		
18	61610-98J40	ファスナー, スターボート	1		
19	77811-54GC0-OPG	エンブレム, マークS (クロム)	1		
20	61614-98J00	ブラケット, ファスナー	1		
21	61621-98J01	ブラケット, ファスナーフロント	1		
22	61624-98J10	ブラケット, ファスナーボート	1		
23	61625-98J10	ブラケット, ファスナースターボート	1		
24	61619-98J00	クワシヨン, エンジンカバーファスナー	3		
25	01547-06167	ボルト	6		
26	01550-06127	ボルト	1		
27	01550-06127	ボルト	2		
28-1	61443-93J32	ストライプ, エンジンカバースターボート	1	FOR OEP BODY COLOR: OEP	
28-2	61443-93J40	ストライプ, エンジンカバースターボート (ホワイト)	1	FOR Y5S BODY COLOR: Y5S	
29-1	61453-93J32	ストライプ, エンジンカバーボート	1	FOR OEP BODY COLOR: OEP	

DF300A_000_016

FIG.420C

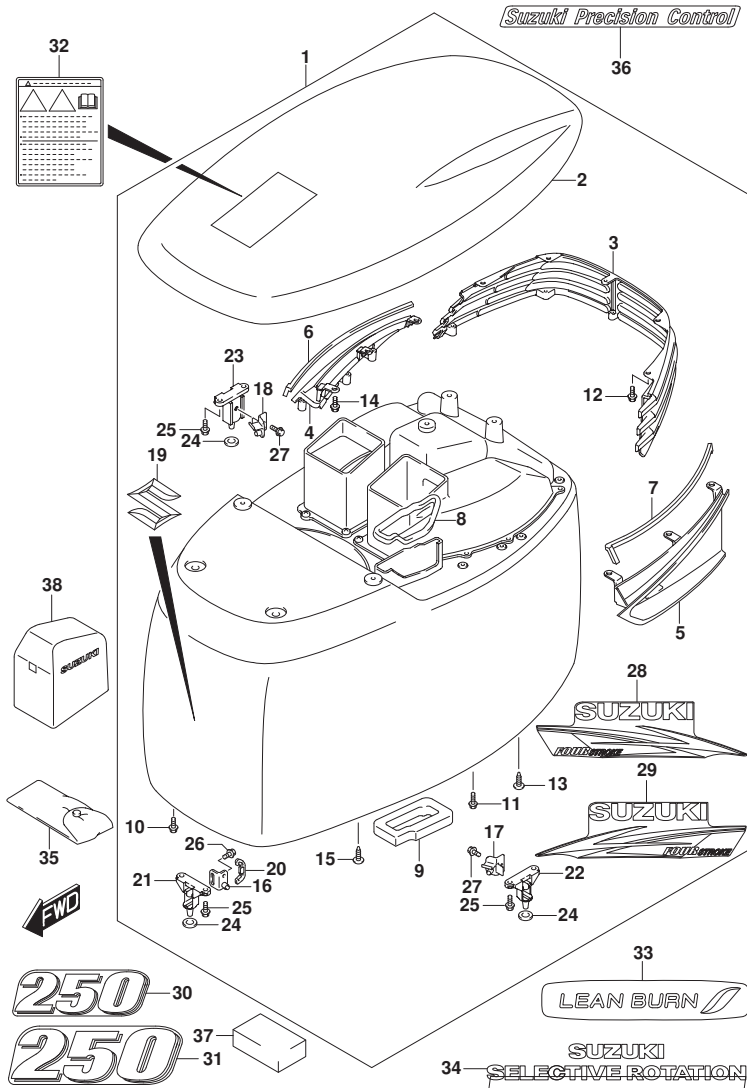


FIG. 420C (1-J-8) エンジンカバー (DF250A)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
29-2	61453-93J40	・ストライプ, エンジンカバー・ボート(ホワイト)	1	FOR Y5S BODY COLOR:Y5S	
30-1	61422-93J72	マーク, エンブレムフロント(250)	1	FOR OEP BODY COLOR:OEP	
30-2	61422-93J80	マーク, エンブレムフロント(250) (ホワイト)	1	FOR Y5S BODY COLOR:Y5S	
31-1	61435-93J52	マーク, エンブレムリヤ(250)	1	FOR OEP BODY COLOR:OEP	
31-2	61435-93J60	マーク, エンブレムリヤ(250) (ホワイト)	1	FOR Y5S BODY COLOR:Y5S	
32	61458-99E50	ラベル, エンジンカバー	1		
33	61471-98J00	デカール, LEANBURN	1		
34-1	61473-98J00	デカール(S. S. R.)	1	FOR OEP BODY COLOR:OEP	
34-2	61473-98J10	デカール(S. S. R.) (ホワイト)	1	FOR Y5S BODY COLOR:Y5S	
35	09800-81834	ツールセット	1		
36-1	61446-96J20	デカール(S. P. C.)	1	FOR OEP BODY COLOR:OEP	
36-2	61446-96J30	デカール(S. P. C.) (ホワイト)	1	FOR Y5S BODY COLOR:Y5S	
37	61425-98J00	クワシヨン, エンジンカバー	1		
38	68110-98J00	カバー, ウェザ	1	オプション	

FIG.430A


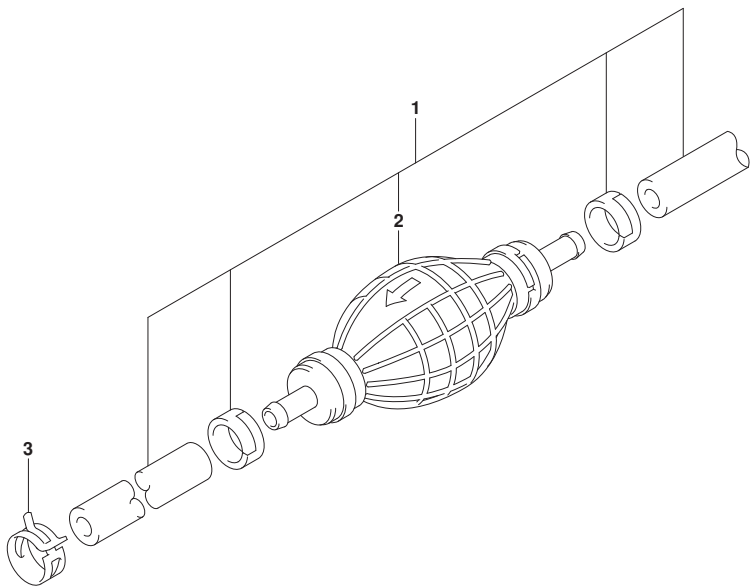


FIG. 430A (1-J-9) フューエルホース

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	65700-93J10	ホース, フューエル (タンクツアエンジン)	1		
2	65770-93J11	・ホース, スケイズ	1		
3	09401-13423	クリップ	1		

FIG.502A

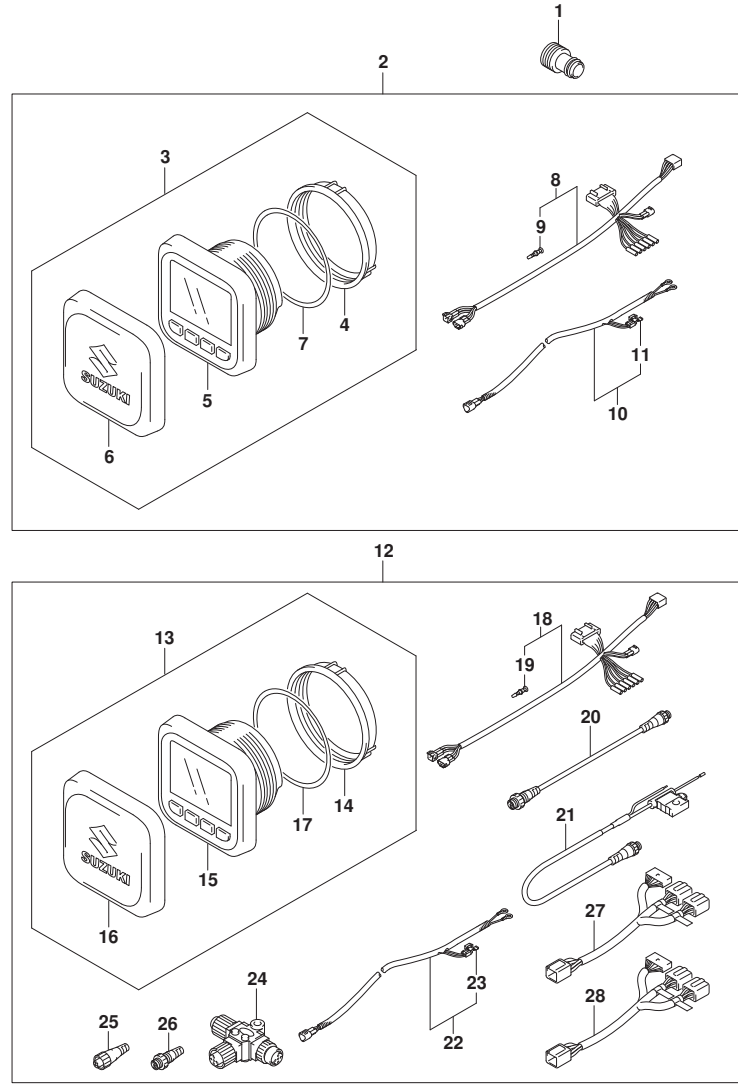


DF300A_000_016_502A
OPT:METER (1)

FIG. 502A (1-J-10) オプション:メータ(1)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	17917-87L00	コネクタ, フラッシュアウト	1		
2	34000-96L20	キット, シングルゲージ電気リツク	1		
3	34011-96L00	ゲージセット, マルチ(W/インストラクション)	1		
4	34112-96L00	ナット, ゲージ	1		
5	34193-96L00	ベゼル, ゲージ	1		
6	34211-96L00	カバー, ゲージ	1		
7	34825-96L00	ハッキング, ゲージ	1		
8	36661-96L00	アダプタ, ゲージ	1		
9	36615-96300	ターミナル	5		
10	36663-98J10	ハーネスアツシ, アクティブ ハブ ハワー (6M)	1		
11	09481-05501	フューズ (5A)	1		
12	34000-96L30	キット, デュアルゲージ電気リツク	1		
13	34011-96L00	ゲージセット, マルチ(W/インストラクション)	1		
14	34112-96L00	ナット, ゲージ	1		
15	34193-96L00	ベゼル, ゲージ	1		
16	34211-96L00	カバー, ゲージ	1		
17	34825-96L00	ハッキング, ゲージ	1		
18	36661-96L00	アダプタ, ゲージ	1		
19	36615-96300	ターミナル	5		
20	36662-88L10	ワイヤ, 2エキステンション	2		
21	36663-88L00	ハーネスアツシ, ネットワークハワー	1		
22	36663-98J10	ハーネスアツシ, アクティブ ハブ ハワー (6M)	1		
23	09481-05501	フューズ (5A)	1		
24	36664-88L00	コネクタ, プランチ	2		
25	36665-88L00	ユニット, レジスタメール	1		
26	36665-88L10	ユニット, レジスタメール	1		
27	36667-96L00	ワイヤ, ゲージアダプタ	1		
28	36667-96L10	ワイヤ, デュアルゲージアダプタ	1		

DF300A_000_016

FIG.503A

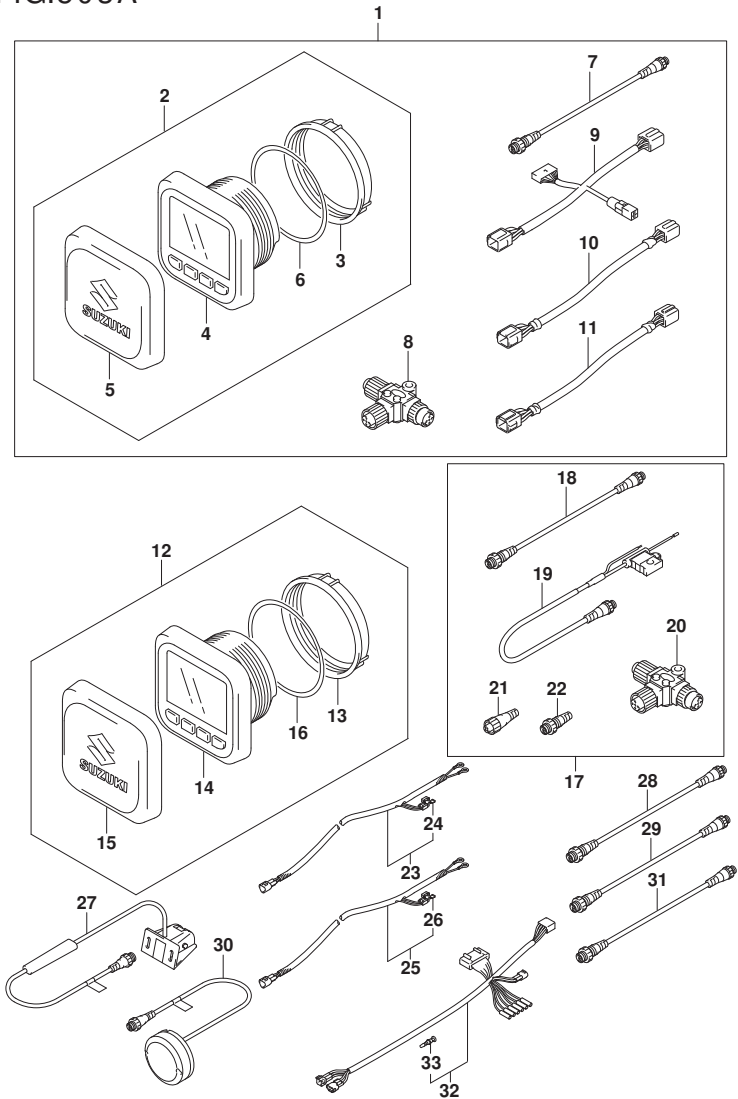

DF300A_000_016_503A
OPT:METER (2)


FIG. 503A (1-J-11) オプション:メータ(2)

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	34002-96L00	キット, デュアルステーション	1		
2	34011-96L00	・ゲージセット, マルチ(W/インストラクション)	1		
3	34112-96L00	・ナット, ゲージ	1		
4	34193-96L00	・ベッセル, ゲージ	1		
5	34211-96L00	・カハ-, ゲージ	1		
6	34825-96L00	・ハツキンク, ゲージ	1		
7	36662-88L10	ワイヤ, 2エクステンション	1		
8	36664-88L00	・コネクタ, プランチ	1		
9	36665-96L00	・アダプタ, デュアルステーション	1		
10	36666-96L00	・アダプタ, ゲージハワー	1		
11	36682-92E00	・ワイヤ, トリムメータエクステンション (L: 6500)	1		
12	34011-96L00	ゲージセット, マルチ(W/インストラクション)	1		
13	34112-96L00	・ナット, ゲージ	1		
14	34193-96L00	・ベッセル, ゲージ	1		
15	34211-96L00	・カハ-, ゲージ	1		
16	34825-96L00	・ハツキンク, ゲージ	1		
17	36001-88L00	セット, ワイヤ	1		
18	36662-88L10	・ワイヤ, 2エクステンション	1		
19	36663-88L00	・ハーネスアツシ, ネットワークハワー	1		
20	36664-88L00	・コネクタ, プランチ	1		
21	36665-88L00	・ユニット, レジスタヒューメル	1		
22	36665-88L10	・ユニット, レジスタヒューメル	1		
23	36663-98J00	ハーネスアツシ, アクティブハワー (2. 5M)	1		
24	09481-05501	・フューズ (5A)	1		
25	36663-98J10	ハーネスアツシ, アクティブハワー (6M)	1		
26	09481-05501	・フューズ (5A)	1		
27	34190-88L00	センサアツシ, ハットホイール	1		
28	36662-88L20	ワイヤ, 6エクステンション	1		
29	36662-88L30	ワイヤ, 15エクステンション	1		
30	39950-88L01	モジュールアツシ, GPSレシーバ	1		
31	36662-88L00	ワイヤ, 25エクステンション	1		
32	36661-96L00	アダプタ, ゲージ	1		
33	36615-96300	・ターミナル	5		

This exploded view diagram illustrates the assembly of a vehicle headlight. The components are numbered 1 through 55. The diagram shows the main housing (1), lens (2), reflector (3), and various mounting brackets (4, 14, 18). It also includes the bulb (5), wiring harness (55), and various fasteners like screws (e.g., 30, 32, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54) and washers (e.g., 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54). The 'FWD' arrow indicates the front view of the assembly.

見出番号	品番	品名	使用個数	備考	標準作業時間
1	67200-98J22	リモートコントロールアツシ	1		
2	67271-98J20	・カハ ⁺ ー, ホ ⁺ トムベ ⁺ ース	1		
3	67264-98J00	・カハ ⁺ ー, トツフ ⁺ ベ ⁺ ース	1		
4	67263-98J20	・カハ ⁺ ー, レハ ⁺ ー	1		
5	67261-98J20	・ク ⁺ リツフ ⁺ , A	1		
6	67261-98J30	・ク ⁺ リツフ ⁺ , B	1		
7	67265-98J00	・ホ ⁺ タン, ニュートラルロツク	1		
8	67255-98J00	・リンク, ニュートラルロツクNO. 1	1		
9	67258-98J00	・フ ⁺ レート, シ ⁺ ョイント	1		
10	67256-98J00	・フ ⁺ ロツク, ニュートラルロツク	1		
11	67259-98J00	・スフ ⁺ リンク ⁺	3		
12	67251-98J20	・レハ ⁺ ー, ハント ⁺ ル	1		
13	67294-98J00	・スベ ⁺ ーサ	1		
14	67254-98J00	・リンク, ニュートラルロツクNO. 2	1		
15	67233-98J00	・スライダ ⁺ , ニュートラルホ ⁺ タン	1		
16	67296-98JA0	・スクリュ (4X10)	3		
17	67234-98J00	・フ ⁺ レート, レハ ⁺ ー	1		
18	67211-98J20	・ハウシ ⁺ ンク ⁺	1		
19	67269-98J20	・クランフ ⁺ , リード ⁺	1		
20	67296-98JB0	・スクリュ (4X30)	1		
21	67227-98J20	・スクリュ (4X35)	1		
22	67227-98J30	・スクリュ (4X20)	1		
23	67288-98J50	・ワツシヤ	8		
24	67296-98JC0	・スクリュ (6X40)	4		
25	67287-98J00	・ナツト	4		
26	67226-98J10	・ホ ⁺ ルト (6X50)	4		
27	67288-98J60	・ワツシヤ	3		
28	67296-98JD0	・スクリュ (5X40)	1		
29	67238-98J00	・ヒ ⁺ ン	2		
30	67288-98J70	・ワツシヤ	5		
31	67246-98J00	・シヤフト, ト ⁺ ライブ ⁺	1		
32	67222-98J00	・ハ ⁺ ネルアツシ, ハ ⁺ ツク	1		
33	67236-98J00	・ローラー, テ ⁺ Tent	1		
34	67235-98J00	・カ ⁺ イト ⁺ , テ ⁺ Tent ROLER	1		
35	67237-98J00	・スフ ⁺ リンク ⁺ , テ ⁺ Tent	1		

FIG.520A

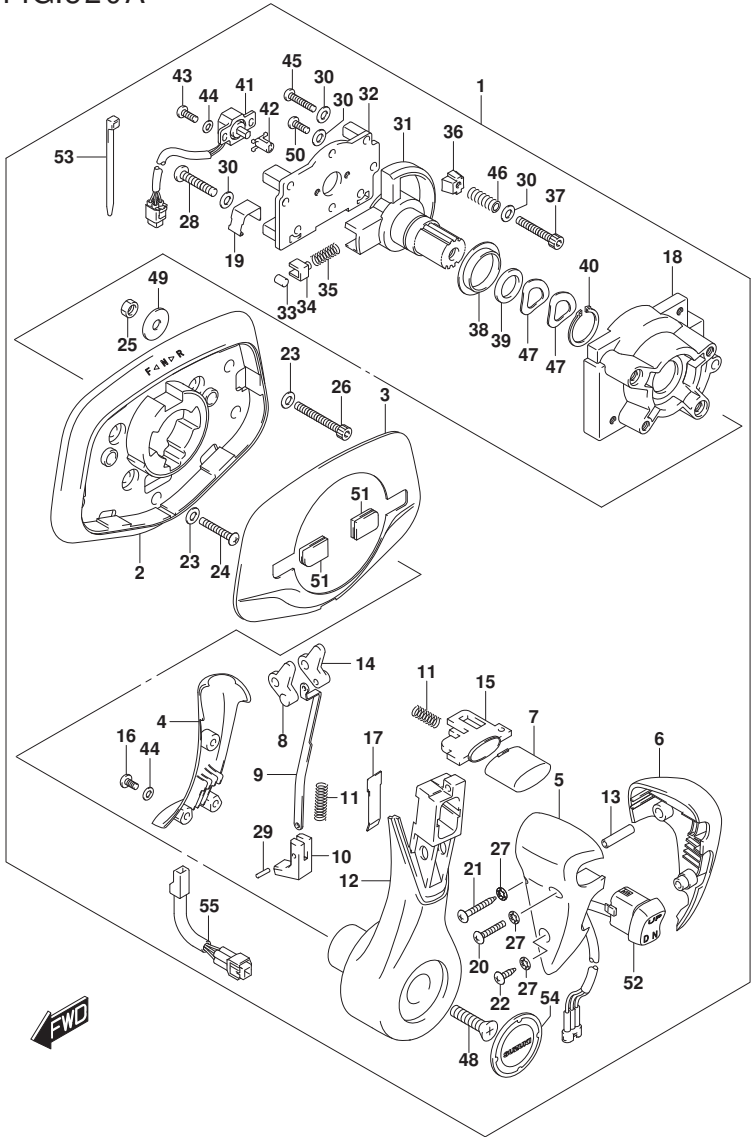

DF300A_000_016_520A
OPT:FLUSH MOUNT REMOCON

FIG. 520A (1-J-13) オプション:フラッシュマウントリモコン

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
36	67223-98J00	・バツト、フ レキ	1		
37	67296-98JE0	・スクリュ (5X35)	1		
38	67252-98J00	・フ ツシ、ド ライブ シャフト	1		
39	67288-98J20	・ワツシャ	1		
40	67292-98J00	・Cリング	1		
41	15980-98J00	・本 テンヨメータ	1		
42	67227-98J10	・レバ ー、本 テンヨメータNO. 2	1		
43	67296-94300	・スクリュ (4X10)	2		
44	67288-98J00	・ワツシャ	5		
45	67296-98J10	・スクリュ (5X35)	1		
46	67288-98J10	・ワツシャ	8		
47	67228-98J50	・ワツシャ、ウエーブ	2		
48	67296-98J60	・スクリュ (8X30)	1		
49	09160-06104	・ワツシャ (6. 5X24X2)	4		
50	67296-98J50	・スクリュ (5X18)	2		
51	67272-98J00	・ケ ー ロメット、カハ ー	2		
52	37850-98J02	・スイツチアツシ、PTT	1		
53	67269-98J10	・バ ント	1		
54	68165-98J00	・マー ク、レバ ー (ス キ)	1		
55	36890-98J00	・ハーネ ス、コンデ ンサ ーアダ プタ	1		

FIG.522A

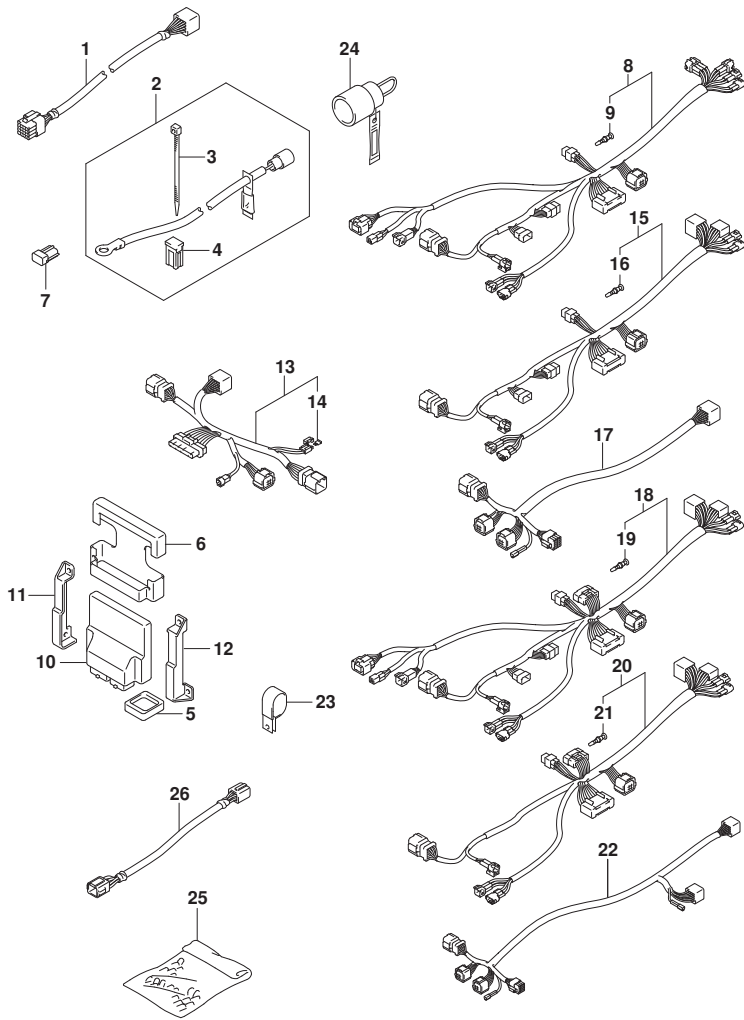


FIG. 522A (1-J-14) オプション:ハーネス(1)

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	36620-98J50	ワイヤツシ, リモコンエクステンション	1		
2	33830-98J11	セツト, ハツチアイソレータリード	1		
3	09407-10404	・クランプ (L:100)	2		
4	09481-40401	・フューズ (40A)	1		
5	33911-88BL0	キヤツプ, ラハ	1		
6	33925-93J00	クツシヨシ, エンシヨシヨシヨシヨシ	1		
7	33926-98J00	レシヨシ, タミナル	2		
8	36623-98J20	ハーネスアツシ, BCM NO. 1 フォシヨシヨシ	1		
9	36615-96300	・タミナル	4		
10-1	36770-98J10	コシヨシヨシアツシ, ホシヨシヨシヨシヨシ	1		
10-2	36770-98J20	コシヨシヨシアツシ, ホシヨシヨシヨシヨシヨシヨシ	2		
11	36775-98J00	ホルタ, BCM, レフト	AR		
12	36776-98J00	ホルタ, BCM, ライト	AR		
13	36622-98J00	ハーネスアツシ, シヨシヨシヨシヨシヨシ	AR		
14	09481-10501	・フューズ (10A)	1		
15	36624-98J02	ハーネスアツシ, BCMNO. 2フォシヨシヨシ	1		
16	36615-96300	・タミナル	2		
17	36621-98J00	ハーネスアツシ, シヨシヨシヨシヨシ	1		
18	36623-98J30	ハーネスアツシ, BCM NO. 1 フォシヨシヨシ	1		
19	36615-96300	・タミナル	5		
20	36624-98J11	ハーネスアツシ, BCMNO. 2フォシヨシヨシ	1		
21	36615-96300	・タミナル	2		
22	36621-98J10	ハーネスアツシ, トリフヨシヨシヨシ	1		
23	09403-13402	クランプ (ID:13)	AR		
24-1	36612-98J01	コシヨシヨシ, カウシヨシヨシヨシ (クシヨシ)	1		
24-2	36612-98J20	コシヨシヨシ, カウシヨシヨシヨシ (ホシヨシ)	1		
25	36990-87D00	タミナル, スリフセツト	1		
26	36682-92E00	ワイヤ, トリムメシヨシヨシヨシヨシ (L:6500)	1		

FIG.523A


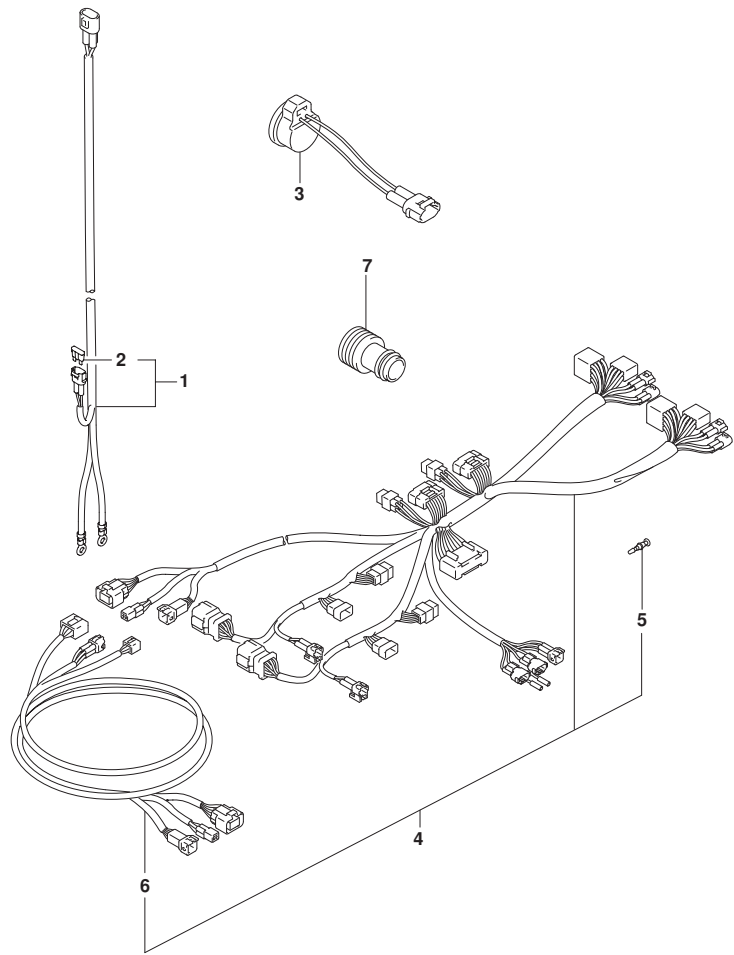


FIG. 523A (1-J-15) オプション:ハーネス(2)

見出番号	品番	品名	使用個数	備考	標準作業時間
1	36625-98J10	ワイヤツシ、ハツテリ	2		
2	09481-30501	・フューズ (30A)	2		
3	38500-93J90	ブザー、ウオーニング	1		
4	36623-98J40	ハーネスアツシ、BCMフォークアトフルフル	1		
5	36615-96300	・ターミナル	8		
6	36627-98J00	・ハーネス、リモコンエクステンション	1		
7	17917-87L00	コネクタ、フラッシュウオータ	1		

FIG.530A

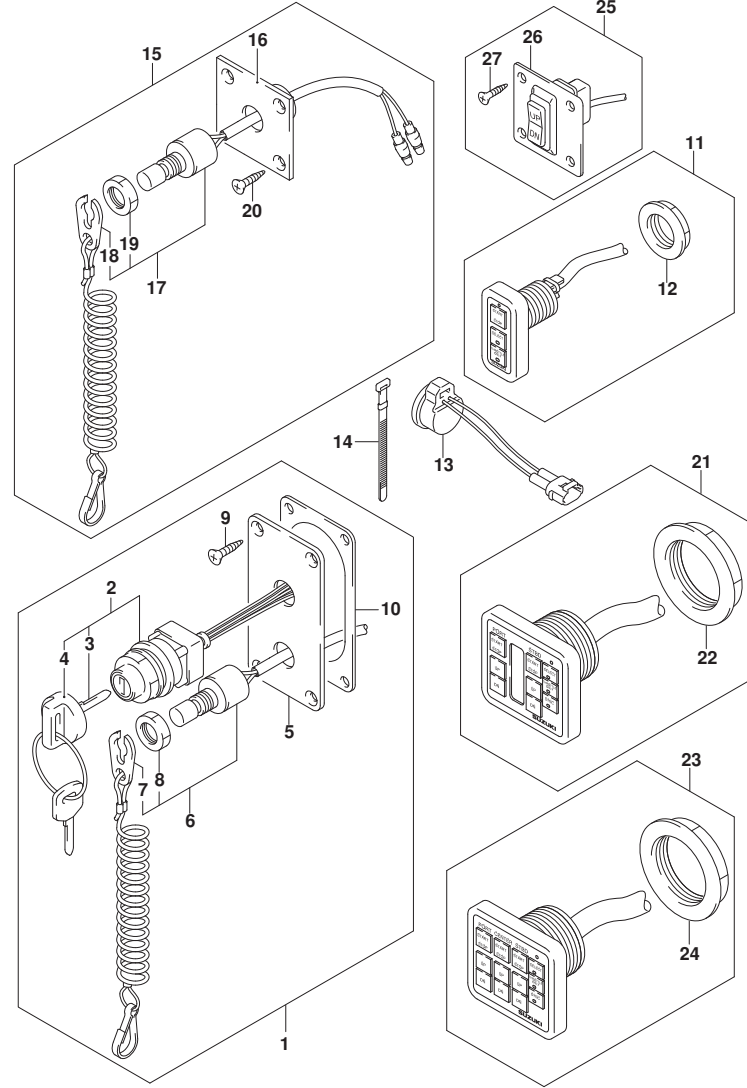


DF300A_000_016_530A
OPT:SWITCH

FIG. 530A (1-J-16) オプション:スイッチ

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
1	37100-98J04	ハ ^ニ ネルアツシ, メインスイッチ	1		
2	37110-98J01	・スイッチアツシ, メイン	1		
3-1	37141-99EA0	・キー (941)	1		
3-2	37141-99EB0	・キー (942)	1		
3-3	37141-99E00	・キー (931)	1		
3-4	37141-99E10	・キー (932)	1		
3-5	37141-99E20	・キー (933)	1		
3-6	37141-99E30	・キー (934)	1		
3-7	37141-99E40	・キー (935)	1		
3-8	37141-99E50	・キー (936)	1		
3-9	37141-99E60	・キー (937)	1		
3-10	37141-99E70	・キー (938)	1		
3-11	37141-99E80	・キー (939)	1		
3-12	37141-99E90	・キー (940)	1		
4	37143-99E00	・キヤツツ, キー	1		
5	37139-98J00	・ハ ^ニ ネル, メインスイッチ	1		
6	37820-93J04	・スイッチアツシ, エマシ ^ニ エンシ	1		
7	37823-92E01	・フ ^ニ レートアツシ, エマシ ^ニ エンシスイッチロツク	1		
8	37826-92J00	・ナツト	1		
9	03122-05165	・スクリュ	4		
10	37114-98J00	・シート, メインスイッチハ ^ニ ネル	1		
11	37100-98J11	ハ ^ニ ネルアツシ, シンク ^ニ ル	1		
12	37112-98J00	・ナツト	1		
13	38500-93J90	ブ ^ニ ザ ^ニ ー, ウォーニンク ^ニ	1		
14	09407-08401	クランブ ^ニ (L: 80)	AR		
15	37803-93J04	ハ ^ニ ネルアツシ, エマシ ^ニ エンシスイッチ	1		
16	37825-99E00	・ハ ^ニ ネル, エマシ ^ニ エンシストツフ ^ニ スイッチ	1		
17	37820-93J04	・スイッチアツシ, エマシ ^ニ エンシ	1		
18	37823-92E01	・フ ^ニ レートアツシ, エマシ ^ニ エンシスイッチロツク	1		
19	37826-92J00	・ナツト	1		
20	03122-05165	・スクリュ	4		
21	37100-98J21	ハ ^ニ ネルアツシ, デ ^ニ ュアル	1		
22	37112-98J10	・ナツト	1		
23	37100-98J31	ハ ^ニ ネルアツシ, トリフ ^ニ ル	1		
24	37112-98J10	・ナツト	1		

DF300A_000_016

FIG.530A

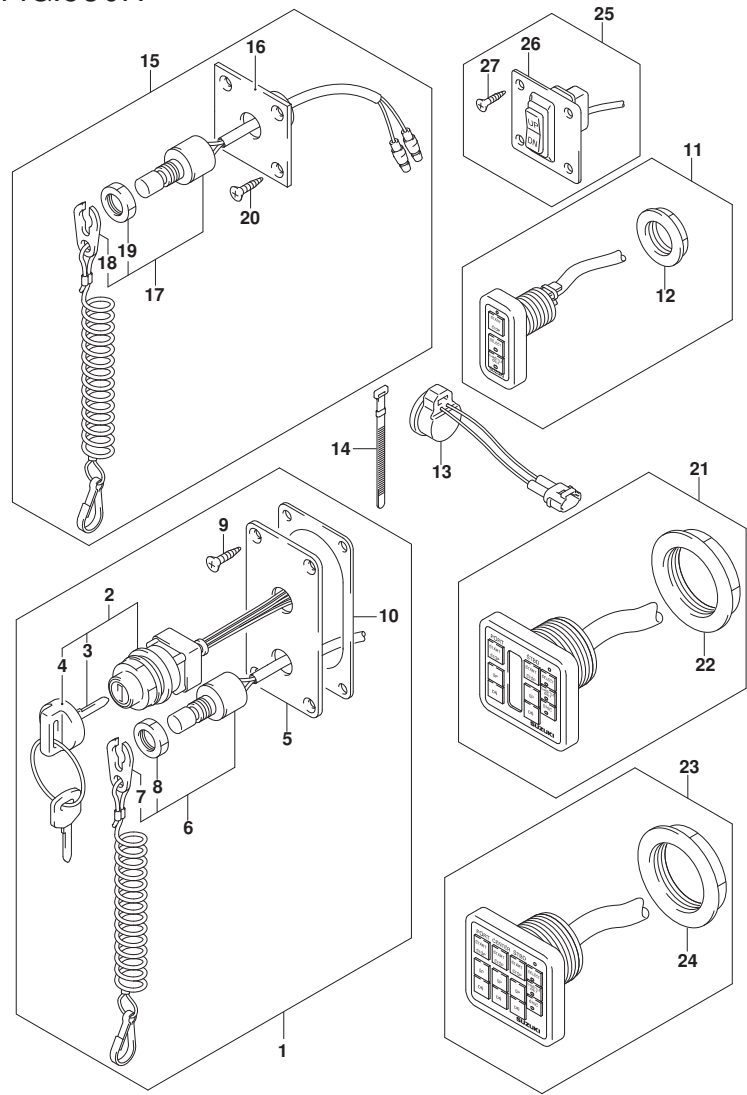


DF300A_000_016_530A
OPT:SWITCH

FIG. 530A (1-K-2) オプション:スイッチ

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
25	37860-87L00	パネルアッシ、トロリング コントロールスイッチ	1		
26	37862-87L00	・パネル	1		
27	09131-05004	・タツピング スクリュ	4		

FIG.535A

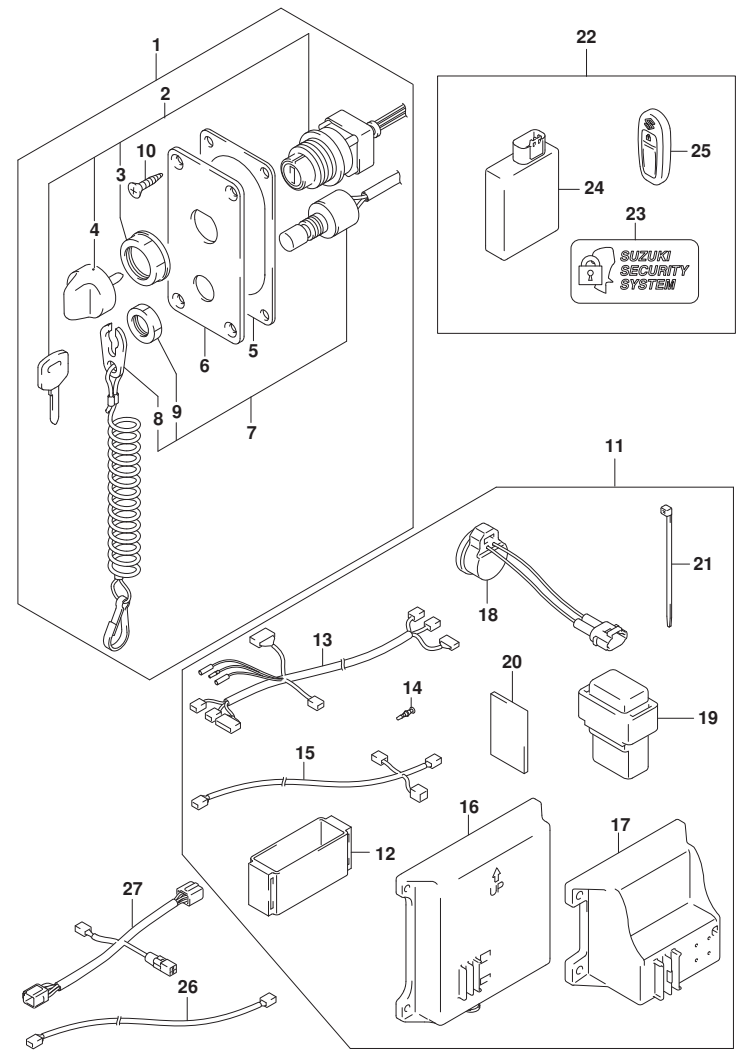


DF300A_000_016_535A
OPT:KEY LESSSTART

FIG. 535A (1-K-3) オプション:キーレススタート

見出番号	品番	品名	使用個数	備考	標準作業時間
1	37100-96L00	ハネルアツシ, メインスイッチ	1		
2	37110-96L00	・スイッチアツシ, メイン	1		
3-1	37141-99E00	・キー (931)	1		
3-2	37141-99E10	・キー (932)	1		
3-3	37141-99E20	・キー (933)	1		
3-4	37141-99E30	・キー (934)	1		
3-5	37141-99E40	・キー (935)	1		
3-6	37141-99E50	・キー (936)	1		
4	37143-96L00	・ノブ, メインスイッチ	1		
5	37114-98J00	・シート, メインスイッチハネル	1		
6	37139-96L00	・ハネル, メインスイッチ	1		
7	37820-93J04	・スイッチアツシ, エマシエンシ	1		
8	37823-92E01	・プレートアツシ, エマシエンシスイッチロック	1		
9	37826-92J00	・ナット	1		
10	03122-05165	・スクリュー	4		
11-1	37105-96L00	ハーネスセット, キーレススタートコントローラ	1	FROM 25003P-61000 1 UPTO 25003P-61051 9 FROM 30002P-61000 1 UPTO 30002P-61016 4	
11-2	37105-96L01	ハーネスセット, キーレススタートコントローラ	1	FROM 25003P-61052 0 FROM 30002P-61016 5	
12	32980-38F00	・クッション, CDIユニット	1		
13-1	36623-96L00	・ハーネスアツシ, キーレススタートコントローラ	1	FROM 25003P-61000 1 UPTO 25003P-61051 9 FROM 30002P-61000 1 UPTO 30002P-61016	

FIG.535A

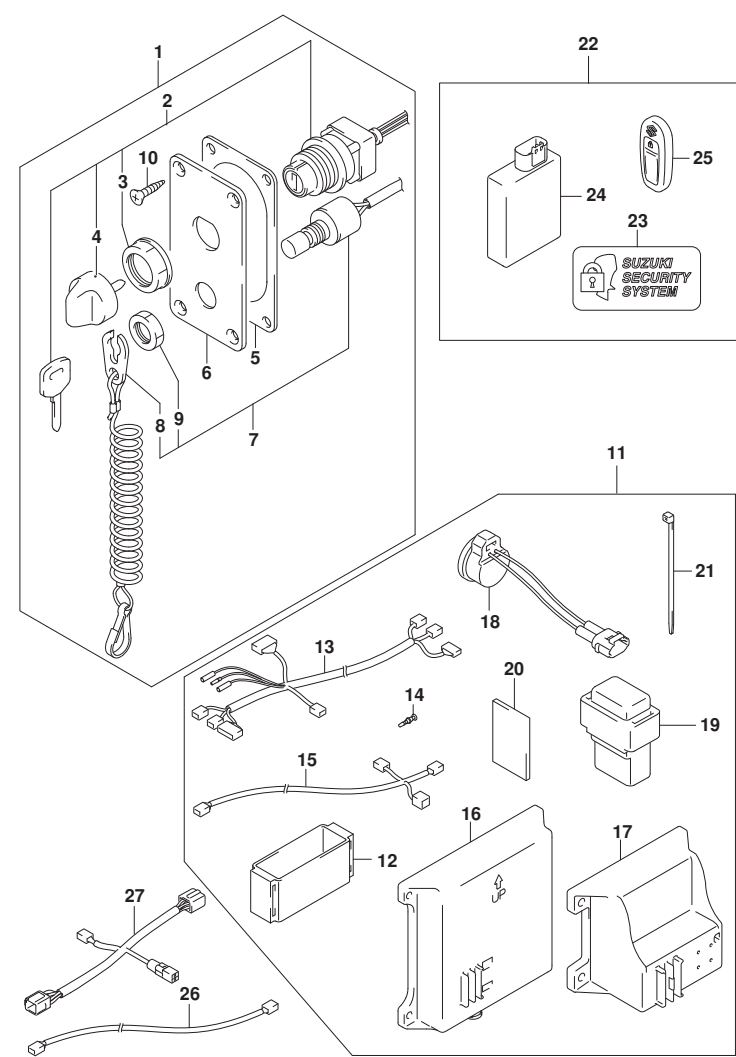


DF300A_000_016_535A
OPT:KEY LESSSTART

FIG. 535A (1-K-4) オプション:キーレススタート

見出番号	品番	品名	使用個数	備考	標準作業時間
13-2	36623-96L01	・ハーネスアツシ, キーレススタートコントローラ	1	4 FROM 25003P-61052 0 FROM 30002P-61016 5	
14	36615-96300	・ターミナル	1		
15	36662-96L00	・ハーネスアツシ, キーレススタートCAN	1	L:6500+110	
16	37173-96L00	・ホルダ*, キーレススタートハーツ	1	UPTO 201508 LARGE TYPE FROM 25003P-61000 1 UPTO 25003P-61051 9 FROM 30002P-61000 1 UPTO 30002P-61016 4	
17	37173-96L10	・ホルダ*, キーレススタートハーツ	1	FROM 201508 SMALL TYPE FROM 25003P-61052 0 FROM 30002P-61016 5	
18	38500-93J90	・ブザー, ウォーニング	1		
19	38860-96L00	・リレーアツシ, キーレススタート	1		
20-1	32851-93J00	・クッション, リードワイヤ	2	FROM 30002P-61000 1 UPTO 30002P-61016 4	
20-2	32851-93J00	・クッション, リードワイヤ	1	FROM 30002P-61016 5	
21	09407-14407	・クランプ (L:145)	1		
22-1	37170-96L10	コントローラセット, キーレススタート315MHZ	1	FROM 25003P-61000 1 UPTO 25003P-61051	

FIG.535A

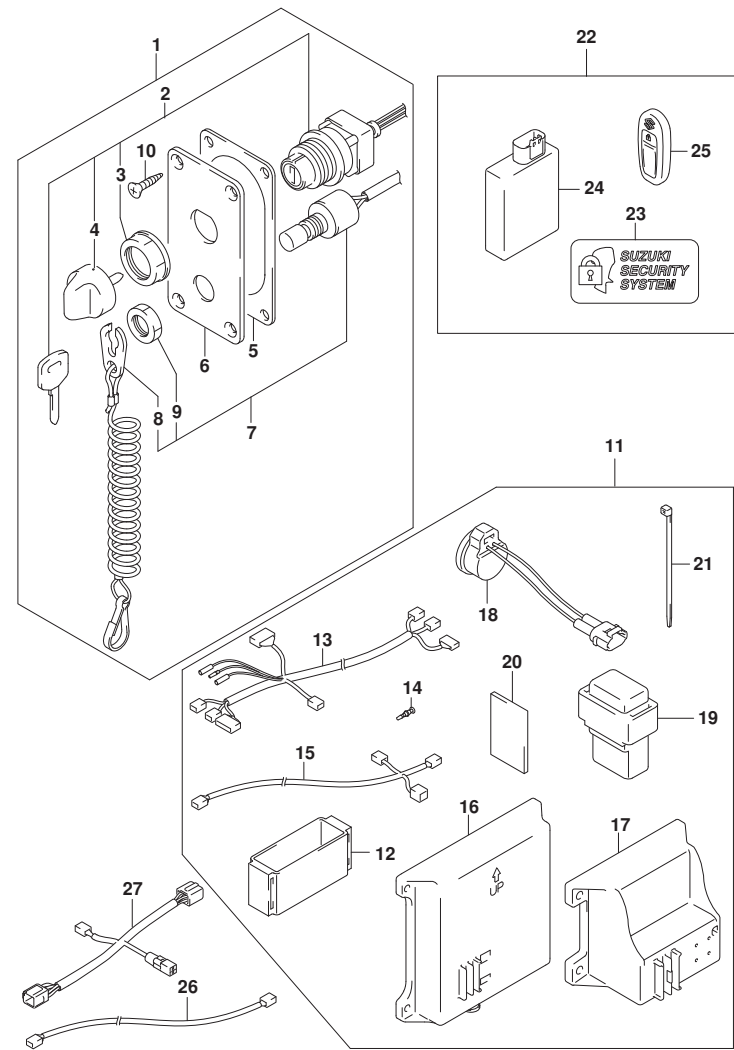


DF300A_000_016_535A
OPT:KEY LESSSTART

FIG. 535A (1-K-5) オプション:キーレススタート

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
			9		
			1	FROM 30002P-61000	
			1	UPTO 30002P-61016	
			4		
22-2	37170-96L11	コントローラセット, キーレススタート315	1	FROM 25003P-61052	
			0	FROM 30002P-61016	
			5		
23	37117-96L00	・デモコール, キーレススタート	2		
24-1	37171-96L10	・コントローラアツシ, キーレススタート315MHZ	1	FROM 25003P-61000	
			1	UPTO 25003P-61051	
			9	FROM 30002P-61000	
			1	UPTO 30002P-61016	
			4		
24-2	37171-96L11	・コントローラアツシ, キーレススタート315	1	FROM 25003P-61052	
			0	FROM 30002P-61016	
			5		
25	37172-96L10	・リモコンアツシ, キーレススタート315MHZ	2		
26	36663-96L00	ワイヤ, キーレススタートCANエクステンション	1		
27	36664-96L00	ハーネスアツシ, キーレススタートCAN	1	L:810+110	

DF300A_000_016

FIG.540A

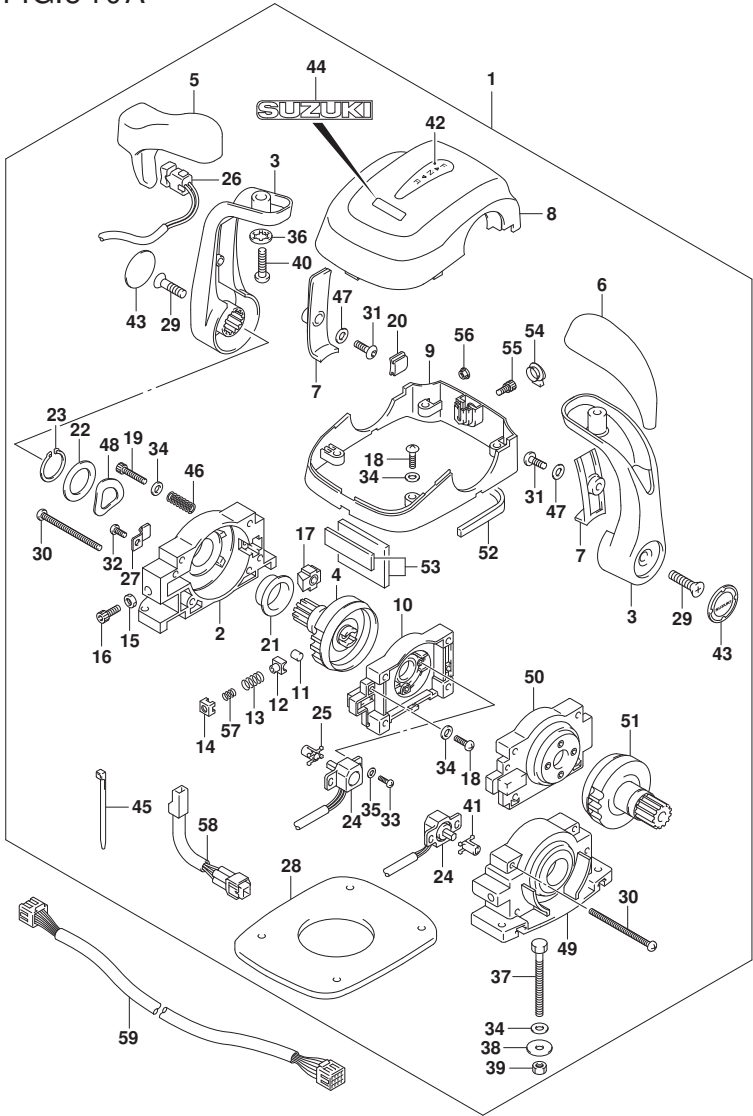


DF300A_000_016_540A
OPT:REMOTE CONTROL ASSYDUAL

FIG. 540A (1-K-6) オプション:リモートコントロールアツシデュアル

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	67200-98J13	リモートコントロールアツシ	1		
2	67211-98J20	・ハウジング	1		
3	67251-98J00	・レバー, ハンドル	2		
4	67246-98J10	・シャフト, ドライブ リモコン	1		
5	67261-98J00	・グリップ, NO. 1	1		
6	67261-98J10	・グリップ, NO. 2	1		
7	67263-98J00	・カバー, レバー	2		
8	67212-98J30	・カバー, リモコンアツハ	1		
9	67271-98J40	・カバー, リモコンボトム	1		
10	67222-98J10	・ハネルアツシ, ハック	1		
11	67236-98J10	・ローラ, テント	2		
12	67235-98J10	・ガイド, テントローラ	2		
13	67237-98J40	・スプリング, テント	2		
14	67233-98J10	・ホルダー, テントスプリング	2		
15	67287-92E00	・ナット	2		
16	67239-98J00	・スクリュ, テントアシヤストメント	2		
17	67223-98J00	・パッド, フレーキ	2		
18	67296-98J50	・スクリュ (5X18)	8		
19	67296-98JA0	・スクリュ (4X10)	2		
20	67272-98J10	・グロメット, リモコンカバー	2		
21	67252-98J10	・ブッシュ, ドライブ シャフト	2		
22	67288-98J20	・ワッシャ	2		
23	67292-98J00	・Cリング	2		
24	15980-98J00	・ボテンシヨメータ	2		
25	67227-98J10	・レバー, ボテンシヨメータNO. 2	1		
26	37850-98J02	・スイッチアツシ, PTT	1		
27	67269-98J00	・クランプ, リード	1		
28	67273-98J20	・バックギンク	1		
29	67296-98J60	・スクリュ (8X30)	2		
30	67296-98J30	・スクリュ (5X70)	4		
31	67296-98J80	・スクリュ (5X14)	2		
32	67296-98J00	・スクリュ (5X12)	1		
33	67296-94300	・スクリュ (4X10)	4		
34	67288-98J40	・ワッシャ	14		
35	67288-98J00	・ワッシャ	4		

DF300A_000_016

FIG.540A

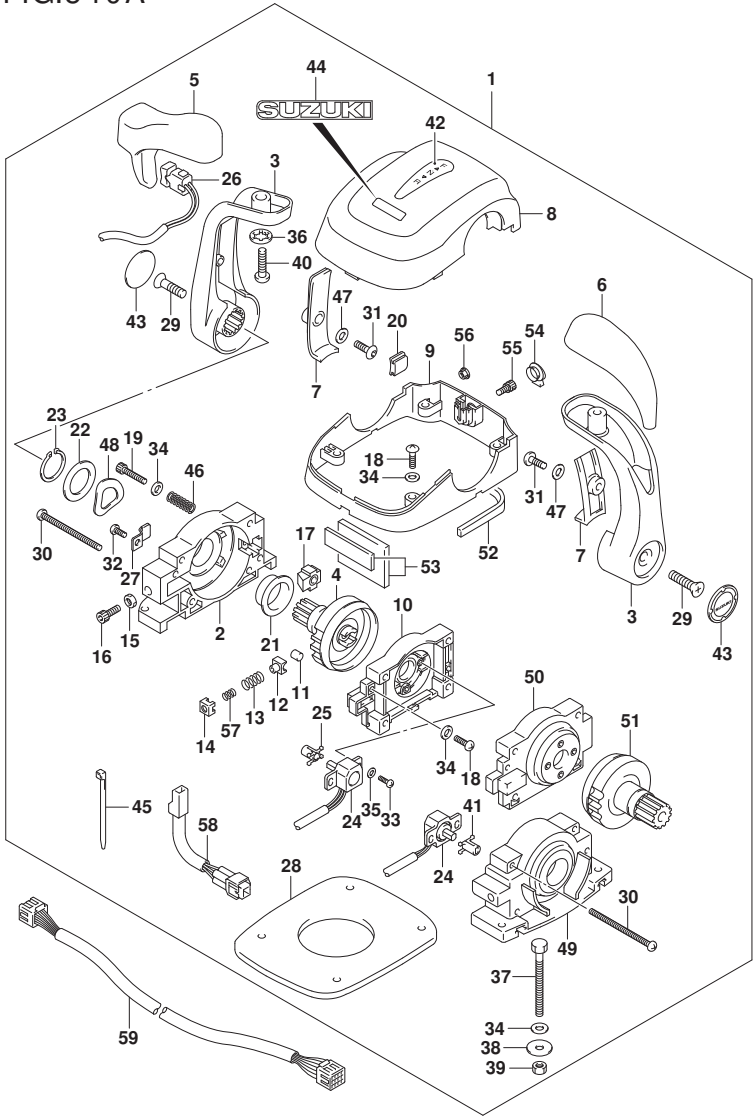


DF300A_000_016_540A
OPT:REMOTE CONTROL ASSYDUAL

FIG. 540A (1-K-7) オプション:リモートコントロールアッシデュアル

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
36	67288-92E20	・ワッシャ	2		
37	67226-98J00	・ボルト (5X50)	4		
38	09160-05024	・ワッシャ (5. 5X16X1. 5)	4		
39	67287-92E00	・ナット	4		
40	67296-98J90	・スクリュー (8X30)	2		
41	67227-98J00	・レバー, ボテンシヨメータNO. 1	1		
42	67284-98J00	・マーク (F-N-R)	1		
43	68165-98J00	・マーク, レバー (スズキ)	2		
44	68165-98J10	・エンブレム, スズキ	1		
45	67269-98J30	・ハンドル	1		
46	67288-98J10	・ワッシャ	16		
47	67288-98J30	・ワッシャ	2		
48	67228-98J50	・ワッシャ, ウェーブ	2		
49	67211-98J30	・ハウジング, リモコン	1		
50	67222-98J20	・ハネルアッシ, ハック	1		
51	67246-98J20	・シャフト, トライブ リモコン	1		
52	67273-98J10	・ハッキング, フロント	1		
53	67273-98J30	・ハッキング, リヤ	1		
54	67277-98J00	・クローメット, リモコンボトムカバー	1		
55	67296-98JF0	・ボルト (5X14)	1		
56	67297-98J00	・ナット, アッパカバーボルト	1		
57	67237-98J50	・スプリング, デンセント	2		
58	36890-98J00	・ハーネス, コンデンスアダプタ	1		
59-1	36620-98J30	ワイヤアッシ, リモートコントロール	1		
59-2	36620-98J40	ワイヤアッシ, リモートコントロール	1		

FIG.543A

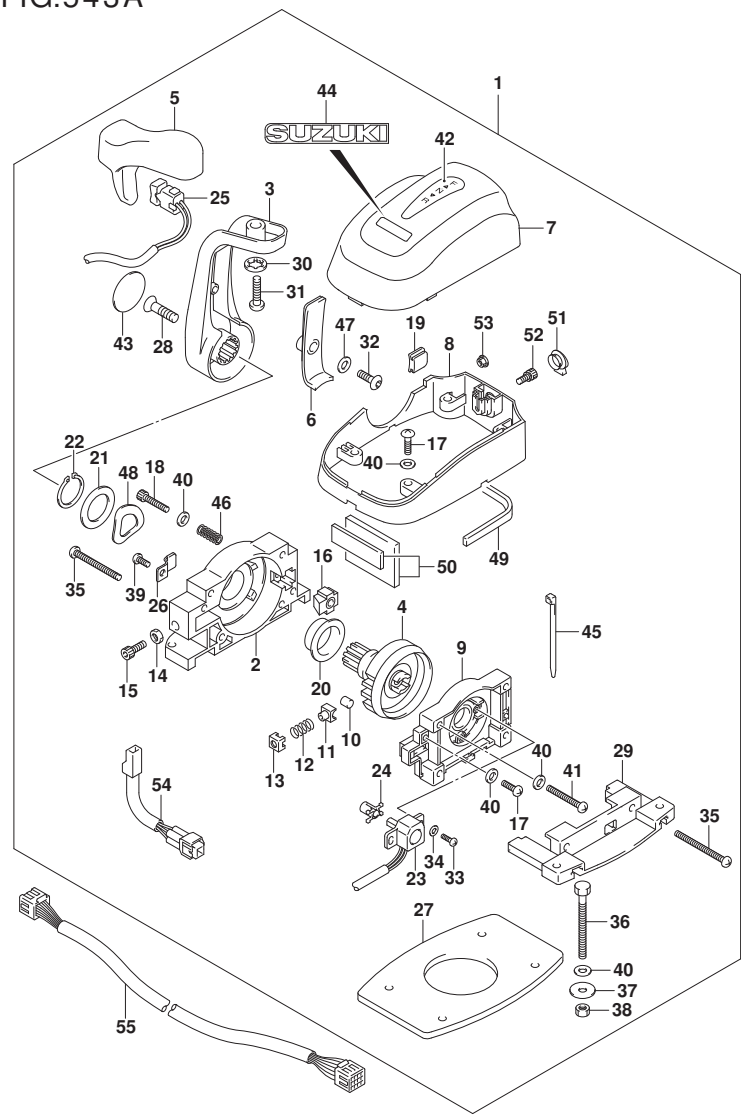


DF300A_000_016_543A
OPT:REMOTE CONTROL ASSY SINGLE

FIG. 543A (1-K-8) オプション:リモート コントロール アツシ シングル

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	67200-98J03	リモートコントロールアツシ	1		
2	67211-98J20	・ハウジング	1		
3	67251-98J00	・レバー、ハンドル	1		
4	67246-98J10	・シャフト、ドライブ リモコン	1		
5	67261-98J00	・グリップ、NO. 1	1		
6	67263-98J00	・カバー、レバー	1		
7	67212-98J20	・カバー、リモコンアツパ	1		
8	67271-98J30	・カバー、リモコンボトム	1		
9	67222-98J10	・ハネルアツシ、ハック	1		
10	67236-98J00	・ローラー、テント	1		
11	67235-98J10	・ガイド、テントローラ	1		
12	67237-98J30	・スプリング、テント	1		
13	67233-98J10	・ネジ、テントスプリング	1		
14	67287-92E00	・ナット	1		
15	67239-98J00	・スクリュー、テントアジャストメント	1		
16	67223-98J00	・バネ、ブレーキ	1		
17	67296-98J50	・スクリュー (5X18)	6		
18	67296-98JA0	・スクリュー (4X10)	1		
19	67272-98J10	・グロメット、リモコンカバー	1		
20	67252-98J10	・ブッシュ、ドライブシャフト	1		
21	67288-98J20	・ワッシャ	1		
22	67292-98J00	・Oリング	1		
23	15980-98J00	・ボテンシヨメータ	1		
24	67227-98J10	・レバー、ボテンシヨメータNO. 2	1		
25	37850-98J02	・スイッチアツシ、PTT	1		
26	67269-98J00	・クランプ、リート	1		
27	67273-98J00	・ハック	1		
28	67296-98J60	・スクリュー (8X30)	1		
29	67274-98J00	・フランジ、ベース	1		
30	67288-92E20	・ワッシャ	1		
31	67296-98J90	・スクリュー (8X30)	1		
32	67296-98J80	・スクリュー (5X14)	1		
33	67296-94300	・スクリュー (4X10)	2		
34	67288-98J00	・ワッシャ	2		
35	67296-98J20	・スクリュー (5X50)	2		

FIG.543A

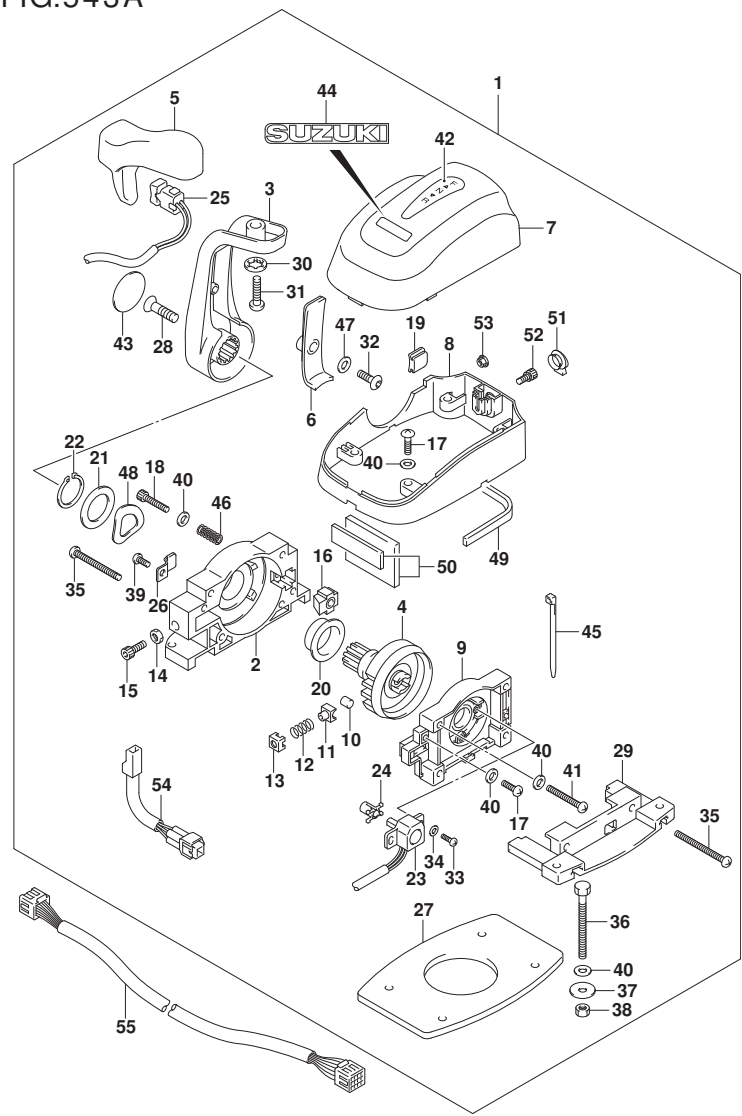

DF300A_000_016_543A
OPT:REMOTE CONTROL ASSY SINGLE

FIG. 543A (1-K-9) オプション:リモート コントロール アッ シン グ ル

見出番号	品 番	品 名	使用個数	備 考	標 準 作業時間
36	67226-98J00	・ボルト (5X50)	4		
37	09160-05024	・ワッシャ (5. 5X16X1. 5)	4		
38	67287-92E00	・ナット	4		
39	67296-98J00	・スクリュ (5X12)	1		
40	67288-98J40	・ワッシャ	12		
41	67296-98J10	・スクリュ (5X35)	1		
42	67284-98J00	・マーク (F-N-R)	1		
43	68165-98J00	・マーク, レバ - (ス ス キ)	1		
44	68165-98J10	・エン ブ レム, ス ス キ	1		
45	67269-98J30	・ハ ン ト	1		
46	67288-98J10	・ワッシャ	8		
47	67288-98J30	・ワッシャ	1		
48	67228-98J50	・ワッシャ, ウェー フ	1		
49	67273-98J10	・ハ ッ キング, フロント	1		
50	67273-98J30	・ハ ッ キング, リヤ	1		
51	67277-98J00	・ク ロメツ ト, リモコンホ トムカハ -	1		
52	67296-98JF0	・ボ ルト (5X14)	1		
53	67297-98J00	・ナツ ト, アッ ハ カハ -ボ ルト	1		
54	36890-98J00	・ハーネ ス, コンデ ンサ タ フ タ	1		
55-1	36620-98J30	ワイヤアッ シ, リモートコントロール	1		
55-2	36620-98J40	ワイヤアッ シ, リモートコントロール	1		

FIG.585A

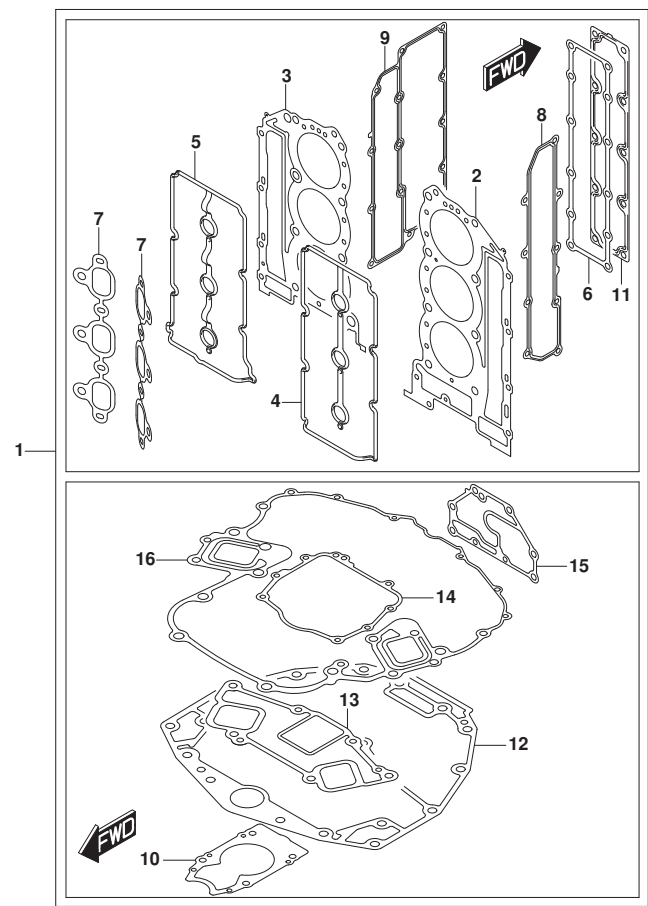


FIG. 585A (1-K-10) オプション:ガasket セット

見出番号	品 番	品 名	使用個数	備 考	標準 作業時間
1	11410-98830	ガasketセット	1		
2	11141-98J10	・ガasket, シリンダヘッドスターボート	1		
3	11142-98J10	・ガasket, シリンダヘッドボート	1		
4	11179-93J00	・ガasket, シリンダヘッドカバースターボート	1		
5	11189-93J00	・ガasket, シリンダヘッドカバーボート	1		
6	11332-93J00	・ガasket, クランクケースウォータージャケットカバー	1		
7	13119-98J00	・ガasket, インテークマニホールド	2		
8	14151-93J00	・ガasket, エキゾーストカバー(スターボート)	1		
9	14152-93J00	・ガasket, エキゾーストカバー(ボート)	1		
10	17472-98J00	・ガasket, ホップケースハネル	1		
11	11272-93J00	・ガasket, シリンダブロックプレート	1		
12	11489-93J00	・ガasket, オイルパン	1		
13	14212-93J00	・ガasket, エキゾーストチューブ	1		
14	51123-93J00	・ガasket, マウントオイルシールカバー	1		
15	51142-93J00	・ガasket, エンジンホルダーカバー	1		
16	51211-93J00	・ガasket, エンジンホルダー	1		